

RBC-BP2 Black Pear II Quick Start Guide


The Black Pear II allows a building management system (BMS) to monitor and control air-conditioning units on a system from one of five manufacturers, without the need for a central controller. It has been designed as a plug-in replacement for the original Black Pear BMS interface, with similar configuration options, all accessible via the touch screen or built-in web browser interface.



Features and Specification

HVAC Compatibility	Toshiba (TCC-Link)
BMS protocols	Modbus-RTU (via RS485) Modbus/TCP BACnet/IP Trend (requires an IQ3/4 outstation with spare memory)
Display interface	7" TFT LCD with capacitive touch interface
Power Supply	24V AC 5VA
Ethernet	10/100Base-T with auto-negotiation and auto-crossover
Mount	Panel or din-rail (clips supplied)

Dimensions and Connection Details

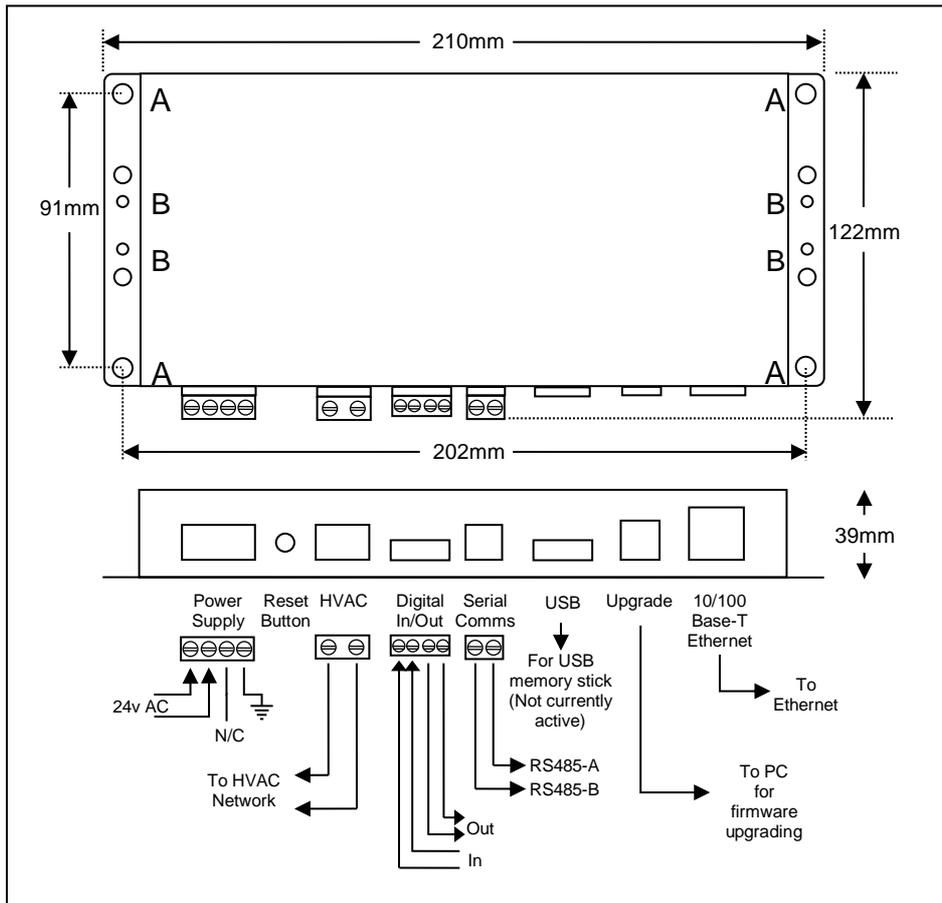

Startup Sequence

Shortly after power-up or a system reset, the system overview page appears, ready to start the initial HVAC scan.

After a short delay, the scan will start.

Once the scan has completed, the overview screen will look like this. All units found during the scan will be highlighted on the grid, in various colours.



System Overview Key

01	Unit Off (red unit number)	02	Unit On (green unit number)
	Master unit (dark blue background)		Slave unit (light blue background)
	Unit has not been detected (grey button)		Unit in error (flashing red outline)
	Display Configuration Menu		UU = Unit number gg = Group number

Unit Control

Tapping a detected unit will display the manual control screen. The control options visible will depend on the type of unit selected. Tap the page curls to show the next/previous detected unit. Tap the green arrow to return to the overview screen.



Configuration Menu



	<u>Restore</u> Restore factory defaults.
	<u>Date and Time</u> Set clock and network time server.
	<u>Schedule</u> Create schedules and attach to groups.
	<u>Security</u> Set pin code.
	<u>Error Log</u> View list of alarms detected
	<u>Diagnostics</u> Show various diagnostic info.
	<u>Network</u> Setup ethernet interface.

	<u>Protocol</u> Configure BMS protocols.
	<u>Configure</u> Configure groupings.
	<u>Unit Names</u> Change unit names.
	<u>Web Server</u> Configure web interface.
	<u>Information</u> Show firmware details.
	<u>Reboot</u> Perform a system reset. This is recommended after any modifications to the configuration.

	<p><u>Pin Code Required</u> Indicates options requiring the pin code. Once the correct pin has been entered, it will not need re-entering until the configuration button is pressed on the overview screen. Factory default pin code: 0000</p>
--	--

Initial Setup Sequence

- 1) Configure
 Configure unit groupings and global-off functionality.
- 2) Configure network
 Select DHCP or Static IP
 If Static IP, enter IP address, gateway address, subnet mask and DNS addresses.
- 3) Select BMS protocol
 Enable and setup required protocol (Note: Modbus is always enabled).
- 4) Set date and time
 Set the clock manually or use the network time feature to automatically set it.
- 5) Reboot
 This is always recommended after making changes to the configuration.

Web Browser Interface

The Black Pear II has a built-in webserver which allows the system to be monitored, controlled and configured using a web browser. The pages can be viewed on both desktop PCs and mobile devices, provided the web browser is up to date.


To access the webserver, type the IP address of the Black Pear II into the address bar of the browser.

There are 3 different views available, Group View, Unit View and Configuration. These are selectable using the  button in the top right corner of the page.


Group View



Unit View

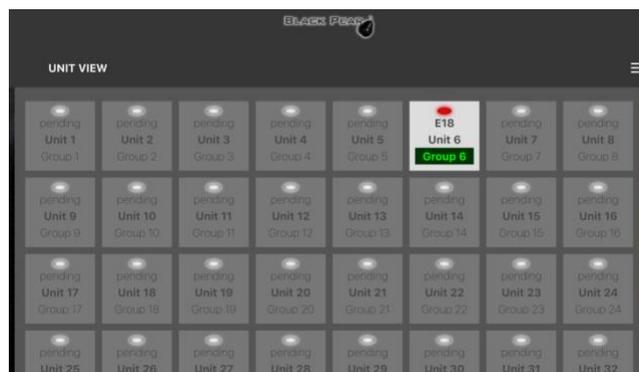

Configuration

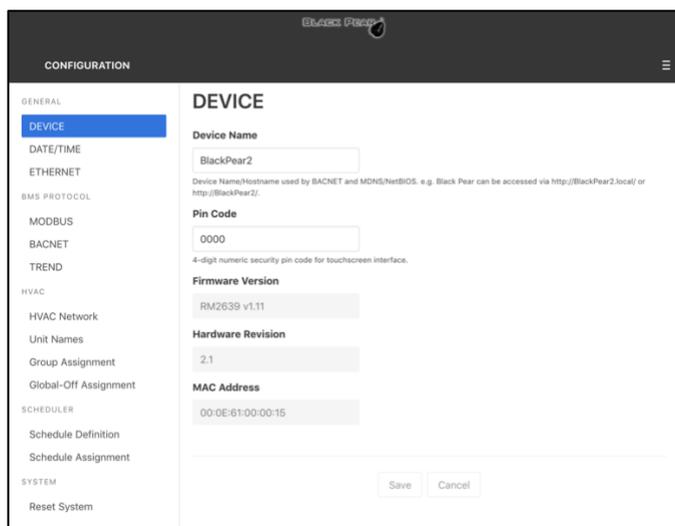

The configuration menu will either be on the left or across the top, depending on the width of the web browser page.

Note: After making changes on a page, click the 'Save' button at the bottom of the page to update the Black Pear II settings.

When configuration is complete, click the 'Reboot' button on the 'Reset System' page.

Further details can be found on our website at www.toshiba-aircon.co.uk

TOSHIBA



Office Locations

Leatherhead

Toshiba Air Conditioning
United Technologies House
Guildford Road
Leatherhead
Surrey
KT22 9UT

Tel: 01372 220 240

marketing.uk@toshiba-ac.com

Manchester

Toshiba Air Conditioning
Unit 15 S:Park Business Park
Hamilton Road
Stockport
Greater Manchester
SK1 2AE

Tel: 0870 843 0333

sales.support@toshiba-ac.com

Plymouth

Toshiba Carrier UK Limited
Porsham Close
Belliver Industrial Estate
Plymouth
Devon
PL6 7DB

Tel: 0870 843 0333

sales.support@toshiba-ac.com

Sales

0845 850 8924

sales.support@toshiba-ac.com

Spares

0870 843 0333 opt 3

spares@toshiba-ac.com

Training

0870 843 0333 opt 5

toshiba.training@toshiba-ac.com

Projects

01372 220 266

projects.uk@toshiba-ac.com

Warranty

0870 843 0333 opt 6

warranty@toshiba-ac.com

Technical

0870 843 0333 opt 7

technical.enquiries@toshiba-ac.com

The full manual is available on the Toshiba website.

www.toshiba-aircon.co.uk



Better Air Solutions

Toshiba Air Conditioning offering total HVAC Solutions