

TOSHIBA

AIR CONDITIONER (MULTI TYPE)

Installation Manual

R32 or R410A

For commercial use

Indoor Unit

Model name: _____

Fresh Air Intake Indoor Unit


Model with drain pump

MMD-UP0721HFP-E1

MMD-UP0961HFP-E1

MMD-UP1121HFP-E1

MMD-UP1281HFP-E1

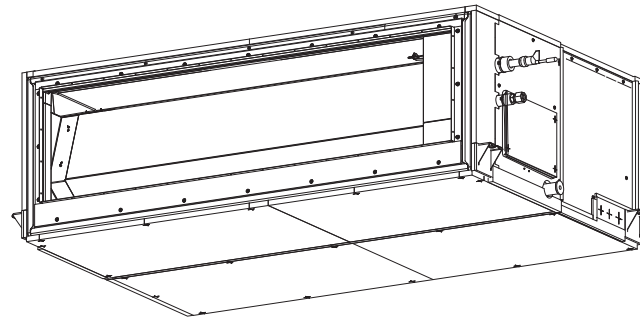

“Fresh Air Intake 12 HP and 14 HP
applicable for SMMS-u series only”

Original instruction

Please read this Installation Manual carefully before installing the Air Conditioner.

- This Manual describes the installation method of the indoor unit.
- For installation of the outdoor unit, follow the Installation Manual attached to the outdoor unit.

ADOPTION OF R32 or R410A REFRIGERANT

This Air Conditioner has adopted a refrigerant HFC (R32 or R410A) which does not destroy the ozone layer. Be sure to check the refrigerant type for outdoor unit to be combined, and then install it.

Information

If U series models (TU2C-Link) are combined with models other than U series (TCC-Link), the wiring specifications and maximum number of connectable indoor units will be changed. Pay attentions to their communication specifications when carrying out the installation, maintenance, or repair. For its details, refer to the **“Electrical connection”** in this Manual.

Product information of ecodesign requirements. (Regulation (EU) 2016/2281)

<http://ecodesign.toshiba-airconditioning.eu/en>

Contents

| | | |
|-----------|--|-----------|
| 1 | Precautions for safety | 3 |
| 2 | Accessory parts | 7 |
| 3 | System control of fresh air intake unit | 7 |
| 4 | Selection of installation place | 8 |
| 5 | Installation | 9 |
| 6 | Drain piping | 11 |
| 7 | Duct design | 13 |
| 8 | Refrigerant piping | 19 |
| 9 | Electrical connection | 20 |
| 10 | Applicable controls | 25 |
| 11 | Test run | 26 |
| 12 | Maintenance | 27 |
| 13 | Troubleshooting | 28 |
| 14 | Specifications | 34 |
| 15 | Notice code | 34 |
| 16 | Appendix | 35 |

Thank you for purchasing this Toshiba air conditioner.

Please read carefully through these instructions that contain important information which complies with the Machinery Directive (Directive 2006/42/EC), and ensure that you understand them.

After completing the installation work, hand over this Installation Manual as well as the Owner's Manual provided to the user, and ask the user to keep them in a safe place for future reference.

Generic Denomination: Air Conditioner

Definition of qualified installer or qualified service person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them. A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

| Agent | Qualifications and knowledge which the agent must have |
|-------------------------------|--|
| Qualified installer (*1) | <ul style="list-style-type: none"> • The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. • The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. |
| Qualified service person (*1) | <ul style="list-style-type: none"> • The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations. • The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. • The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work. |

Definition of Protective Gear



When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the following table.

Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.





| Work undertaken | Protective gear worn |
|------------------------------------|---|
| All types of work | Protective gloves 'Safety' working clothing |
| Electrical-related work | Gloves to provide protection for electricians Insulating shoes Clothing to provide protection from electric shock |
| Work at heights (50 cm or more) | Helmets for use in industry |
| Transportation of heavy objects | Shoes with additional protective toe cap |
| Repair of outdoor unit | Gloves to provide protection for electricians |

These safety cautions describe important matters concerning safety to prevent injury to users or other people and damages to property. Please read through this manual after understanding the contents below (meanings of indications), and be sure to follow the description.






| Indication | Meaning of Indication |
|--|---|
|  WARNING | Text set off in this manner indicates that failure to adhere to the directions in the warning could result in serious bodily harm (*1) or loss of life if the product is handled improperly. |
|  CAUTION | Text set off in this manner indicates that failure to adhere to the directions in the caution could result in slight injury (*2) or damage (*3) to property if the product is handled improperly. |

- *1: Serious bodily harm indicates loss of eyesight, injury, burns, electric shock, bone fracture, poisoning, and other injuries which leave aftereffect and require hospitalization or long-term treatment as an outpatient.
- *2: Slight injury indicates injury, burns, electric shock, and other injuries which do not require hospitalization or long-term treatment as an outpatient.
- *3: Damage to property indicates damage extending to buildings, household effects, domestic livestock, and pets.

MEANINGS OF SYMBOLS DISPLAYED ON THE UNIT

| | | |
|---|----------------------------------|---|
|  | WARNING (Risk of fire) | This mark is for R32 refrigerant only. In case that refrigerant type is R32, this unit uses a flammable refrigerant. If refrigerant leaks and comes in contact with fire or heating part, it will create harmful gas and there is risk of fire. |
|  | | Read the OWNER'S MANUAL carefully before operation. |
|  | | Service personnel are required to carefully read the OWNER'S MANUAL and INSTALLATION MANUAL before operation. |
|  | | Further information is available in the OWNER'S MANUAL, INSTALLATION MANUAL, and the like. |

Warning indications on the air conditioner unit

| Warning indication | Description | | |
|---|-------------|--|--|
|  <table border="1"> <thead> <tr> <th>WARNING</th> </tr> </thead> <tbody> <tr> <td>ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing.</td> </tr> </tbody> </table> | WARNING | ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing. | WARNING ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing. |
| WARNING | | | |
| ELECTRICAL SHOCK HAZARD Disconnect all remote electric power supplies before servicing. | | | |
|  <table border="1"> <thead> <tr> <th>WARNING</th> </tr> </thead> <tbody> <tr> <td>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</td> </tr> </tbody> </table> | WARNING | Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing. | WARNING Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing. |
| WARNING | | | |
| Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing. | | | |
|  <table border="1"> <thead> <tr> <th>CAUTION</th> </tr> </thead> <tbody> <tr> <td>High temperature parts. You might get burned when removing this panel.</td> </tr> </tbody> </table> | CAUTION | High temperature parts. You might get burned when removing this panel. | CAUTION High temperature parts. You might get burned when removing this panel. |
| CAUTION | | | |
| High temperature parts. You might get burned when removing this panel. | | | |
|  <table border="1"> <thead> <tr> <th>CAUTION</th> </tr> </thead> <tbody> <tr> <td>Do not touch the aluminum fins of the unit. Doing so may result in injury.</td> </tr> </tbody> </table> | CAUTION | Do not touch the aluminum fins of the unit. Doing so may result in injury. | CAUTION Do not touch the aluminium fins of the unit. Doing so may result in injury. |
| CAUTION | | | |
| Do not touch the aluminum fins of the unit. Doing so may result in injury. | | | |
|  <table border="1"> <thead> <tr> <th>CAUTION</th> </tr> </thead> <tbody> <tr> <td>BURST HAZARD Open the service valves before the operation, otherwise there might be the burst.</td> </tr> </tbody> </table> | CAUTION | BURST HAZARD Open the service valves before the operation, otherwise there might be the burst. | CAUTION BURST HAZARD Open the service valves before the operation, otherwise there might be the burst. |
| CAUTION | | | |
| BURST HAZARD Open the service valves before the operation, otherwise there might be the burst. | | | |

1 Precautions for safety

The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

WARNING

General

- Before starting to install the air conditioner, read through the Installation Manual carefully, and follow its instructions to install the air conditioner.
- Only a qualified installer or service person is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.
- Do not use any refrigerant different from the one specified for complement or replacement.
Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.
- Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.
- Before carrying out the installation, maintenance, repair or removal work, set the circuit breaker to the OFF position. Otherwise, electric shocks may result.
- Place a “Work in progress” sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.

- Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of 50 cm or more or to remove the intake grille of the indoor unit to undertake work.
- Wear protective gloves and safety work clothing during installation, servicing and removal.
- Do not touch the aluminium fin of the unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.
- Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off of the outdoor unit and result in injury.
- When work is performed at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder’s instructions. Also wear a helmet for use in industry as protective gear to undertake the work.
- Before cleaning the filter or other parts of the outdoor unit, set the circuit breaker to OFF without fail, and place a “Work in progress” sign near the circuit breaker before proceeding with the work.
- Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.
- Do not use the refrigerant other than R32 or R410A. For the refrigerant type, check the outdoor unit to be combined.
- The refrigerant used by this air conditioner, follow to the outdoor unit.
- The air conditioner must be transported in stable condition. If any part of the product is broken, contact the dealer.
- When the air conditioner must be transported by hand, carry it by four or more people.

- Do not move or repair any unit by yourself. There is high voltage inside the unit. You may get electric shock when removing the cover and main unit.
- This appliance is intended to be used by expert or trained users in shops, in light industry, or for commercial use by lay persons.

Selection of installation location

- When the air conditioner is installed in a small room, provide appropriate measures to ensure that the concentration of refrigerant leakage occur in the room does not exceed the critical level.
- Do not install in a location where flammable gas leaks are possible. If the gas leak and accumulate around the unit, it may ignite and cause a fire.
- To transport the air conditioner, wear shoes with additional protective toecap.
- To transport the air conditioner, do not take hold of the bands around the packing carton.
You may injure yourself if the bands should break.
- Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.
- Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.

Installation

- Suction duct length must be longer than 850 mm.
- When the indoor unit is to be suspended, the designated hanging bolts (M10 or W3/8) and nuts (M10 or W3/8) must be used.
- Install the air conditioner securely in a location where the base can sustain the weight adequately. If the strength is not enough, the unit may fall down resulting in injury.

- Follow the instructions in the Installation Manual to install the air conditioner. Failure to follow these instructions may cause the product to fall down or topple over or give rise to noise, vibration, water leakage or other trouble.
- Carry out the specified installation work to guard against the possibility of high winds and earthquake. If the air conditioner is not installed appropriately, a unit may topple over or fall down, causing an accident.
- If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate.
- Use forklift truck to carry in the air conditioner units and use winch or hoist at installation of them.
- Helmet must be worn to protect your head from falling objects. Especially, when you work under an inspection opening, helmet must be worn to protect your head from falling objects from the opening.
- The unit can be accessed from the service panel.
- After the unit has been suspended and installed, take dust-proof measures for the air intake and air discharge openings (cover these openings) to ensure that no dust will enter inside the unit at any point until the construction work has been completed.

Refrigerant piping

- Install the refrigerant pipe securely during the installation work before operating the air conditioner. If the compressor is operated with the valve open and without refrigerant pipe, the compressor sucks air and the refrigeration cycles is over pressurized, which may cause an injury.
- Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage.

- After the installation work, confirm that refrigerant gas does not leak. If refrigerant gas leaks into the room and flows near a fire source, such as a cooking range, noxious gas may be generated.
- When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle. Failure to purge the air completely may cause the air conditioner to malfunction.
- Nitrogen gas must be used for the airtight test.
- The charge hose must be connected tightly and in a proper manner.
- If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may be generated.

Electrical wiring

- Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and/or electrical leaks.
- To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.
- Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.
- Connect earth wire. (Grounding work) Incomplete earthing causes an electric shock.
- Do not connect earth wires to gas pipes, water pipes, and lightning conductor or telephone earth wires.

- After completing the repair or relocation work, check that the earth wires are connected properly.
- Install a circuit breaker that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws.
- Install the circuit breaker where it can be easily accessed by the agent.
- When installing the circuit breaker outdoors, install one which is designed to be used outdoors.
- Under no circumstances, the power supply wire or the indoor and outdoor connecting wire must be connected in the middle (Connection using a solderless terminal etc.). Connection trouble in the places where the wire is connected in the middle may give rise to smoking and/or a fire.
- Electrical wiring work shall be conducted according to law and regulation in the community and Installation Manual. Failure to do so may result in electrocution or short circuit.

Test run

- Before operating the air conditioner after having completed the work, check that the electrical control box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.
- If there is any kind of trouble (such as check code display has appeared, smell of burning, abnormal sounds, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other trouble.

-
- After the work has finished, use an insulation tester set (500VMΩ) to check the resistance is 1MΩ or more between the charge section and the non-charge metal section (Earth section). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
 - Upon completion of the installation work, check for refrigerant leaks and check the insulation resistance and water drainage. Then conduct a test run to check that the air conditioner is operating properly.

Explanations given to user

- Upon completion of the installation work, tell the user where the circuit breaker is located. If the user does not know where the circuit breaker is, he or she will not be able to turn it off in the event that trouble has occurred in the air conditioner.
- After the installation work, follow the Owner's Manual to explain to the customer how to use and maintain the unit.

Relocation

- Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and/or vibration may result.
- When carrying out the pump-down work, shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air or other gas to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, or other trouble.

(*1) Refer to the "Definition of qualified installer or qualified service person."

⚠ CAUTION

This Air Conditioner has adopted a refrigerant HFC (R32 or R410A) which does not destroy the ozone layer.










- As the R32 or R410A refrigerant is easily affected by impurities such as moisture, oxidized film, oil, etc., due to the high pressure, be careful not to allow the moisture, dirt, existing refrigerant, refrigerating machine oil, etc., to get mixed up in the refrigeration cycle during the installation work.
- A special tool for the R32 or R410A refrigerant is required for installation.
- Use a new and clean piping materials for the connecting pipe so that moisture and dirt are not mixed together during the installation work.
- When using existing pipes, follow the Installation Manual enclosed with the outdoor unit.

To Disconnect the Appliance from Main Power Supply.

- This appliance must be connected to the main power supply by means of a switch with a contact separation of at least 3 mm.
-

2 Accessory parts

■ Accessory parts

| Part name | Q'ty | Shape | Usage |
|----------------------|------|--|--|
| Installation Manual | 1 | This manual | (Hand over to customers) (For other languages that do not appear in this Installation Manual, please refer to the enclosed CD-R.) |
| Owner's Manual | 1 |  | (Hand over to customers) (For other languages that do not appear in this Owner's Manual, please refer to the enclosed CD-R.) |
| CD-ROM | 1 | — | Owner's Manual and Installation Manual |
| Heat insulating pipe | 2 |  | For heat insulation of pipe connecting section |
| Washer | 8 |  | For hanging-down unit |
| Hose band | 1 |  | For connecting drain pipe |
| Flexible hose | 1 |  | For adjusting center of drain pipe |
| Heat insulator | 1 |  | For heat insulation of drain connecting section |
| Liquid joint pipe | 1 |  | For 1281 model |
| Socket | 1 |  | For 1121, 1281 model |
| Seal material | 3 |  (45×45×3t) | For sealing of wire connecting port |

3 System control of fresh air intake unit

■ System able to be combined

The fresh air intake unit is connectable to SMMS (Super Modular Multi system series). However this is not connectable to SHRM (Super Heat Recovery Multi system series), and MiNi-SMMS (MCY-**) series.

■ System combination

- Connecting the Fresh air intake units with the Outdoor units has some combination depends on Outdoor unit series.
Should be confirm the Catalogue or ask an authorized dealer.
- When two Fresh air intake units or more are installed into one refrigerant line, all the units to be installed must be the same model (MMD-UP***HFP*).

4 Selection of installation place

⚠ CAUTION

- **Do not install in a location where flammable gas may leak are possible.**
If the gas leak and accumulate around the unit, it may ignite and cause a fire.
- **When an outdoor unit using R32 refrigerant is combined with indoor unit, be attention to the floor area in the room to be installed.**
Indoor units cannot be installed in rooms with a floor area less than the minimum floor area.
For details, follow the Installation Manual to the outdoor unit.

Avoid installing in the following places


Select a location for the indoor unit where the cool or warm air will circulate evenly.
Avoid installation in the following kinds of locations.

- Locations where inside the ceiling is used as route for fresh air.
- Saline area (coastal area).
- Locations with acidic or alkaline atmospheres (such as areas with hot springs, factories where chemicals or pharmaceuticals are made and places where the exhaust air from combustion appliances will be sucked into the unit).
Doing so may cause the heat exchanger (its aluminum fins and copper pipes) and other parts to become corroded.
- Locations with atmospheres with mist of cutting oil or other types of machine oil.
Doing so may cause the heat exchanger to become corroded, mists caused by the blockage of the heat exchanger to be generated, the plastic parts to be damaged, the heat insulators to peel off, and other such problems to result.
- Places where iron or other metal dust is present. If iron or other metal dust adheres to or collects on the interior of the air conditioner, it may spontaneously combust and start a fire.
- Locations where vapors from food oils are formed (such as kitchens where food oils are used).
Blocked filters may cause the air conditioner's performance to deteriorate, condensation to form, the plastic parts to be damaged, and other such problems to result.
- Locations near obstructions such as ventilation openings or lighting fixtures where the flow of the blown air will be disrupted (a disruption of the air flow may cause the air conditioner's performance to deteriorate or the unit to shut down).
- Locations where an in-house power generator is used for the power supply.
The power line frequency and voltage may fluctuate, and the air conditioner may not work properly as a result.
- On truck cranes, ships or other moving conveyances.
- The air conditioner must not be used for special applications (such as for storing food, plants, precision instruments or art works).
(The quality of the items stored may be degraded.)
- Locations where high frequencies are generated (by inverter equipment, in-house power generators, medical equipment or communication equipment).
(Malfunctioning or control trouble in the air conditioner or noise may adversely affect the equipment's operation.)
- Locations where there is anything under the unit installed that would be compromised by wetness.
(If the drain has become blocked or when the humidity is over 80%, condensation from the indoor unit will drip, possibly causing damage to anything underneath.)
- In the case of the wireless type of system, rooms with the inverter type of fluorescent lighting or locations exposed to direct sunlight.
(The signals from the wireless remote controller may not be sensed.)
- Locations where organic solvents are being used.
- The air conditioner cannot be used for liquefied carbonic acid cooling or in chemical plants.
- Location near doors or windows where the air conditioner may come into contact with high-temperature, high-humidity outdoor air.
(Condensation may occur as a result.)
- Locations where special sprays are used frequently.

■ Installation under atmosphere of the high humidity

Although it has been confirmed that no trouble occurs on the unit, there is a fear of drip of the water if operation under high humidity condition continues.
In some cases including the rainy season, especially inside of the ceiling may become high-humidity atmosphere (dew-point temperature: 30 °C (humidity: 80%) or higher).




- 1 Installation to inside of the ceiling with tiles on the roof.**
- 2 Installation to inside of the ceiling with slated roof.**
- 3 Installation to inside of the ceiling with kitchen.**
- 4 Installation to place where inside of the ceiling is used for pathway to intake the fresh air.**
 - In the above cases, additionally attach the heat insulator (Glass wool, etc.) to all positions of the air conditioner, which come to contact with the high-humidity atmosphere.
In this case, arrange the side plate (Service panel) so that it is easily removed.
 - Apply also heat insulating a sufficient thickness 10 mm or more to the duct and connecting part of the duct.

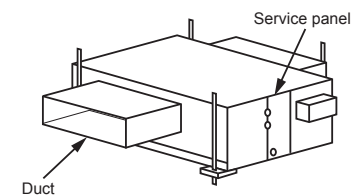

■ Installation space

(Unit: mm)

Reserve sufficient space required for installation or service work.

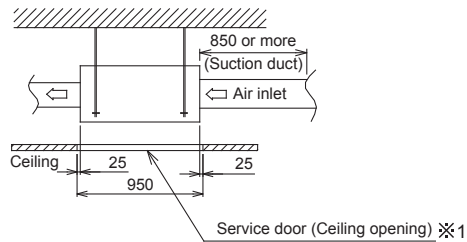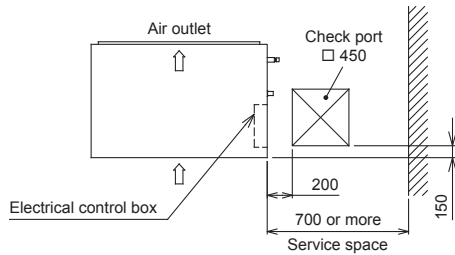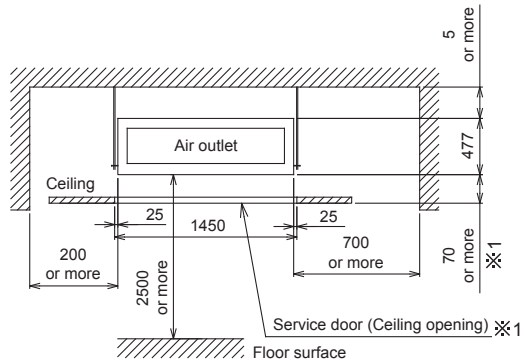

*1 If there are enough space under the unit (more than 1000 mm) the service door (Ceiling opening) is not necessary.

5 Installation


⚠ CAUTION

Strictly comply with the following rules to prevent damage of the indoor units and human injury.

- Do not put a heavy article on the indoor unit or let a person get on it. (Even units are packaged)
- Carry in the indoor unit as it is packaged if possible. If carrying in the indoor unit unpacked by necessity, use buffering cloth or other material to not damage the unit.
- To move the indoor unit, hold the hooking brackets (4 positions) only. Do not apply force to the other parts (such as refrigerant pipe, drain pan, foamed parts, or resin parts).
- Carry the package by two or more persons, and do not bundle it with plastic band at positions other than specified.
- To install vibration isolation material to hanging bolts, confirm that it does not increase the unit vibration.

■ External dimensions

(Unit: mm)

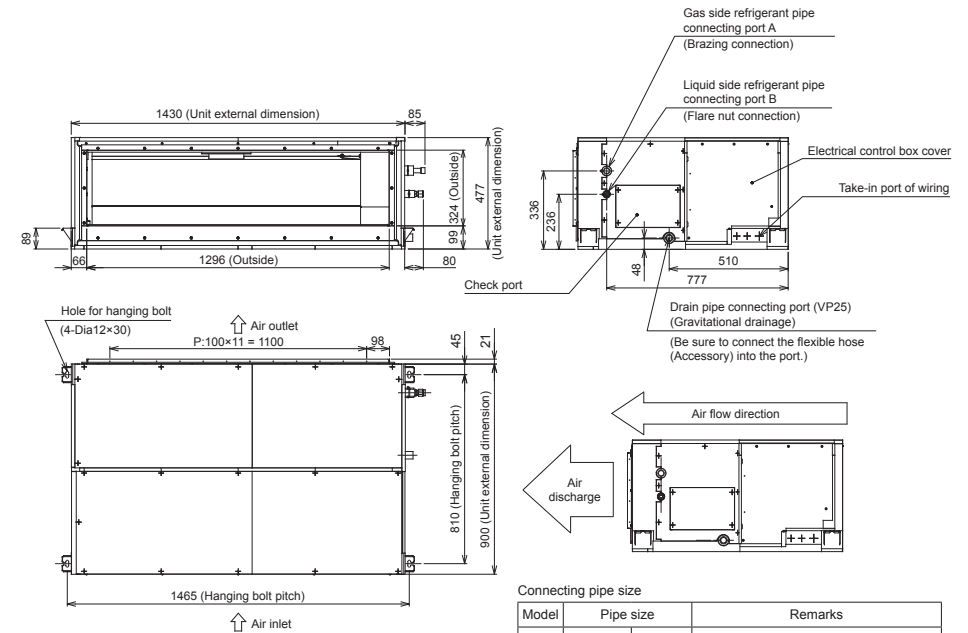

| Connecting pipe size | | |
|----------------------|-------------------|--------------------------------------|
| Model | Pipe size | Remarks |
| 0721 0961 | A(Gas) Dia22.2 | |
| | B(Liquid) Dia12.7 | |
| 1121 | A(Gas) Dia28.6 | Use the SOCKET(Accessory) |
| | B(Liquid) Dia12.7 | |
| 1281 | A(Gas) Dia28.6 | Use the SOCKET(Accessory) |
| | B(Liquid) Dia15.9 | Use the LIQUID JOINT PIPE(Accessory) |

■ Installation of hanging bolt









- Consider the piping / wiring after the unit is hung to determine the location of the indoor unit installation and orientation.
- After the location of the indoor unit installation has been determined, install hanging bolts.
- For the dimensions of the hanging bolt pitches, refer to the external view.
- When a ceiling already exists, lay the drain pipe, refrigerant pipe, control wires, and remote controller wires to their connection locations before hanging the indoor unit.

Procure hanging bolts washer and nuts for installing the indoor unit (these are not supplied).

| | | |
|--------------|-------------|-----------|
| Hanging bolt | M10 or W3/8 | 4 pieces |
| Nut | M10 or W3/8 | 12 pieces |
| Washer | M10 | 8 pieces |

Installation of hanging bolt

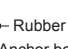Use M10 hanging bolts (4 pcs, locally procured). Matching to the existing structure, set pitch according to size in the unit external view as shown below.

| New concrete slab | |
|---|---|
| Install the bolts with insert brackets or anchor bolts. | |
|  |  |
| (Blade type bracket) | (Slide type bracket) |
|  |  |
| Rubber Anchor bolt | (Pipe hanging anchor bolt) |
| Steel frame structure | |
| Use existing angles or install new support angles. | |
|  |  |
| Hanging bolt | Support angle |
| Existing concrete slab | |
| Use a hole-in anchors, hole-in plugs, or a hole-in bolts. | |
|  |  |


■ Installation of indoor unit

Treatment of ceiling

The ceiling differs according to structure of building. For details, consult your constructor or interior finish contractor.


In the process after the ceiling board has been removed, it is important to reinforce ceiling foundation (frame) and to keep horizontal level of installed ceiling correctly in order to prevent vibration of ceiling board.

- Attach the nuts and the M10 flat washers to the hanging bolt.
- Put washers at up and down of the hanging bracket of the indoor unit to hang down the indoor unit.
- Check that four sides are horizontal with a level gauge. (Horizontal degree: Within 5 mm)

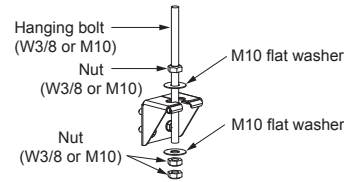

REQUIREMENT


- Hang the unit in a horizontal position. When unit is hanged to slant, it may cause overflow of drainage.
- Install the unit within the dimension according to the figure below.
- Use level gauge to confirm whether the unit is hang horizontally.

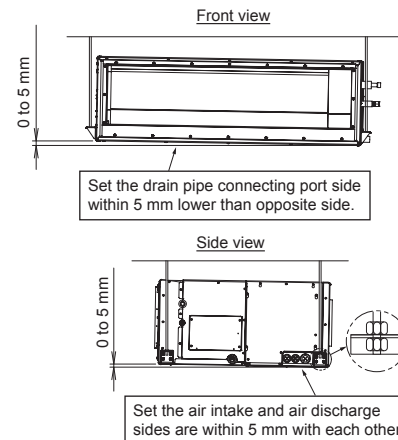

■ REQUIREMENT

Removing the cardboard for transportation

- Make sure to remove the protection cardboard for transportation that is inserted in the gap between the top cabinet and the heat exchanger before installing the indoor unit.

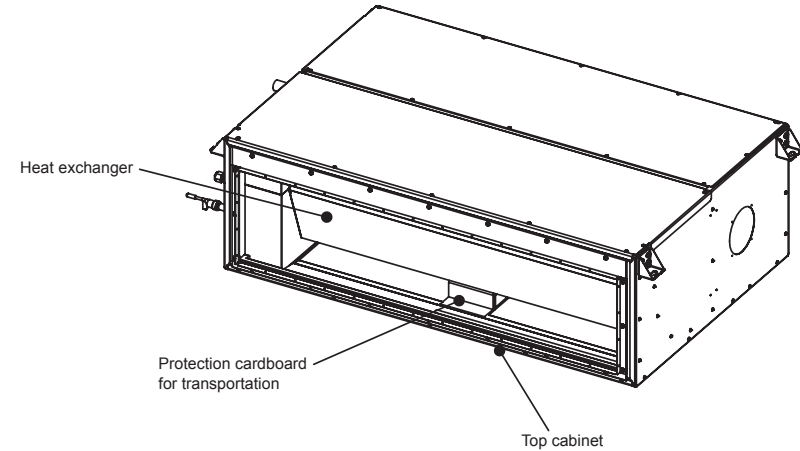


6 Drain piping

⚠ CAUTION

Following the Installation Manual, perform the drain piping work so that water is properly drained. Apply a heat insulation so as not to cause a dew condensation. Inappropriate piping work may result in water leakage in the room and wet furniture.

- Provide the indoor drain piping with proper heat insulation.
- Provide the area where the pipe connects to the indoor unit with proper heat insulation. Improper heat insulation will cause condensation to form.
- The drain pipe must be sloping downward (at an angle of 1/100 or more), and do not run the pipe up and down (arched shape) or allow it to form traps. Doing so may cause abnormal sounds.
- Restrict the length of the traversing drain pipe to 20 meters or less. For a long pipe, provide support brackets at intervals of 1.5 to 2 meters to prevent flapping.
- Install the collective piping as shown in the following figure.
- Do not provide any air vents. Otherwise, the drain water will spout, causing water to leak.
- Do not allow any force to be applied to the connection area with the drain pipe.

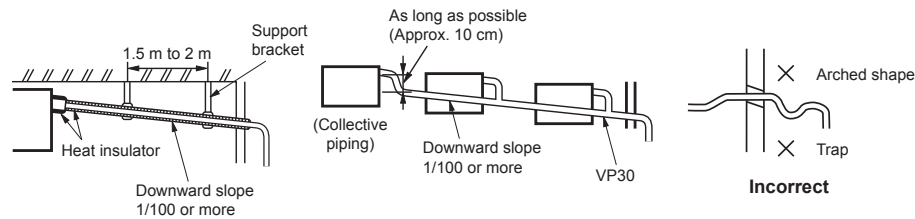

■ Pipe material, size and insulator

The following materials for piping work and insulating process are locally procured.


| | |
|----------------------|--|
| Pipe material | Hard vinyl chloride pipe VP25 (Nominal outer diameter 32 mm) |
| Insulator | Foamed polyethylene foam, thickness: 10 mm or more |

■ Connecting drain pipe

Insert flexible drain hose into upper drain pipe of main unit as far as it will go. Fix it with hose band.

REQUIREMENT

Mount the flexible drain hose using the hose band without using adhesive.

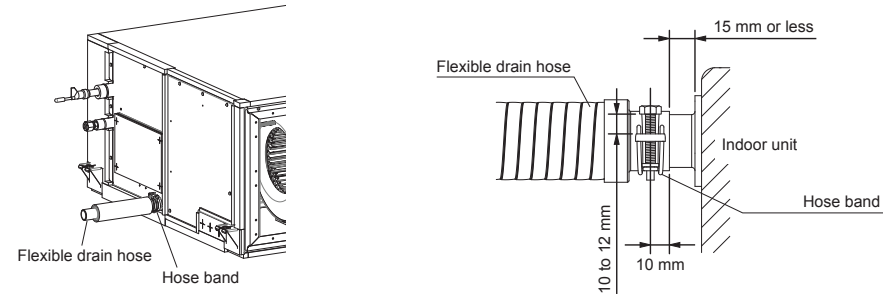

■ Check the draining


In the test run, check that water drain is properly performed and water does not leak from the connecting part of the pipes. When doing this, also check that no abnormal sounds are heard from the drain pump motor. Check draining also when installed in heating period.

When the electrical and wiring work has been completed

Pour some water by following the method shown in the following figure. Then, while performing a cooling operation, check that the water drains from the drain pipe connecting port (transparent) and that no water is leaking from the drain pipe.


When the electrical and wiring work has not been completed

- Disconnect the float switch connector (3P: red) from the connector (CN34: red) on the printed circuit board inside the electrical control box. (Before doing this, the power must be turned off.)
- Connect a 208V-240V supply voltage to (L) and (N) on the power supply terminal block. (Do not apply a 208V-240V voltage to (Uv (U1)), (Uv (U2)), (A), (B) of the terminal block. Otherwise, the printed circuit board may be damaged.)
- Pour the water by following the method shown in the following figure.
(Amount of water poured: 1500 cc to 2000 cc)
- When the power is turned on, the drain pump automatically starts running. Check whether the water is draining from the drain pipe connecting port, and check that no water is leaking from the drain pipe.
- After checking that the water drains and there are no water leaks, turn off the power, connect the float switch connector to its original location (CN34) on the printed circuit board, and return the electrical control box to its original position.

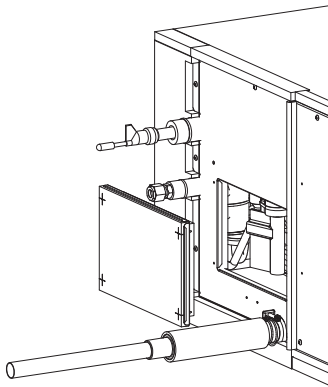


■ Heat insulating process

- As shown in the figure, cover the flexible hose and hose band with the attached heat insulator up to the bottom of the indoor unit tightly.
- Cover the drain pipe tightly with a heat insulator procured locally so that it overlaps with the attached heat insulator of the drain connecting section.

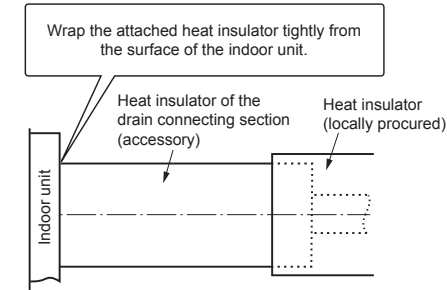

<Example of construction>

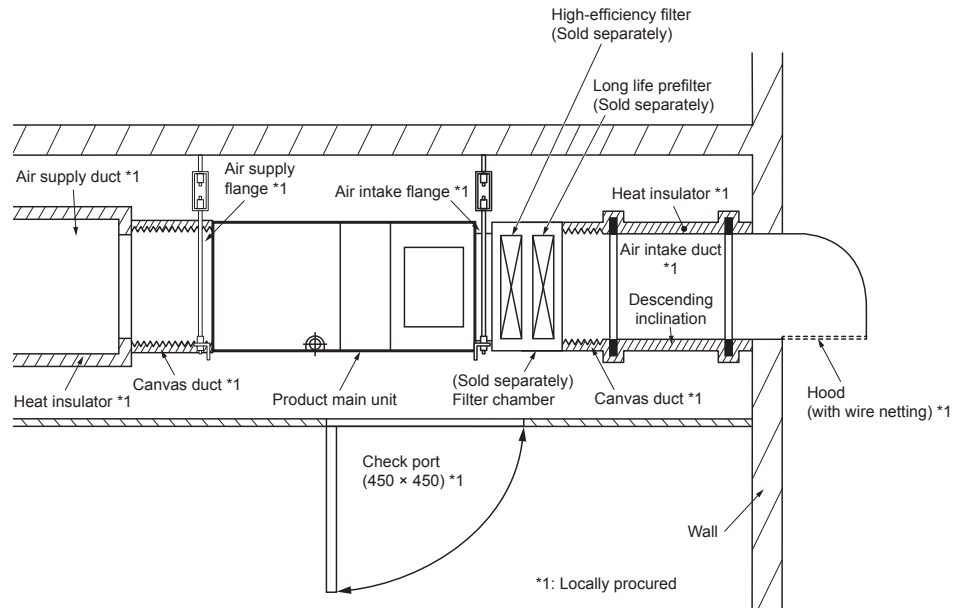

1 Air intake duct







- Connect the air intake duct (Locally procured) to the inlet flange.
Wrap aluminum tape around connecting part between the air intake port flange and duct, or provide sealer so that air does not leak.
- For the fresh air intake port, attach a hood so that fresh air is sucked from lower side.
And attach wire netting, etc. to the air intake of the hood.
- Set the air intake duct at descending inclination so that water can be drained even if rainwater enters in.
- Wrap the outside of the intake duct with heat insulator because it intakes cold air while heating.

2 Air supply duct

Connect the air supply duct (Locally procured) to the Air supply flange.
Wrap aluminum tape around connecting part of the air supply port flange and duct or apply packing so that air does not leak.

■ External processor PQ


MMD-UP0721HFP-E1

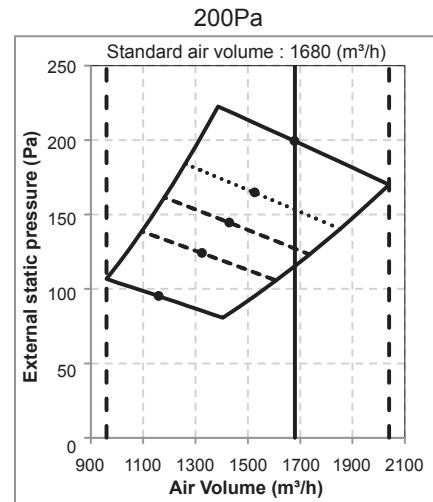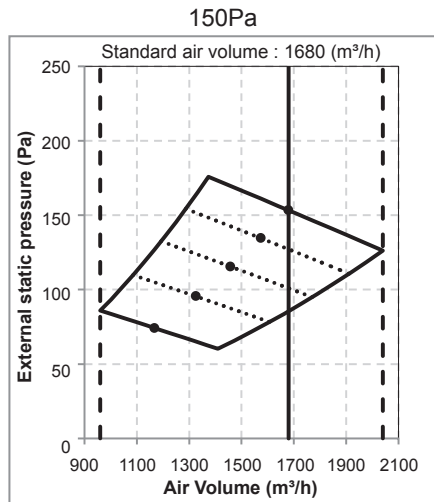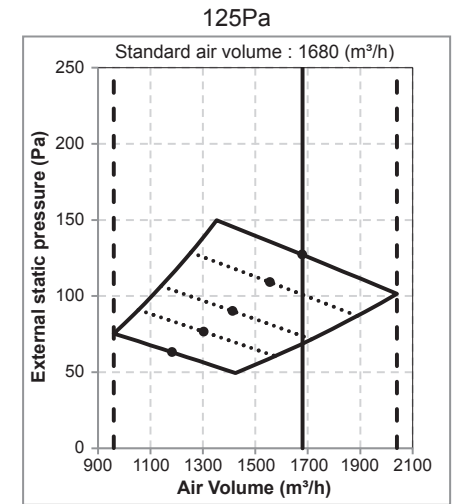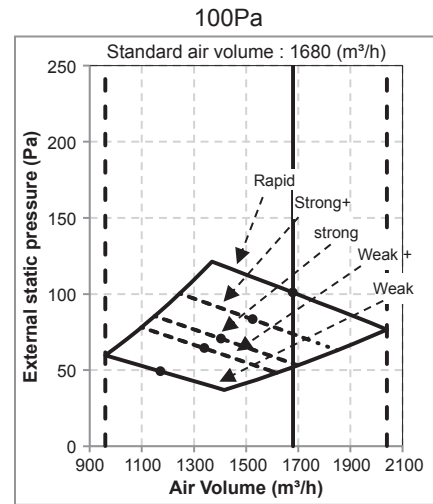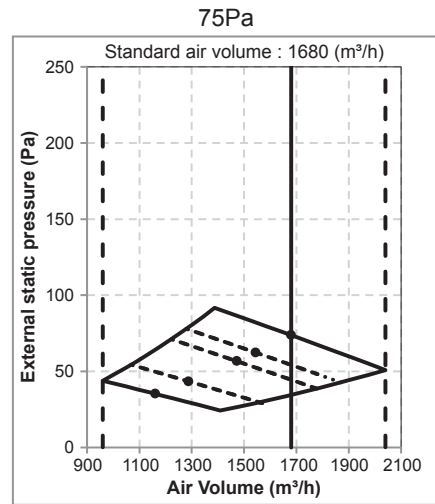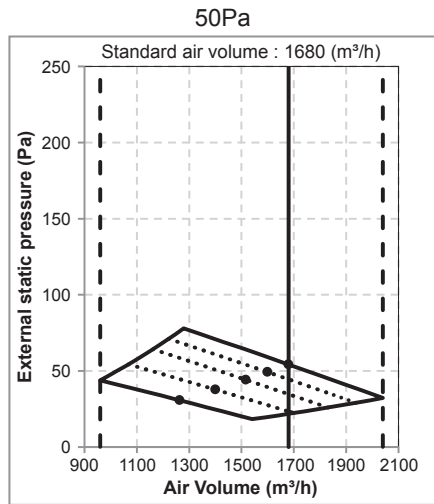


■ External processor PQ

MMD-UP0961HFP-E1


50Pa

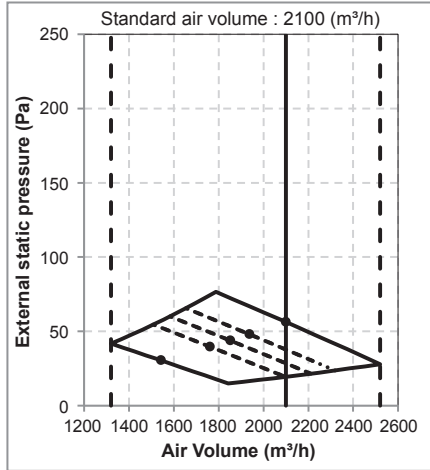


75Pa

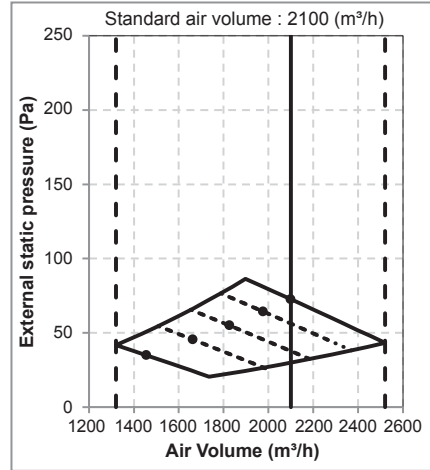


100Pa

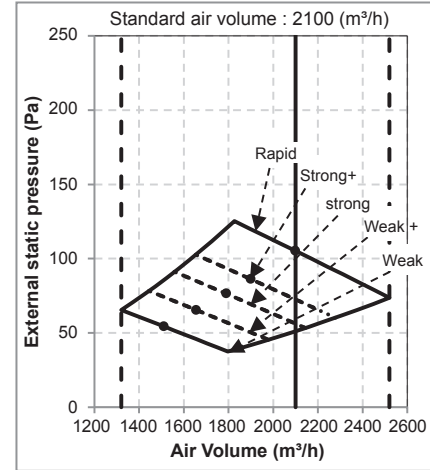


125Pa

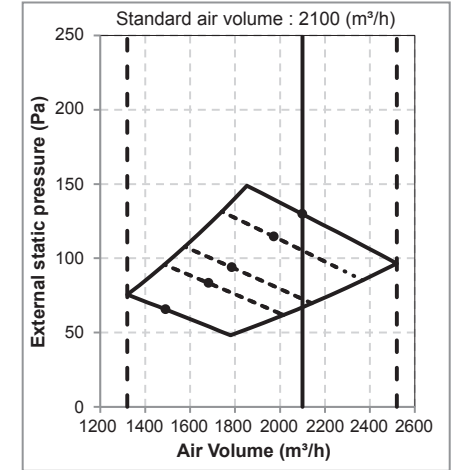


150Pa

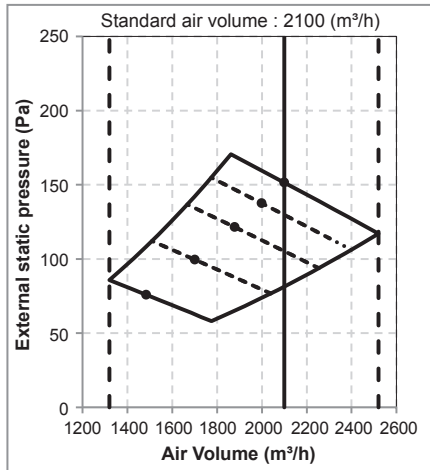

175Pa







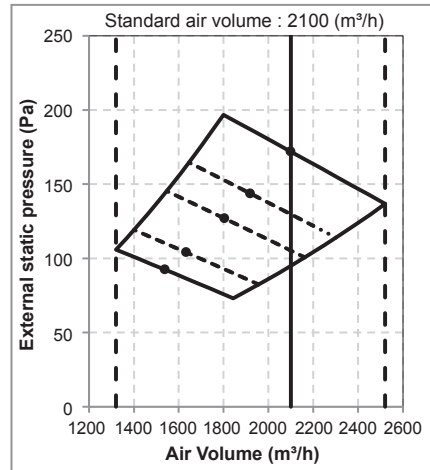


200Pa

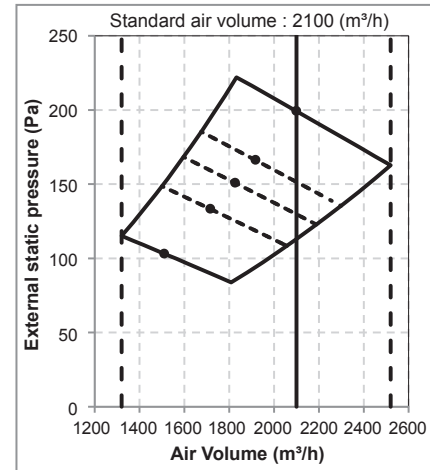








■ External processor PQ

MMD-UP1121HFP-E1

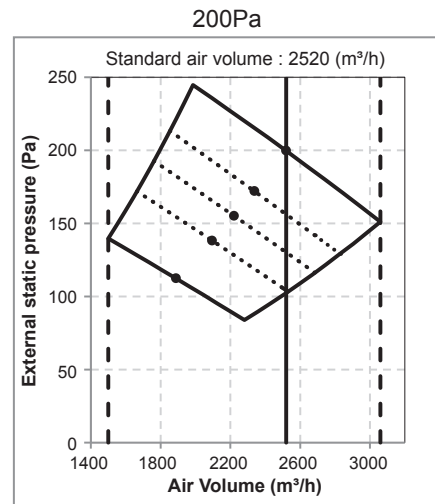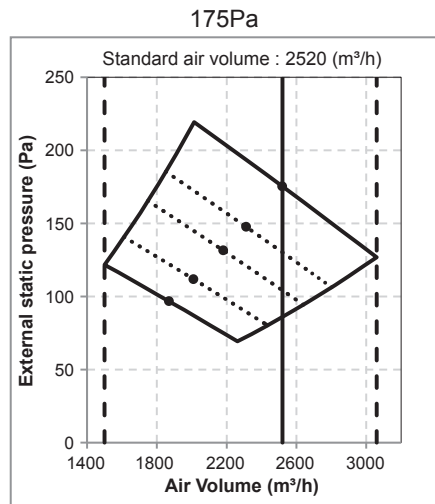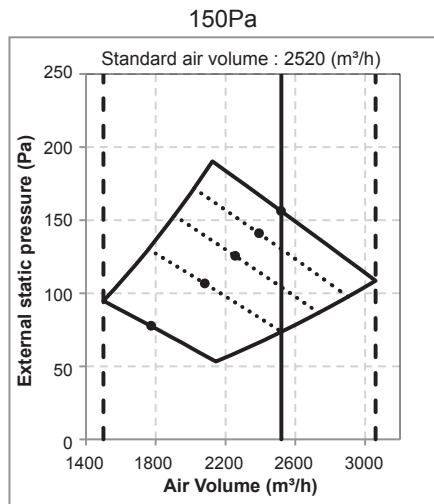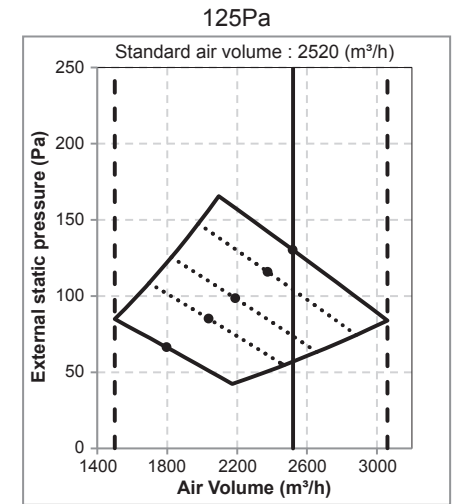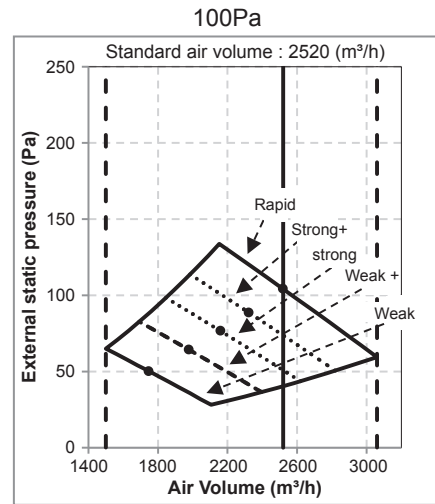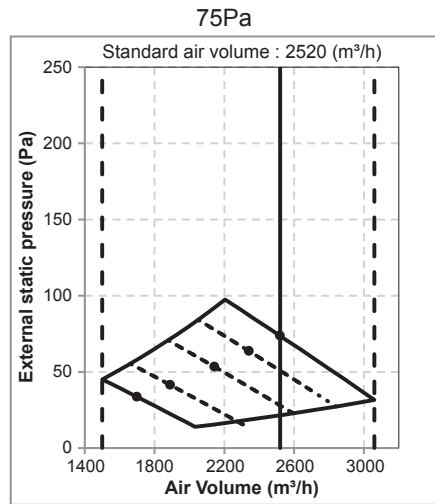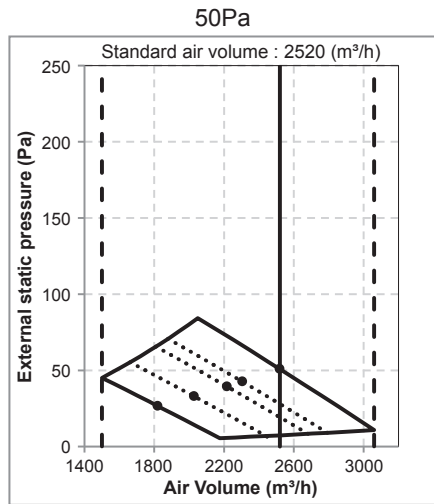

■ External processor PQ

MMD-UP1281HFP-E1

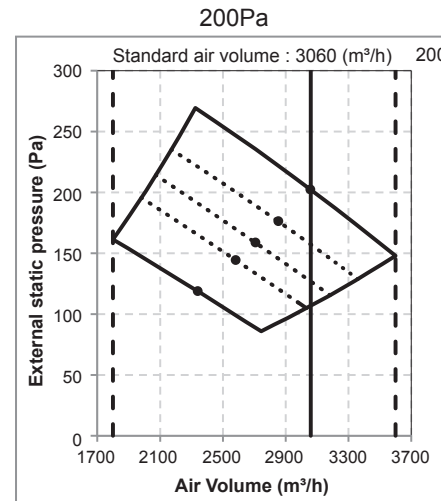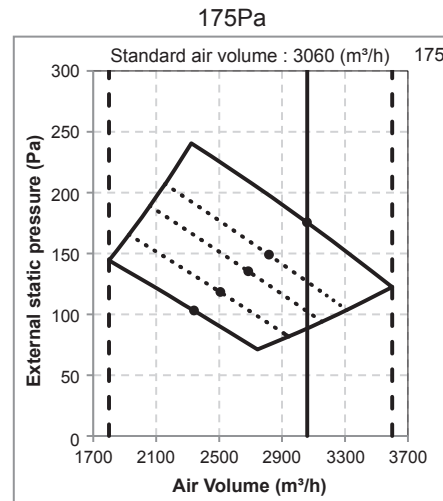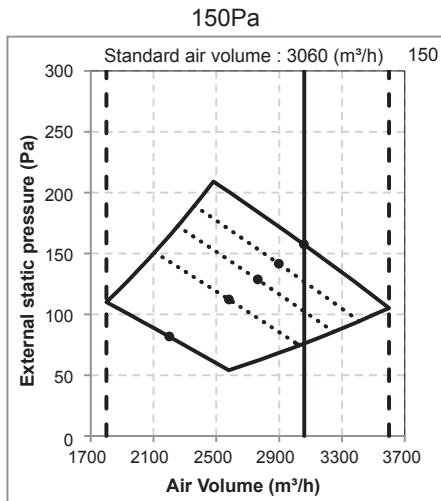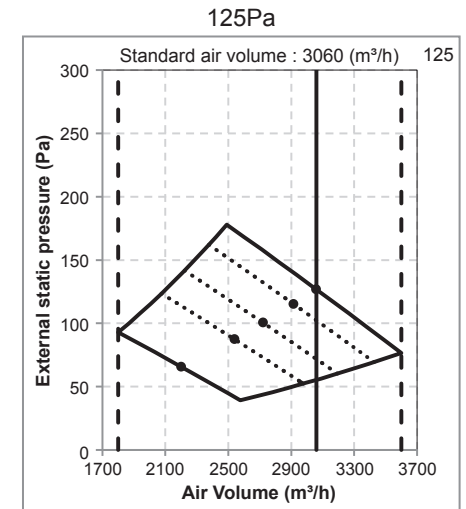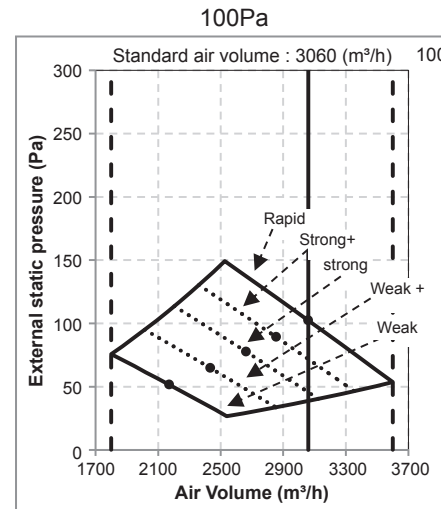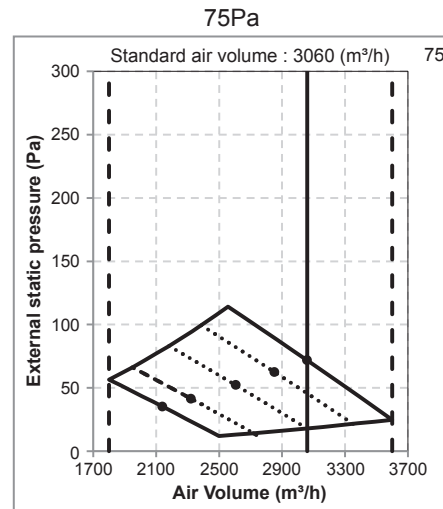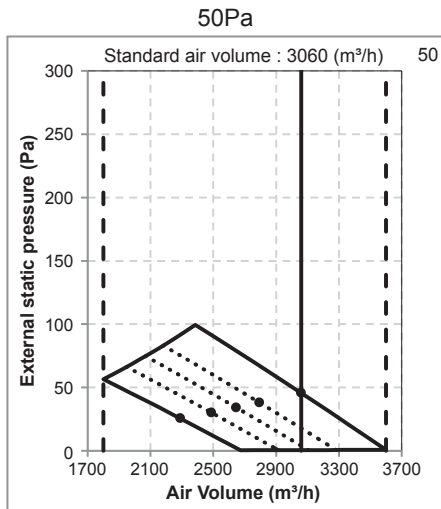

8 Refrigerant piping

CAUTION

Use flare nuts that are included with the unit. Using different flare nuts may cause refrigerant gas leakage.

Refrigerant piping

Use the following item for the refrigerant piping.
Material: Seamless phosphorous de-oxidized copper pipe.

6.35, 9.52 and 12.7 Wall thickness 0.8 mm or more
15.88, wall thickness 1.0 mm or more.

REQUIREMENT

When the refrigerant pipe is long, provide support brackets at intervals of 2.5 - 3 m to clamp the refrigerant pipe. Otherwise, abnormal sound may be generated.

CAUTION

IMPORTANT 4 POINTS FOR PIPING WORK

1. Reusable mechanical connectors and flared joints are not allowed indoors. When mechanical connectors are reused indoors, sealing parts shall be renewed.
 When flared joints are reused indoors, the flare part shall be re-fabricated.
2. Tight connection (between pipes and unit)
3. Evacuate the air in the connecting pipes by using VACUUM PUMP.
4. Check the gas leakage. (Connected points)

Pipe size

| Model | Pipe size | | Remarks |
|--------------|-----------|---------|---------------------------------------|
| 0721 0961 | A(Gas) | Dia22.2 | |
| | B(Liquid) | Dia12.7 | |
| 1121 | A(Gas) | Dia28.6 | Use the SOCKET (Accessory) |
| | B(Liquid) | Dia12.7 | |
| 1281 | A(Gas) | Dia28.6 | Use the SOCKET (Accessory) |
| | B(Liquid) | Dia15.9 | Use the LIQUID JOINT PIPE (Accessory) |


Permissible piping length and height difference

They vary according to the outdoor unit.
 For details, refer to the Installation Manual attached to the outdoor unit.

Flaring

1. Cut the pipe with a pipe cutter.
 Remove burrs completely.
 Remaining burrs may cause gas leakage.
2. Insert a flare nut into the pipe, and flare the pipe.
 As the flaring sizes of R32 or R410A differ from those of refrigerant R22, the flare tools newly manufactured for R32 or R410A are recommended.

However, the conventional tools can be used by adjusting projection margin of the copper pipe.

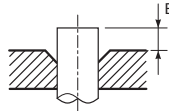


Projection margin in flaring: B (Unit: mm) RIDGID (Clutch type)

| Outside diameter size (mm) | Tool used | Conventional tool used |
|----------------------------|-----------|------------------------|
| 6.4, 9.5 | 0 - 0.5 | 1.0 - 1.5 |
| 12.7, 15.9 | | |

Flaring dia. meter size: A (Unit: mm)

| Outside diameter size (mm) | A ⁺⁰ / _{-0.4} |
|----------------------------|-----------------------------------|
| 6.4 | 9.1 |
| 9.5 | 13.2 |
| 12.7 | 16.6 |
| 15.9 | 19.7 |

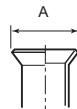

CAUTION

- Do not scratch the inner surface of the flared part when removing burrs.
- Flare processing under the condition of scratches on the inner surface of flare processing part will cause refrigerant gas leak.
- Check that the flared part is not scratched, deformed, stepped, or flattened, and that there are no chips adhered or other problems, after flare processing.
- Do not apply refrigerating machine oil to the flare surface.

Tightening connection

CAUTION


Do not apply excessive torque. Otherwise, the nut may crack depending on the conditions.

(Unit: N•m)

| Outside diameter size (mm) | Tightening torque |
|----------------------------|-------------------|
| 6.4 mm | 14 - 18 |
| 9.5 mm | 34 - 42 |
| 12.7 mm | 49 - 61 |
| 15.9 mm | 68 - 82 |

Tightening torque of flare pipe connections

Incorrect connections may cause not only a gas leak, but also a trouble of the refrigeration cycle. Align the centres of the connecting pipes and tighten the flare nut as far as possible with your fingers. Then tighten the nut with wrenches and torque wrench as shown in the figure.

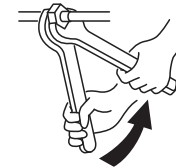


Work using two wrenches

REQUIREMENT

Tightening with an excessive torque may crack the nut depending on installation conditions. Tighten the nut within the specified tightening torque.

Gas side refrigerant pipe connection


- Be careful of fire when brazing the pipes above the ceiling.
- Turn up the pipe heat insulator to the unit side.
- Wrap the pipe with wet cloth.

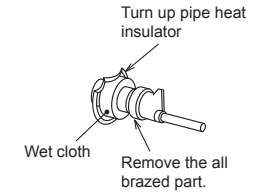

- Remove the cup on the gas side piping by using a burner.

CAUTION


- Do not burn the pipe heat insulator.

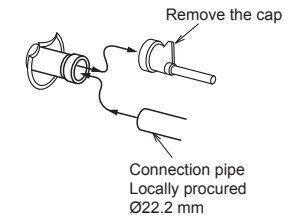

- Braze the connection piping to the joint part. (procure locally)



- Turn back the pipe heat insulator and tie up with a banding band.

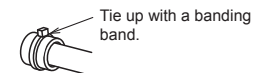

■ Airtight test / Air purge, etc.

For air tightness test, vacuum drying and adding refrigerant, refer to the Installation Manual attached to the outdoor unit.

⚠ CAUTION

Do not supply power to the indoor unit until the airtight test and vacuuming are completed. (If the indoor unit is powered on, the pulse motor valve is fully closed, which extends the time for vacuuming.)

■ Open the valve fully

Open the valve of the outdoor unit fully.

Gas leak check

Check with a leak detector or soap water whether gas leaks or not, from the pipe connecting section or cap of the valve.

REQUIREMENT

Use a leak detector manufactured exclusively for HFC refrigerant (R32, R134a, R410A, etc).


■ Heat insulation process

Apply heat insulation for the pipes separately at liquid side and gas side.

- For the heat insulation to the pipes at gas side, use the material with heat-resisting temperature 120 °C or higher.
- To use the attached heat insulation pipe, apply the heat insulation to the pipe connecting section of the indoor unit securely without gap.

REQUIREMENT

- Apply the heat insulation to the pipe connecting section of the indoor unit securely up to the root without exposure of the pipe. (The pipe exposed to the outside causes water leak.)
- Wrap heat insulator with its slits facing up (ceiling side).

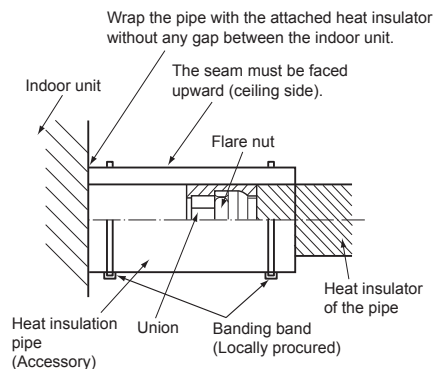

9 Electrical connection

⚠ WARNING

- **Use the specified wires for wiring connect the terminals. Securely fix them to prevent external forces applied to the terminals from affecting the terminals.**
Incomplete connection or fixation may cause a fire or other trouble.
- **Connect earth wire. (grounding work)**
Incomplete earthing cause an electric shock.
Do not connect earth wires to gas pipes, water pipes, lightning conductor or telephone earth wires.
- **Appliance shall be installed in accordance with national wiring regulations.**
Capacity shortage of power circuit or incomplete installation may cause an electric shock or a fire.

⚠ CAUTION

- **The wire size and wire length of the communication line differs depending on the outdoor unit series to be connected.**
- If incorrect / incomplete wiring is carried out, it will cause an electrical fire or smoke.
- Install an earth leakage breaker that is not tripped by shock waves.
If an earth leakage breaker is not installed, an electric shock may be caused.
- Use the cord clamps attached to the product.
- Do not damage or scratch the conductive core and inner insulator of power and control wires when peeling them.
- Use the power supply wire and control wires of specified thickness, type, and protective devices required.
- Do not connect 208V-240V power to the terminal blocks (Uv (U1)), (Uv (U2)), (A), (B) for control wiring. (Otherwise, the system will fail.)
- Perform the electric wiring so that it does not come to contact with the high-temperature part of the pipe. The coating may melt resulting in an accident.

REQUIREMENT

- For power supply wiring, strictly conform to the Local Regulation in each country.
- For wiring of power supply of the outdoor units, follow the Installation Manual of each outdoor unit.
- After connecting wires to the terminal blocks, provide a trap and fix wires with the cord clamp.
- Run the refrigerant piping line and communication line in the same line.
- Do not turn on the power of the indoor unit until vacuuming of the refrigerant pipes completes.

Power supply wire and communication wires specifications

Power supply wire and communication wires are locally procured.

For the power supply specifications, follow to the table below. If capacity is little, it is dangerous because overheat or burnout may be caused.

For specifications of the power capacity of the outdoor unit and the power supply wires, refer to the Installation Manual attached to the outdoor unit.

Indoor unit power supply

- For the power supply of the indoor unit, prepare the exclusive power supply separated from that of the outdoor unit.
- Arrange the power supply, circuit breaker, and main switch of the indoor unit connected to the same outdoor unit so that they are commonly used.
- Power supply wire specification: Cable 3-core 2.5 mm², in conformity with Design 60245 IEC 57.

Power supply

| | | |
|---|--|--|
| Power supply | 220V-240V ~, 50Hz 208V-230V ~, 60Hz | |
| Power supply switch / circuit breaker or power supply wiring / fuse rating for indoor units should be selected by the accumulated total current values of the indoor units. | | |
| Power supply wiring | Below 50 m | 3 × 2.5 mm ² (power supply and earth) |

Control wiring, Central controller wiring

- 2-core with polarity wires are used for the control wiring between indoor unit and outdoor unit and Central controller wiring.
- To prevent noise trouble, use 2-core shield wire.

Communication line

TU2C-Link models (U series) can be combined with TCC-Link models (other than U series).
For details of communication type, refer to the following table.

Communication type and model names

| Communication type | TU2C-Link (U series and future models) | TCC-Link (Other than U series) |
|--|---|---|
| Outdoor unit | MMY-MUP*** ↑ This letter indicates U series model. | Other than U series MMY-MHP***, MMY-MAP*** MCY-MHP*** |
| Indoor unit | MM*-UP*** ↑ This letter indicates U series model. | Other than U series MM*-AP*** |
| Wired remote controller | RBC-ASCU*** ↑ This letter indicates U series model. | Other than U series |
| Wireless remote controller kit & receiver unit | RBC-AXU*** ↑ This letter indicates U series model. | Other than U series |

U series outdoor unit : SMMS-u (MMY-MUP***)

Other than U series outdoor unit : SMMS-i, SMMS-e etc. (MMY-MHP***, MMY-MAP***)


<In the case of combining with outdoor units of Super Modular Multi System u series (SMMS-u)>

| | |
|--|---|
| Uv line and Uc line (L2, L3, L4) (2-core shield wire, non-polarity) | Wire size : 1.0 to 1.5 mm ² (Up to 1000 m) |
| Uh line (L1) (2-core shield wire, non-polarity) | Wire size : 1.0 to 1.5 mm ² (Up to 1000 m) 2.0 mm ² (Up to 2000 m) |

- U (v, h, c) line means of control wiring.
 - Uv line : Between indoor and outdoor units.
 - Uh line : Central control line.
 - Uc line : Between outdoor and outdoor units.
- Uv line and Uc line are independent from another refrigerant line. Total length of Uv and Uc lines (L3+L4) in each refrigerant line is up to 1000 m.

REQUIREMENT

For connection of Uv line / Uc line or Uh line, wire each line using wires with the same type and size.
If different wire types and size are mixed and used in a system, communication trouble is caused.

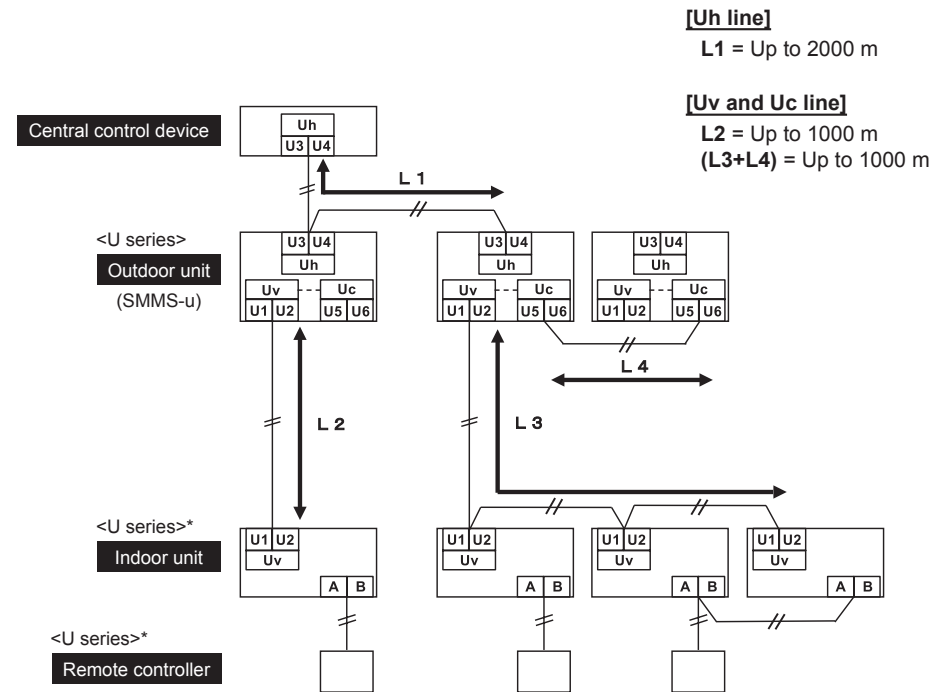

* Even if the indoor unit and the remote controller are "other than U series", the wiring specification are the same.

<In the case of combining with outdoor units other than Super Modular Multi System u series (SMMS-u)>


| | |
|--|---|
| Control wiring between indoor units, and outdoor unit (L2, L3) (2-core shield wire, non-polarity) | Wire size : 1.25 mm ² (Up to 1000 m) 2.0 mm ² (Up to 2000 m) |
| Central control line wiring (L1) (2-core shield wire, non-polarity) | |
| Control wiring between outdoor units (L4) (2-core shield wire, non-polarity) | Wire size : 1.25 to 2.0 mm ² (Up to 100 m) |

- The length of the communication line (L1+L2+L3) means the total length of the inter-unit wire length between indoor and outdoor units added with the central control system wire length.

REQUIREMENT

For connection of between indoor and outdoor units line / between outdoor and outdoor units line or central control line, wire each line using wires with the same type and size. If different wire types and size are mixed and used in a system, communication trouble is caused.

[Communication line]
(L1+L2+L3) = Up to 2000 m

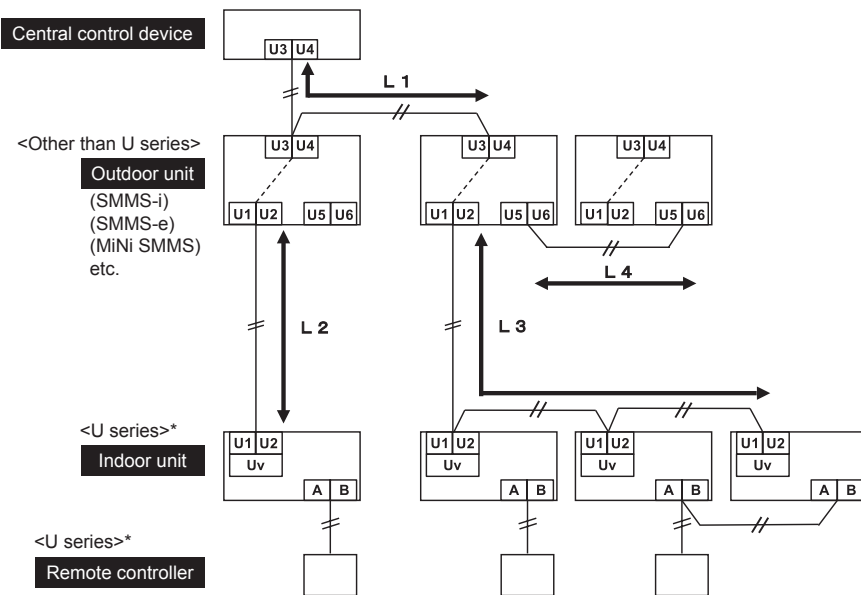

* Even if the indoor unit and the remote controller are "other than U series", the wiring specification are the same.


Remote controller wiring

- 2-core with non-polarity wire is used for the remote controller wiring and group remote controllers wiring.

| | | |
|--|---|-------------|
| Remote controller wiring, remote controller inter-unit wiring | Wire size: 0.5 mm ² to 2.0 mm ² | |
| Total wire length of remote controller wiring and remote controller inter-unit wiring = L + L1 + L2 + ... Ln | In case of one remote controller | Up to 500 m |
| | In case of two remote controller | Up to 400 m |
| Max. length of each remote control wiring between indoor units = L1, L2, ... , Ln | Up to 200 m | |

CAUTION

- The remote controller wire (Communication line) and AC 208V-240V wires cannot be parallel to contact each other and cannot be stored in the same conduits. If doing so, a trouble may be caused on the control system due to noise or other factor.
- If U series models (TU2C-Link) are combined with models other than U series (TCC-Link), the wiring specifications and maximum number of connectable indoor units will be changed. Pay attentions to their communication specifications when carrying out the installation, maintenance, or repair. For its details, refer to the "Communication line" in 9 Electrical connection.

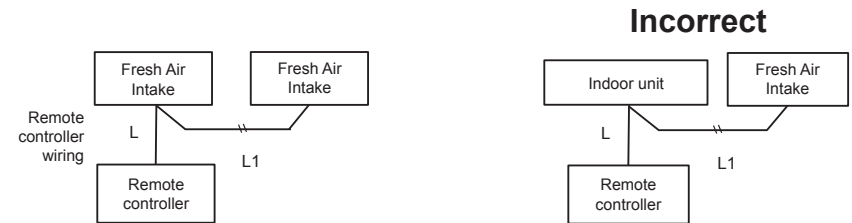

The fresh air intake unit and indoor unit for air conditioning cannot be connected as a group control.

REQUIREMENT


After carrying out installation of additional indoor unit, relocation, or repairing, set the addresses again. For its detail, refer to the Installation Manual attached to the outdoor unit.

■ Wiring between indoor unit and outdoor units

NOTE

A wiring diagram below is an example for connection to SMMS-u series. For connecting to other outdoor unit series, refer to the Installation Manual attached to the outdoor unit to be connected.

▼ Wiring example

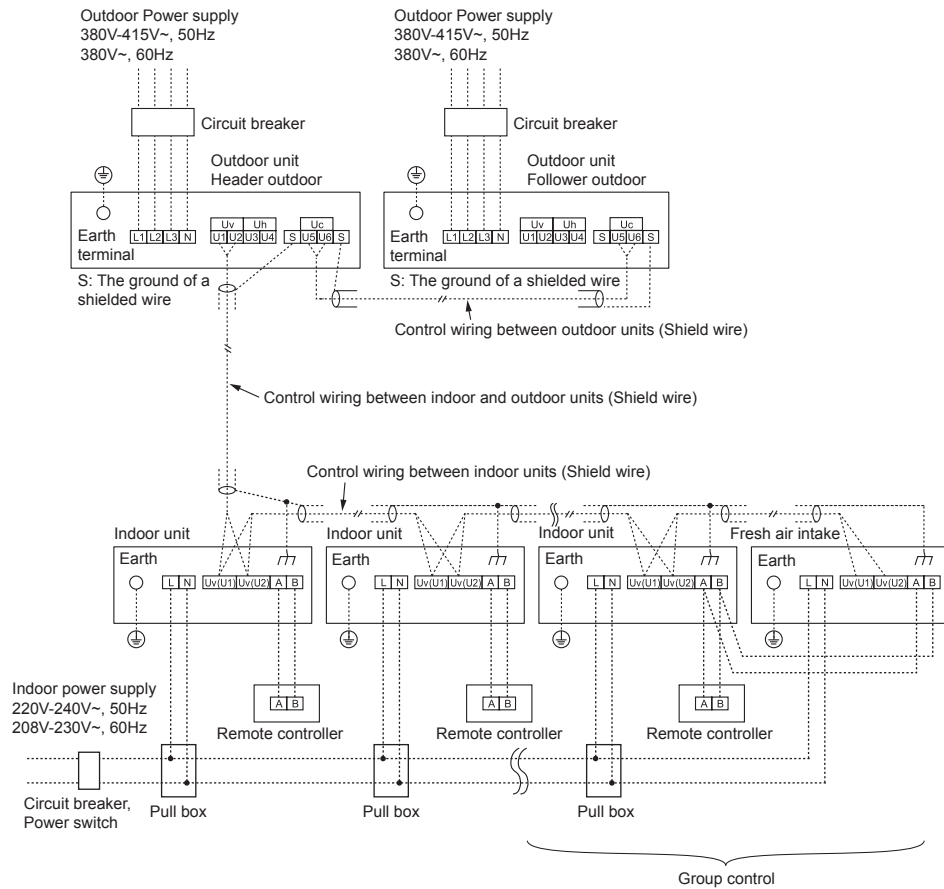


■ Wire connection

REQUIREMENT

- Connect the wires matching the terminal numbers. Incorrect connection causes a trouble.
- Pass the wires through the bushing of wire connection holes of the indoor unit.
- Keep a margin (Approx. 100 mm) on a wire to hang down the electrical control box at servicing or other purpose.
- The low-voltage circuit is provided for the remote controller. (Do not connect the high-voltage circuit)



- Before performing wiring work in the electrical control box, remove the cover of the box (fixed with 6 screws).
- Remove screw A, and loosen screw B.
- Pull up the electrical control box cover and then open it forward.
- Tighten the screws of the terminal block firmly, and fix the wires with the cord clamps attached to the electrical control box. (Do not apply tension to the connecting section of the terminal block.)
- Mount the cover of the electrical control box without pinching wires (fixed with 6 screws).
- Using the attached seal material, seal the wire connecting port.

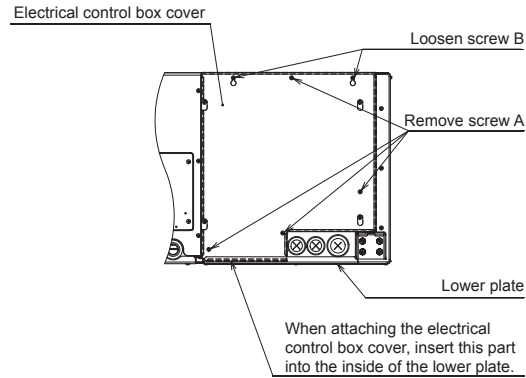



■ Remote controller wiring

Strip off approx. 9 mm the wire to be connected.

Wiring diagram

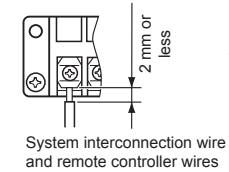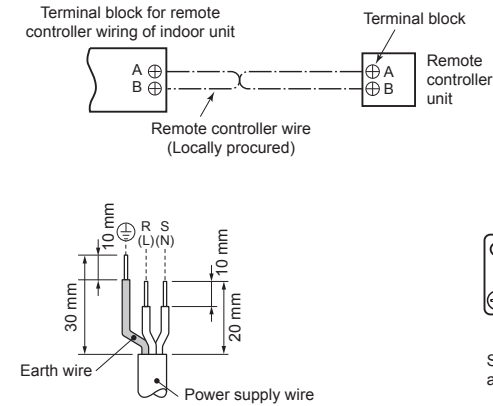

See the figure on the left for system interconnection wires and remote controller wires to the terminal block.

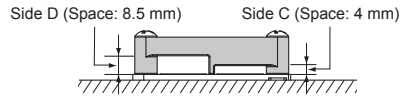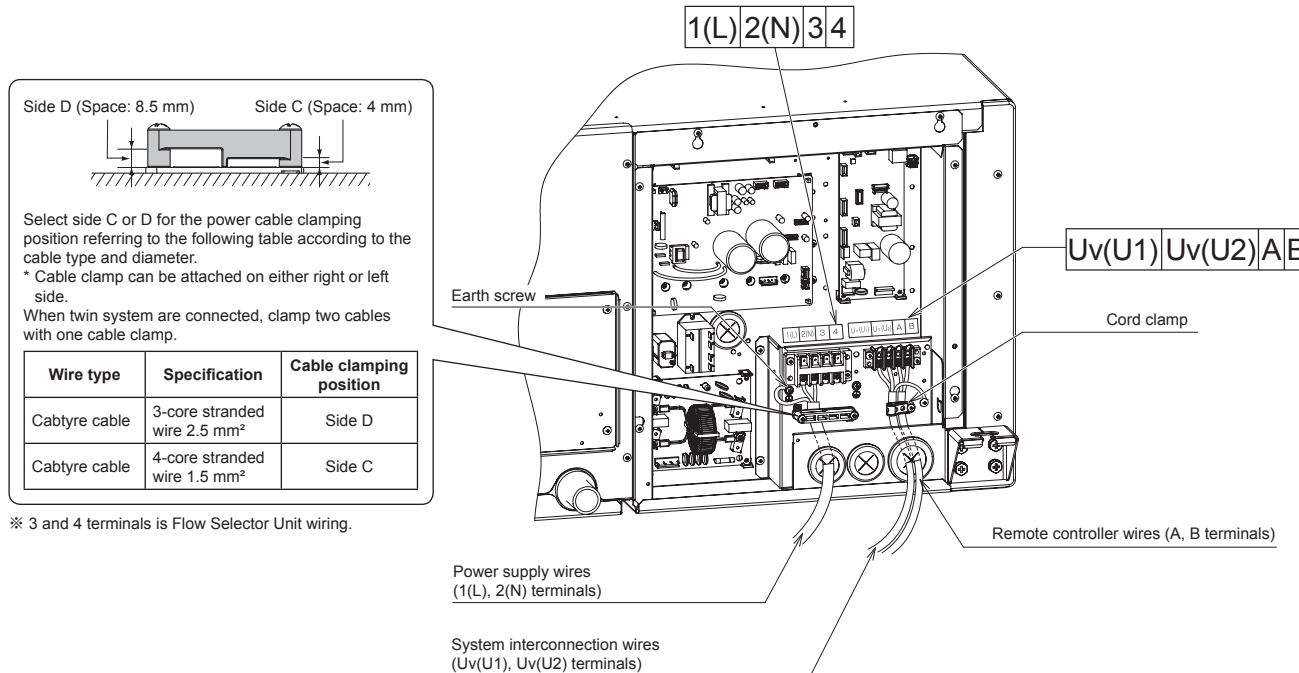


Select side C or D for the power cable clamping position referring to the following table according to the cable type and diameter.

* Cable clamp can be attached on either right or left side.

When twin system are connected, clamp two cables with one cable clamp.

| Wire type | Specification | Cable clamping position |
|---------------|--|-------------------------|
| Cabtyre cable | 3-core stranded wire 2.5 mm ² | Side D |
| Cabtyre cable | 4-core stranded wire 1.5 mm ² | Side C |

※ 3 and 4 terminals is Flow Selector Unit wiring.

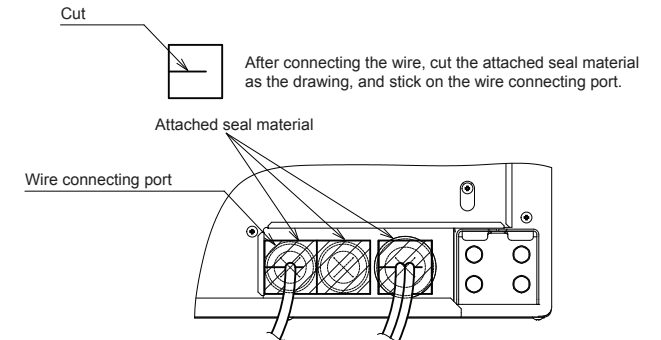

10 Applicable controls

REQUIREMENT

When the air conditioner is used for the first time, it will take some moments after the power has been turned on before the remote controller becomes available for operations: This is normal and is not indicative of trouble.

- Concerning the automatic addresses (The automatic addresses are set up by performing operations on the outdoor interface circuit board.) While the automatic addresses are being set up, no remote controller operations can be performed. Setup takes up to 10 minutes (usually about 5 minutes).
- When the power is turned on after automatically address setup, It takes up to 10 minutes (usually about 3 minute) for the outdoor unit to start operating after the power has been turned on. Before the air conditioner was shipped from the factory, all units are set to [STANDARD] (factory default).

If necessary, change the indoor unit settings. The settings are changed by operating the wired remote controller.

* The settings cannot be changed using only a wireless remote controller and simple remote controller by itself so install a wired remote controller separately as well.

■ Applicable controls setup (settings at the site)

Remote controller model name: RBC-ASCU11-E


Basic procedure

Be sure to stop the air conditioner before making settings.

(Change the setup while the air conditioner is not working.)


⚠ CAUTION

Set only the Code No. shown in the following table: Do NOT set any other Code No. If a Code No. not listed is set, it may not be possible to operate the air conditioner or other trouble with the product may result.

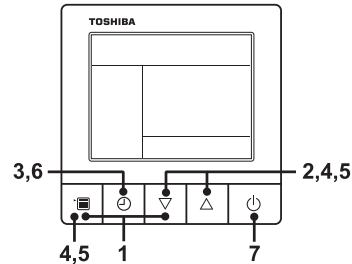

1 Push and hold menu button and [▽] setting button simultaneously for 10 seconds or more.

- After a while, the display flashes as shown in the figure. "ALL" is displayed as indoor unit numbers during initial communication immediately after the power has been turned on.

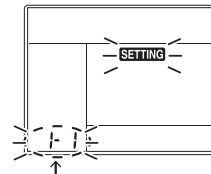


Indoor unit No.

2 Each time [▽] [△] setting button is pushed, indoor unit numbers in the group control change cyclically. Select the indoor unit to change settings for.

- The fan of the selected indoor unit runs. The indoor unit can be confirmed for which to change settings.

3 Push OFF timer button to confirm the selected indoor unit.

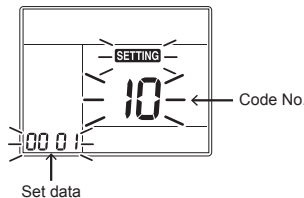

4 Push the menu button to make Code No. [**] flash. Change Code No. [**] with [▽] [△] setting button.

5 Push the menu button to make Set data [****] flash. Change Set data [****] with [▽] [△] setting button.

6 Push OFF timer button.

By doing so, the setup is completed.

- To change other settings of the selected indoor unit, repeat from Procedure 4.

7 When all the settings have been completed, push ON/OFF button to determine the settings.

"SETTING" flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while "SETTING" is flashing.)

- To change settings of another indoor unit, repeat from Procedure 1.

■ Filter sign setting

According to the installation condition, the filter sign term (Notification of filter cleaning) can be changed.

Follow to the basic operation procedure

(1 → 2 → 3 → 4 → 5 → 6 → 7).

- Specify [01] for the Code No. in Procedure 4.
- For the set data in Procedure 5, select the set data of filter sign term from the following table.

| Set data | Filter sign term |
|----------|-----------------------------|
| 0000 | None |
| 0001 | 150 H |
| 0002 | 2500 H (Factory default) |
| 0003 | 5000 H |
| 0004 | 10000 H |

- The filter sign may be unavailable depending on the remote controllers.

■ External static pressure settings

To set the external static pressure, refer to the "Fan characteristics" in 7 Duct design.

Set up a tap change based upon the external static pressure of the duct to be connected.

To set up a tap change, follow to the basic operation procedure (1 → 2 → 3 → 4 → 5 → 6 → 7).


- Specify [5d] for the Code No. in procedure 4.
- For the set data of procedure 5, select a set data of the external static pressure to be set up from the following table.

| Set data | External static pressure | |
|----------|--------------------------|-----------------|
| 0000 | 100 Pa | Factory default |
| 0001 | 50 Pa | — |
| 0002 | 75 Pa | — |
| 0003 | 150 Pa | — |
| 0004 | 125 Pa | — |
| 0005 | 175 Pa | — |
| 0006 | 200 Pa | — |

Remote controller-less setting

Change the external static pressure setting with the DIP switch on the P.C. board.

* Once the Set data has been changed, though it can be freely set to 0001 or 0003, to reset it to 0000 (factory default), it need changing using remote controller (sold separately). After setting has been completed, restart the air conditioner.

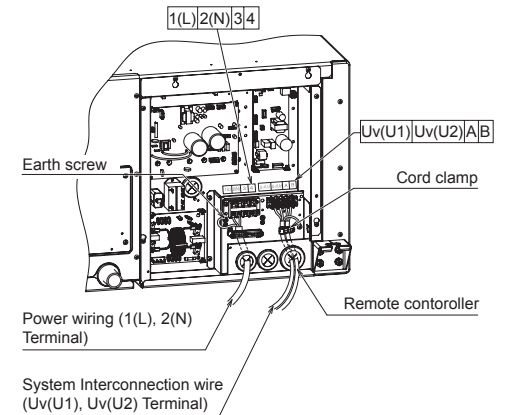

| SW501-1 | OFF | ON | OFF | ON |
|----------|-----------------|------|------|------|
| SW501-2 | OFF | OFF | ON | ON |
| Set data | Factory default | 0001 | 0003 | 0006 |

To restore the factory defaults

To return the DIP switch settings to the factory defaults, set SW501-1 and SW501-2 to OFF, connect a separately sold wired remote controller, and then set the data of Code No. [5d] to "0000".

■ All Fresh Air Intake Unit connection setting

Other than Super Modular Multi System u series (SMMS-e or SMMS-7)

When only Fresh Air Intake Units connected to Outdoor unit, set the all Fresh Air Intake Unit connection setting at Fresh Air Intake Units.

Firstly, follow to the basic operation procedure (1 → 2 → 3 → 4 → 5 → 6 → 7).

- The Code No. in procedure 4 is [C8].
- The Set data in procedure 5 is [0000].

Secondary, follow to the basic operation procedure (4 → 5 → 6).

- The Code No. in procedure 4 is [AE].
- The Set data in procedure 5 is [0016].

Finally, follow to the basic operation procedure (4 → 5 → 6 → 7).

- The Code No. in procedure 4 is [AF].
- The Set data in procedure 5 is [0010].

| Code No. | Set data |
|----------|----------|
| C8 | 0000 |
| AE | 0016 |
| AF | 0010 |

■ Group control (Fresh Air Intake Indoor Unit)

- The Fresh Air Intake unit and indoor unit for air conditioner cannot be connected as a group control.
- The wired remote controller only can control a group control. The wireless remote controller is unavailable for this control.
- For wiring procedure and wires of the individual line (Identical refrigerant line) system, refer to "9 Electrical connection" in this Manual.
- Wiring between indoor units in a group is performed in the following procedure.
- Connect the indoor units by connecting the remote controller wires from the remote controller terminal blocks (A, B) of the indoor unit connected with a remote controller to the remote controller terminal blocks (A, B) of the other indoor unit. (Non-polarity)
- For address setup, refer to the Installation Manual attached to the outdoor unit.

11 Test run

■ Before test run

- Before turning on the circuit breaker, carry out the following procedure.
 - 1) By using insulation tester (500VMΩ), check that resistance of 1MΩ or more exists between the terminal block L to N and the earth (grounding). If resistance of less than 1MΩ is detected, do not run the unit.
 - 2) Check the valve of the outdoor unit being opened fully.
- To protect the compressor at activation time, leave power-ON for 12 hours or more for operating.
- Before starting a test run, be sure to set addresses following the Installation Manual supplied with the outdoor unit.

◆ Requirements for turning thermostat OFF

Cooling operation

- When the outdoor/suction air temperature is lower than or equal to 19 °C.
- When the outdoor/suction air temperature is lower than or equal to 3 °C above the set temperature.

Heating operation

- When the outdoor/suction air temperature is lower than or equal to -10 °C
- When the outdoor/suction air temperature is higher than or equal to 15 °C.
- When the outdoor/suction air temperature is higher than or equal to 3 °C above the set temperature.

■ Execute a test run

- When a fan operation is to be performed for an individual indoor unit, turn off the power, short circuit CN72 on the circuit board, and then turn the power back on. (Set the operation mode to "fan" to operate the unit.) When the test run has been performed using this method, be sure to release the short circuit of CN72 after the test run is completed.

Operate the unit with the remote controller as usual. For the procedure of the operation, refer to the Owner's Manual attached to the outdoor unit. A forced test run can be executed in the following procedure even if the operation stops by thermostat-OFF.

In order to prevent a serial operation, the forced test run is released after 60 minutes have passed and returns to the usual operation.

CAUTION


- Do not use the forced test run for cases other than the test run because it applies an excessive load to the devices.

12 Maintenance


Wired remote controller

Be sure to stop the air conditioner before making settings.


(Change the setup while the air conditioner is not working.)

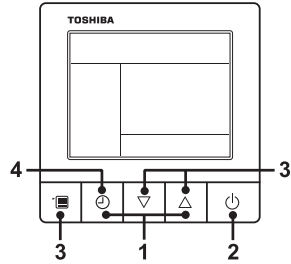

- 1 Push and hold OFF timer button and [△] setting button simultaneously for 10 seconds or more. [TEST] is displayed on the display part and the test run is permitted.

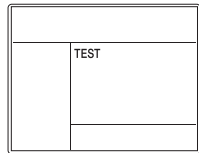

- 2 Push ON/OFF button.
- 3 Push menu button to select the operation mode. Select [Cool] or [Heat] with [▽] [△] setting button, and then push menu button (three times) again to determine the operation mode.
 - Do not run the air conditioner in a mode other than [Cool] or [Heat].
 - The temperature setting function does not work during test run.
 - The check code is displayed as usual.
- 4 After the test run, push OFF timer button to stop a test run. ([TEST] disappears on the display and the air conditioner enters the normal stop mode.)

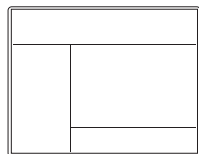

Periodic Maintenance

For environmental conservation, it is strongly recommended that the indoor and outdoor units of the air conditioner in use be cleaned and maintained regularly to ensure efficient operation of the air conditioner. When the air conditioner is operated for a long time, periodic maintenance (once a year) is recommended. Furthermore, regularly check the outdoor unit for rust and scratches, and remove them or apply rustproof treatment, if necessary.

As a general rule, when an indoor unit is operated for 8 hours or more daily, clean the indoor unit and outdoor unit at least once every 3 months. Ask a professional for this cleaning / maintenance work. Such maintenance can extend the life of the product though it involves the owner's expense.

Failure to clean the indoor and outdoor units regularly will result in poor performance, freezing, water leakage, and even compressor failure.

Inspection before maintenance

Following inspection must be carried out by a qualified installer or qualified service person.

| Parts | Inspection method |
|----------------|---|
| Heat exchanger | Access from inspection opening and remove the access panel. Examine the heat exchanger if there is any clogging or damages. |
| Fan motor | Access from inspection opening and check if any abnormal noise can be heard. |
| Fan | Access from inspection opening and remove the access panel. Examine the fan if there are any waggles, damages or adhesive dust. |
| Filter | Go to installed location and check if there are any stains or breaks on the filter. |
| Drain pan | Access from inspection opening and remove the access panel. Check if there is any clogging or drain water is polluted. |


Maintenance List

| Part | Unit | Check (visual / auditory) | Maintenance |
|--------------------------------|------------------|--|--|
| Heat exchanger | Indoor / outdoor | Dust / dirt clogging, scratches | Wash the heat exchanger when it is clogged. |
| Fan motor | Indoor / outdoor | Sound | Take appropriate measures when abnormal sound is generated. |
| Filter | Indoor | Dust / dirt, breakage | <ul style="list-style-type: none"> • Wash the filter with water when it is contaminated. • Replace it when it is damaged. |
| Fan | Indoor | <ul style="list-style-type: none"> • Vibration, balance • Dust / dirt, appearance | <ul style="list-style-type: none"> • Replace the fan when vibration or balance is terrible. • Brush or wash the fan when it is contaminated. |
| Air intake / discharge grilles | Indoor / outdoor | Dust / dirt, scratches | Fix or replace them when they are deformed or damaged. |
| Drain pan | Indoor | Dust / dirt clogging, drain contamination | Clean the drain pan and check the downward slope for smooth drainage. |
| Ceiling panel, louvres | Indoor | Dust / dirt, scratches | Wash them when they are contaminated or apply repair coating. |
| Exterior | Outdoor | <ul style="list-style-type: none"> • Rust, peeling of insulator • Peeling / lift of coat | Apply repair coating. |

13 Troubleshooting

Confirmation and check

If a problem occurs with the air conditioner, the OFF timer indicator alternately shows the check code and the indoor Unit No. in which the problem occurred.


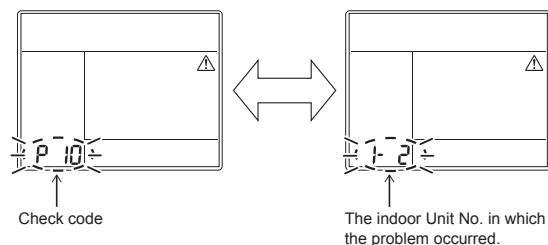


Troubleshooting history and confirmation

You can check the troubleshooting history with the following procedure if a problem occurs with the air conditioner. (The troubleshooting history records up to 4 incidents.)

You can check it during operation or when operation is stopped.

- If you check the troubleshooting history during OFF timer operation, the OFF timer will be canceled.
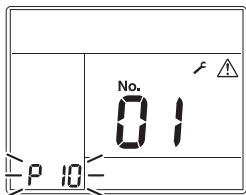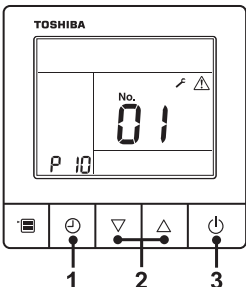
| Procedure | Description of operation |
|-----------|--|
| 1 | <p>Push the OFF timer button for over 10 seconds and the indicators appear as an image indicating the troubleshooting history mode has been entered. If [/ i Service check] is displayed, the mode enters in the troubleshooting history mode.</p> <ul style="list-style-type: none"> • [01: Order of troubleshooting history] appears in the temperature indicator. • The OFF timer indicator alternately shows the [check code] and the [indoor Unit No.] in which the problem occurred.  |
| 2 | <p>Each time the setting button is pushed, the recorded troubleshooting history is displayed in sequence. The troubleshooting history appears in order from [01] (newest) to [04] (oldest).</p> <p>CAUTION</p> <p>In the troubleshooting history mode, DO NOT push the Menu button for over 10 seconds, doing so deletes the entire troubleshooting history of the indoor unit.</p>  |
| 3 | <p>After you have finished checking, push the ON/OFF button to return to the regular mode.</p> <ul style="list-style-type: none"> • If the air conditioner is operating, it remains operated even after the ON/OFF button has been pushed. To stop its operation, push the ON/OFF button again. |

Check method

On the wired remote controller, central control remote controller and the interface P.C. board of the outdoor unit (I/F), a check display LCD (Remote controller) or 7-segment display (on the outdoor interface P.C. board) to display the operation is provided. Therefore the operation status can be known. Using this self-diagnosis function, a trouble or position with error of the air conditioner can be found as shown in the table.

Check code list

The following list shows each check code. Find the check contents from the list according to part to be checked.

- In case of check from indoor remote controller: See "Wired remote controller display" in the list.
- In case of check from outdoor unit: See "Outdoor unit 7-segment display" in the list.
- In case of check from indoor unit with a wireless remote controller: See "Sensor block display of receiving unit" in the list.

○ : Lighting, ◻ : Flashing, ● : Goes off
 ALT: Flashing is alternately when there are two flashing LED.
 SIM: Simultaneous flashing when there are two flashing LED.
 Inverter: Compressor / Fan Inverter P.C. board
 I/F: Interface P.C. board

| Wired remote controller display | Check code | | Wireless remote controller | | | | Check code name | Judging device |
|---------------------------------|------------|---|--|-------|-------|-------|--|--|
| | | Outdoor unit 7-segment display | Sensor block display of receiving unit | | | | | |
| | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| E01 | — | — | ◻ | ● | ● | | Communication trouble between indoor unit and remote controller (Detected at remote controller side) | Remote controller |
| E02 | — | — | ◻ | ● | ● | | Remote controller transmission trouble | Remote controller |
| E03 | — | — | ◻ | ● | ● | | Communication trouble between indoor unit and remote controller (Detected at indoor unit side) | Indoor unit |
| E04 | — | — | ● | ● | ◻ | | Communication circuit trouble between indoor / outdoor unit (Detected at indoor unit side) | Indoor unit |
| E06 | E06 | No. of indoor units in which sensor has been normally received | ● | ● | ◻ | | Decrease of No. of indoor units | I/F |
| — | E07 | — | ● | ● | ◻ | | Communication circuit trouble between indoor / outdoor unit (Detected at outdoor unit side) | I/F |
| E08 | E08 | Duplicated indoor unit addresses | ◻ | ● | ● | | Duplicated indoor unit addresses | Indoor unit • I/F |
| E09 | — | — | ◻ | ● | ● | | Duplicated master remote controllers | Remote controller |
| E10 | — | — | ◻ | ● | ● | | Communication trouble between indoor unit MCU | Indoor unit |
| E11 | — | — | ◻ | ● | ● | | Communication trouble between Application control kit and indoor unit | Indoor unit Application control kit |
| E12 | E12 | 01: Indoor / Outdoor units communication 02: Outdoor / Outdoor units communication | ◻ | ● | ● | | Automatic address start trouble | I/F |
| E15 | E15 | — | ● | ● | ◻ | | No indoor unit during automatic addressing | I/F |
| E16 | E16 | 00: Capacity over 01: No. of connected units | ● | ● | ◻ | | Capacity over / No. of connected indoor units | I/F |
| E17 | — | — | ◻ | ● | ● | | Communication trouble between indoor unit and Flow Selector unit | Indoor unit |
| E18 | — | — | ◻ | ● | ● | | Communication trouble between header and follower units Indoor unit | Indoor unit |
| E19 | E19 | 00: Header is not detected 02: Two or more header units | ● | ● | ◻ | | Outdoor header units quantity trouble | I/F |
| E20 | E20 | 01: Outdoor unit of other line connected 02: Indoor unit of other line connected | ● | ● | ◻ | | Other line connected during automatic address | I/F |
| E23 | E23 | — | ● | ● | ◻ | | Sending trouble in communication between outdoor units Trouble in number of heat storage units (trouble with reception) | I/F |
| E25 | E25 | — | ● | ● | ◻ | | Duplicated follower outdoor addresses | I/F |
| E26 | E26 | No. of outdoor units which received signal normally | ● | ● | ◻ | | Decrease of No. of connected outdoor units | I/F |
| E28 | E28 | Detected outdoor unit number | ● | ● | ◻ | | Follower outdoor unit trouble | I/F |
| E31 | E31 | *1 Inverter quantity information | ● | ● | ◻ | | Inverter communication trouble | I/F |
| F01 | — | — | ◻ | ◻ | ● | ALT | Indoor unit TCJ sensor trouble | Indoor unit |
| F02 | — | — | ◻ | ◻ | ● | ALT | Indoor unit TC2 sensor trouble | Indoor unit |
| F03 | — | — | ◻ | ◻ | ● | ALT | Indoor unit TC1 sensor trouble | Indoor unit |

| Check code | | Wireless remote controller | | | | Check code name | Judging device | |
|---------------------------------|--------------------------------|--|--|-------|-------|-----------------|---|-------------|
| Wired remote controller display | Outdoor unit 7-segment display | | Sensor block display of receiving unit | | | | | |
| | | Auxiliary code | Operation | Timer | Ready | | | Flash |
| F04 | F04 | — | ☐ | ☐ | ○ | ALT | TD1 sensor trouble | I/F |
| F05 | F05 | — | ☐ | ☐ | ○ | ALT | TD2 sensor trouble | I/F |
| F06 | F06 | 01: TE1 sensor 02: TE2 sensor 03: TE3 sensor | ☐ | ☐ | ○ | ALT | TE1,TE2 or TE3 sensor trouble | I/F |
| F07 | F07 | 01: TL1 sensor 02: TL2 sensor 03: TL3 sensor | ☐ | ☐ | ○ | ALT | TL1,TL2 or TL3 sensor trouble | I/F |
| F08 | F08 | — | ☐ | ☐ | ○ | ALT | TO sensor trouble | I/F |
| F09 | F09 | 01: TG1 sensor 02: TG2 sensor 03: TG3 sensor | ☐ | ☐ | ○ | ALT | TG1,TG2 or TG3 sensor trouble | I/F |
| F10 | — | — | ☐ | ☐ | ● | ALT | Indoor unit TA sensor trouble | Indoor unit |
| F11 | — | — | ☐ | ☐ | ● | ALT | TF sensor trouble | Indoor unit |
| F12 | F12 | 01: TS1 sensor 03: TS3 sensor 04: TS3 sensor disconnect | ☐ | ☐ | ○ | ALT | TS1 or TS3 sensor trouble | I/F |
| F13 | F13 | 1* Comp. 1 side 2* Comp. 2 side | ☐ | ☐ | ○ | ALT | TH sensor trouble | Inverter |
| F15 | F15 | — | ☐ | ☐ | ○ | ALT | Outdoor unit temp. sensor miswiring (TE, TL) | I/F |
| F16 | F16 | — | ☐ | ☐ | ○ | ALT | Outdoor unit pressure sensor miswiring (Pd, Ps) | I/F |
| F22 | F22 | — | ☐ | ☐ | ○ | ALT | TD3 sensor trouble | I/F |
| F23 | F23 | — | ☐ | ☐ | ○ | ALT | Ps sensor trouble | I/F |
| F24 | F24 | — | ☐ | ☐ | ○ | ALT | Pd sensor trouble | I/F |
| F29 | — | — | ☐ | ☐ | ● | SIM | Indoor unit other trouble | Indoor unit |
| F30 | F30 | — | ☐ | ☐ | ○ | SIM | Occupancy sensor trouble | Indoor unit |
| F31 | F31 | — | ☐ | ☐ | ○ | SIM | Indoor unit EEPROM trouble | I/F |
| H01 | H01 | 1* Comp. 1 side 2* Comp. 2 side | ● | ☐ | ● | | Compressor break down | Inverter |
| H02 | H02 | 1* Comp. 1 side 2* Comp. 2 side | ● | ☐ | ● | | Compressor trouble (lock) | Inverter |
| H03 | H03 | 1* Comp. 1 side 2* Comp. 2 side | ● | ☐ | ● | | Current detect circuit system trouble | Inverter |
| H04 | H04 | — | ● | ☐ | ● | | Comp. 1 case thermostat operation | I/F |
| H05 | H05 | — | ● | ☐ | ● | | TD1 sensor miswiring | I/F |
| H06 | H06 | — | ● | ☐ | ● | | Low pressure protective operation | I/F |
| H07 | H07 | — | ● | ☐ | ● | | Oil level down detective protection | I/F |
| H08 | H08 | 01: TK1 sensor trouble 02: TK2 sensor trouble 03: TK3 sensor trouble 04: TK4 sensor trouble 05: TK5 sensor trouble | ● | ☐ | ● | | Oil level detective temp. sensor trouble | I/F |
| H14 | H14 | — | ● | ☐ | ● | | Comp. 2 case thermostat operation | I/F |
| H15 | H15 | — | ● | ☐ | ● | | TD2 sensor miswiring | I/F |
| H16 | H16 | 01: TK1 oil circuit system trouble 02: TK2 oil circuit system trouble 03: TK3 oil circuit system trouble 04: TK4 oil circuit system trouble 05: TK5 oil circuit system trouble | ● | ☐ | ● | | Oil level detective circuit trouble | I/F |

| Check code | | Wireless remote controller | | | | Check code name | Judging device | |
|---------------------------------|--------------------------------|--|--|-------|-------|-----------------|--|------------------|
| Wired remote controller display | Outdoor unit 7-segment display | | Sensor block display of receiving unit | | | | | |
| | | Auxiliary code | Operation | Timer | Ready | | | Flash |
| H17 | H17 | 1* Compressor 1 side 2* Compressor 2 side | ● | □ | ● | | Compressor trouble (Step out) | I/F |
| H25 | H25 | — | ● | □ | ● | | TD3 sensor miswiring | I/F |
| J02 | — | — | ● | □ | □ | SIM | Communication trouble between control boards in Flow Selector unit | Indoor unit |
| J03 | — | — | ● | □ | □ | SIM | Duplicated Flow Selector unit addresses | Indoor unit |
| J10 | J10 | Detected indoor unit address | ● | □ | □ | SIM | Flow Selector unit overflow trouble | Indoor unit |
| J11 | — | — | ● | □ | □ | SIM | Flow Selector unit temperature sensor (TCS) trouble | |
| J29 | — | — | ● | □ | □ | SIM | Refrigerant leak detection sensor trouble | Indoor unit |
| J30 | J30 | Detected indoor unit address * Not displayed depending on the DN code (I.DN) setting | ● | □ | □ | SIM | Refrigerant leak detection | Indoor unit |
| J31 | — | — | ● | □ | □ | SIM | Refrigerant leak detection sensor exceeding its life of the product | Indoor unit |
| L02 | L02 | Detected indoor unit address | □ | ● | □ | SIM | Model mismatch of indoor and outdoor unit Indoor unit incompatible with A2L (R32) refrigerant | I/F |
| L03 | — | — | □ | ● | □ | SIM | Indoor unit centre unit duplicated | Indoor unit |
| L04 | L04 | — | □ | ○ | □ | SIM | Outdoor unit line address duplicated | I/F |
| L05 | — | — | □ | ● | □ | SIM | Duplicated indoor units with priority (Displayed in indoor unit with priority) | I/F |
| L06 | L06 | No. of indoor units with priority | □ | ● | □ | SIM | Duplicated indoor units with priority (Displayed in unit other than indoor unit with priority) | I/F |
| L07 | — | — | □ | ● | □ | SIM | Group line in individual indoor unit | Indoor unit |
| L08 | L08 | — | □ | ● | □ | SIM | Indoor unit group / Address unset | Indoor unit, I/F |
| L09 | — | — | □ | ● | □ | SIM | Indoor unit capacity unset | Indoor unit |
| L10 | L10 | — | □ | ○ | □ | SIM | Outdoor unit capacity unset | I/F |
| L11 | L11 | Detected indoor unit address | □ | ○ | □ | SIM | Flow Selector unit not connected | I/F |
| L12 | L12 | 01: Flow Selector unit installation trouble | □ | ○ | □ | SIM | Flow Selector unit system trouble | I/F |
| L13 | L13 | Detected indoor unit address | □ | ○ | □ | SIM | Safety device setting unmatch | I/F |
| L14 | L14 | Detected indoor unit address | □ | ○ | □ | SIM | Safety device nonconformity | I/F |
| L17 | L17 | — | □ | ○ | □ | SIM | Outdoor unit type mismatch trouble | I/F |
| L18 | L18 | Detected indoor unit address | □ | ○ | □ | SIM | Flow Selector unit trouble | I/F |
| L20 | — | — | □ | ○ | □ | SIM | Duplicated central control addresses | Indoor unit |
| L22 | — | — | □ | ○ | □ | SIM | There is a DX-kit (heat source capacity command) non-compliant machine in the group (DDC control, TA control and TF control are mixed) | Indoor unit |
| L24 | L24 | 01: Duplication of Flow Selector unit address 02: Indoor unit operation mode priority setting | □ | ○ | □ | SIM | Flow Selector unit setting trouble | I/F |
| L28 | L28 | — | □ | ○ | □ | SIM | Too many outdoor units connected | I/F |
| L29 | L29 | *1 Inverter quantity information | □ | ○ | □ | SIM | No. of inverter trouble | I/F |
| L30 | L30 | Detected indoor unit address | □ | ○ | □ | SIM | Indoor unit outside interlock | Indoor unit |
| — | L31 | — | | — | | | Extended I/C trouble | I/F |
| P01 | — | — | ● | □ | □ | ALT | Indoor fan motor trouble | Indoor unit |
| P03 | P03 | — | □ | ● | □ | ALT | Discharge temp. TD1 trouble | I/F |
| P04 | P04 | 1* Comp. 1 side 2* Comp. 2 side | □ | ● | □ | ALT | High-pressure SW system operation | Inverter |
| P05 | P05 | 1* Comp. 1 side 2* Comp. 2 side | □ | ● | □ | ALT | Phase missing detection / Power failure detection Inverter DC voltage trouble (comp.) | I/F |
| P07 | P07 | 1* Comp. 1 side 2* Comp. 2 side ----- 04: Heat sink | □ | ● | □ | ALT | Heat sink overheat trouble ----- Heat sink dew condensation trouble | Inverter, I/F |

| Check code | | | Wireless remote controller | | | | Check code name | Judging device |
|---------------------------------|--------------------------------|---|--|-------|-------|-------|---|----------------|
| Wired remote controller display | Outdoor unit 7-segment display | | Sensor block display of receiving unit | | | | | |
| | | Auxiliary code | Operation | Timer | Ready | Flash | | |
| P10 | P10 | Detected indoor unit address | ● | □ | □ | ALT | Indoor unit overflow trouble | Indoor unit |
| P11 | P11 | — | ● | □ | □ | ALT | Outdoor heat exchanger freezing trouble | I/F |
| P12 | — | — | ● | □ | □ | ALT | Indoor unit fan motor trouble | Indoor unit |
| P13 | P13 | — | ● | □ | □ | ALT | Outdoor liquid back detection trouble | I/F |
| P15 | P15 | 01: TS condition 02: TD condition | □ | ● | □ | ALT | Gas leak detection | I/F |
| P16 | P16 | 01: PMV5 02: PMV6 03: SV7 | □ | ● | □ | ALT | Injection circuit trouble | I/F |
| P17 | P17 | — | □ | ● | □ | ALT | Discharge temp. TD2 trouble | I/F |
| P18 | P18 | — | □ | ● | □ | ALT | Discharge temp. TD3 trouble | I/F |
| P19 | P19 | 0#: 4-way valves 1#: 4-way valve1 2#: 4-way valve2 *Put in outdoor unit No. in [#] mark. | □ | ● | □ | ALT | 4-way valve inverse trouble | I/F |
| P20 | P20 | — | □ | ● | □ | ALT | High-pressure protective operation | I/F |
| P22 | P22 | 1* Compressor 1 side 2* Compressor 2 side | □ | ● | □ | ALT | Outdoor unit fan inverter trouble | Inverter |
| P26 | P26 | 1* Comp. 1 side 2* Comp. 2 side | □ | ● | □ | ALT | IPM short protection trouble | Inverter |
| P29 | P29 | 1* Comp. 1 side 2* Comp. 2 side | □ | ● | □ | ALT | Comp. position detective circuit system trouble | Inverter |
| P31 | — | — | □ | ● | □ | ALT | Other indoor unit trouble (Group follower indoor unit trouble) | Indoor unit |

• For details about check codes determined with an Interface P.C. board or an Inverter P.C. board, refer to the Installation Manual of the outdoor unit.

*1 Inverter quantity information

(Super Modular Multi System e and u series (SMMS-e, SMMS-u, SHRM-A))

| No. | Comp. Inverter | | Fan Inverter | | Trouble |
|----------------------|----------------|---|--------------|---|--------------------------|
| | 1 | 2 | 1 | 2 | |
| 01 | ○ | | | | Comp. 1 |
| 02 | | ○ | | | Comp. 2 |
| 03 | ○ | ○ | | | Comp. 1 + Comp. 2 |
| 08 | | | ○ | | Fan1 |
| 09 | ○ | | ○ | | Comp. 1 + Fan1 |
| 0A | | ○ | ○ | | Comp. 2 + Fan1 |
| 0B | ○ | ○ | ○ | | Comp. 1 + Comp. 2 + Fan1 |
| 10 | | | | ○ | Fan2 |
| 11 | ○ | | | ○ | Comp. 1 + Fan2 |
| 12 | | ○ | | ○ | Comp. 2 + Fan2 |
| 13 | ○ | ○ | | ○ | Comp. 1 + Comp. 2 + Fan2 |
| 18 | | | ○ | ○ | Fan1 + Fan2 |
| 19 | ○ | | ○ | ○ | Comp. 1 + Fan1 + Fan2 |
| 1A | | ○ | ○ | ○ | Comp. 2 + Fan1 + Fan2 |
| 1B | ○ | ○ | ○ | ○ | All |
| ○ : Inverter trouble | | | | | |

Trouble detected by central control device

| Check code | | Wireless remote controller | | | | Check code name | Judging device |
|-----------------------------------|--|--|---------------------|-------|-------|--|-------------------------------|
| Central control device indication | Outdoor unit 7-segment display | Sensor block display of receiving unit | | | | | |
| | | Auxiliary code | Operation | Timer | Ready | Flash | |
| C05 | — | — | — | — | — | Sending trouble in central control device | Central control device |
| C06 | — | — | — | — | — | Receiving trouble in central control device | Central control device |
| C12 | — | — | — | — | — | Batch alarm of general-purpose equipment control interface | General-purpose equipment I/F |
| P30 (L20) | Differs according to trouble contents of unit with occurrence of alarm | | | | | Group control follower unit trouble | Communication Link |
| | — | — | (L20 is displayed.) | — | — | <ul style="list-style-type: none"> • Duplication addresses of indoor units in central control device • With the combination of air conditioning system, the indoor unit may detect the check code of L20 | |
| S01 | — | — | — | — | — | Receiving trouble in central control device | Central control device |


14 Specifications

| Model | Sound pressure level (dBA) | | Weight (kg) |
|------------------|----------------------------|---------|-------------|
| | Cooling | Heating | |
| MMD-UP0721HFP-E1 | * | * | 99 |
| MMD-UP0961HFP-E1 | * | * | 99 |
| MMD-UP1121HFP-E1 | * | * | 99 |
| MMD-UP1281HFP-E1 | * | * | 99 |

* Under 70 dBA

15 Notice code

- Notice code is a function only in TC2U-Link communication.
- When the outdoor or indoor unit detects its conditions requiring caution or maintenance, this function notices you to check your units with the spanner mark (Notice code mark) on the wired remote controller or central controller display.
- Even while the notice code mark is displayed, the air conditioner can operate normally.
- A maximum of 5 notice codes can be issued simultaneously in one system (line).

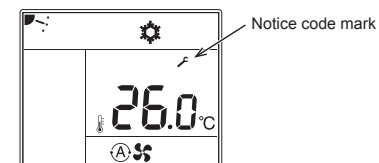

■ How to check Notice code No.

- 1** Stop the operation of the air conditioner and push the Menu button and OFF timer button at the same time for 10 seconds or more.
- 2** The unit number of the indoor unit is displayed at the bottom left of the screen. Change it with the [▽][△] setting button and push the OFF timer button to confirm.
- 3** The history number is displayed in the center of the screen, and the Notice code No. is displayed in the lower left. [▽][△] You can switch the history with the setting button (a maximum of 5 notice codes).
- 4** Push the ON / OFF button to return to the operation stop screen.

■ Notice code list

| Notice code No. | Item | Content |
|-----------------|------------------------------------|--|
| 203 | Flow Selector unit battery dead | The battery kit connected to the Flow Selector unit has reached the end of its life. |
| 204 | Leak detector life advance display | The leak detector will soon reach the end of its life. |

16 Appendix

Work instructions

The existing R22 and R410A piping can be reused for inverter R32 product installations.

⚠ WARNING

Confirming the existence of scratches or dents on the existing pipes and confirming the reliability of the pipe strength are conventionally referred to the local site.

If the specified conditions can be cleared, it is possible to update existing R22 and R410A pipes to those for R32 models.

Basic conditions needed to reuse existing pipes

Check and observe the presence of three conditions in the refrigerant piping works.

1. **Dry** (There is no moisture inside of the pipes.)
2. **Clean** (There is no dust inside of the pipes.)
3. **Tight** (There are no refrigerant leaks.)

Restrictions for use of existing pipes

In the following cases, the existing pipes should not be reused as they are. Clean the existing pipes or exchange them with new pipes.

1. When a scratch or dent is heavy, be sure to use new pipes for the refrigerant piping works.
2. When the existing pipe thickness is thinner than the specified "Pipe diameter and thickness," be sure to use new pipes for the refrigerant piping works.
 - The operating pressure of refrigerant is high. If there is a scratch or dent on the pipe or a thinner pipe is used, the pressure strength may be inadequate, which may cause the pipe to break in the worst case.

* Pipe diameter and thickness (mm)

| Pipe outer diameter | Ø6.4 | Ø9.5 | Ø12.7 | Ø15.9 |
|---------------------|------|------|-------|-------|
| R32, R410A | 0.8 | 0.8 | 0.8 | 1.0 |
| R22 | | | | |

3. When the outdoor unit was left with the pipes disconnected, or the gas leaked from the pipes and the pipes were not repaired and refilled.
 - There is the possibility of rain water or air, including moisture, entering the pipe.
4. When refrigerant cannot be recovered using a refrigerant recovery unit.
 - There is the possibility that a large quantity of dirty oil or moisture remains inside the pipes.

5. When a commercially available dryer is attached to the existing pipes.
 - There is the possibility that copper green rust has been generated.
6. When the existing air conditioner is removed after refrigerant has been recovered. Check if the oil is judged to be clearly different from normal oil.
 - The refrigerator oil is copper rust green in color: There is the possibility that moisture has mixed with the oil and rust has been generated inside the pipe.
 - There is discolored oil, a large quantity of residue, or a bad smell.
 - A large quantity of shiny metal dust or other wear residue can be seen in the refrigerant oil.
7. When the air conditioner has a history of the compressor failing and being replaced.
 - When discolored oil, a large quantity of residue, shiny metal dust, or other wear residue or mixture of foreign matter is observed, trouble will occur.
8. When temporary installation and removal of the air conditioner are repeated such as when leased etc.
9. If the type of refrigerator oil of the existing air conditioner is other than the following oil (Mineral oil), Suniso, Freol-S, MS (Synthetic oil), alkyl benzene (HAB, Barrel-freeze), ester series, PVE only of ether series.
 - The winding-insulation of the compressor may deteriorate.

NOTE


The above descriptions are results have been confirmed by our company and represent our views on our air conditioners, but do not guarantee the use of the existing pipes of air conditioners that have adopted R32, R410A in other companies.

Curing of pipes

When removing and opening the indoor or outdoor unit for a long time, cure the pipes as follows:

- Otherwise rust may be generated when moisture or foreign matter due to condensation enters the pipes.
- The rust cannot be removed by cleaning, and new pipes are necessary.

| Placement location | Term | Curing manner |
|--------------------|-------------------|--------------------|
| Outdoors | 1 month or more | Pinching |
| | Less than 1 month | Pinching or taping |
| Indoors | Every time | |

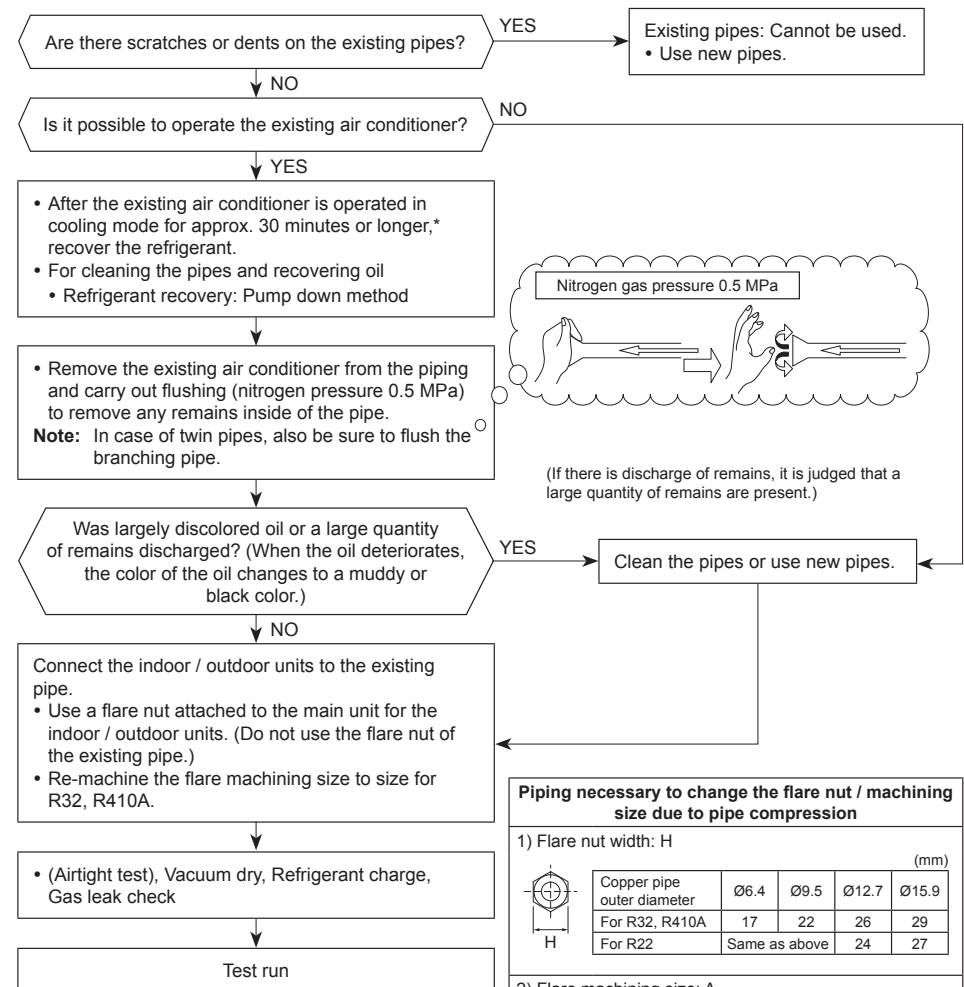

Piping necessary to change the flare nut / machining size due to pipe compression

1) Flare nut width: H (mm)

| Copper pipe outer diameter | Ø6.4 | Ø9.5 | Ø12.7 | Ø15.9 |
|----------------------------|---------------|------|-------|-------|
| For R32, R410A | 17 | 22 | 26 | 29 |
| For R22 | Same as above | | 24 | 27 |

2) Flare machining size: A (mm)

| Copper pipe outer diameter | Ø6.4 | Ø9.5 | Ø12.7 | Ø15.9 |
|----------------------------|------|------|-------|-------|
| For R32, R410A | 9.1 | 13.2 | 16.6 | 19.7 |
| For R22 | 9.0 | 13.0 | 16.2 | 19.4 |

Becomes a little larger for R32, R410A

Do not apply refrigerator oil to the flare surface.

Declaration of Conformity

Manufacturer: Toshiba Carrier (Thailand) Co.,Ltd.
144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi,
Amphur Muang, Pathumthani 12000, Thailand

TCF holder: TOSHIBA CARRIER EUROPE S.A.S
Route de Thil 01120 Montluel FRANCE

Hereby declares that the machinery described below:

Generic Denomination: Air Conditioner

Model / type: MMD-UP0721HFP-E1, MMD-UP0961HFP-E1,
MMD-UP1121HFP-E1, MMD-UP1281HFP-E1

Commercial name: Super Modular Multi System Air Conditioner
Super Heat Recovery Multi System Air Conditioner
Mini-Super Modular Multi System Air Conditioner (MiNi-SMMS series)

Complies with the provisions of the Machinery Directive (Directive 2006/42/EC) and the regulations transposing into national law

Name: Masaru Takeyama
Position: GM, Quality Assurance Dept.
Date: 2 November, 2021
Place Issued: Thailand

NOTE

This declaration becomes invalid if technical or operational modifications are introduced without the manufacturer's consent.

Declaration of Conformity

Manufacturer: Toshiba Carrier (Thailand) Co.,Ltd.
144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi,
Amphur Muang, Pathumthani 12000, Thailand

TCF holder: TOSHIBA CARRIER UK LTD.
Porsham Close Belliver Industrial Estate Roborough Plymouth Devon
PL6 7DB United Kingdom

Hereby declares that the machinery described below:

Generic Denomination: Air Conditioner

Model / type: MMD-UP0721HFP-E1, MMD-UP0961HFP-E1,
MMD-UP1121HFP-E1, MMD-UP1281HFP-E1

Commercial name: Super Modular Multi System Air Conditioner
Super Heat Recovery Multi System Air Conditioner
Mini-Super Modular Multi System Air Conditioner (MiNi-SMMS series)

Complies with the provisions of the Supply of Machinery (Safety) Regulations 2008

Name: Masaru Takeyama
Position: GM, Quality Assurance Dept.
Date: 2 November, 2021
Place Issued: Thailand

NOTE

This declaration becomes invalid if technical or operational modifications are introduced without the manufacturer's consent.

WARNINGS ON REFRIGERANT LEAKAGE

Check of concentration limit

The room in which the air conditioner is to be installed requires a design that in the event of refrigerant gas leaking out, its concentration will not exceed a set limit.

The refrigerant R32 or R410A which is used in the air conditioner is safe, without the toxicity or combustibility of ammonia, and is not restricted by laws to be imposed which protect the ozone layer. However, since it contains more than air, it poses the risk of suffocation if its concentration should rise excessively. Suffocation from leakage of R32 or R410A is almost non-existent. With the recent increase in the number of high concentration buildings, however, the installation of multi air conditioner systems is on the increase because of the need for effective use of floor space, individual control, energy conservation by curtailing heat and carrying power etc.

Most importantly, the multi air conditioner system is able to replenish a large amount of refrigerant compared with conventional individual air conditioners. If a single unit of the multi conditioner system is to be installed in a small room, select a suitable model and installation procedure so that if the refrigerant accidentally leaks out, its concentration does not reach the limit (and in the event of an emergency, measures can be made before injury can occur).

In a room where the concentration may exceed the limit, create an opening with adjacent rooms, or install mechanical ventilation combined with a gas leak detection device.


The concentration is as given below.

$$\frac{\text{Total amount of refrigerant (kg)}}{\text{Min. volume of the indoor unit installed room (m}^3\text{)}} \leq \text{Concentration limit (kg/m}^3\text{)}$$

Refrigerant Concentration Limit shall be in accordance with local regulations.

▼ NOTE 1

If there are 2 or more refrigerating systems in a single refrigerating device, the amounts of refrigerant should be as charged in each independent device.

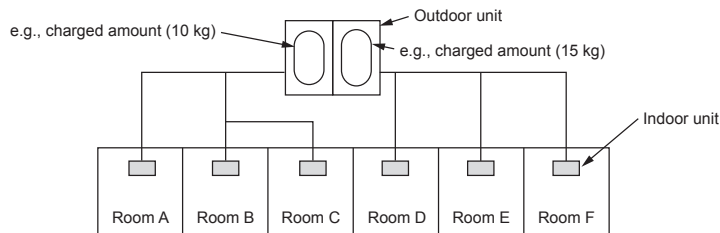

For the amount of charge in this example:

The possible amount of leaked refrigerant gas in rooms A, B and C is 10 kg.


The possible amount of leaked refrigerant gas in rooms D, E and F is 15 kg.

■ Important


▼ NOTE 2

The standards for minimum room volume are as follows.

1) No partition (shaded portion)

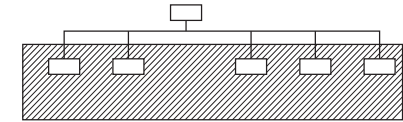


2) When there is an effective opening with the adjacent room for ventilation of leaking refrigerant gas (opening without a door, or an opening 0.15% or larger than the respective floor spaces at the top or bottom of the door).

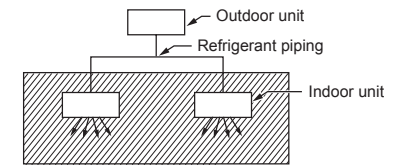

3) If an indoor unit is installed in each partitioned room and the refrigerant piping is interconnected, the smallest room of course becomes the object.

But when a mechanical ventilation is installed interlocked with a gas leakage detector in the smallest room where the density limit is exceeded, the volume of the next smallest room becomes the object.

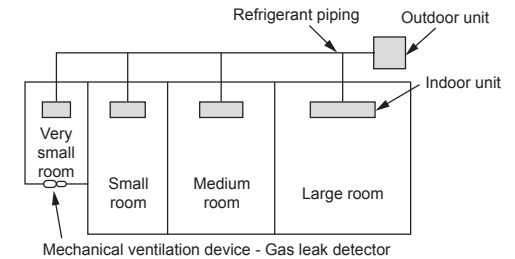

■ Confirmation of indoor unit setup

Prior to delivery to the customer, check the address and setup of the indoor unit, which has been installed in this time and fill the check sheet (Following table). Data of four units can be entered in this check sheet. Copy this sheet according to the No. of the indoor units. If the installed system is a group control system, use this sheet by entering each line system into each Installation Manual attached to the other indoor units.

REQUIREMENT

This check sheet is required for maintenance after installation. Fill this sheet and then pass this Installation Manual to the customers.

Indoor unit setup check sheet

| Indoor unit | | Indoor unit | | Indoor unit | | Indoor unit | | |
|---|-----------|-------------|-----------|-------------------------|-----------|-------------|-----------|-------|
| Room name | Room name | Room name | Room name | Room name | Room name | Room name | Room name | |
| Model | Model | Model | Model | Model | Model | Model | Model | |
| Check indoor unit address. (For check method, refer Service Manual of outdoor unit.) | | | | | | | | |
| * In case of a single system, it is unnecessary to enter the indoor address. (CODE No.: Line [12], Indoor [13], Group [14], Central control [03]) | | | | | | | | |
| Line | Indoor | Group | Line | Indoor | Group | Line | Indoor | Group |
| Central control address | | | | Central control address | | | | |
| Various setup | | | | Various setup | | | | |

Have you changed high ceiling setup? If not, fill check mark [x] in [NO CHANGE], and fill check mark [x] in [ITEM] if changed, respectively.
 (For check method, refer to APPLICABLE CONTROLS in this manual.) * In case of replacement of jumper blocks on indoor microcomputer P.C. board, setup is automatically changed.

| External static pressure (CODE NO. [5d]) | External static pressure (CODE NO. [5d]) | External static pressure (CODE NO. [5d]) | External static pressure (CODE NO. [5d]) |
|---|---|---|---|
| <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE |
| <input type="checkbox"/> STANDARD | <input type="checkbox"/> STANDARD | <input type="checkbox"/> STANDARD | <input type="checkbox"/> STANDARD |
| <input type="checkbox"/> STATIC 1 | <input type="checkbox"/> STATIC 1 | <input type="checkbox"/> STATIC 1 | <input type="checkbox"/> STATIC 1 |
| <input type="checkbox"/> STATIC 2 | <input type="checkbox"/> STATIC 2 | <input type="checkbox"/> STATIC 2 | <input type="checkbox"/> STATIC 2 |
| <input type="checkbox"/> STATIC 3 | <input type="checkbox"/> STATIC 3 | <input type="checkbox"/> STATIC 3 | <input type="checkbox"/> STATIC 3 |
| <input type="checkbox"/> STATIC 4 | <input type="checkbox"/> STATIC 4 | <input type="checkbox"/> STATIC 4 | <input type="checkbox"/> STATIC 4 |
| <input type="checkbox"/> STATIC 5 | <input type="checkbox"/> STATIC 5 | <input type="checkbox"/> STATIC 5 | <input type="checkbox"/> STATIC 5 |
| <input type="checkbox"/> STATIC 6 | <input type="checkbox"/> STATIC 6 | <input type="checkbox"/> STATIC 6 | <input type="checkbox"/> STATIC 6 |

Have you changed lighting time of filter sign? If not, fill check mark [x] in [NO CHANGE], and fill check mark [x] in [ITEM] if changed, respectively.
 (For check method, refer to Applicable controls in this manual.)

| Filter sign lighting time (CODE NO. [0*1]) | Filter sign lighting time (CODE NO. [0*1]) | Filter sign lighting time (CODE NO. [0*1]) | Filter sign lighting time (CODE NO. [0*1]) |
|---|---|---|---|
| <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE |
| <input type="checkbox"/> NONE | <input type="checkbox"/> NONE | <input type="checkbox"/> NONE | <input type="checkbox"/> NONE |
| <input type="checkbox"/> 150H | <input type="checkbox"/> 150H | <input type="checkbox"/> 150H | <input type="checkbox"/> 150H |
| <input type="checkbox"/> 2500H | <input type="checkbox"/> 2500H | <input type="checkbox"/> 2500H | <input type="checkbox"/> 2500H |
| <input type="checkbox"/> 5000H | <input type="checkbox"/> 5000H | <input type="checkbox"/> 5000H | <input type="checkbox"/> 5000H |
| <input type="checkbox"/> 10000H | <input type="checkbox"/> 10000H | <input type="checkbox"/> 10000H | <input type="checkbox"/> 10000H |

Have you incorporated the following parts sold separately? If incorporated, fill check mark [x] in each [ITEM].
 (When incorporating, the setup change is necessary in some cases. For setup change method, refer to Installation Manual attached to each part sold separately.)

| External static pressure (CODE NO. [5d]) | External static pressure (CODE NO. [5d]) | External static pressure (CODE NO. [5d]) | External static pressure (CODE NO. [5d]) |
|---|---|---|---|
| <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE | <input type="checkbox"/> NO CHANGE |
| <input type="checkbox"/> STANDARD | <input type="checkbox"/> STANDARD | <input type="checkbox"/> STANDARD | <input type="checkbox"/> STANDARD |
| <input type="checkbox"/> STATIC 1 | <input type="checkbox"/> STATIC 1 | <input type="checkbox"/> STATIC 1 | <input type="checkbox"/> STATIC 1 |
| <input type="checkbox"/> STATIC 2 | <input type="checkbox"/> STATIC 2 | <input type="checkbox"/> STATIC 2 | <input type="checkbox"/> STATIC 2 |
| <input type="checkbox"/> STATIC 3 | <input type="checkbox"/> STATIC 3 | <input type="checkbox"/> STATIC 3 | <input type="checkbox"/> STATIC 3 |
| <input type="checkbox"/> STATIC 4 | <input type="checkbox"/> STATIC 4 | <input type="checkbox"/> STATIC 4 | <input type="checkbox"/> STATIC 4 |
| <input type="checkbox"/> STATIC 5 | <input type="checkbox"/> STATIC 5 | <input type="checkbox"/> STATIC 5 | <input type="checkbox"/> STATIC 5 |
| <input type="checkbox"/> STATIC 6 | <input type="checkbox"/> STATIC 6 | <input type="checkbox"/> STATIC 6 | <input type="checkbox"/> STATIC 6 |

Toshiba Carrier (Thailand) Co., Ltd.

144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi, Amphur Muang, Pathumthani 12000, Thailand

1128950186