

# TOSHIBA

AIR CONDITIONER (MULTI TYPE)


## SERVICE MANUAL

< Super Modular Multi System-u SMMS-u >

Outdoor

MMY-MUP0801HT8(J)P-E  
MMY-MUP1001HT8(J)P-E  
MMY-MUP1201HT8(J)P-E  
MMY-MUP1401HT8(J)P-E  
MMY-MUP1601HT8(J)P-E  
MMY-MUP1801HT8(J)P-E  
MMY-MUP2001HT8(J)P-E  
MMY-MUP2201HT8(J)P-E  
MMY-MUP2401HT8(J)P-E

MMY-MUP0801HT8(J)P-TR  
MMY-MUP1001HT8(J)P-TR  
MMY-MUP1201HT8(J)P-TR  
MMY-MUP1401HT8(J)P-TR  
MMY-MUP1601HT8(J)P-TR  
MMY-MUP1801HT8(J)P-TR  
MMY-MUP2001HT8(J)P-TR  
MMY-MUP2201HT8(J)P-TR  
MMY-MUP2401HT8(J)P-TR

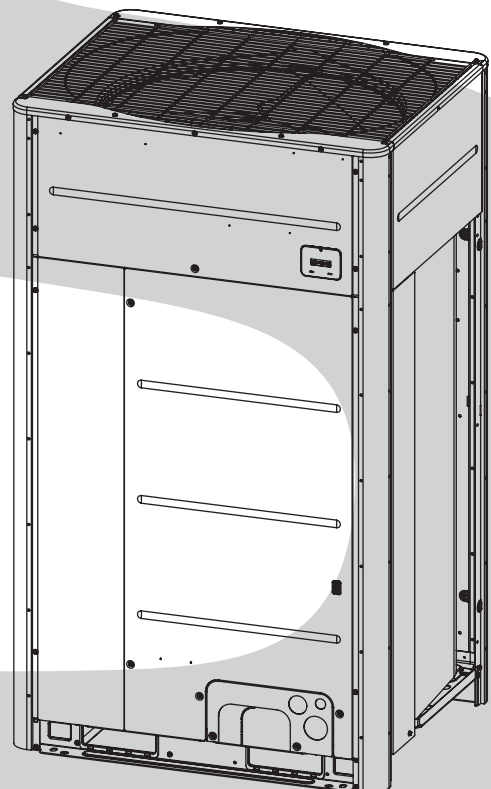

# CONTENTS

<b>SAFETY CAUTION</b> .....	<b>6</b>
<b>REFRIGERANT (R410A)</b> .....	<b>21</b>
<b>1. WIRING DIAGRAMS</b> .....	<b>24</b>
<b>2. PARTS RATING</b> .....	<b>27</b>
2-1. Outdoor Unit (50Hz model: MMY-MUP***1HT8*) .....	27
2-1-1. Winding resistance of outdoor unit main parts .....	28
2-2. Inverter Assembly .....	29
2-3. Parts Layout in Outdoor Unit .....	30
2-4. Parts Layout in Inverter Assembly .....	31
2-5. Outdoor (Inverter) Print Circuit Board .....	34
2-5-1. Interface P.C. board (MCC-1747) .....	34
2-5-2. Noise Filter P.C. board (MCC-1748) .....	35
2-5-3. Inverter P.C. board for compressor (MCC-1729) .....	36
2-5-4. Inverter P.C. board for fan (MCC-1734) .....	37
2-5-5. USB isolate P.C. board (MCC-1754) .....	38
<b>3. REFRIGERANT PIPING SCHEMATIC DRAWING</b> .....	<b>39</b>
<b>4. COMBINED REFRIGERANT PIPING SYSTEM SCHEMATIC DIAGRAMS</b> .....	<b>44</b>
4-1. Refrigerant Flow (Cooling) .....	44
4-2. Refrigerant Flow (Single Defrost) .....	45
4-3. Refrigerant Flow (Heating) .....	46
4-4. Refrigerant Flow (Individual Defrost) .....	47
4-5-1. (1) Refrigerant Flow (Automatic emergency cooling) .....	48
4-5-2. (1) Refrigerant Flow (Automatic emergency heating) .....	50
4-6. Refrigerant Flow (Reclaim) .....	52
<b>5. CONTROL OUTLINE</b> .....	<b>53</b>
5-1. Outdoor Unit .....	53
5-2. Indoor Unit .....	62
<b>6. APPLIED CONTROL AND FUNCTIONS</b> .....	<b>73</b>
6-1. Optional Connector Specifications of Indoor P.C.Board.....	73
6-2. Test Operation of Indoor Unit .....	75
6-3. Method to Set Indoor Unit Function DN Code .....	76
6-4. Method to set Outdoor Unit Function Code No. (DN ) .....	83
6-5. Applied Control of Indoor Unit .....	88
6-6. Applied Control of Outdoor Unit .....	92
6-6-1. Outdoor Fan High Static Pressure Shift .....	92
6-6-2. Priority Operation Mode Setting .....	93
6-6-3. Applied Control of Outdoor Unit .....	96
6-7. Notice Code .....	107
6-8. System Cooperation Defrosting .....	109
<b>7. TEST OPERATION</b> .....	<b>112</b>
7-1. Procedure and Summary of Test Operation .....	112
7-2. Check Items before Test Operation (before powering-on) .....	113
7-3. Check at Main Power-on .....	119
7-4. Address Setup .....	121
7-4-1. Precautions .....	121
7-4-2. Address Setup and Check Procedure .....	121
7-4-3. Address Setup Procedure .....	122
7-4-4. Check after Address Setup when Central Control System Is Connected .....	139

7-5. Troubleshooting in Test Operation .....	140
7-5-1. A Check Code is Displayed on the Remote Controller .....	140
7-5-2. No Remote Controller Response with Check Code .....	141
7-5-3. No Remote Controller Response without Check Code .....	141
7-5-4. Connected Indoor/Outdoor Unit Quantity Check .....	142
7-6. Test Operation Check .....	144
7-6-1. Fan Check .....	144
7-6-2. Cooling/Heating Test Operation Check .....	145
7-7. Service Support Function .....	150
7-7-1. Check Function for Connecting of Refrigerant and Control Lines .....	150
7-7-2. Function to Start/Stop (ON/OFF) Indoor Unit from Outdoor Unit .....	151
7-7-3. Check Code Clearing Function .....	158
7-7-4. Remote Controller Distinction Function .....	161
7-7-5. Pulse Motor Valve (PMV) Forced Open/Close Function in Indoor Unit .....	162
7-7-6. Pulse Motor Valve (PMV) Forced Open/Close Function and Solenoid valve Forced ON Function in Outdoor Unit .....	163
7-7-7. Fan Operation Check in Outdoor Unit .....	165
7-7-8. Abnormal Outdoor Unit Discrimination Method By Fan Operating Function ..	166
7-7-9. Manual Adjustment Function of Outside Temperature (TO) Sensor .....	167
7-7-10. Refrigerant leakage detection .....	168
7-7-11. Monitor Function of Remote Controller Switch .....	169
7-8. Wave Tool Advance for SMMS-u Series .....	171
7-8-1. Before the Use of Wave Tool Advance .....	171
7-8-2. About Wave Tool Advance .....	171
7-8-3. Valid/Prohibition/Permission setting for Test operation from WTA App. ....	171
7-8-4. Confirmation for NFC tag Communication .....	172
<b>8. TROUBLESHOOTING .....</b>	<b>173</b>
8-1. Overview .....	173
8-2. Troubleshooting method .....	174
8-3. Troubleshooting based on information displayed on remote controller .....	180
8-4. Check Codes Displayed on Remote Controller and SMMS-u Outdoor Unit (7-Segment Display on I/F Board) and Locations to Be Checked .....	184
8-5. Diagnosis procedure for each check code .....	199
8-6. 7-Segment Display Function .....	230
8-7. Oil Level Judgment Display .....	237
8-8. SMMS-u Outdoor Interface P.C. Board Function Setting Change Table .....	238
8-9. Leakage/Clogging of Refrigerating Cycle Circuit .....	240
8-10. Sensor Characteristics .....	246
8-11. Pressure Sensor Output Check .....	249
<b>9. BACKUP OPERATION (EMERGENCY OPERATION) .....</b>	<b>251</b>
9-1. Note for Backup Operation .....	251
9-2. Compressor Backup Operation Setting .....	252
9-3. Outdoor Unit Backup Operation Setting .....	254
9-3-1. Follower outdoor unit backup operation setting (failure of follower outdoor unit) .....	254
9-3-2. Header outdoor unit backup operation setting (failure of header outdoor unit) .....	256
9-4. Cooling-Season Outdoor Unit Backup Operation Setting .....	258
9-5. Outdoor Unit Automatic Backup Operation Outline .....	259
<b>10. OUTDOOR UNIT REFRIGERANT RECOVERY METHOD .....</b>	<b>260</b>
10-1. Refrigerant Recovery from Troubled Outdoor Unit (Reclaim) .....	260
10-1-1. Note for refrigerant recovery operation .....	260
10-1-2. Refrigerant recovery procedure A (Case that the troubled outdoor unit turn on) .....	260
10-1-3. Refrigerant recovery procedure B (Case that the troubled outdoor unit does not turn on) .....	262
10-2. How to Operate System While Troubled Outdoor Unit Being Repaired .....	263
10-3. Work procedure after Repair .....	264

<b>11. REPLACING COMPRESSORS .....</b>	<b>265</b>
11-1. Compressor Replacement Procedure (Outline).....	265
11-2. Replacement of Compressors .....	266
11-3. Check Procedure to Search Cause of Compressor Oil Shortage .....	270
<b>12. OUTDOOR UNIT PARTS REPLACEMENT METHODS .....</b>	<b>274</b>
<b>13. P.C. BOARD EXCHANGE PROCEDURES .....</b>	<b>288</b>
13-1. Replacement of outdoor P.C. board & Inverter Parts .....	288
13-1-1. List of service parts (Inverter) .....	288
13-1-2. Configuration of inverter assembly .....	289
13-1-3. Interface P.C. Board (MCC-1747) Replacement Procedure .....	292
13-1-4. Compressor P.C. Board (MCC-1729) Replacement Procedure .....	293
13-1-5. Fan-Motor P.C. Board (MCC-1734) Replacement Procedure .....	295
13-1-6. Noise Filter P.C. Board 1 (MCC-1748) Replacement Procedure .....	296
13-1-7. Noise Filter P.C. Board 2 (MCC-1748) Replacement Procedure .....	297
<b>14. EXPLODED DIAGRAM/PARTS LIST .....</b>	<b>298</b>
14-1. Outdoor unit (8, 10, 12, 14HP) .....	298
14-2. Outdoor unit (16, 18, 20HP) .....	301
14-3. Outdoor unit (22, 24HP) .....	304



**This service manual provides relevant explanations about new outdoor unit (SMMS-u).  
Please refer to the following service manuals for each indoor units.**

Model name	SVM File No.
<4-Way Cassette Type>	
MMU-UP***1HP-E/-TR (Made in Thailand model)	SVM-20095
MMU-UP***1H-E/-TR (Made in Japan model)	TBD
MMU-AP***4HP1-E/-TR (Made in Thailand model)	SVM-16041
<Compact 4-Way Cassette Type>	
MMU-UP***1MH-E/-TR (Made in Japan model)	A10-2004
MMU-AP***7MH-E/-TR (Made in Japan model)	A10-1615-1
<2-Way Cassette Type>	
MMU-UP***1WH-E/-TR (Made in Japan model)	A10-2004
MMU-AP***2WH1/-TR (Made in Japan model)	A10-007
<1-Way Cassette Type>	
MMU-UP***1SH-E/-TR (Made in Japan model)	A10-2004
MMU-UP***1YHP-E/-TR (Made in Thailand model)	SVM-20107
MMU-AP***4YH1-E/-TR (Made in Japan model)	A10-033
MMU-AP***4SH1-E/-TR (Made in Japan model)	A10-033
<Concealed Duct Standard Type>	
MMD-UP***1BHP-E/-TR (Made in Thailand model)	A10-2004
MMD-AP***6BHP1-E/-TR (Made in Thailand model)	SVM-16043
MMD-AP***6BHP1-E1 (Made in Thailand model)	SVM-19065
<Concealed Duct High Static Pressure Type>	
MMD-UP***1HP-E/-TR (Made in Thailand model)	SVM-20095
MMD-AP***6HP1-E/-TR (Made in Thailand model)	SVM-16044
<Slim Duct Type>	
MMD-UP***1SPHY-E (Made in China model)	A10-2006
MMD-AP***4SPH1-E/-TR (Made in Japan model)	A10-033
MMD-AP***6SPH1-E/-TR (Made in Japan model)	A10-033
<Under Ceiling Type>	
MMC-UP***1HP-E/-TR (Made in Thailand model)	SVM-20095
MMC-AP***8HP-E (Made in Thailand model)	SVM-17015
<Floor Standing Cabinet Type>	
MML-UP***1H-E/-TR (Made in Japan model)	A10-2004
MML-AP***4H1-E/-TR (Made in Japan model)	A10-033
<Floor Standing Concealed Type>	
MML-UP***1BH-E/-TR (Made in Japan model)	A10-2004
MML-AP***4BH1-E/-TR (Made in Japan model)	A10-033
<Floor Standing Type>	
MMF-UP***1H-E/-TR (Made in Japan model)	A10-2004
MMF-AP***6H1-E/-TR (Made in Japan model)	A10-1420
<Fresh Air Intake Indoor Unit>	
MMD-UP***1HFP-E/-TR (Made in Thailand model)	SVM-20095
MMD-AP***1HFE (Made in Japan model)	A06-016
<Air to Air Heat Exchanger with DX Coil Unit>	
MMD-VN***2HEX* (Made in Japan model)	A10-022
<High Wall Type>	
MMK-UP***1HP-E/-TR (Made in Thailand model)	SVM-20095
MMK-UP***1HPL-E (Made in Thailand model)	SVM-20095
MMK-AP***7HP-E (Made in Thailand model)	SVM-17045
MMK-AP***7HP-E1 (Made in Thailand model)	SVM-17046
<Console Type>	
MML-UP***1NHP-E/-TR (Made in Thailand model)	SVM-20095
MML-AP***4NH1-E/-TR (Made in Thailand model)	SVM-16048
<Hot Water Module Mid Temperature Type>	
MMW-UP***1LQ-E/-TR (Made in Japan model)	A10-2005
MMW-AP***1LQ-E/-TR (Made in Japan model)	A10-1412

## SAFETY CAUTION

Please read carefully through these instructions that contain important information which complies with the "Machinery" Directive (Directive 2006/42/EC), and ensure that you understand them.

### Generic Denomination: Air Conditioner

#### Definition of Qualified Installer or Qualified Service Person

The air conditioner must be installed, maintained, repaired and removed by a qualified installer or qualified service person. When any of these jobs is to be done, ask a qualified installer or qualified service person to do them.

A qualified installer or qualified service person is an agent who has the qualifications and knowledge described in the table below.

Agent	Qualifications and knowledge which the agent must have
Qualified installer	<ul style="list-style-type: none"> <li>• The qualified installer is a person who installs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.</li> <li>• The qualified installer who is allowed to do the electrical work involved in installation, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>• The qualified installer who is allowed to do the refrigerant handling and piping work involved in installation, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>• The qualified installer who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> </ul>
Qualified service person	<ul style="list-style-type: none"> <li>• The qualified service person is a person who installs, repairs, maintains, relocates and removes the air conditioners made by Toshiba Carrier Corporation. He or she has been trained to install, repair, maintain, relocate and remove the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such operations by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to these operations.</li> <li>• The qualified service person who is allowed to do the electrical work involved in installation, repair, relocation and removal has the qualifications pertaining to this electrical work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to electrical work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>• The qualified service person who is allowed to do the refrigerant handling and piping work involved in installation, repair, relocation and removal has the qualifications pertaining to this refrigerant handling and piping work as stipulated by the local laws and regulations, and he or she is a person who has been trained in matters relating to refrigerant handling and piping work on the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> <li>• The qualified service person who is allowed to work at heights has been trained in matters relating to working at heights with the air conditioners made by Toshiba Carrier Corporation or, alternatively, he or she has been instructed in such matters by an individual or individuals who have been trained and is thus thoroughly acquainted with the knowledge related to this work.</li> </ul>

## Definition of Protective Gear

When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.

In addition to such normal protective gear, wear the protective gear described below when undertaking the special work detailed in the table below.




Failure to wear the proper protective gear is dangerous because you will be more susceptible to injury, burns, electric shocks and other injuries.

Work undertaken	Protective gear worn
All types of work	Protective gloves 'Safety' working clothing
Electrical-related work	Gloves to provide protection for electricians Insulating shoes Clothing to provide protection from electric shock
Work done at heights (50 cm or more)	Helmets for use in industry
Transportation of heavy objects	Shoes with additional protective toecap
Repair of outdoor unit	Gloves to provide protection for electricians

The important contents concerned to the safety are described on the product itself and on this Service Manual.




Please read this Service Manual after understanding the described items thoroughly in the following contents (Indications / Illustrated marks), and keep them.

### [Explanation of indications]



















Indication	Explanation
 <b>DANGER</b>	Indicates contents assumed that an imminent danger causing a death or serious injury of the repair engineers and the third parties when an incorrect work has been executed.
 <b>WARNING</b>	Indicates possibilities assumed that a danger causing a death or serious injury of the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.
 <b>CAUTION</b>	Indicates contents assumed that an injury or property damage (*) may be caused on the repair engineers, the third parties, and the users due to troubles of the product after work when an incorrect work has been executed.

\* Property damage: Enlarged damage concerned to property, furniture, and domestic animal / pet

### [Explanation of illustrated marks]

Indication	Explanation
	Indicates prohibited items (Forbidden items to do) The sentences near an illustrated mark describe the concrete prohibited contents.
	Indicates mandatory items (Compulsory items to do) The sentences near an illustrated mark describe the concrete mandatory contents.
	Indicates cautions (Including danger / warning) The sentences or illustration near or in an illustrated mark describe the concrete cautious contents.





■ Warning indications on the air conditioner unit

Warning indication	Description		
<table border="1"> <tr> <td data-bbox="292 360 379 510"></td> <td data-bbox="379 360 616 510"> <p><b>WARNING</b></p> <p><b>ELECTRICAL SHOCK HAZARD</b> Disconnect all remote electric power supplies before servicing</p> </td> </tr> </table>		<p><b>WARNING</b></p> <p><b>ELECTRICAL SHOCK HAZARD</b> Disconnect all remote electric power supplies before servicing</p>	<p><b>WARNING</b></p> <p><b>ELECTRICAL SHOCK HAZARD</b> Disconnect all remote electric power supplies before servicing.</p>
	<p><b>WARNING</b></p> <p><b>ELECTRICAL SHOCK HAZARD</b> Disconnect all remote electric power supplies before servicing</p>		
<table border="1"> <tr> <td data-bbox="292 566 379 712"></td> <td data-bbox="379 566 616 712"> <p><b>WARNING</b></p> <p>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</p> </td> </tr> </table>		<p><b>WARNING</b></p> <p>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</p>	<p><b>WARNING</b></p> <p>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</p>
	<p><b>WARNING</b></p> <p>Moving parts. Do not operate unit with grille removed. Stop the unit before the servicing.</p>		
<table border="1"> <tr> <td data-bbox="292 761 379 907"></td> <td data-bbox="379 761 616 907"> <p><b>CAUTION</b></p> <p>High temperature parts. You might get burned when removing this panel.</p> </td> </tr> </table>		<p><b>CAUTION</b></p> <p>High temperature parts. You might get burned when removing this panel.</p>	<p><b>CAUTION</b></p> <p>High temperature parts. You might get burned when removing this panel.</p>
	<p><b>CAUTION</b></p> <p>High temperature parts. You might get burned when removing this panel.</p>		
<table border="1"> <tr> <td data-bbox="292 956 379 1102"></td> <td data-bbox="379 956 616 1102"> <p><b>CAUTION</b></p> <p>Do not touch the aluminum fins of the unit. Doing so may result in injury.</p> </td> </tr> </table>		<p><b>CAUTION</b></p> <p>Do not touch the aluminum fins of the unit. Doing so may result in injury.</p>	<p><b>CAUTION</b></p> <p>Do not touch the aluminium fins of the unit. Doing so may result in injury.</p>
	<p><b>CAUTION</b></p> <p>Do not touch the aluminum fins of the unit. Doing so may result in injury.</p>		
<table border="1"> <tr> <td data-bbox="292 1151 379 1296"></td> <td data-bbox="379 1151 616 1296"> <p><b>CAUTION</b></p> <p><b>BURST HAZARD</b> Open the service valves before the operation, otherwise there might be the burst.</p> </td> </tr> </table>		<p><b>CAUTION</b></p> <p><b>BURST HAZARD</b> Open the service valves before the operation, otherwise there might be the burst.</p>	<p><b>CAUTION</b></p> <p><b>BURST HAZARD</b> Open the service valves before the operation, otherwise there might be the burst.</p>
	<p><b>CAUTION</b></p> <p><b>BURST HAZARD</b> Open the service valves before the operation, otherwise there might be the burst.</p>		
<table border="1"> <tr> <td data-bbox="292 1346 379 1491"></td> <td data-bbox="379 1346 616 1491"> <p><b>CAUTION</b></p> <p><b>Do not climb onto the fan guard.</b> Doing so may result in injury.</p> </td> </tr> </table>		<p><b>CAUTION</b></p> <p><b>Do not climb onto the fan guard.</b> Doing so may result in injury.</p>	<p><b>CAUTION</b></p> <p><b>Do not climb onto the fan guard.</b> Doing so may result in injury.</p>
	<p><b>CAUTION</b></p> <p><b>Do not climb onto the fan guard.</b> Doing so may result in injury.</p>		

# PRECAUTIONS FOR SAFETY



The manufacturer shall not assume any liability for the damage caused by not observing the description of this manual.

## DANGER

 Turn off breaker	<p>Before carrying out the installation, maintenance, repair or removal work, be sure to set the circuit breaker for both the indoor and outdoor units to the OFF position. Otherwise, electric shocks may result.</p>
	<p>Before opening the intake grille of the indoor unit or service panel of the outdoor unit, set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in electric shocks through contact with the interior parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the intake grille of the indoor unit or service panel of the outdoor unit and do the work required.</p>
	<p>Before opening the electric box cover set the circuit breaker to the OFF position. Failure to set the circuit breaker to the OFF position may result in injury through contact with the rotation parts. Only a qualified installer (*1) or qualified service person (*1) is allowed to remove the electric box cover and do the work required.</p>
	<p>Before starting to repair the outdoor unit fan or fan guard, be absolutely sure to set the circuit breaker to the OFF position, and place a "Work in progress" sign on the circuit breaker.</p>
	<p>When cleaning the filter or other parts of the indoor unit, set the circuit breaker to OFF without fail, and place a "Work in progress" sign near the circuit breaker before proceeding with the work.</p>
	<p>When you have noticed that some kind of trouble (such as when a check code display has appeared, there is a smell of burning, abnormal sounds are heard, the air conditioner fails to cool or heat or water is leaking) has occurred in the air conditioner, do not touch the air conditioner yourself but set the circuit breaker to the OFF position, and contact a qualified service person. Take steps to ensure that the power will not be turned on (by marking "out of service" near the circuit breaker, for instance) until qualified service person arrives. Continuing to use the air conditioner in the trouble status may cause mechanical problems to escalate or result in electric shocks or other failure.</p>
 Electric shock hazard	<p>When you access inside of the electric cover to repair electric parts, wait for about five minutes after turning off the breaker. Do not start repairing immediately. Otherwise you may get electric shock by touching terminals of high-voltage capacitors. Natural discharge of the capacitor takes about five minutes.</p>
	<p>When checking the electric parts, removing the cover of the electric parts box of indoor unit and/or service panel of outdoor unit inevitably to determine the failure, use gloves to provide protection for electricians, insulating shoes, clothing to provide protection from electric shock and insulating tools. Be careful not to touch the live part. Electric shock may result. Only "Qualified service person" is allowed to do this work.</p>
 Prohibition	<p>Place a "Work in progress" sign near the circuit breaker while the installation, maintenance, repair or removal work is being carried out. There is a danger of electric shocks if the circuit breaker is set to ON by mistake.</p>
	<p>When checking the electric parts, removing the cover of the electric parts box of Indoor Unit and/or front panel of outdoor unit inevitably to determine the failure, put a sign "Do not enter" around the site before the work. Failure to do this may result in third person getting electric shock.</p>
	<p>Before operating the air conditioner after having completed the work, check that the electrical parts box cover of the indoor unit and service panel of the outdoor unit are closed, and set the circuit breaker to the ON position. You may receive an electric shock if the power is turned on without first conducting these checks.</p>
 Stay on protection	<p>If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, wear insulated heat-resistant gloves, insulated boots and insulated work overalls, and take care to avoid touching any live parts. You may receive an electric shock if you fail to heed this warning. Only qualified service person (*1) is allowed to do this kind of work.</p>







(\*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

 **WARNIG**








 General	<p>Before starting to repair the air conditioner, read carefully through the Service Manual, and repair the air conditioner by following its instructions.</p>
	<p>Only qualified service person (*1) is allowed to repair the air conditioner. Repair of the air conditioner by unqualified person may give rise to a fire, electric shocks, injury, water leaks and / or other problems.</p>
	<p>Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.</p>
	<p>Only a qualified installer (*1) or qualified service person (*1) is allowed to carry out the electrical work of the air conditioner. Under no circumstances must this work be done by an unqualified individual since failure to carry out the work properly may result in electric shocks and / or electrical leaks.</p>
	<p>When the air conditioner is to be transported, installed, maintained, repaired or removed, wear protective gloves and 'safety' work clothing.</p>
	<p>To connect the electrical wires, repair the electrical parts or undertake other electrical jobs, wear gloves to provide protection for electricians, insulating shoes and clothing to provide protection from electric shocks. Failure to wear this protective gear may result in electric shocks.</p>
	<p>Electrical wiring work shall be conducted according to law and regulation in the community and Installation Manual. Failure to do so may result in electrocution or short circuit.</p>
	<p>Use wiring that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws. Use of wiring which does not meet the specifications may give rise to electric shocks, electrical leakage, smoking and/or a fire.</p>
	<p>Only a qualified installer (*1) or qualified service person (*1) is allowed to undertake work at heights using a stand of 50 cm or more or to remove the intake grille of the indoor unit to undertake work.</p>
	<p>When working at heights, use a ladder which complies with the ISO 14122 standard, and follow the procedure in the ladder's instructions. Also wear a helmet for use in industry as protective gear to undertake the work.</p>
	<p>Before working at heights, put a sign in place so that no-one will approach the work location, before proceeding with the work. Parts and other objects may fall from above, possibly injuring a person below. While carrying out the work, wear a helmet for protection from falling objects.</p>
	<p>When executing address setting, test run, or troubleshooting through the checking window on the electric parts box, put on insulated gloves to provide protection from electric shock. Otherwise you may receive an electric shock.</p>
	<p>Do not touch the aluminum fin of the unit. You may injure yourself if you do so. If the fin must be touched for some reason, first put on protective gloves and safety work clothing, and then proceed.</p>
	<p>Do not climb onto or place objects on top of the outdoor unit. You may fall or the objects may fall off the outdoor unit and result in injury.</p>
	<p>Use forklift truck to carry in the air conditioner units and use winch or hoist at installation of them.</p>
	<p>When transporting the air conditioner, wear shoes with protective toecap.</p>
<p>When transporting the air conditioner, do not take hold of the bands around the packing carton. You may injure yourself if the bands break.</p>	
<p>Be sure that a heavy unit (10 kg or heavier) such as a compressor is carried by four persons.</p>	
 Check earth wires.	<p>Before troubleshooting or repair work, check the earth wire is connected to the earth terminals of the main unit, otherwise an electric shock is caused when a leak occurs. If the earth wire is not correctly connected, contact an electric engineer for rework.</p>
	<p>After completing the repair or relocation work, check that the earth wires are connected properly.</p>
	<p>Connect earth wire. (Grounding work) Incomplete earthing causes an electric shock. Do not connect earth wires to gas pipes, water pipes, and lightning rods or earth wires for telephone wires.</p>

(\*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"





 Prohibition of modification.	Do not modify the products. Do not also disassemble or modify the parts. It may cause a fire, electric shock or injury.
 Use specified parts.	When any of the electrical parts are to be replaced, ensure that the replacement parts satisfy the specifications given in the Service Manual (or use the parts contained on the parts list in the Service Manual). Use of any parts which do not satisfy the required specifications may give rise to electric shocks, smoking and / or a fire.
 Do not bring a child close to the equipment.	If, in the course of carrying out repairs, it becomes absolutely necessary to check out the electrical parts with the electrical parts box cover of one or more of the indoor units and the service panel of the outdoor unit removed in order to find out exactly where the trouble lies, put a sign in place so that no-one will approach the work location before proceeding with the work. Third-party individuals may enter the work site and receive electric shocks if this warning is not heeded.
 Insulating measures	Connect the cut-off lead wires with crimp contact, etc., put the closed end side upward and then apply a water cut method, otherwise a leak or production of fire is caused at the users' side.
 No fire	When performing repairs using a gas burner, replace the refrigerant with nitrogen gas because the oil that coats the pipes may otherwise burn. When repairing the refrigerating cycle, take the following measures. 1) Be attentive to fire around the cycle. When using a gas stove, etc., be sure to put out fire before work; otherwise the oil mixed with refrigerant gas may catch fire. 2) Do not use a brazing in the closed room. When using it without ventilation, carbon monoxide poisoning may be caused. 3) Do not bring inflammables close to the refrigerant cycle, otherwise fire of the brazing may catch the inflammables.
 Refrigerant	<p>The refrigerant used by this air conditioner is the R410A.</p> <p>Check the used refrigerant name and use tools and materials of the parts which match with it. For the products which use R410A refrigerant, the refrigerant name is indicated at a position on the outdoor unit where is easy to see. To prevent miss charging, the route of the service port is changed from one of the former R22.</p> <p>Do not use any refrigerant different from the one specified for complement or replacement. Otherwise, abnormally high pressure may be generated in the refrigeration cycle, which may result in a failure or explosion of the product or an injury to your body.</p> <p>For an air conditioner which uses R410A, never use other refrigerant than R410A. For an air conditioner which uses other refrigerant (R22, etc.), never use R410A. If different types of refrigerant are mixed, abnormal high pressure generates in the refrigerating cycle and an injury due to breakage may be caused.</p> <p>When the air conditioner has been installed or relocated, follow the instructions in the Installation Manual and purge the air completely so that no gases other than the refrigerant will be mixed in the refrigerating cycle.  Failure to purge the air completely may cause the air conditioner to malfunction.</p> <p>Do not charge refrigerant additionally. If charging refrigerant additionally when refrigerant gas leaks, the refrigerant composition in the refrigerating cycle changes resulted in change of air conditioner characteristics or refrigerant over the specified standard amount is charged and an abnormal high pressure is applied to the inside of the refrigerating cycle resulted in cause of breakage or injury. Therefore if the refrigerant gas leaks, recover the refrigerant in the air conditioner, execute vacuuming, and then newly recharge the specified amount of liquid refrigerant. In this time, never charge the refrigerant over the specified amount.</p> <p>When recharging the refrigerant in the refrigerating cycle, do not mix the refrigerant or air other than R410A into the specified refrigerant. If air or others is mixed with the refrigerant, abnormal high pressure generates in the refrigerating cycle resulted in cause of injury due to breakage.</p> <p>After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous.</p> <p>Never recover the refrigerant into the outdoor unit. When the equipment is moved or repaired, be sure to recover the refrigerant with recovering device.  The refrigerant cannot be recovered in the outdoor unit; otherwise a serious accident such as breakage or injury is caused.</p>



 Assembly / Wiring	After repair work, surely assemble the disassembled parts, and connect and lead the removed wires as before. Perform the work so that the cabinet or panel does not catch the inner wires. If incorrect assembly or incorrect wire connection was done, a disaster such as a leak or fire is caused at user's side.
 Insulator check	After the work has finished, be sure to use an insulation tester set (500VMΩ) to check the resistance is 1 MΩ or more between the charge section and the non-charge metal section (Earth position). If the resistance value is low, a disaster such as a leak or electric shock is caused at user's side.
 Ventilation	When the refrigerant gas leaks during work, execute ventilation. If the refrigerant gas touches to a fire, poisonous gas generates. A case of leakage of the refrigerant and the closed room full with gas is dangerous because a shortage of oxygen occurs. Be sure to execute ventilation. If refrigerant gas has leaked during the installation work, ventilate the room immediately. If the leaked refrigerant gas comes in contact with fire, noxious gas may generate. After installation work, check the refrigerant gas does not leak. If the refrigerant gas leaks in the room, poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous.
 Compulsion	When the refrigerant gas leaks, find out the leaked position and repair it surely. If the leaked position cannot be found out and the repair work is interrupted, reclaim and tighten the service valve, otherwise the refrigerant gas may leak into the room. The poisonous gas generates when gas touches to fire such as fan heater, stove or cooking stove though the refrigerant gas itself is innocuous. When installing equipment which includes a large amount of charged refrigerant in a sub-room, it is necessary that the concentration does not the limit even if the refrigerant leaks. If the refrigerant leaks and exceeds the limit concentration, an accident of shortage of oxygen is caused. Tighten the flare nut with a torque wrench in the specified manner. Excessive tighten of the flare nut may cause a crack in the flare nut after a long period, which may result in refrigerant leakage. Nitrogen gas must be used for the airtight test. The charge hose must be connected in such a way that it is not slack. For the installation / moving / reinstallation work, follow to the Installation Manual. If an incorrect installation is done, a trouble of the refrigerating cycle, water leak, electric shock or fire is caused.
 Check after repair	Once the repair work has been completed, check for refrigerant leaks, and check the insulation resistance and water drainage. Then perform a trial run to check that the air conditioner is running properly. After repair work has finished, check there is no trouble. If check is not executed, a fire, electric shock or injury may be caused. For a check, turn off the power breaker. After repair work (installation of front panel and cabinet) has finished, execute a test run to check there is no generation of smoke or abnormal sound. If check is not executed, a fire or an electric shock is caused. Before test run, install the front panel and cabinet. Be sure to fix the screws back which have been removed for installation or other purposes.
 Do not operate the unit with the valve closed.	Check the following matters before a test run after repairing piping. <ul style="list-style-type: none"> <li>• Connect the pipes surely and there is no leak of refrigerant.</li> <li>• The valve is opened.</li> </ul> Running the compressor under condition that the valve closes causes an abnormal high pressure resulted in damage of the parts of the compressor and etc. and moreover if there is leak of refrigerant at connecting section of pipes, the air is sucked and causes further abnormal high pressure resulted in burst or injury.
 Check after reinstallation	Only a qualified installer (*1) or qualified service person (*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result. Check the following items after reinstallation. <ol style="list-style-type: none"> <li>1) The earth wire is correctly connected.</li> <li>2) The power cord is not caught in the product.</li> <li>3) There is no inclination or unsteadiness and the installation is stable.</li> </ol> If check is not executed, a fire, an electric shock or an injury is caused. When carrying out the reclaim work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.

(\*1) Refer to the "Definition of Qualified Installer or Qualified Service Person"

 Cooling check	<p>When the service panel of the outdoor unit is to be opened in order for the compressor or the area around this part to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the compressor pipes and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p>
	<p>Take care not to get burned by compressor pipes or other parts when checking the cooling cycle while running the unit as they get heated while running. Be sure to put on gloves providing protection for heat.</p>
 Installation	<p>When the service panel of the outdoor unit is to be opened in order for the fan motor, inverter or the areas around these parts to be repaired immediately after the air conditioner has been shut down, set the circuit breaker to the OFF position, and then wait at least 10 minutes before opening the service panel. If you fail to heed this warning, you will run the risk of burning yourself because the fan motor, reactor, inverter heat sink and other parts will be very hot to the touch. In addition, before proceeding with the repair work, wear the kind of insulated heat-resistant gloves designed to protect electricians.</p>
	<p>Only a qualified installer or service person is allowed to do installation work. Inappropriate installation may result in water leakage, electric shock or fire.</p>
	<p>Before starting to install the air conditioner, read carefully through the Installation Manual, and follow its instructions to install the air conditioner.</p>
	<p>Be sure to use the company-specified products for the separately purchased parts. Use of non-specified products may result in fire, electric shock, water leakage or other failure. Have the installation performed by a qualified installer.</p>
	<p>Do not supply power from the power terminal block equipped on the outdoor unit to another outdoor unit. Capacity overflow may occur on the terminal block and may result in fire.</p>
	<p>Do not install the air conditioner in a location that may be subject to a risk of exposure to a combustible gas. If a combustible gas leaks and becomes concentrated around the unit, a fire may occur.</p>
	<p>Install the indoor unit at least 2.5 m above the floor level since otherwise the users may injure themselves or receive electric shocks if they poke their fingers or other objects into the indoor unit while the air conditioner is running.</p>
	<p>Install a circuit breaker that meets the specifications in the Installation Manual and the stipulations in the local regulations and laws.</p>
	<p>Install the circuit breaker where it can be easily accessed by the agent.</p>
	<p>If you install the unit in a small room, take appropriate measures to prevent the refrigerant from exceeding the limit concentration even if it leaks. Consult the dealer from whom you purchased the air conditioner when you implement the measures. Accumulation of highly concentrated refrigerant may cause an oxygen deficiency accident.</p>
<p>Do not place any combustion appliance in a place where it is directly exposed to the wind of air conditioner, otherwise it may cause imperfect combustion.</p>	

### Explanations given to user

If you have discovered that the fan grille is damaged, do not approach the outdoor unit but set the circuit breaker to the OFF position, and contact a qualified service person to have the repairs done. Do not set the circuit breaker to the ON position until the repairs are completed.

### Relocation

- Only a qualified installer (\*1) or qualified service person (\*1) is allowed to relocate the air conditioner. It is dangerous for the air conditioner to be relocated by an unqualified individual since a fire, electric shocks, injury, water leakage, noise and / or vibration may result.
- When carrying out the reclaim work shut down the compressor before disconnecting the refrigerant pipe. Disconnecting the refrigerant pipe with the service valve left open and the compressor still operating will cause air, etc. to be sucked in, raising the pressure inside the refrigeration cycle to an abnormally high level, and possibly resulting in rupture, injury, etc.

(\*1) Refer to the “Definition of Qualified Installer or Qualified Service Person”

# ***Declaration of Conformity***

Manufacturer: Toshiba Carrier (Thailand) Co., Ltd.  
144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi,  
Amphur Muang, Pathumthani 12000, Thailand

TCF holder: TOSHIBA CARRIER EUROPE S.A.S  
Route de Thil 01120 Montluel FRANCE

Hereby declares that the machinery described below:

Generic Denomination: Air Conditioner

Model / type: MMY-MUP0801HT8P-E(TR), MMY-MUP1001HT8P-E(TR), MMY-MUP1201HT8P-E(TR),  
MMY-MUP1401HT8P-E(TR), MMY-MUP1601HT8P-E(TR), MMY-MUP1801HT8P-E(TR),  
MMY-MUP2001HT8P-E(TR), MMY-MUP2201HT8P-E(TR), MMY-MUP2401HT8P-E(TR)  
  
MMY-MUP0801HT8JP-E(TR), MMY-MUP1001HT8JP-E(TR), MMY-MUP1201HT8JP-E(TR),  
MMY-MUP1401HT8JP-E(TR), MMY-MUP1601HT8JP-E(TR), MMY-MUP1801HT8JP-E(TR),  
MMY-MUP2001HT8JP-E(TR), MMY-MUP2201HT8JP-E(TR), MMY-MUP2401HT8JP-E(TR)

Commercial name: Super Modular Multi System Air Conditioner  
Super Heat Recovery Multi System Air Conditioner  
Mini-Super Modular Multi System Air Conditioner (MiNi-SMMS series)

Complies with the provisions of the Machinery Directive (Directive 2006/42/EC) and the regulations transposing into national law

Complies with the provisions of the following harmonized standard:  
EN 378-2: 2008+A2: 2012

## **NOTE**

---

This declaration becomes invalid if technical or operational modifications are introduced without the manufacturer's consent.

---

# Specifications

Model	Sound power level (dBA)		Weight (kg)
	Cooling	Heating	
MMY-MUP0801*	75	76	228
MMY-MUP1001*	77	77	228
MMY-MUP1201*	79	81	228
MMY-MUP1401*	79	82	228
MMY-MUP1601*	83	86	312
MMY-MUP1801*	84	89	312
MMY-MUP2001*	86	90	334
MMY-MUP2201*	86	90	356
MMY-MUP2401*	86	90	356

## Carrying in the outdoor unit


### CAUTION

Handle the outdoor unit carefully, observing the following items

- When using a forklift truck or other machinery for loading/unloading in transportation, insert the fork of the forklift truck into the rectangular holes for handling as shown below.
- When lifting up the unit, insert a rope able to bear the unit's weight into the rectangular holes for handling, and tie the unit from 4 sides.

(Apply padding in positions where the rope comes into contact with the outdoor unit so that no damage is caused to the outer surface of the outdoor unit.)


(There are reinforcing plates on the side surfaces, so the rope cannot be passed through.)

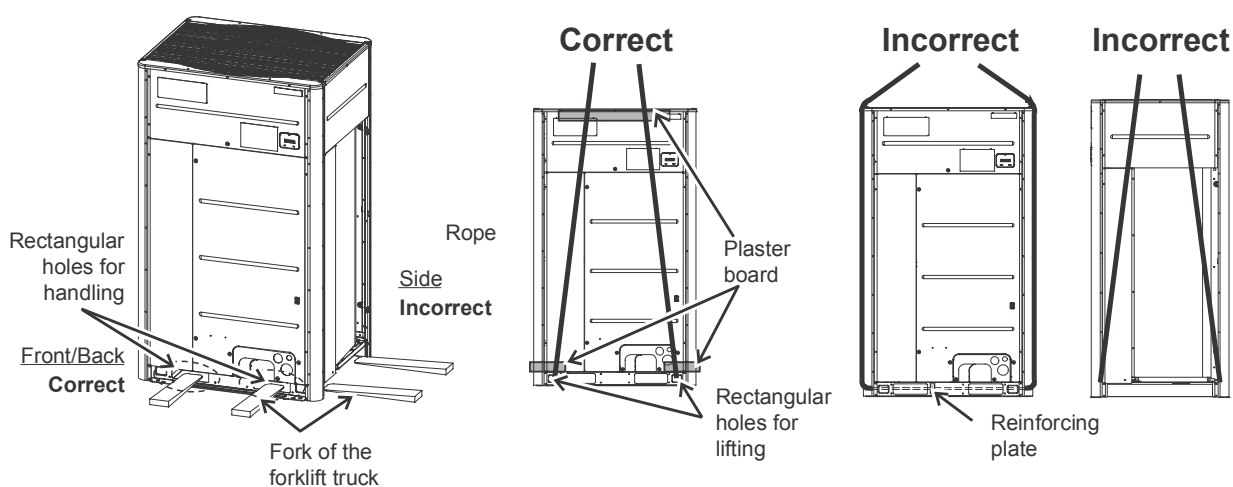


## Weight center and weight

### ◆ Weight center of an outdoor unit

**A**

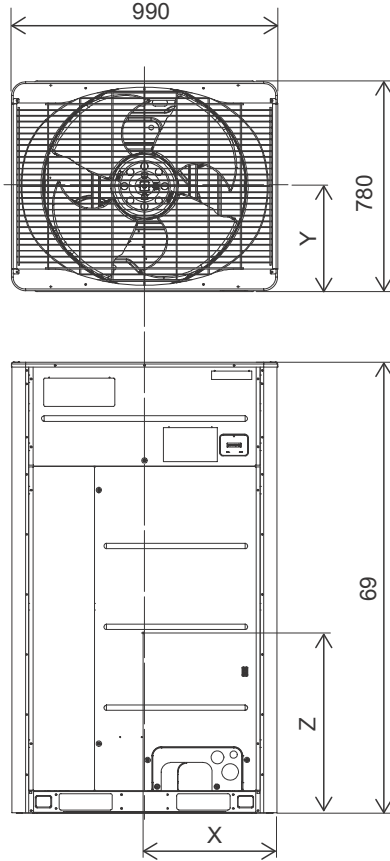


**B**

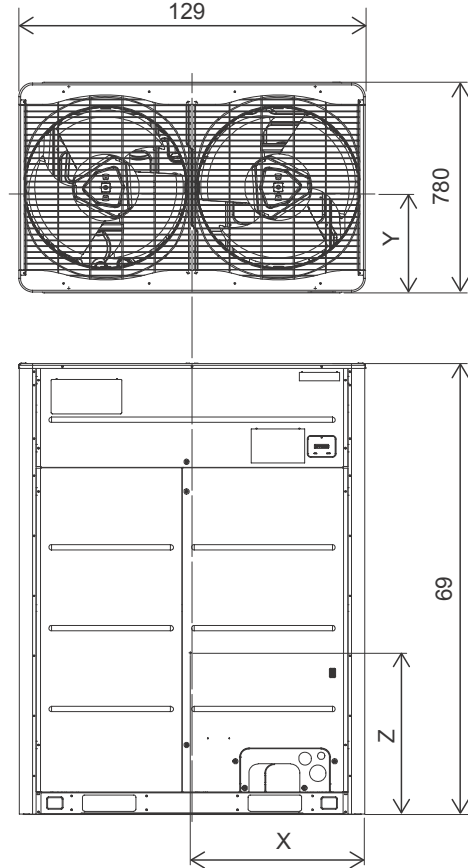

No.	Model	X (mm)	Y (mm)	Z (mm)	Mass (kg)
A	MMY-MUP0801*	500	400	675	228
	MMY-MUP1001*				
	MMY-MUP1201*				
	MMY-MUP1401*				
B	MMY-MUP1601*	650	370	605	312
	MMY-MUP1801*				334
	MMY-MUP2001*	640	360	680	356
	MMY-MUP2201*				
	MMY-MUP2401*				

## Coupling size of brazed pipe

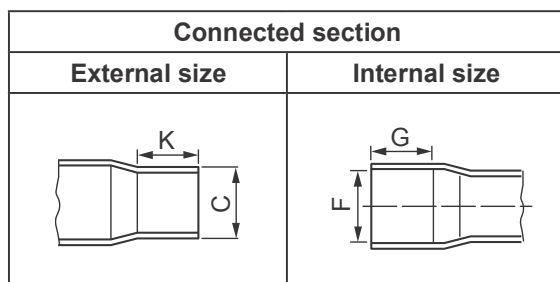

(Unit: mm)

Standard outer dia. of connected copper pipe	Connected section				Oval value	Min. thickness of coupling
	External size	Internal size	Min. depth of insertion			
	Standard outer dia. (Allowable difference)					
	C	F	K	G		
6.35	6.35 (±0.03)	6.45 (±0.03)	7	6	0.06 or less	0.50
9.52	9.52 (±0.03)	9.62 (±0.03)	8	7	0.08 or less	0.60
12.70	12.70 (±0.03)	12.81 (±0.03)	9	8	0.10 or less	0.70
15.88	15.88 (±0.03)	16.00 (±0.03)	9	8	0.13 or less	0.80
19.50	19.50 (±0.03)	19.19 (±0.03)	11	10	0.15 or less	0.80
22.22	22.22 (±0.03)	22.36 (±0.03)	11	10	0.16 or less	0.90
25.40	25.40 (±0.04)	25.56 (±0.04)	13	12	0.18 or less	0.95
28.58	28.58 (±0.04)	28.75 (±0.04)	13	12	0.20 or less	1.00
34.92	34.90 (±0.04)	35.1 (±0.04)	13	12	0.24 or less	1.20
38.10	38.10 (±0.05)	38.31 (±0.05)	15	14	0.27 or less	1.35
41.28	41.28 (±0.05)	41.50 (±0.05)	15	14	0.29 or less	1.45
44.45	44.45 (±0.05)	44.68 (±0.05)	17	14	0.31 or less	1.25
53.98	53.98 (±0.05)	54.22 (±0.05)	17	16	0.32 or less	1.50

## Screw size and tightening torque

	Screw size	Tightening torque (N•m)
Power supply terminal	M6	2.5 to 3.0
Earth screw	M8	5.5 to 6.6
Communication wire terminal	M4	1.2 to 1.4

# Adding refrigerant

After finishing vacuuming, exchange the vacuum pump with a refrigerant canister and start additional charging of refrigerant.

## Calculation of additional refrigerant charge amount

Refrigerant charge amount at shipment from the factory does not include the refrigerant for pipes at the local site. For refrigerant to be charged in pipes at the local site, calculate the amount and charge it additionally.

### NOTE

If the additional refrigerant amount indicates minus as the result of calculation, use the air conditioner without additional refrigerant.

Outdoor unit type	MUP0801	MUP1001	MUP1201	MUP1401	MUP1601	MUP1801	MUP2001	MUP2201	MUP2401
Charging amount (kg)	6.0				9.0				

### Additional refrigerant charge amount at site = [1] + [2] + [3] + [4]

- [1] Compensation by system HP (Table 1)\*
- [2] Real Length of liquid pipe X additional refrigerant charge amount per 1 m liquid pipe (Table 2)
- [3] Corrective amount of refrigerant depending on the Indoor units (Table 3-1, 3-2 and 3-3)
- [4] Corrective amount of refrigerant depending on the outdoor unit diversity (Connected ratio of indoor units to outdoor units). (Table 4)

\*If combination of the outdoor units is not same as listed at Table 1, calculate the correction amount refrigerant of the combination outdoor units refers to the each outdoor unit's additional refrigerant

**Table 1**  
**Standard**

System HP	Combination HP					Compensation by System HP (kg)
8	8	-	-	-	-	1.5
10	10	-	-	-	-	1.7
12	12	-	-	-	-	2.3
14	14	-	-	-	-	2.3
16	16	-	-	-	-	1.0
18	18	-	-	-	-	2.0
20	20	-	-	-	-	4.0
22	22	-	-	-	-	5.0
24	24	-	-	-	-	5.5
26	14	12	-	-	-	4.6
28	14	14	-	-	-	4.6
30	18	12	-	-	-	4.3
32	20	12	-	-	-	6.3
34	20	14	-	-	-	6.3
36	24	12	-	-	-	7.8
38	24	14	-	-	-	7.8
40	20	20	-	-	-	8.0
42	24	18	-	-	-	7.5
44	24	20	-	-	-	9.5
46	24	22	-	-	-	10.5
48	24	24	-	-	-	11.0



System HP	Combination HP					Compensation by System HP (kg)
50	24	14	12	-	-	10.1
52	24	14	14	-	-	10.1
54	20	20	14	-	-	10.3
56	24	20	12	-	-	11.8
58	24	20	14	-	-	11.8
60	24	24	12	-	-	13.3
62	24	24	14	-	-	13.3
64	24	20	20	-	-	13.5
66	24	22	20	-	-	14.5
68	24	24	20	-	-	15.0
70	24	24	22	-	-	16.0
72	24	24	24	-	-	16.5
74	24	24	14	12	-	15.6
76	24	24	14	14	-	15.6
78	24	20	20	14	-	15.8
80	24	24	20	12	-	17.3
82	24	24	20	14	-	17.3
84	24	24	24	12	-	18.8
86	24	24	24	14	-	18.8
88	24	24	20	20	-	19.0
90	24	24	22	20	-	20.0
92	24	24	24	20	-	20.5
94	24	24	24	22	-	21.5
96	24	24	24	24	-	22.0
98	24	24	24	14	12	21.1
100	24	24	24	14	14	21.1
102	24	24	20	20	14	21.3
104	24	24	24	20	12	22.8
106	24	24	24	20	14	22.8
108	24	24	24	24	12	24.3
110	24	24	24	24	14	24.3
112	24	24	24	20	20	24.5
114	24	24	24	22	20	25.5
116	24	24	24	24	20	26.0
118	24	24	24	24	22	27.0
120	24	24	24	24	24	27.5

**Table 2**

Liquid pipe dia. (mm)	6.4	9.5	12.7	15.9	19.1	22.2	25.4
Additional refrigerant amount per 1 m liquid pipe (kg/m)	0.025	0.055	0.105	0.160	0.250	0.350	0.470

**Table 3-1**

Corrective amount of refrigerant varies according to indoor unit capacity rank.

Indoor unit Capacity rank	003	005	007	008	009	010	012	014	015	018	020	024	027	030	036	048	056	072	096
Capacity code (Equivalent to HP)	0.3	0.6	0.8	0.9	1	1.1	1.25	1.5	1.7	2	2.25	2.5	3	3.2	4	5	6	8	10
Corrective amount of refrigerant (kg)	0.2						0.4						0.6		1.0				

- If the Fresh Air Intake Indoor Unit (MMD-UP \*\*\* HFP \*) is connected, the correction amount refrigerant for Fresh Air Intake Indoor Unit is 0 Kg.

**Table 3-2**

Corrective amount of refrigerant varies for DX Coil Interface

Capacity code (Equivalent to HP)	8	10	16	18	20	32	36	40	48	54	60
Corrective amount of refrigerant (kg)	1.4	1.8	2.9	3.2	3.6	5.8	6.5	7.2	8.6	9.7	10.8

**Table 3-3**

Corrective amount of refrigerant varies for Hot Water Module

Indoor unit Capacity rank	024	048
Capacity code (Equivalent to HP)	2.5	5
Corrective amount of refrigerant (kg)	0.2	

**Table 3-4**

Corrective amount of refrigerant varies for (MMU-UP \*\*\* H-E) High Efficiency 4 way cassette

Indoor unit capacity rank	009	012	015	018	024	027	030	036	048	056
Capacity code (Equivalent to HP)	1	1.25	1.7	2	2.5	3	3.2	4	5	6
Corrective amount of refrigerant (kg)	0.2			0.6						

**Charging of refrigerant**

- Keeping the valve of the outdoor unit closed, be sure to charge the liquid refrigerant into the service port at the liquid side.
- If the specified amount of refrigerant cannot be charged, fully open the valves of the outdoor unit at liquid and gas sides, operate the air conditioner in COOL mode, and then charge refrigerant into service port at the gas side. In this time, choke the refrigerant slightly by operating the valve of the canister to charge liquid refrigerant.
- The liquid refrigerant may be charged suddenly, therefore be sure to charge refrigerant gradually.

**Table 4**

Corrective amount of refrigerant varies according to the outdoor unit diversity

Diversity D (%)	Corrective amount of refrigerant (kg)
50% ≤ D < 60%	-2.5
60% ≤ D < 70%	-2.0
70% ≤ D < 80%	-1.5
80% ≤ D < 90%	-1.0
90% ≤ D < 95%	-0.5
95% ≤ D	0

# Refrigerant (R410A)

This air conditioner adopts a HFC type refrigerant (R410A) which does not deplete the ozone layer.

## 1. Safety Caution Concerned to refrigerant (R410A)

The pressure of R410A is 1.6 times higher than that of the former refrigerant (R22). Accompanied with change of refrigerant, the refrigerating oil has been also changed. Therefore, be sure that water, dust, the former refrigerant or the former refrigerating oil is not mixed into the refrigerating cycle of the air conditioner with new refrigerant during installation work or service work. If an incorrect work or incorrect service is performed, there is a possibility to cause a serious accident. Use the tools and materials exclusive to R410A to purpose a safe work.

## 2. Cautions on Installation/Service

- (1) Do not mix the other refrigerant or refrigerating oil.  
For the tools exclusive to R410A, shapes of all the joints including the service port differ from those of the former refrigerant in order to prevent mixture of them.
- (2) As the use pressure of the refrigerant (R410A) is high, use material thickness of the pipe and tools which are specified for R410A.
- (3) In the installation time, use clean pipe materials and work with great attention so that water and others do not mix in because pipes are affected by impurities such as water, oxide scales, oil, etc. Use the clean pipes.  
Be sure to braze with flowing nitrogen gas. (Never use gas other than nitrogen gas.)
- (4) For the earth protection, use a vacuum pump for air purge.
- (5) R410A refrigerant is a zeotropic mixture type refrigerant. Therefore use liquid type to charge the refrigerant.

## 3. Pipe Materials

For the refrigerant pipes, copper pipe and joints are mainly used. It is necessary to select the most appropriate pipes to conform to the standard. Use clean material in which impurities adhere inside of pipe or joint to a minimum.

- (1) Copper pipe

### <Piping>

The pipe thickness, flare-finishing size, flare nut and others differ according to a refrigerant type. When using a long copper pipe for R410A, it is recommended to select "Copper or copper-base pipe without seam" and one with bonded oil amount 40mg/10m or less. Also do not use crushed, deformed, discolored (especially inside) pipes. (Impurities cause clogging of expansion valves and capillary tubes.)

### <Flare nut>

Use the flare nuts which are attached to the air conditioner unit.

- (2) Joint

The flare joint and socket joint are used for joints of the copper pipe. The joints are rarely used for installation of the air conditioner. However clear impurities when using them.

## Tools

### (1) Required Tools for R410A

Mixing of different types of oil may cause a trouble such as generation of sludge, clogging of capillary, etc. Accordingly, the tools to be used are classified into the following three types.

- 1) Tools exclusive for R410A (Those which cannot be used for conventional refrigerant (R22))
- 2) Tools exclusive for R410A, but can be also used for conventional refrigerant (R22)
- 3) Tools commonly used for R410A and for conventional refrigerant (R22)

The table below shows the tools exclusive for R410A and their interchangeability.

### Tools exclusive for R410A (The following tools for R410A are required.)

#### Explanation of symbols

△ : Newly prepared (It is necessary to use it exclusively with R410A, separately from those for R22 or R407C.) : Former tool is available.

Used tools	Usage	Proper use of tools/parts
Gauge manifold	Vacuuming, charging refrigerant and operation check	△ Exclusive to R410A
Charging hose		△ Exclusive to R410A
Charging cylinder	Charging refrigerant	Unusable (Use the Refrigerant charging balance.)
Gas leak detector	Checking gas leak	△ Exclusive to R410A
Vacuum pump	Vacuum drying	Usable if a counter-flow preventive adapter is attached
Vacuum pump with counter flow	Vacuum drying	⊙ R22 (Existing article)
Flare tool	Flare processing of pipes	⊙ Usable by adjusting size
Bender	Bending processing of pipes	⊙ R22 (Existing article)
Refrigerant recovery device	Recovering refrigerant	△ Exclusive to R410A
Torque wrench	Tightening flare nut	△ Exclusive to Ø12.7mm and Ø15.9mm
Pipe cutter	Cutting pipes	⊙ R22 (Existing article)
Refrigerant canister	Charging refrigerant	△ Exclusive to R410A Enter the refrigerate name for identification
Brazing machine/ Nitrogen gas cylinder	Brazing of pipes	⊙ R22 (Existing article)
Refrigerant charging balance	Charging refrigerant	⊙ R22 (Existing article)

**(Note 1)** When flaring is carried out for R410A using the conventional flare tools, adjustment of projection margin is necessary. For this adjustment, a copper pipe gauge, etc. are necessary.

**(Note 2)** Charging cylinder for R410A is being currently developed.

### General tools (Conventional tools can be used.)

In addition to the above exclusive tools, the following equipment which serve also for R22 are necessary as the general tools.

- |  |   |
|--|---|
| (1) Vacuum pump<br>Use vacuum pump by attaching vacuum pump adapter. | (7) Screwdriver (+, -)                  |
| (2) Torque wrench  | (8) Spanner or Adjustable wrench        |
| (3) Pipe cutter  | (9) Hole core drill                     |
| (4) Reamer   | (10) Hexagon wrench (Opposite side 4mm) |
| (5) Pipe bender  | (11) Tape measure                       |
| (6) Level vial   | (12) Metal saw                          |

Also prepare the following equipment for other installation method and run check.

- |                 |                                  |
|-----------------|----------------------------------|
| (1) Clamp meter | (3) Insulation resistance tester |
| (2) Thermometer | (4) Electro-scope                |

# Communication type, model names and the maximum number of connectable units


- ◆ This air conditioning (U series) has new communication specifications, and TU2C-Link (U series) and TCC-Link (other than U series) differ in a communication type. For the communication type and the model names such as each unit or remote controllers, refer to the following table.

Communication type	TU2C-Link (U series and future models)	TCC-Link (Other than U series)
Outdoor unit	MMY-M <u>U</u> P*** ↑ This letter indicates U series model.	Other than U series MMY-MAP*** MCY-MHP***
Indoor unit	MM*- <u>U</u> P*** ↑ This letter indicates U series model.	Other than U series MM*-AP***
Wired remote controller	RBC-A** <u>U</u> *** ↑ This letter indicates U series model.	Other than U series
Wireless remote controller kit & receiver unit	RBC-AX <u>U</u> *** ↑ This letter indicates U series model.	Other than U series
Remote sensor	TCB-TC** <u>U</u> *** ↑ This letter indicates U series model.	Other than U series

U series outdoor unit : SMMS-u (MMY-MUP\*\*\* )  
Other than U series outdoor unit : SMMS-i, SMMS-e etc. (MMY-MAP\*\*\* )

- ◆ If TU2C-Link (U series) is combined with TCC-Link (other than U series), the wiring specifications and the maximum number of connectable indoor units during group control operation will be changed.

- (1) For wiring specifications, carry out the installation, maintenance, or repair according to the attached Installation Manual.
- (2) For a communication type combination and the max. number of connectable indoor units, refer to the following table.
  - Only when all outdoor unit, indoor unit and remote control are a U series, communication method is TU2C-LINK, and the maximum number of connectable units will be 16.

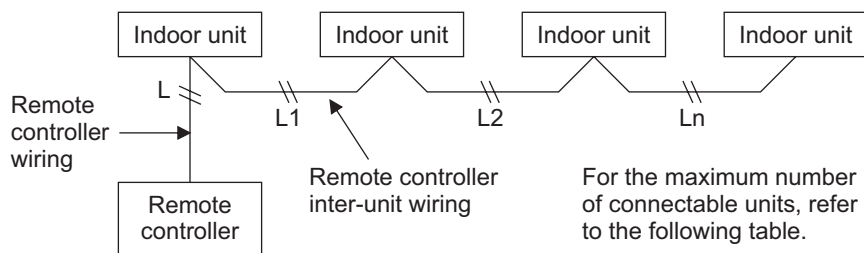


## The combination of unit type and the number of the maximum connection of a communication method

	Unit type							
	U series	U series	U series	U series	*	*	*	*
Outdoor unit	U series	U series	U series	U series	*	*	*	*
Indoor unit	U series	U series	*	*	U series	U series	*	*
Remote controller	U series	*	U series	*	U series	*	U series	*
Remote sensor								
Communication type	TU2C-Link	TCC-Link						
Maximum number of connectable units	16	8						

\* Other than U series

# 1.WIRING DIAGRAMS

8, 10, 12, 14HP Model: MMY-MUP0801\*, MUP1001\*, MUP1201\*, MUP1401\*

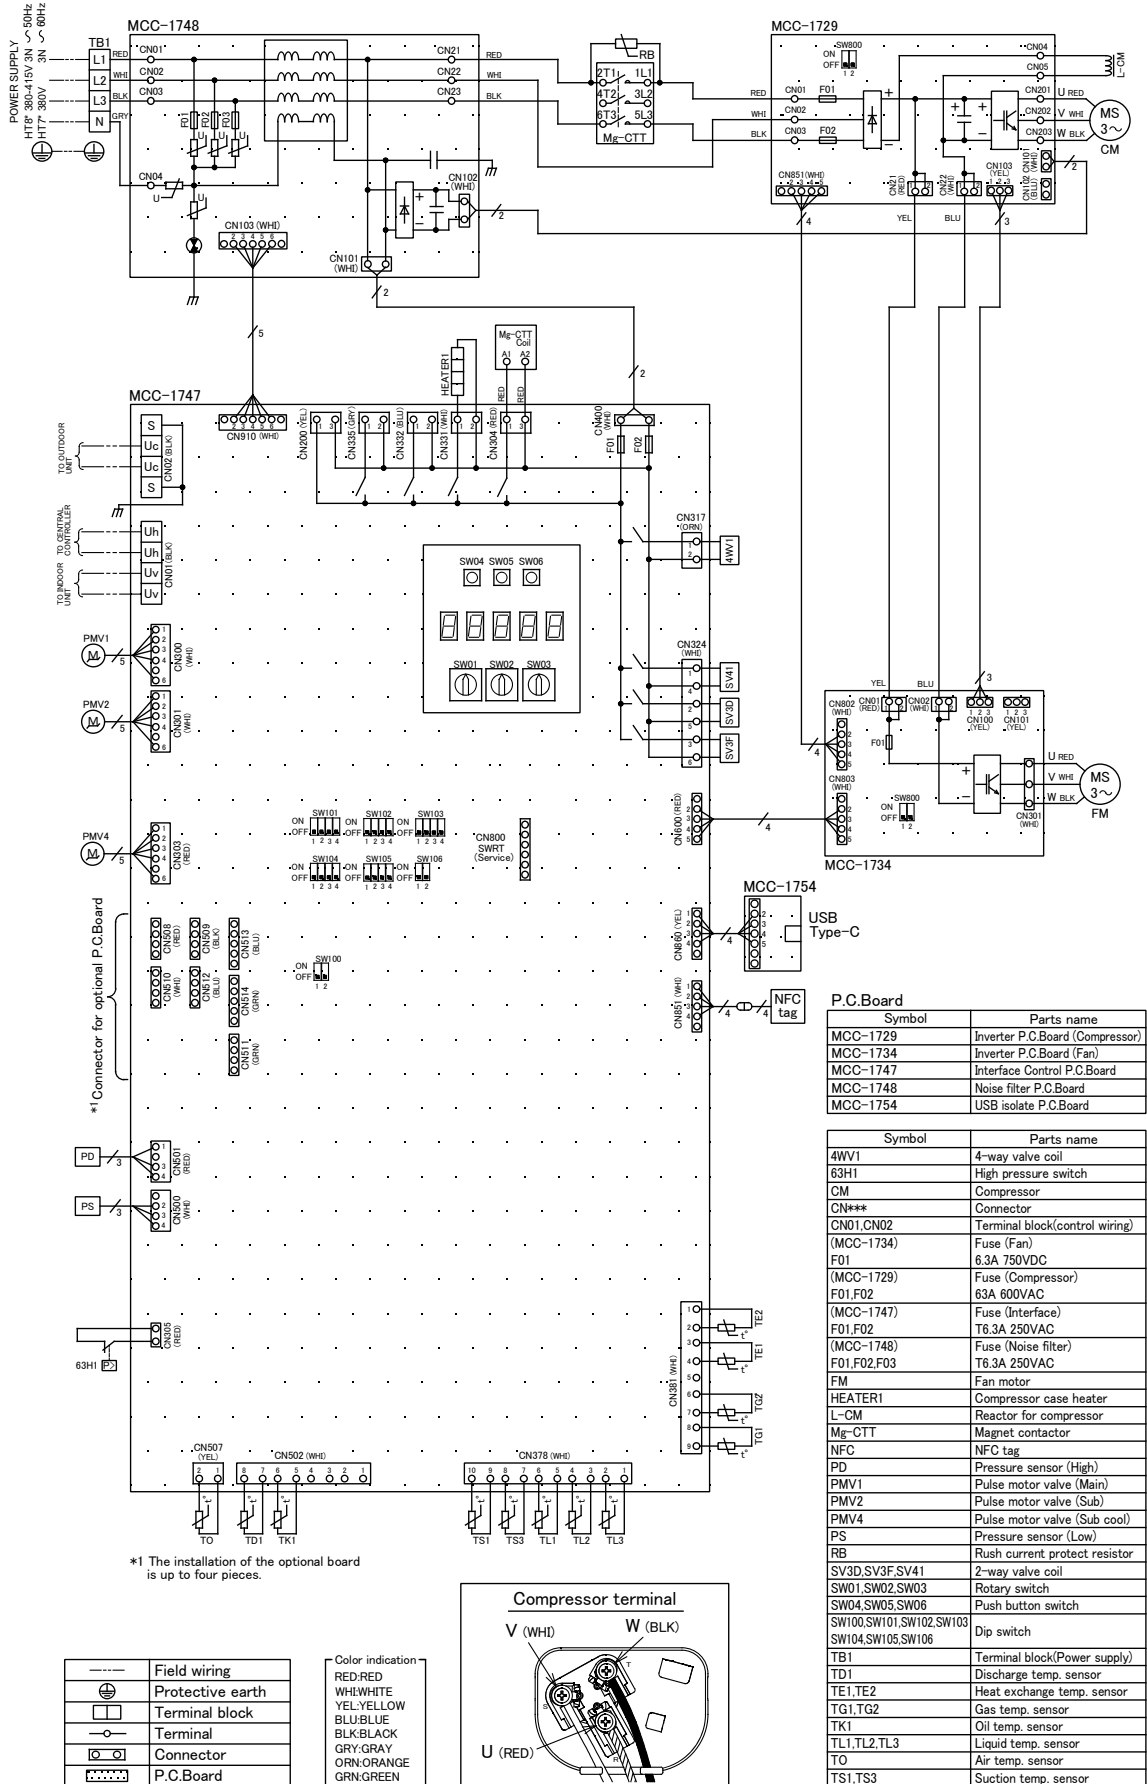


\*1 Connector for optional P.C.Board

\*1 The installation of the optional board is up to four pieces.

	Field wiring
	Protective earth
	Terminal block
	Terminal
	Connector
	P.C.Board


Color indication	
RED	RED
WHI	WHITE
YEL	YELLOW
BLU	BLUE
BLK	BLACK
GRY	GRAY
ORN	ORANGE
GRN	GREEN

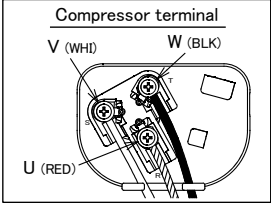

Symbol	Parts name
MCC-1729	Inverter P.C.Board (Compressor)
MCC-1734	Inverter P.C.Board (Fan)
MCC-1747	Interface Control P.C.Board
MCC-1748	Noise filter P.C.Board
MCC-1754	USB isolate P.C.Board

Symbol	Parts name
4WV1	4-way valve coil
63H1	High pressure switch
CM	Compressor
CN+***	Connector
CN01,CN02	Terminal block(control wiring)
(MCC-1734)	Fuse (Fan)
F01	6.3A 750VDC
(MCC-1729)	Fuse (Compressor)
F01,F02	63A 600VAC
(MCC-1747)	Fuse (Interface)
F01,F02	T6.3A 250VAC
(MCC-1748)	Fuse (Noise filter)
F01,F02,F03	T6.3A 250VAC
FM	Fan motor
HEATER1	Compressor case heater
L-CM	Reactor for compressor
Mg-CTT	Magnet contactor
NFC	NFC tag
PD	Pressure sensor (High)
PMV1	Pulse motor valve (Main)
PMV2	Pulse motor valve (Sub)
PMV4	Pulse motor valve (Sub cool)
PS	Pressure sensor (Low)
RB	Rush current protect resistor
SV3D,SV3F,SV41	2-way valve coil
SW01,SW02,SW03	Rotary switch
SW04,SW05,SW06	Push button switch
SW100,SW101,SW102,SW103	Dip switch
SW104,SW105,SW106	Dip switch
TB1	Terminal block(Power supply)
TD1	Discharge temp. sensor
TE1,TE2	Heat exchange temp. sensor
TG1,TG2	Gas temp. sensor
TK1	Oil temp. sensor
TL1,TL2,TL3	Liquid temp. sensor
TO	Air temp. sensor
TS1,TS3	Suction temp. sensor


16, 18, 20HP Model: MMY-MUP1601\*, MUP1801\*, MUP2001\*

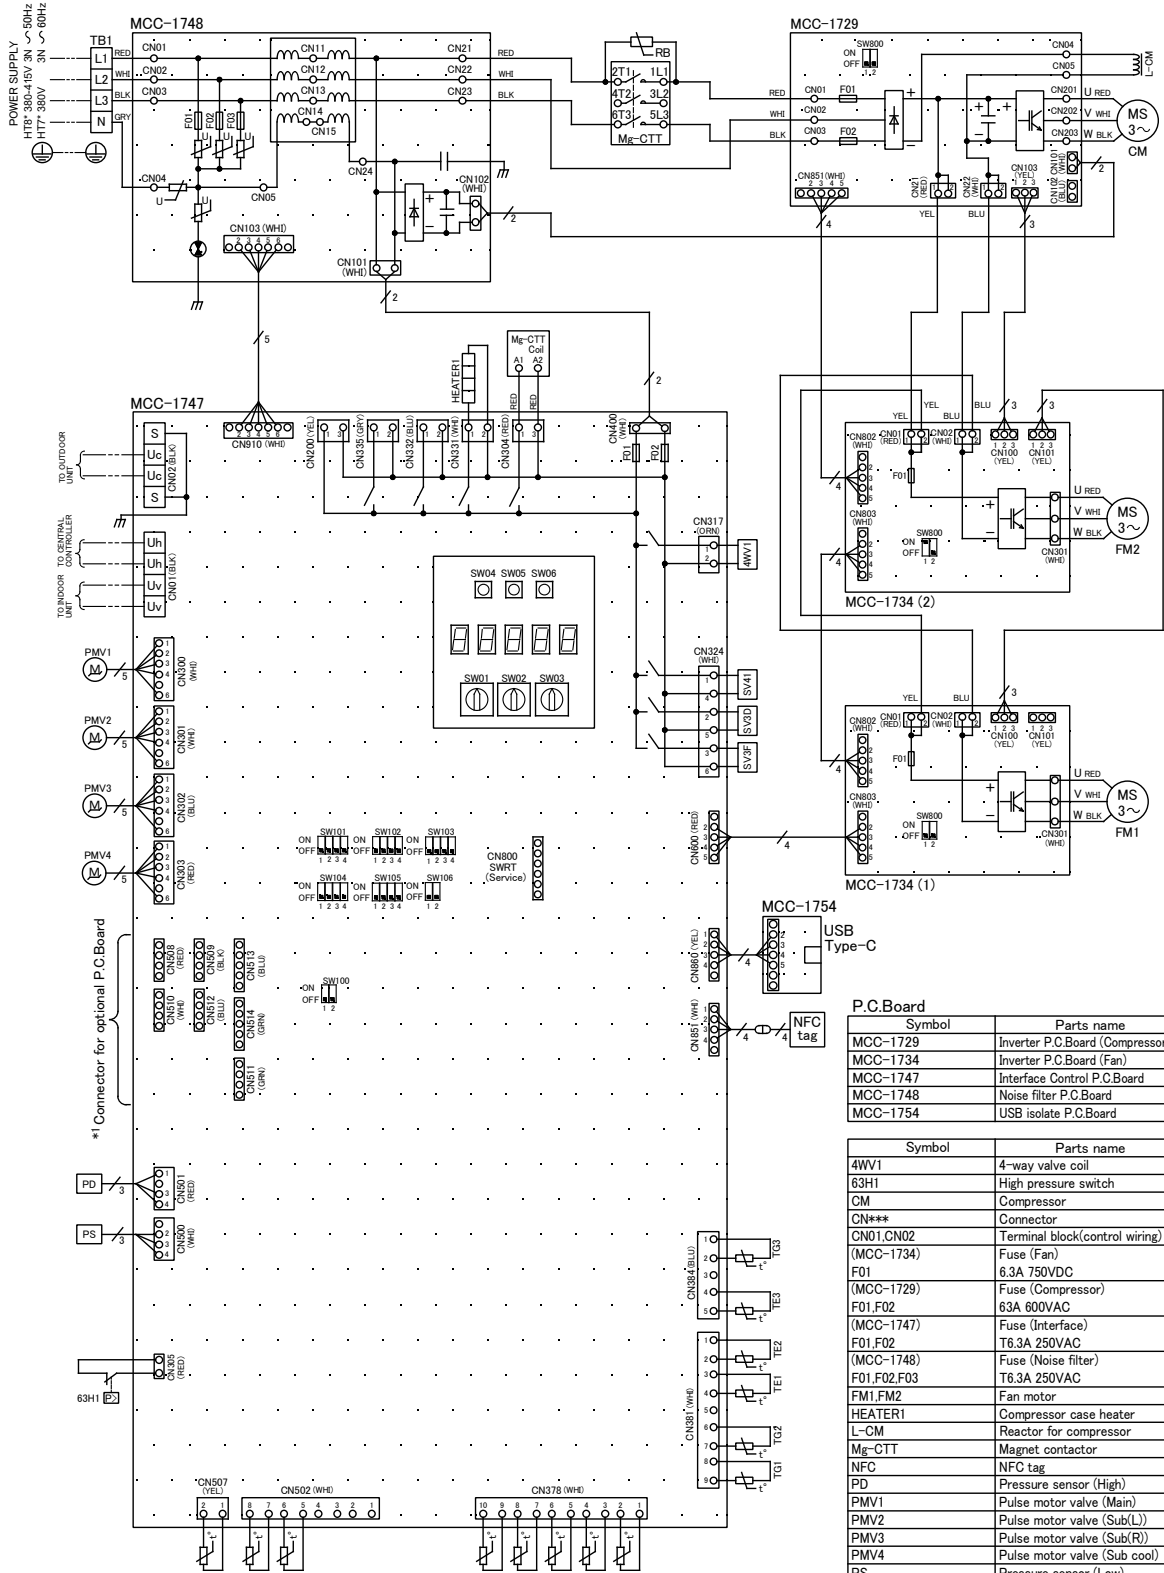

\*1 The installation of the optional board is up to four pieces.

---	Field wiring
⊕	Protective earth
□	Terminal block
○	Terminal
⊗	Connector
⊞	P.C.Board

Color indication	
RED	RED
WH	WHITE
YEL	YELLOW
BLU	BLUE
BLK	BLACK
GRY	GRAY
ORN	ORANGE
GRN	GREEN

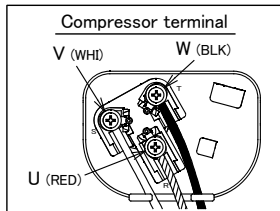


Symbol	Parts name
MCC-1729	Inverter P.C.Board (Compressor)
MCC-1734	Inverter P.C.Board (Fan)
MCC-1747	Interface Control P.C.Board
MCC-1748	Noise filter P.C.Board
MCC-1754	USB isolate P.C.Board

Symbol	Parts name
4WV1	4-way valve coil
63H1	High pressure switch
CM	Compressor
CN***	Connector
CN01,CN02	Terminal block(control wiring)
(MCC-1734)	Fuse (Fan)
F01	6.3A 750VDC
(MCC-1729)	Fuse (Compressor)
F01,F02	63A 600VAC
(MCC-1747)	Fuse (Interface)
F01,F02	T6.3A 250VAC
(MCC-1748)	Fuse (Noise filter)
F01,F02,F03	T6.3A 250VAC
FM1,FM2	Fan motor
HEATER1	Compressor case heater
L-CM	Reactor for compressor
Mg-CCT	Magnet contactor
NFC	NFC tag
PD	Pressure sensor (High)
PMV1	Pulse motor valve (Main)
PMV2	Pulse motor valve (Sub(L))
PMV3	Pulse motor valve (Sub(R))
PMV4	Pulse motor valve (Sub cool)
PS	Pressure sensor (Low)
RB	Rush current protect resistor
SV3D,SV3F,SV41	2-way valve coil
SW01,SW02,SW03	Rotary switch
SW04,SW05,SW06	Push button switch
SW100,SW101,SW102,SW103	Dip switch
SW104,SW105,SW106	Dip switch
TB1	Terminal block(Power supply)
TD1	Discharge temp. sensor
TE1,TE2,TE3	Heat exchange temp. sensor
TG1,TG2,TG3	Gas temp. sensor
TK1	Oil temp. sensor
TL1,TL2,TL3	Liquid temp. sensor
TO	Air temp. sensor
TS1,TS3	Suction temp. sensor




# 22, 24HP Model: MMY-MUP2201\*, MUP2401\*

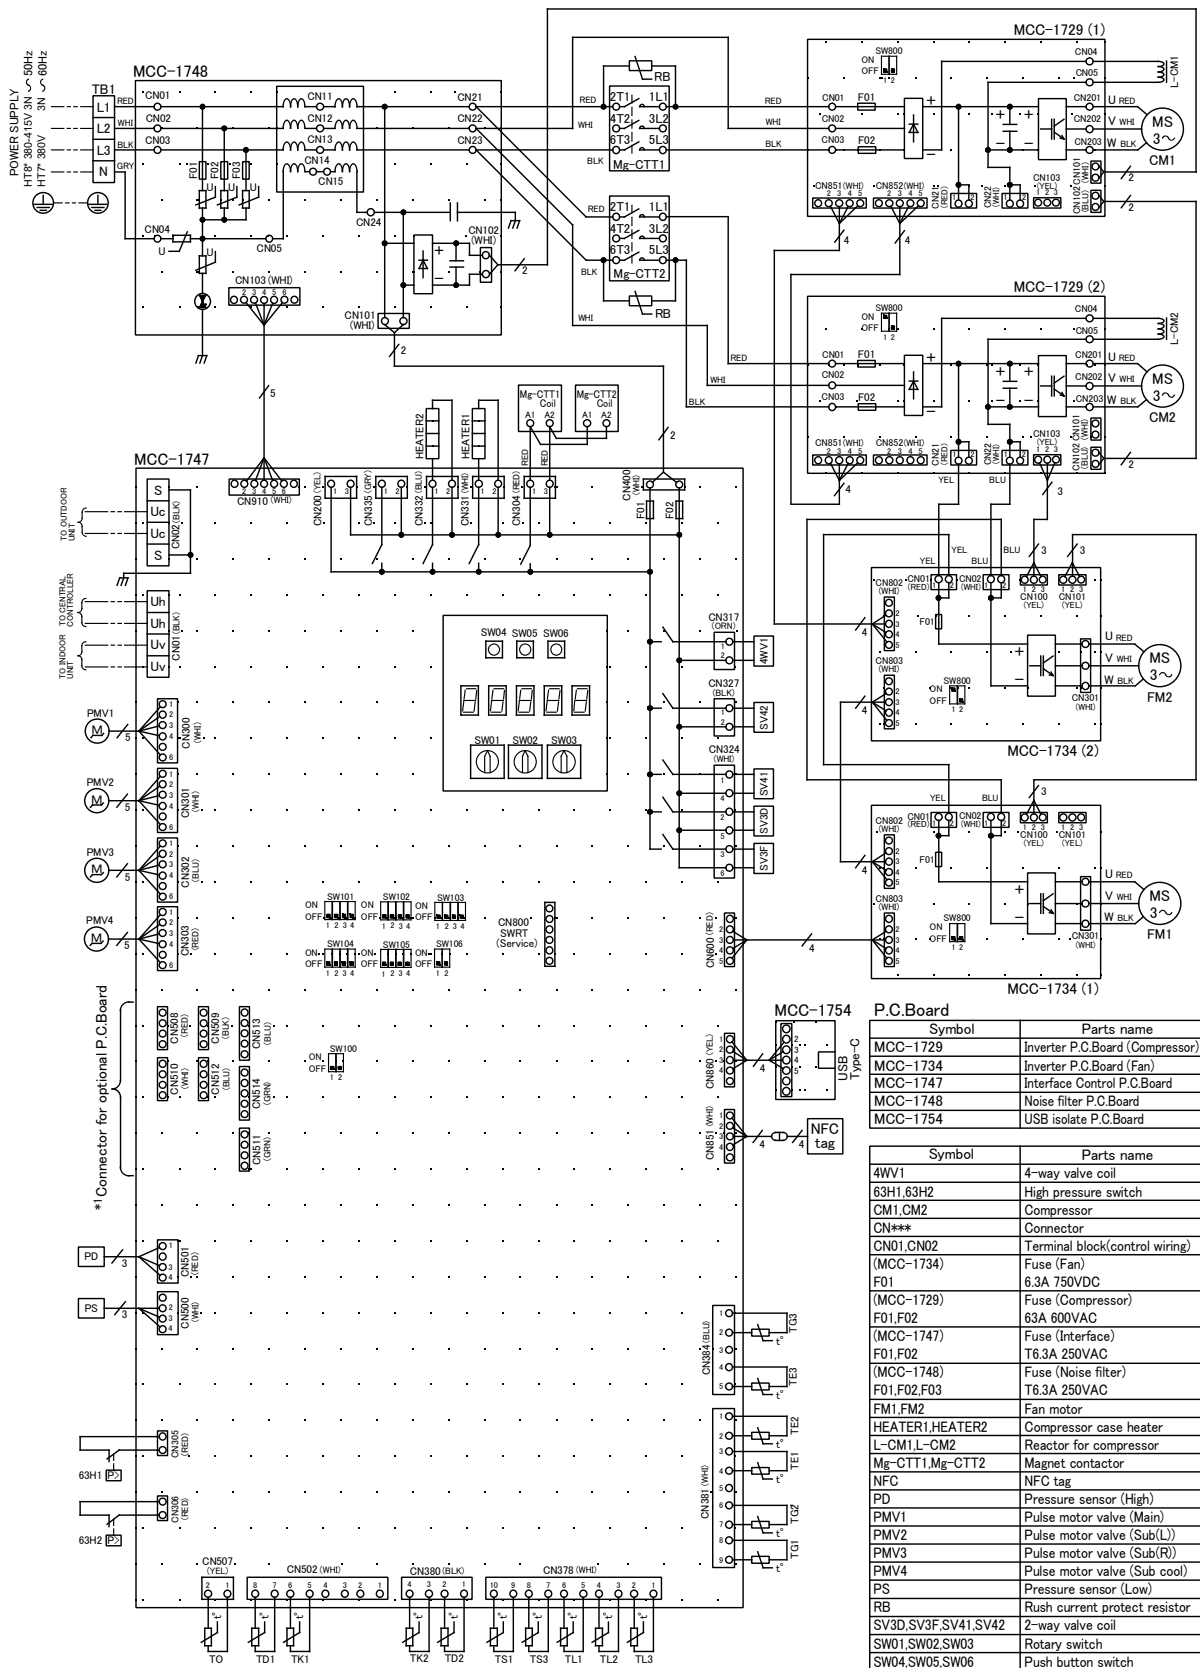

\*1 The installation of the optional board is up to four pieces.

	Field wiring
	Protective earth
	Terminal block
	Terminal
	Connector
	P.C. Board

RED	RED
WHI	WHITE
YEL	YELLOW
BLU	BLUE
BLK	BLACK
GRY	GRAY
ORN	ORANGE
GRN	GREEN

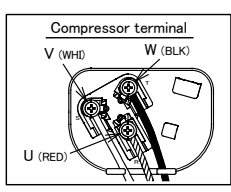

Symbol	Parts name
MCC-1729	Inverter P.C. Board (Compressor)
MCC-1734	Inverter P.C. Board (Fan)
MCC-1747	Interface Control P.C. Board
MCC-1748	Noise filter P.C. Board
MCC-1754	USB isolate P.C. Board

Symbol	Parts name
4WV1	4-way valve coil
63H1,63H2	High pressure switch
CM1,CM2	Compressor
CN***	Connector
CN01,CN02	Terminal block(control wiring)
(MCC-1734)	Fuse (Fan)
F01	6.3A 750VDC
(MCC-1729)	Fuse (Compressor)
F01,F02	63A 600VAC
(MCC-1747)	Fuse (Interface)
F01,F02	T6.3A 250VAC
(MCC-1748)	Fuse (Noise filter)
F01,F02,F03	T6.3A 250VAC
FM1,FM2	Fan motor
HEATER1,HEATER2	Compressor case heater
L-CM1,L-CM2	Reactor for compressor
Mg-CTT1,Mg-CTT2	Magnet contactor
NFC	NFC tag
PD	Pressure sensor (High)
PMV1	Pulse motor valve (Main)
PMV2	Pulse motor valve (Sub/L)
PMV3	Pulse motor valve (Sub/R)
PMV4	Pulse motor valve (Sub cool)
PS	Pressure sensor (Low)
RB	Rush current protect resistor
SV3D,SV3F,SV41,SV42	2-way valve coil
SW01,SW02,SW03	Rotary switch
SW04,SW05,SW06	Push button switch
SW100,SW101,SW102,SW103	Dip switch
SW104,SW105,SW106	Terminal block(Power supply)
TB1	Terminal block
TD1,TD2	Discharge temp. sensor
TE1,TE2,TE3	Heat exchange temp. sensor
TG1,TG2,TG3	Gas temp. sensor
TK1,TK2	Oil temp. sensor
TL1,TL2,TL3	Liquid temp. sensor
TO	Air temp. sensor
TS1,TS3	Suction temp. sensor

## 2. PARTS RATING

### 2-1. Outdoor Unit (50Hz model: MMY-MUP\*\*\*1HT8\*)

No.	Part name	Model	Specifications	MMY-MUP0801HT8*	MMY-MUP1001HT8*	MMY-MUP1201HT8*	MMY-MUP1401HT8*	MMY-MUP1601HT8*	MMY-MUP1801HT8*	MMY-MUP2001HT8*	MMY-MUP2201HT8*	MMY-MUP2401HT8*
1	Compressor	LA771A3TB-20M	Output: 5.3kW×1	○								
1	Compressor	LA771A3TB-20M	Output: 6.4kW×1		○							
1	Compressor	LA771A3TB-20M	Output: 8.2kW×1			○						
1	Compressor	LA771A3TB-20M	Output: 10.8kW×1				○					
1	Compressor	LA1201K4FB-10UC	Output: 11.7kW×1					○				
1	Compressor	LA1201K4FB-10UC	Output: 14.0kW×1						○			
1	Compressor	LA1201K4FB-10UC	Output: 15.9kW×1							○		
1	Compressor	LA771A3TB-20M	Output: 9.3kW×2								○	
1	Compressor	LA771A3TB-20M	Output: 10.7kW×2									○
2	4-way valve coil	SHF	AC220-240V 50Hz	○	○	○	○	○	○	○	○	○
3	2-way valve coil	FDF	AC220-240V 50Hz SV3D, SV41, SV42	○	○	○	○	○	○	○	○	○
3	2-way valve coil	TEV	AC220-240V 50Hz SV3F	○	○	○	○	○	○	○	○	○
4	Pulse motor valve coil	PAM	PMV1	○	○	○	○	○	○	○	○	○
4	Pulse motor valve coil	HAM	PMV2, 3	○	○	○	○	○	○	○	○	○
4	Pulse motor valve coil	UKV	PMV4	○	○	○	○	○	○	○	○	○
5	High-pressure SW	ACB-4UB237W	OFF: 4.15MPa ON: 3.2MPa	○	○	○	○	○	○	○	○	○
6	Pressure sensor (For high pressure)	NSK-BH038F-823	0.5 ~ 4.5V / 0 ~ 3.92MPa	○	○	○	○	○	○	○	○	○
7	Pressure sensor (For low pressure)	NSK-BH020F-822	0.5 ~ 3.5V / 0 ~ 2.0MPa	○	○	○	○	○	○	○	○	○
8	Fan motor	ICF-620A1000-1	DC530 - 620	○	○	○	○	○	○	○	○	○
9	Case heater (For comp.)	—	AC240V/29W	○	○	○	○	○	○	○	○	○

## 2-1-1. Winding resistance of outdoor unit main parts


No.	Part name	Checking procedure							
1	Compressor (Model : LA771A3TB-20M)	<p>Measure and compare each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Red – White</td> <td rowspan="3">0.242 Ω ±0.1</td> </tr> <tr> <td>White – Black</td> </tr> <tr> <td>Black – Red</td> </tr> </tbody> </table> <p>(all same resistance is ok.) at 20°C</p>	Position	Resistance value	Red – White	0.242 Ω ±0.1	White – Black	Black – Red	
Position	Resistance value								
Red – White	0.242 Ω ±0.1								
White – Black									
Black – Red									
2	Compressor (Model : LA1201K4FB-10UC)	<p>Measure and compare each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Red – White</td> <td rowspan="3">0.204 Ω ±0.1</td> </tr> <tr> <td>White – Black</td> </tr> <tr> <td>Black – Red</td> </tr> </tbody> </table> <p>(all same resistance is ok.) at 20°C</p>	Position	Resistance value	Red – White	0.204 Ω ±0.1	White – Black	Black – Red	
Position	Resistance value								
Red – White	0.204 Ω ±0.1								
White – Black									
Black – Red									
3	Fan motor (Model : ICF-620A1000-1)	<p>Measure and compare each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>Red – White</td> <td rowspan="3">10.38Ω ±1.04</td> </tr> <tr> <td>White – Black</td> </tr> <tr> <td>Black – Red</td> </tr> </tbody> </table> <p>(all same resistance is ok.) at 20°C</p>	Position	Resistance value	Red – White	10.38Ω ±1.04	White – Black	Black – Red	
Position	Resistance value								
Red – White	10.38Ω ±1.04								
White – Black									
Black – Red									
4	PMV (Pulse Motor Vale) coil (Model : HAM-MD12TF*) (Model : UKV-A376)	<p>Measure each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>White - Red (COM)</td> <td rowspan="4">46 Ω ±4</td> </tr> <tr> <td>Yellow - Red (COM)</td> </tr> <tr> <td>Orange - Red (COM)</td> </tr> <tr> <td>Blue - Red (COM)</td> </tr> </tbody> </table> <p>at 20°C</p>	Position	Resistance value	White - Red (COM)	46 Ω ±4	Yellow - Red (COM)	Orange - Red (COM)	Blue - Red (COM)
Position	Resistance value								
White - Red (COM)	46 Ω ±4								
Yellow - Red (COM)									
Orange - Red (COM)									
Blue - Red (COM)									
5	PMV (Pulse Motor Valve) coil (Model : PAM-MD12TF*)	<p>Measure each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Position</th> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>White - Red (COM)</td> <td rowspan="4">100 Ω ±10</td> </tr> <tr> <td>Yellow - Red (COM)</td> </tr> <tr> <td>Orange - Red (COM)</td> </tr> <tr> <td>Blue - Red (COM)</td> </tr> </tbody> </table> <p>at 20°C</p>	Position	Resistance value	White - Red (COM)	100 Ω ±10	Yellow - Red (COM)	Orange - Red (COM)	Blue - Red (COM)
Position	Resistance value								
White - Red (COM)	100 Ω ±10								
Yellow - Red (COM)									
Orange - Red (COM)									
Blue - Red (COM)									
6	4-way valve coil (Model : SQ-A2522G*)	<p>Measure each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>2085 Ω ±10%</td> </tr> </tbody> </table> <p>at 20°C</p>	Resistance value	2085 Ω ±10%					
Resistance value									
2085 Ω ±10%									
7	2-way valve coil (Model : FQ-A0522G*)	<p>Measure each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>2085 Ω ±10%</td> </tr> </tbody> </table> <p>at 20°C</p>	Resistance value	2085 Ω ±10%					
Resistance value									
2085 Ω ±10%									
8	2-way valve coil (Model :TEV-SMOAJ2170B)	<p>Measure each winding resistance by digital tester.</p> <table border="1"> <thead> <tr> <th>Resistance value</th> </tr> </thead> <tbody> <tr> <td>2163 Ω ±7%</td> </tr> </tbody> </table> <p>at 20°C</p>	Resistance value	2163 Ω ±7%					
Resistance value									
2163 Ω ±7%									

## 2-2. Inverter Assembly


No	Name	Model	Specifications	IMMY-MUP0801*	IMMY-MUP1001*	IMMY-MUP1201*	IMMY-MUP1401*	IMMY-MUP1601*	IMMY-MUP1801*	IMMY-MUP2001*	IMMY-MUP2201*	IMMY-MUP2401*
1	Power supply terminal block	JXO-6004	AC600V/75A, 4P	○	○	○	○	○	○	○	○	○
2	Noise Filter P.C. board (1)	MCC-1748	-	○	○	○	○	-	-	-	-	-
3	Noise Filter P.C. board (2)	MCC-1748	-	-	-	-	-	○	○	○	○	○
4	Line filter	-	0.9mH/AC460V/50A	-	-	-	-	○	○	○	○	○
5	Interface P.C. board	MCC-1747	-	○	○	○	○	○	○	○	○	○
6	Inverter P.C. board for Compressor (1)	MCC-1729	50A	○	○	○	○	-	-	-	○	○
7	Inverter P.C. board for Compressor (2)	MCC-1729	75A	-	-	-	-	○	○	○	-	-
8	Inverter P.C. board for fan	MCC-1734	-	○	○	○	○	○	○	○	○	○
9	Magnet Contactor	FC-1S	-	○	○	○	○	-	-	-	○	○
10	Magnet Contactor	FC-2S	-	-	-	-	-	○	○	○	-	-
11	PTC Thermistor	MZ32-101R	13A/AC500V	○	○	○	○	○	○	○	○	○

### 2-3. Parts Layout in Outdoor Unit


8,10,12,14HP  
 Model:  
 MMY-MUP0801\*  
 MMY-MUP1001\*  
 MMY-MUP1201\*  
 MMY-MUP1401\*

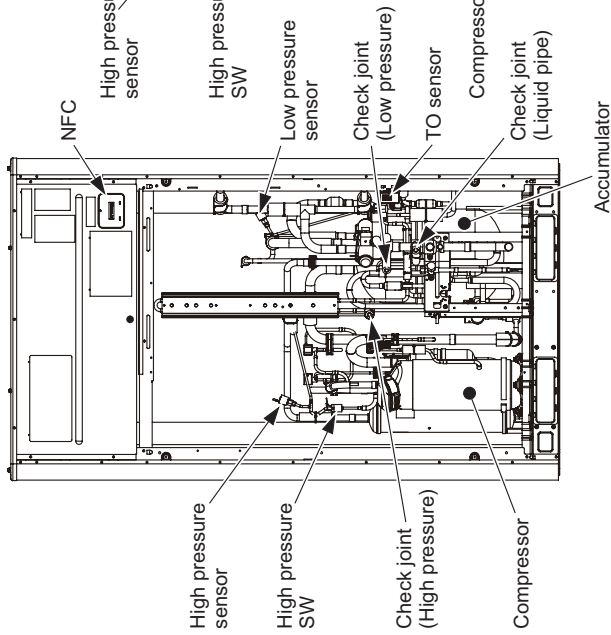

16,18,20HP  
 Model:  
 MMY-MUP1601\*  
 MMY-MUP1801\*  
 MMY-MUP2001\*

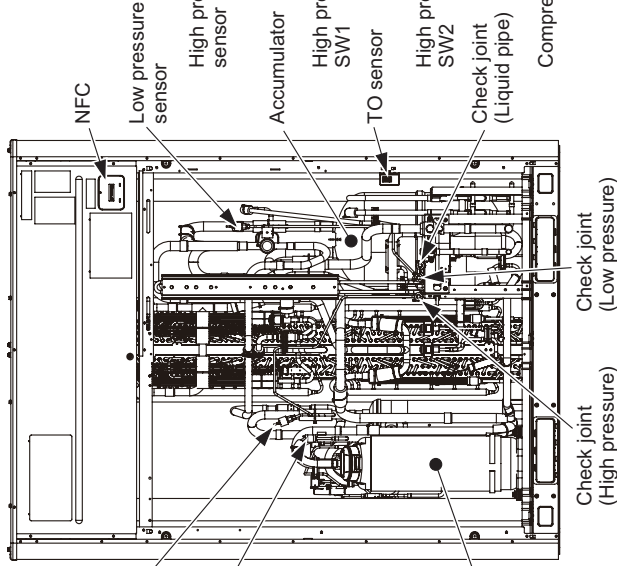


22,24HP  
 Model:  
 MMY-MUP2201\*  
 MMY-MUP2401\*

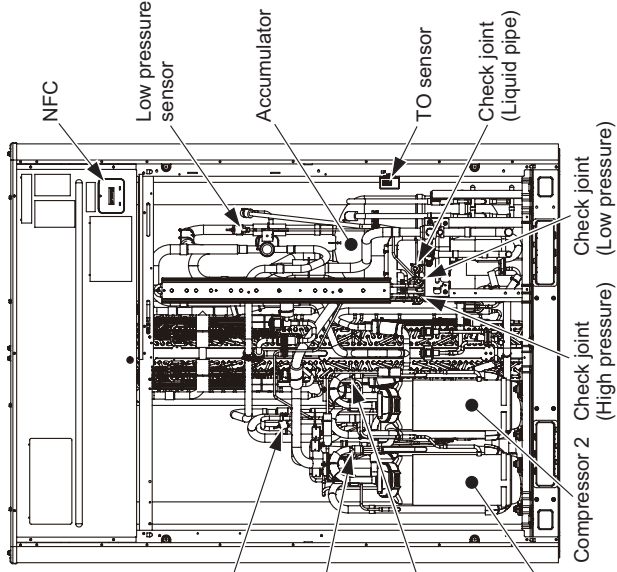

## 2-4. Parts Layout in Inverter Assembly


8, 10, 12, 14HP

Model: MMY-MUP0801\*, MUP1001\*, MUP1201\*, MUP1401\*

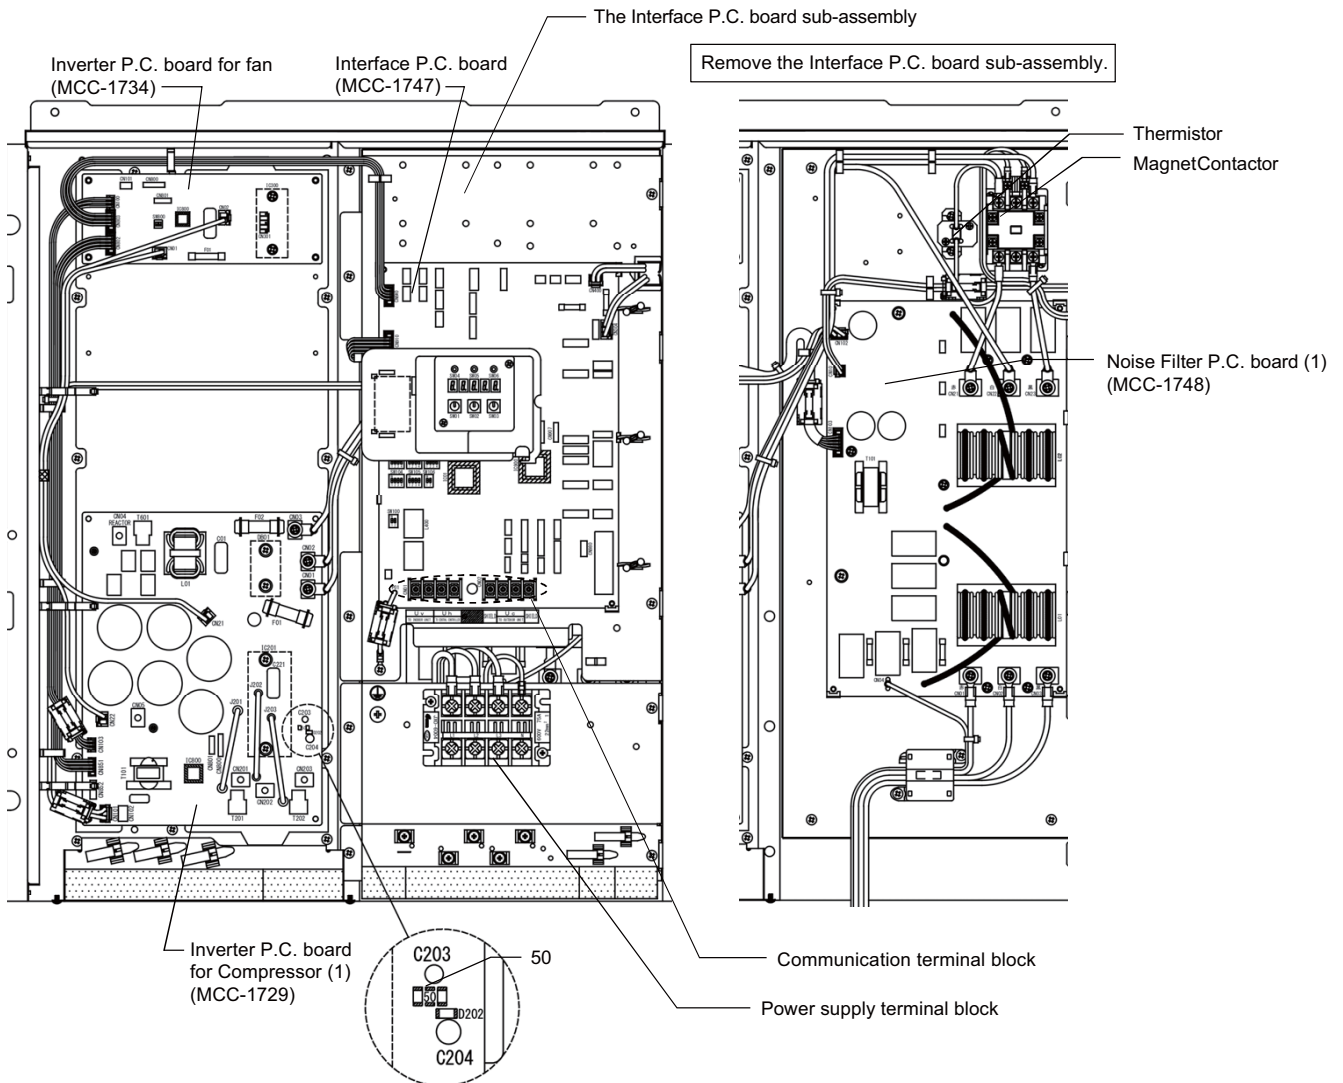

16, 18, 20HP


Model: MMY-MUP1601\*, MUP1801\*, MUP2001\*

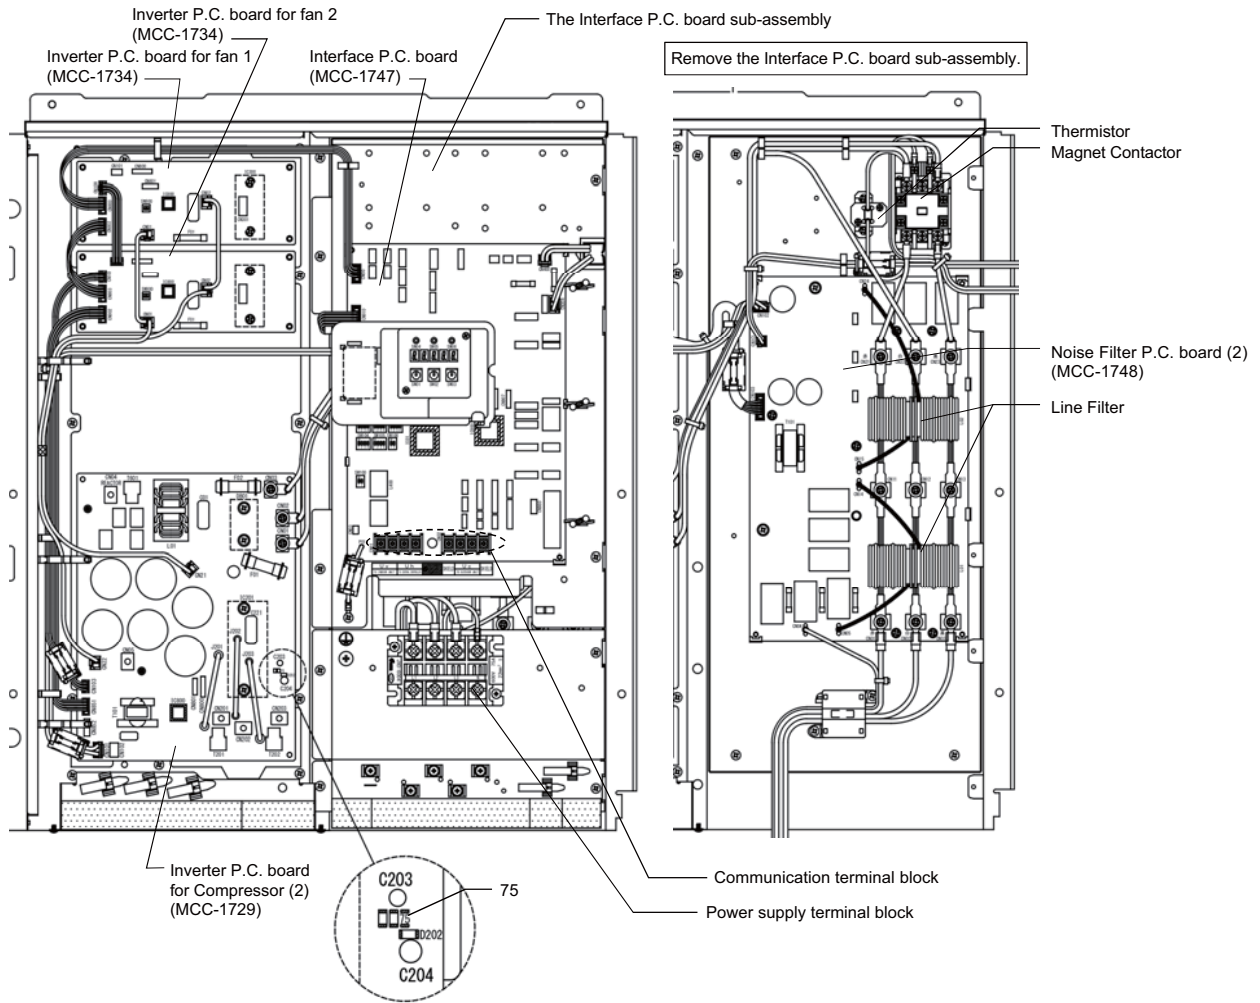




22, 24HP

Model: MMY-MUP2201\*, MUP2401\*

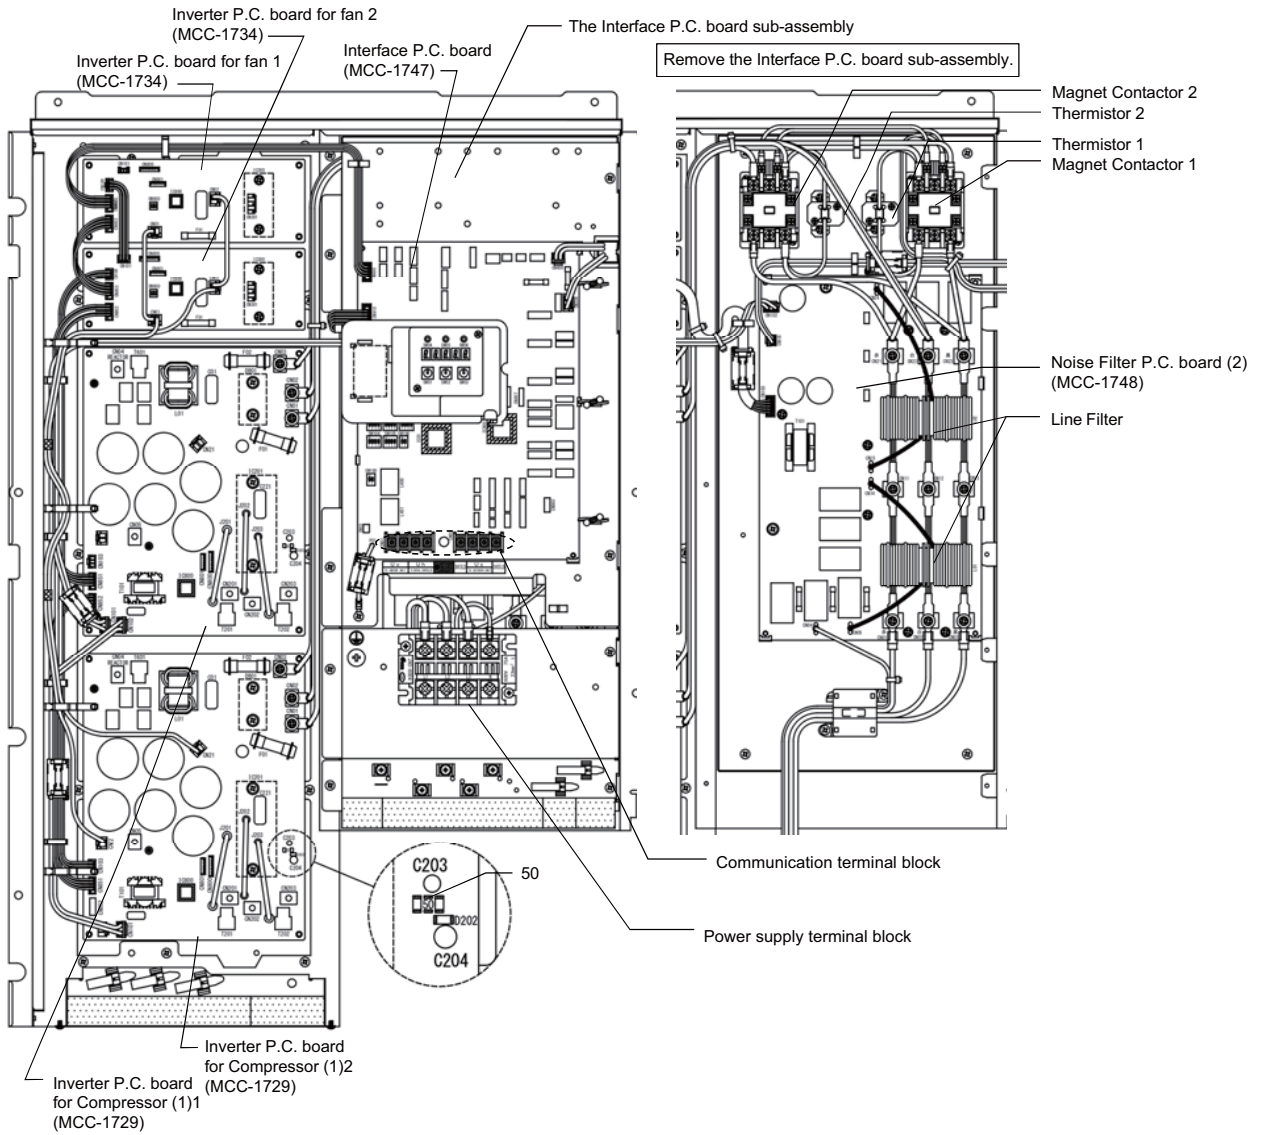

## 2-5. Outdoor (Inverter) Print Circuit Board



### 2-5-1. Interface P.C. board (MCC-1747)

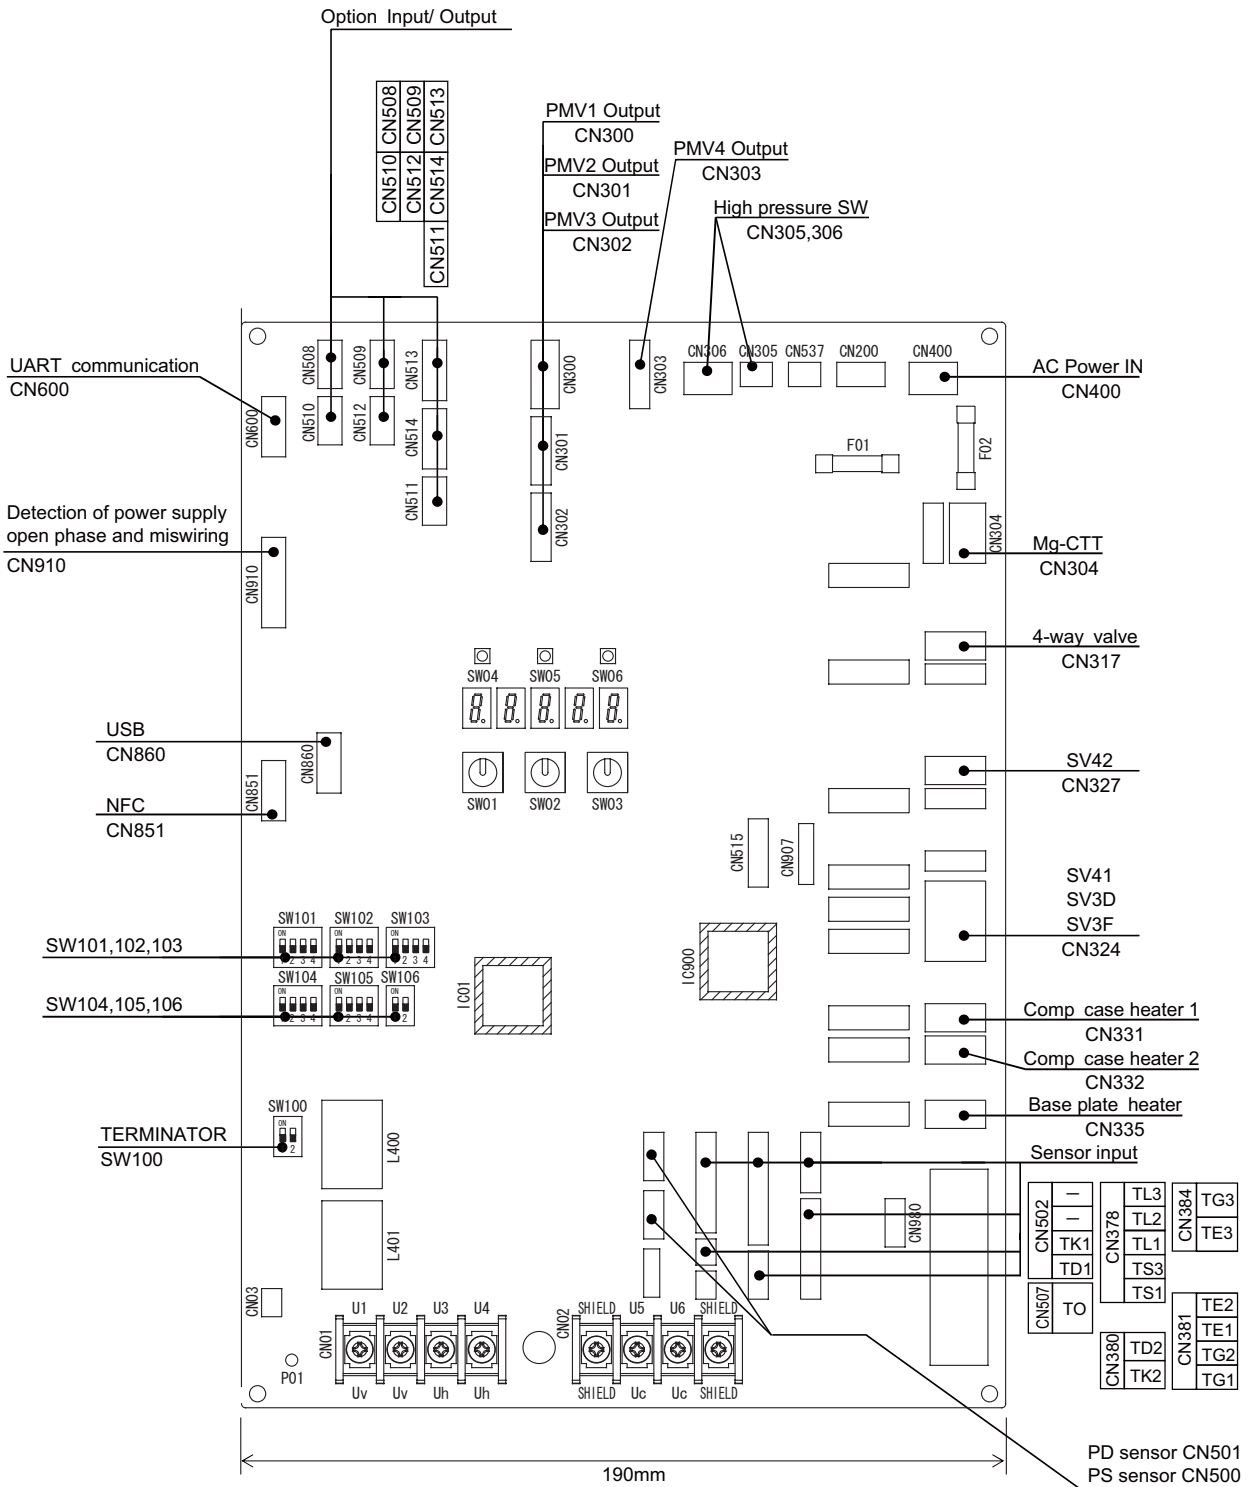

## 2-5-2. Noise Filter P.C. board (MCC-1748)

**990W 1Comp 1Fan model (A3 Compressor)  
(8, 10, 12, 14HP)**





**1290W 1Comp 2Fan model (K4 Compressor)  
(16/18/20HP)  
1290W 2Comp 2Fan model (A3 Compressor)  
(22/24HP)**

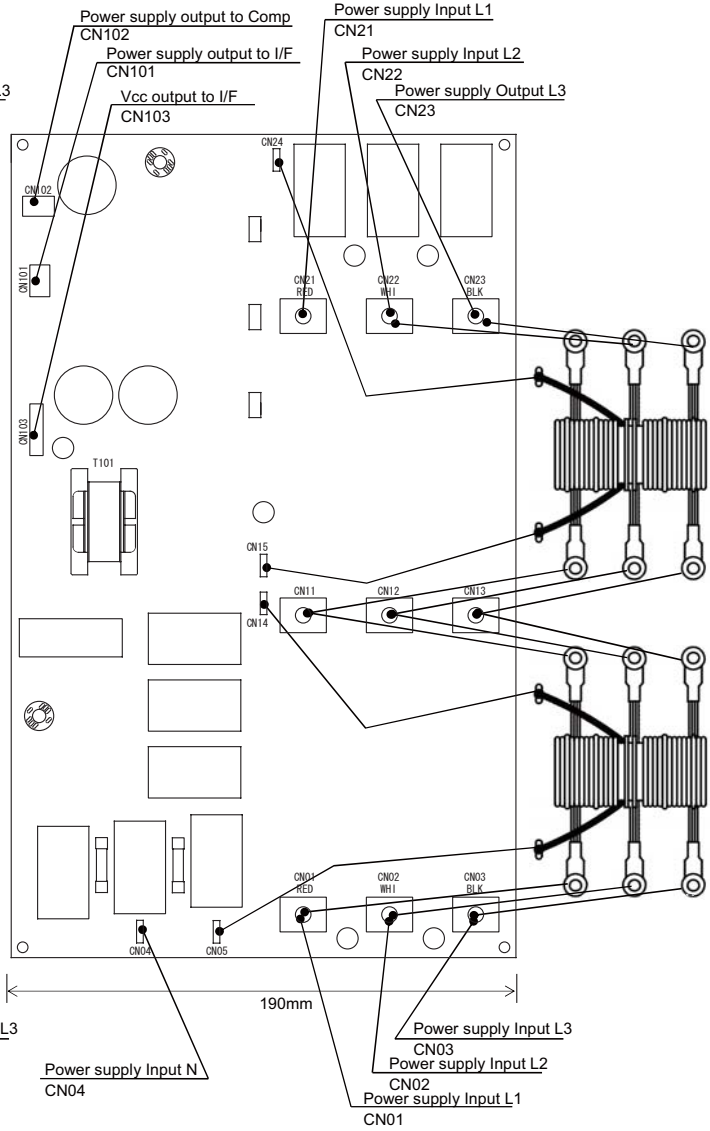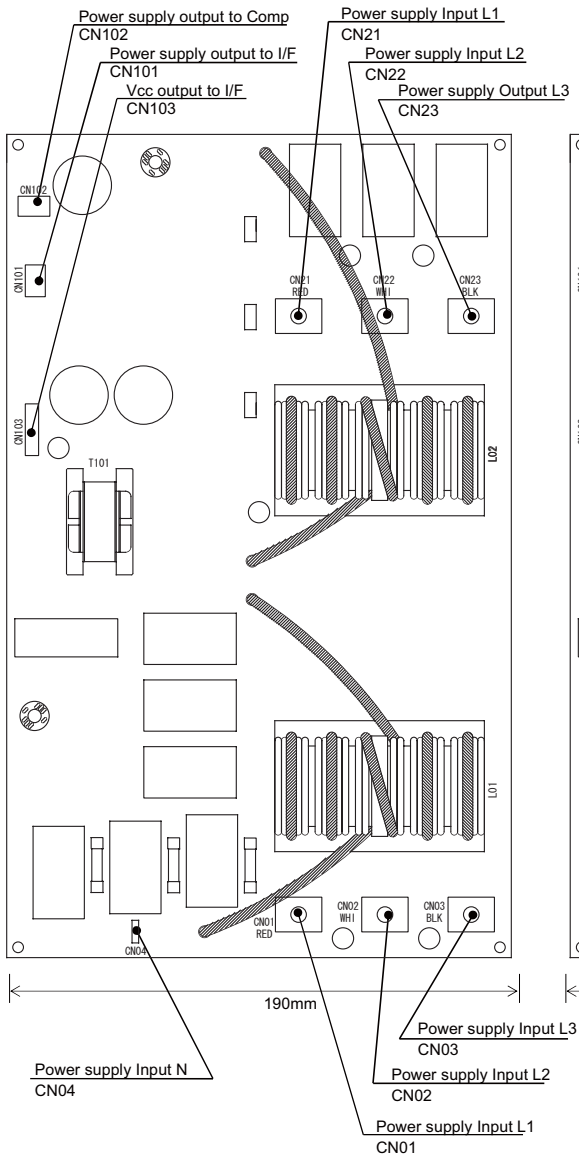


### 2-5-3. Inverter P.C. board for compressor (MCC-1729)

**1290W 1Comp 2Fan model (K4 Compressor)  
(16/18/20HP)**


**1290W 2Comp 2Fan model (A3 Compressor)  
(22/24HP)  
990W 1Comp 1Fan model (A3 Compressor)  
(8/10/12/14HP)**

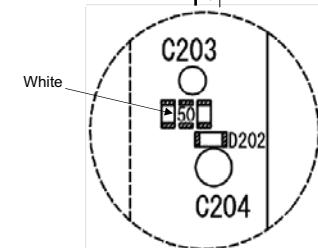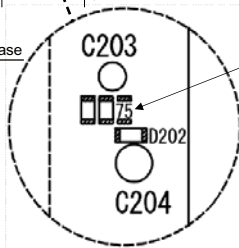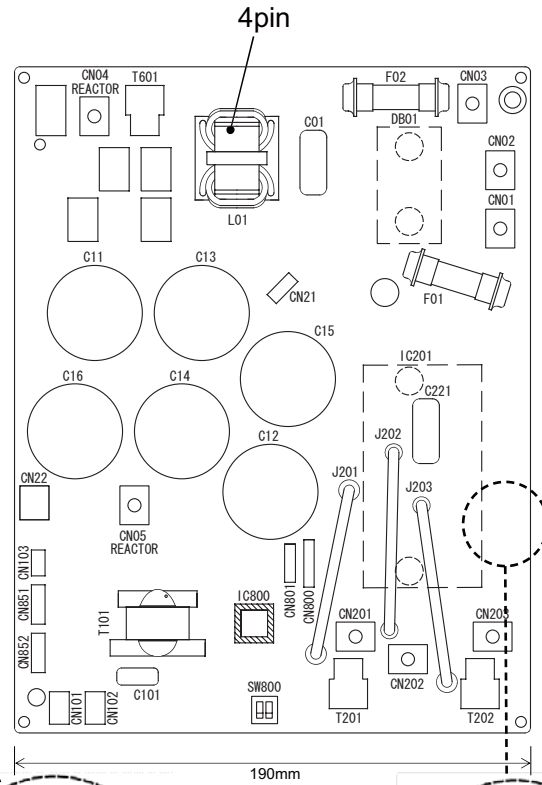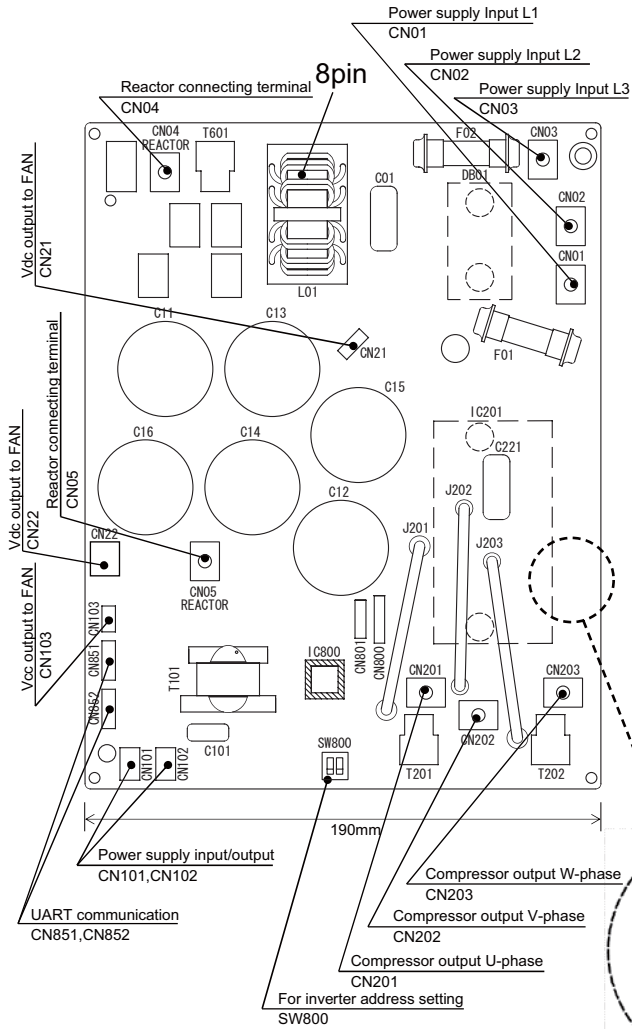

## 2-5-4. Inverter P.C. board for fan (MCC-1734)

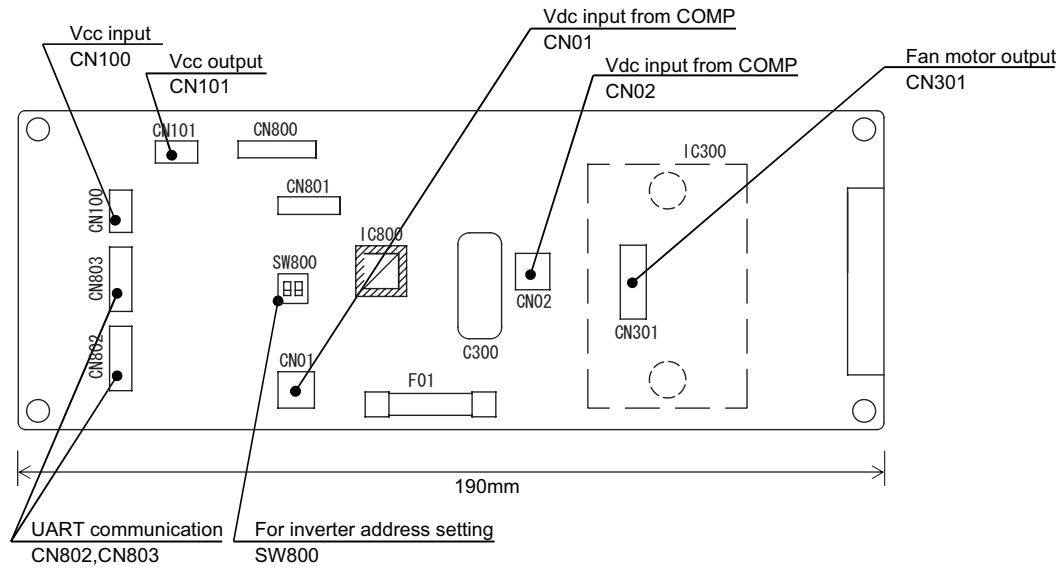

2-5-5. USB isolate P.C. board (MCC-1754)

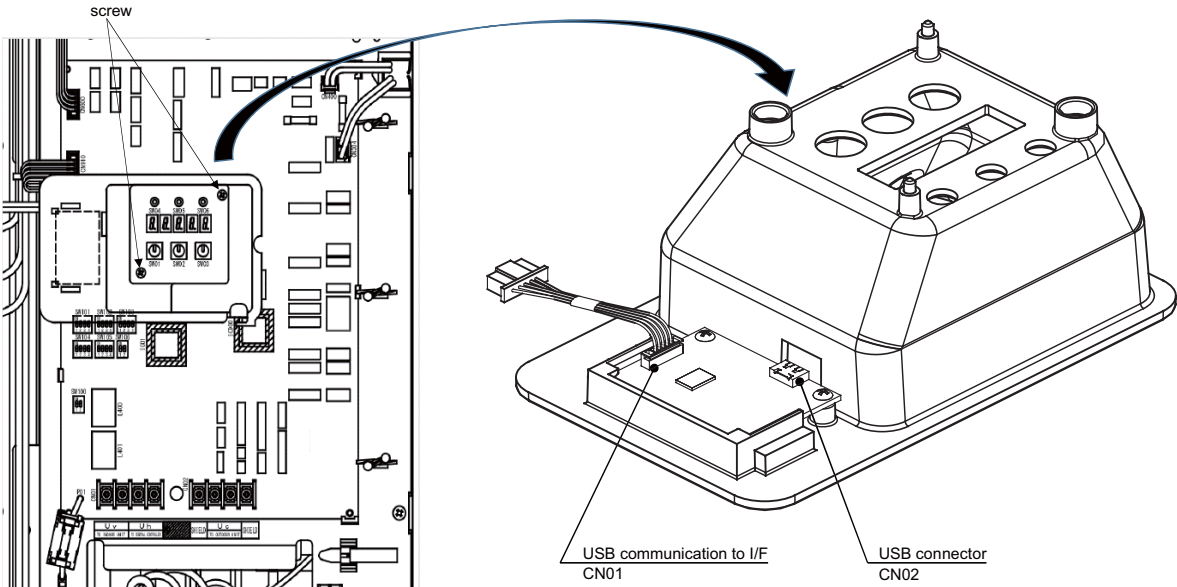


# 3. REFRIGERANT PIPING SCHEMATIC DRAWING

## Outdoor unit

8, 10, 12, 14HP


Model: MMY-MUP0801\*, MUP1001\*, MUP1201\*, MUP1401\*

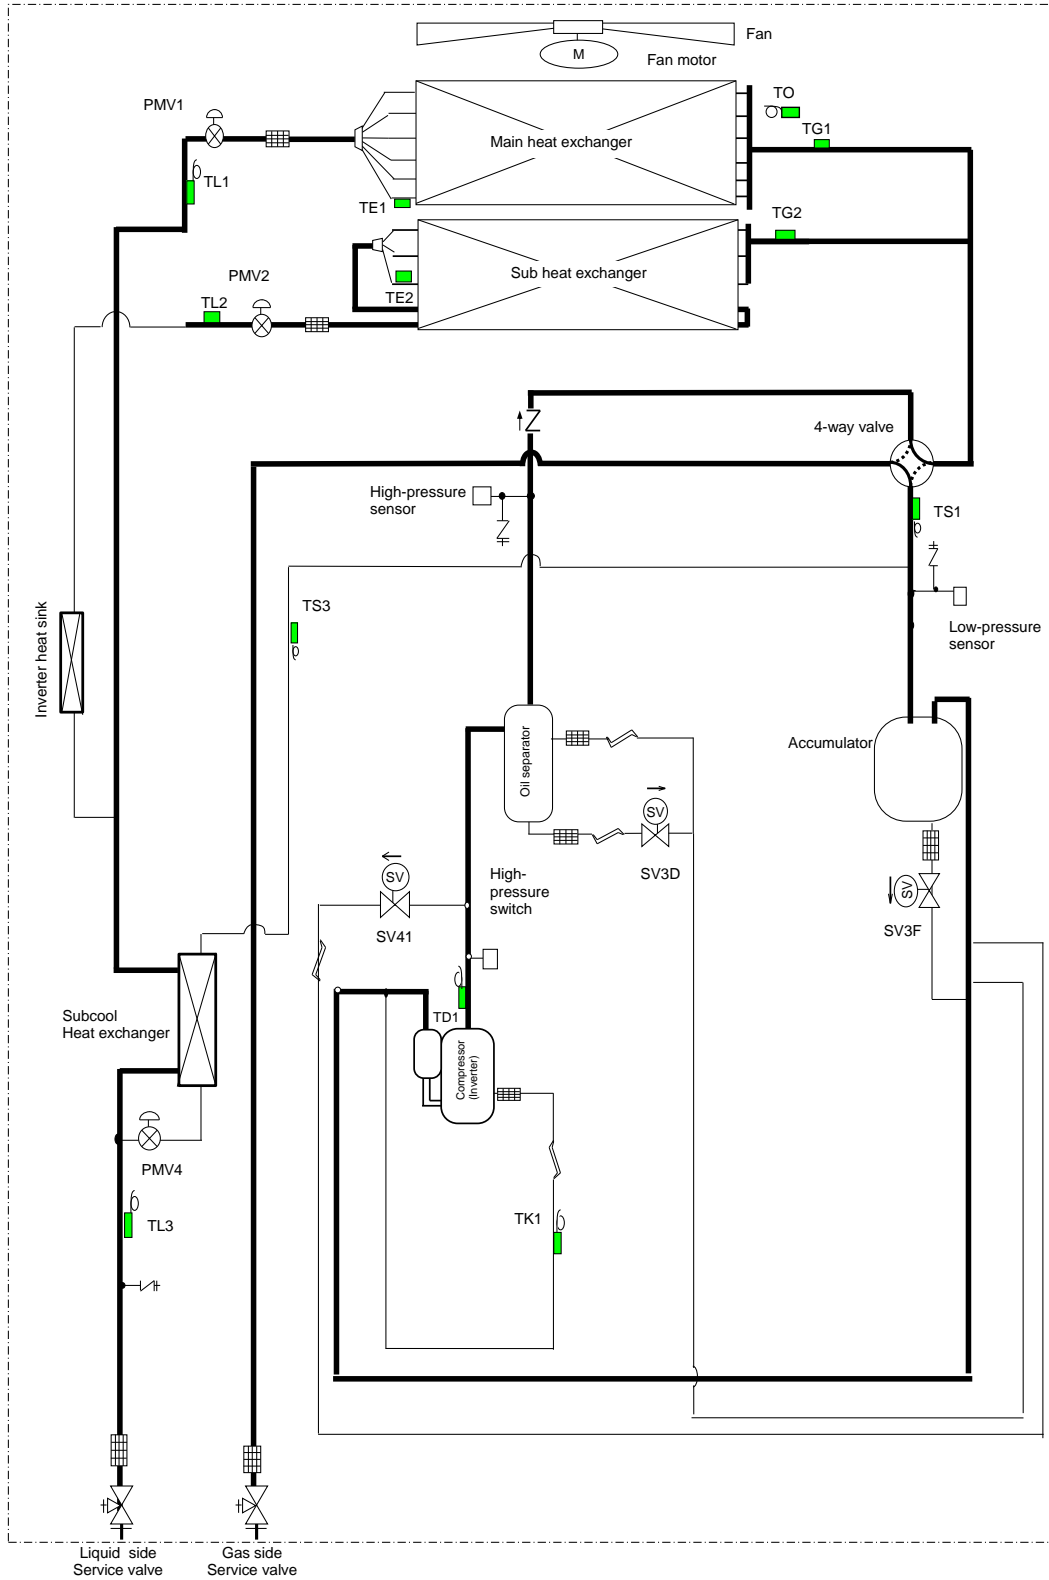

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

16, 18, 20HP

Model: MMY-MUP1601\*, MUP1801\*, MUP2001\*

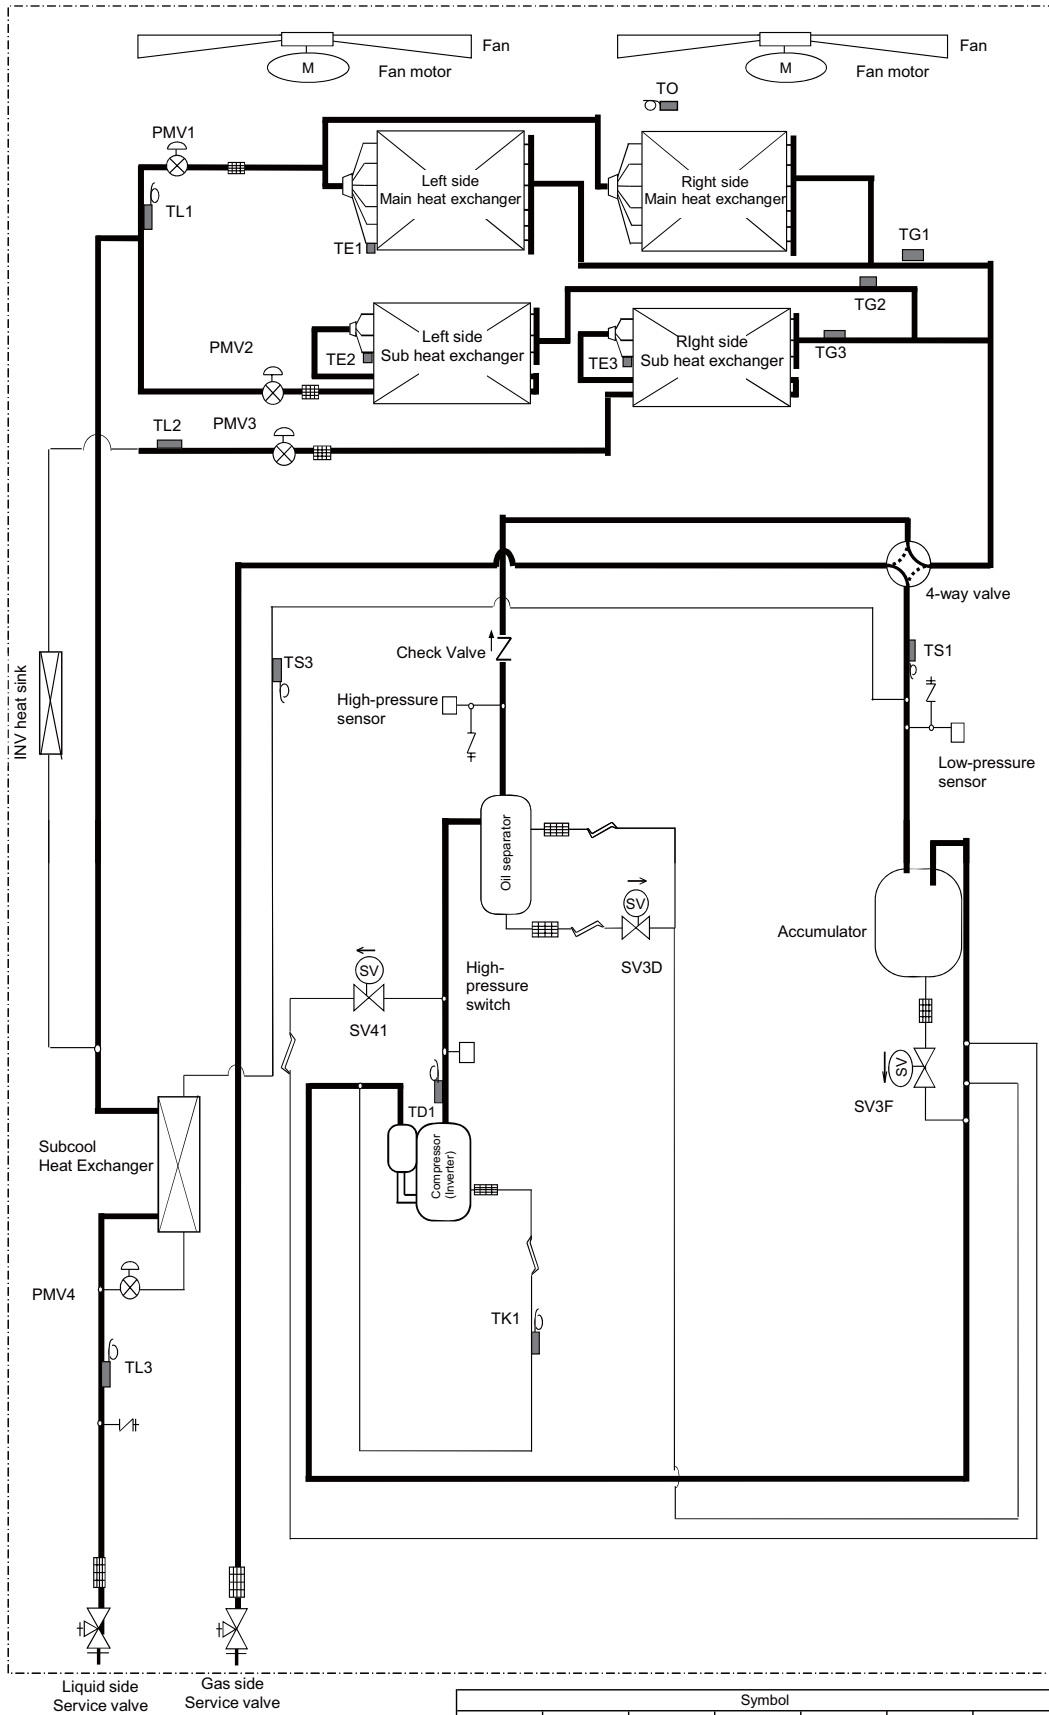


Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor



22, 24HP

Model: MMY-MUP2201\*, MUP2401\*

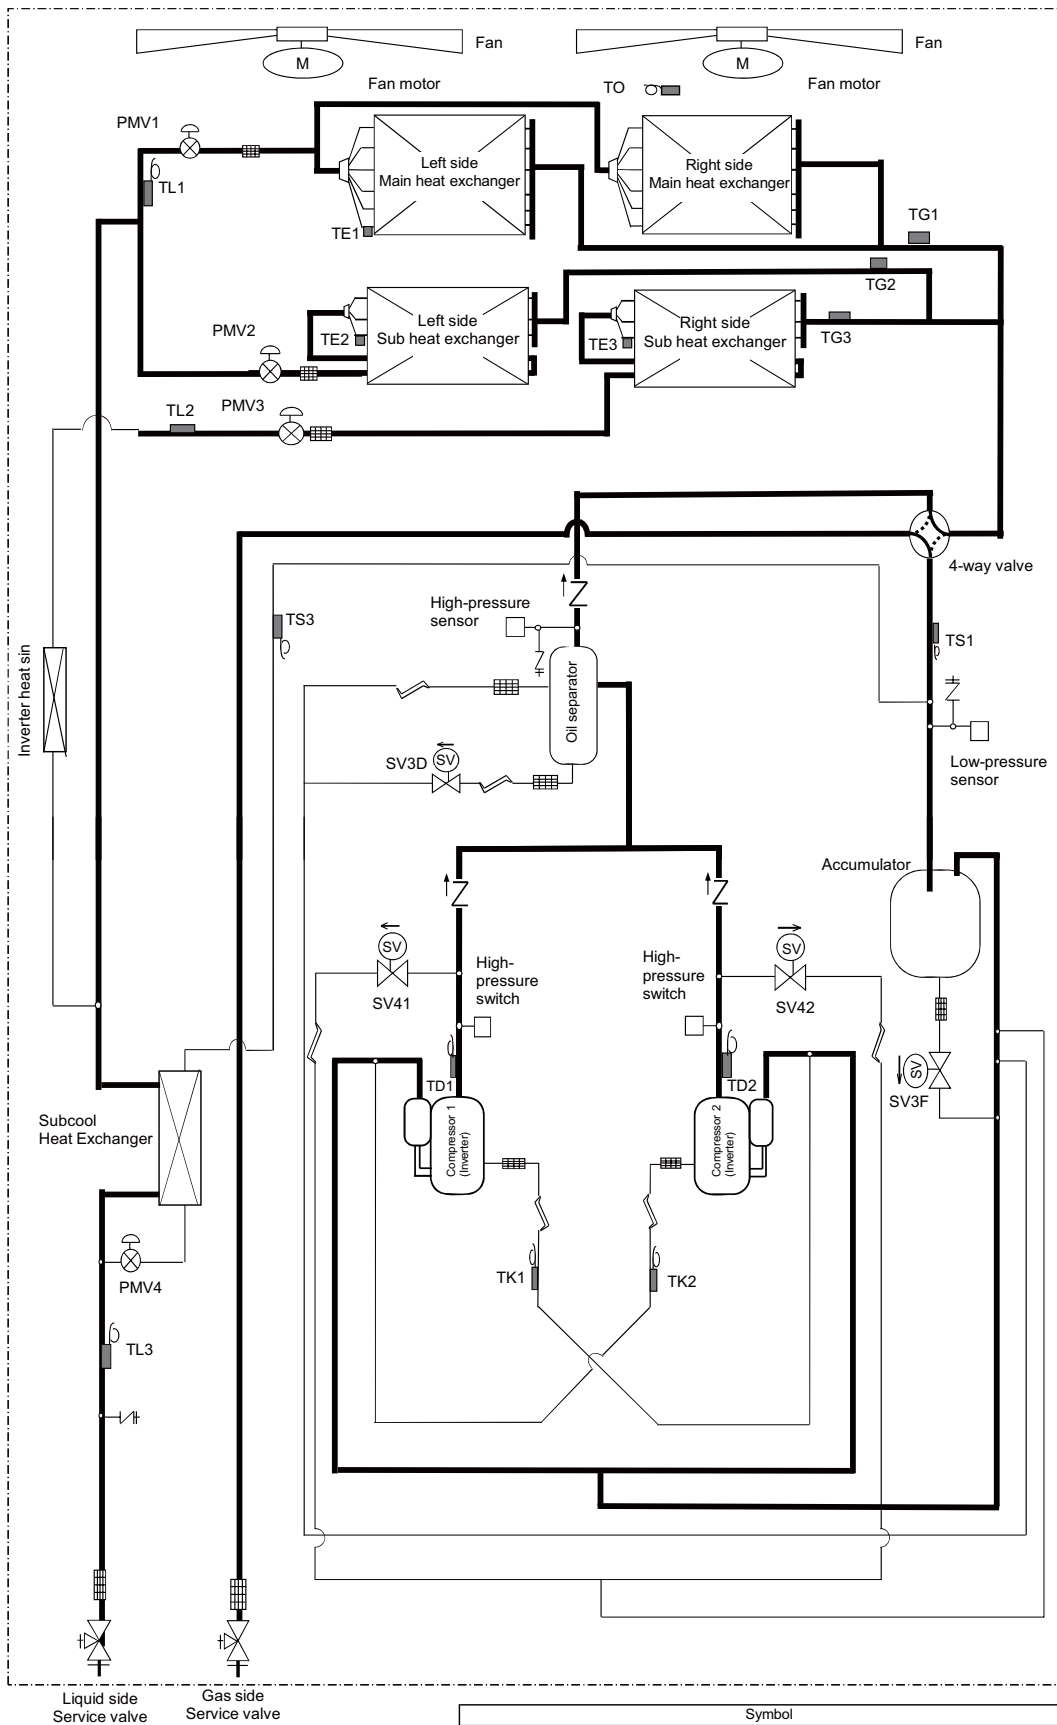


Liquid side Service valve      Gas side Service valve

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

## Functional Part Name

	SV3D	(Connector CN324 : WHI) 1) Reserves oil in the oil separator during OFF time. 2) Returns oil reserved in the oil separator to the compressor during ON time.	
	SV3F	(Connector CN324: WHI) 1) Supplies oil in the accumulator to the compressor 2) Shuts off the liquid refrigerant from the accumulator when the compressor dilution	
	SV41 SV42	(SV41 ••• Connector CN324 : WHI , SV42 ••• Connector CN327 : BLK) 1) High/Low pressure balance Prevention of subcool oil backflow when compressor stop, start-up compensation when starting up the compressor, reducing refrigerant noise when starting up heating operation 2) High pressure release function 3) Low pressure release function 4) Keeps the compressor reliability when Hot Gas Bypass system (prevent dilution with oil) 5) Releases capacity (Refrigerant mass bypass function in minimum cooling operation)	
4-Way valve		(Connector CN317 : ORN) 1) Cooling/Heating exchange 2) Reverses Defrost	
Pulse Motor Valve	PMV1	(Connector CN300 : WHI) 1) Controls superheat and subcool of the main heat exchanger 2) Stored liquid refrigerant reduction control in low ambient cooling operation (recovers stored liquid refrigerant in the main heat exchanger)	
	PMV2 PMV3	(PMV2 ••• Connector CN301 : WHI , PMV3 ••• Connector CN302 : BLU) 1) Controls superheat and subcool of the sub heat exchanger 2) Maintains discharge pressure in low ambient cooling operation	
	PMV4	(Connector CN303 : RED) 1) Controls superheat and subcool of the sub-cooling heat exchanger 2) Liquid bypass function for discharge temperature releases (cooling bypass function)	
Oil Separator		1) Prevention for rapid decreasing oil (Decreases oil flowing to the cycle) 2) Reserve function of excess oil	
Temperature Sensor	TD1 TD2	(TD1 ••• Connector CN502 : WHI , TD2 ••• Connector CN380 : BLK) 1) Protection of compressor discharge temperature 2) Used for discharge temperature release	
	TG1 TG2 TG3	(TG1 ••• Connector CN381 : WHI , TG2 ••• Connector CN381 : WHI , TG3 ••• Connector CN384 : BLU) 1) Controls superheat of PMV in heating operation	
	TE1	(Connector CN381 : WHI) 1) Controls the main heat exchanger defrost in heating operation 2) Controls outdoor fan in heating operation	
	TE2 TE3	(TE2 ••• Connector CN381 : WHI , TE3 ••• Connector CN384 : BLU) 1) Controls the main heat exchanger defrost in heating operation 2) Controls outdoor fan in heating operation	
	TL1	(Connector CN378 : WHI) 1) Detects the main heat exchanger subcool in cooling operation 2) Use as main complement switching during cooling operation	
	TL2	(Connector CN378 : WHI) 1) Detects subcool of the sub-cooling heat exchanger in cooling operation 2) Use as main complement switching in cooling operation [3 way variable heat exchanger]	
	TL3	(Connector CN378 : WHI) 1) Controls subcool of the sub-cooling heat exchanger	
	TS1	(Connector CN378 : WHI) 1) Controls PMV superheat in heating operation	
	TS3	(Connector CN378 : WHI) 1) Controls subcool of the sub-cooling heat exchanger	
	TO	(Connector CN507 : YEL) 1) Detects outside temperature	
	TK1 TK2	(TK1 ••• Connector CN502 : WHI , TK2 ••• Connector CN380 : BLK) 1) Judges oil level of the compressor	
	Pressure Sensor	High pressure sensor	(Connector CN501 : RED) 1) Detects high pressure 2) Controls the fan in low ambient cooling operation 3) Detects subcool of indoor units in heating operation
		Low pressure sensor	(Connector CN500 : WHI) 1) Detects low pressure 2) Controls superheat in heating operation
Heater	Compressor case heater	(Comp1 ••• Connector CN331 : WHI , Comp2 ••• Connector CN332 : BLU) 1) Prevents liquid refrigerant accumulation in the compressor	

## Indoor unit

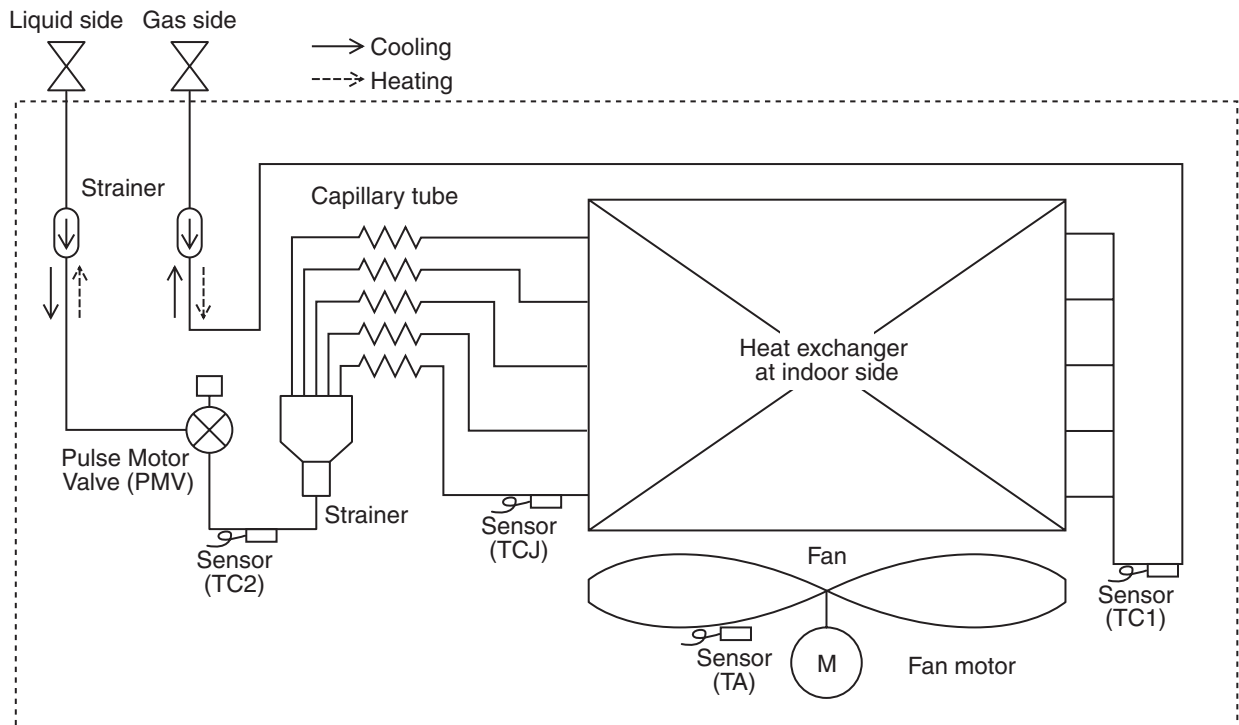


### U series Indoor Unit Functional Part Explanation

Functional part name	Functional outline	
Pulse Motor Valve	PMV	(Connector CN082 (6P): Blue) 1) Controls superheat in cooling operation 2) Controls subcool in heating operation 3) Recovers refrigerant oil in cooling operation 4) Recovers refrigerant oil in heating operation
Temp. Sensor	1.TA	(Connector CN104 (2P): Yellow) 1) Detects indoor return air temperature
	2.TC1	(Connector CN100 (3P): Brown) 1) Controls PMV superheat in cooling operation
	3.TC2	(Connector CN101 (2P): Black) 1) Controls PMV subcool in heating operation
	4.TCJ	(Connector CN102 (2P): Red) 1) Controls PMV superheat in cooling operation

\* Please refer to each indoor unit Service Manual for details of each sensor

# 4. COMBINED REFRIGERANT PIPING SYSTEM SCHEMATIC DIAGRAMS

## 4-1. Refrigerant Flow (Cooling)

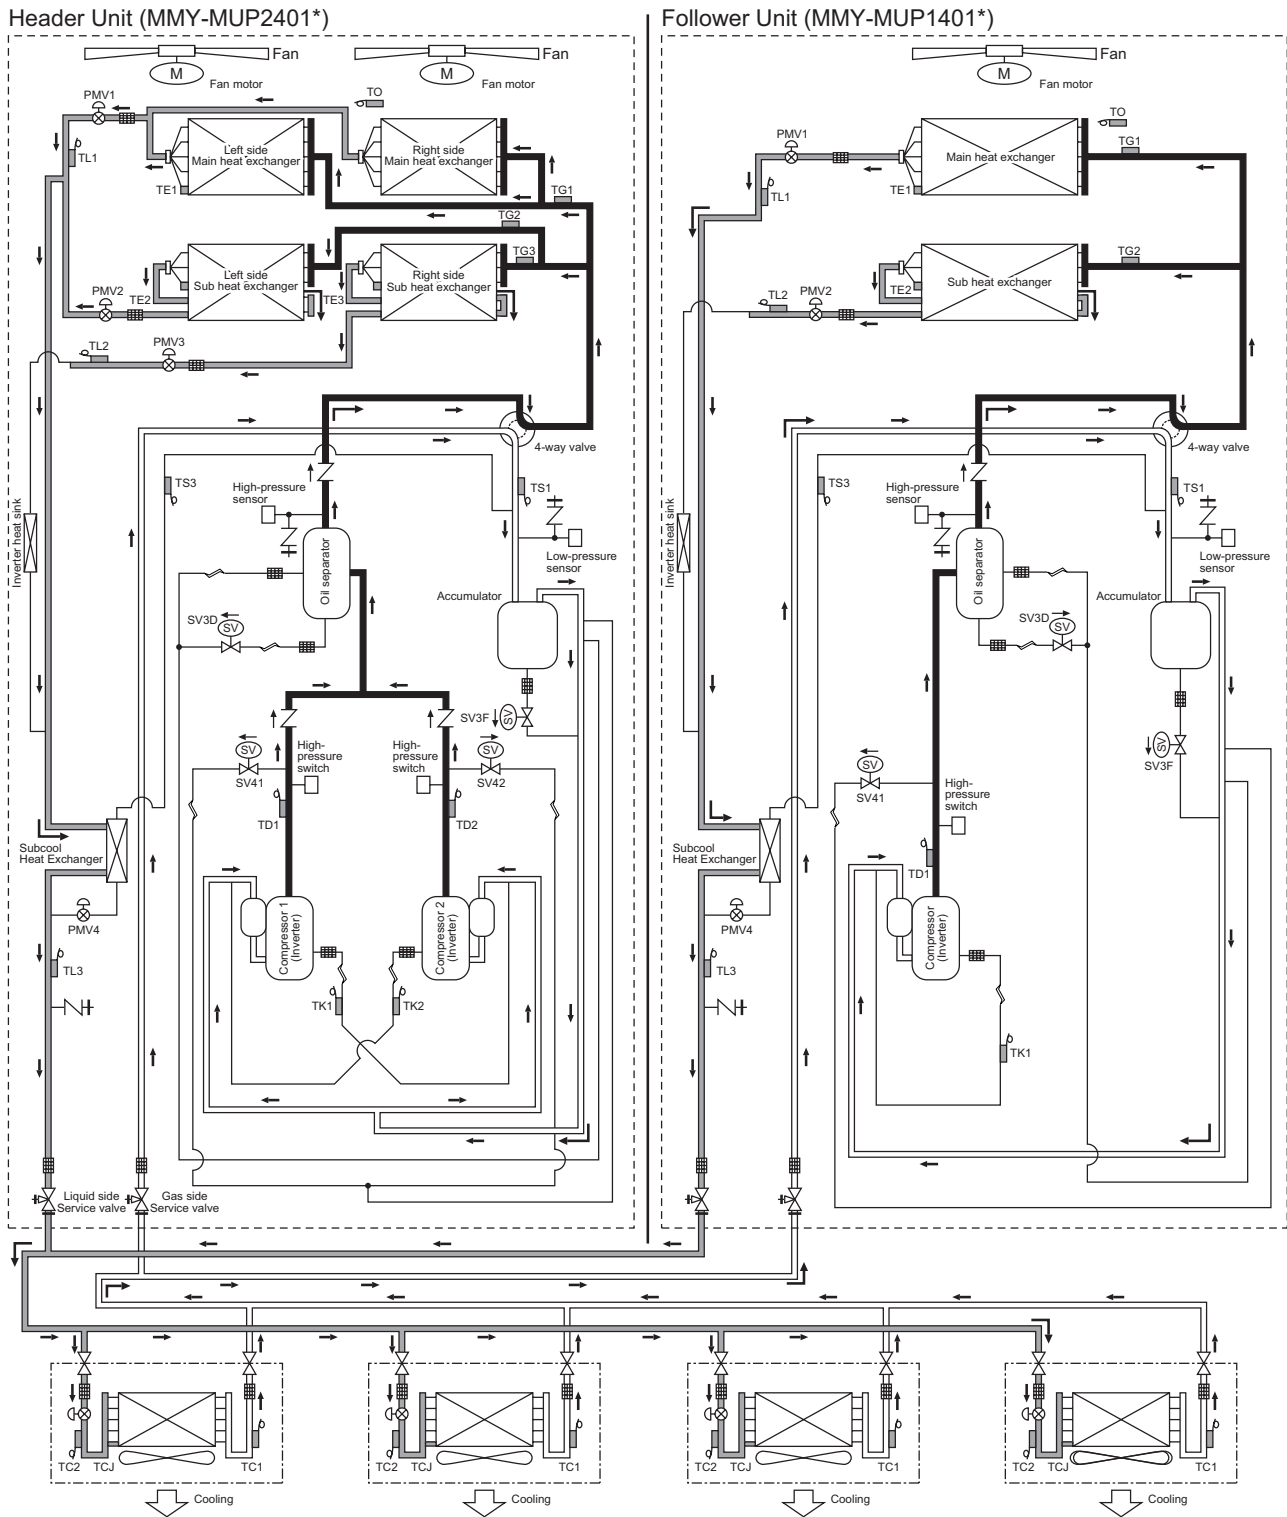

Outdoor Unit			
4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		


High-pressure gas refrigerant	Evaporative gas refrigerant (Low pressure)
Condensate liquid refrigerant	Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

## 4-2. Refrigerant Flow (Single Defrost)

Outdoor Unit (MMY-MUP2401\*)

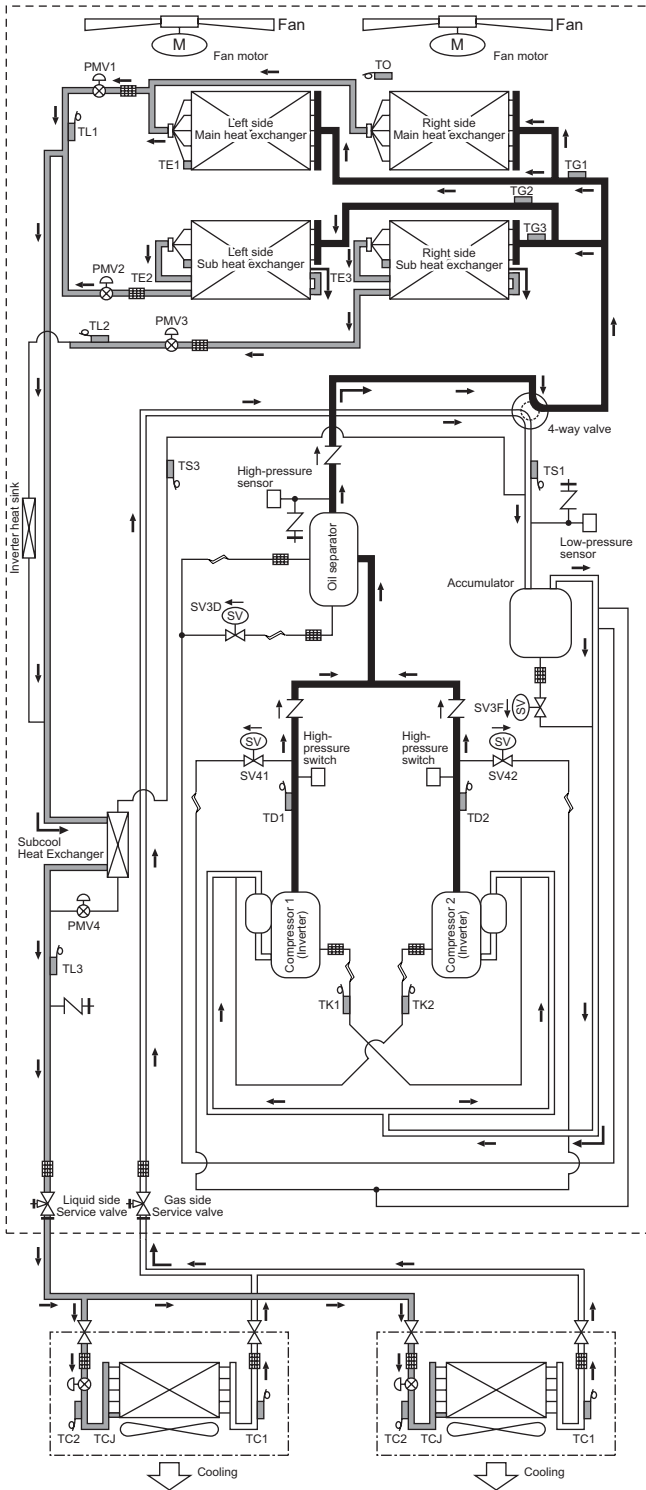


Outdoor Unit			
4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		

	High-pressure gas refrigerant		Evaporative gas refrigerant (Low pressure)
	Condensate liquid refrigerant		Low-pressure circuit (Refrigerant recover line)



The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

### 4-3. Refrigerant Flow (Heating)

Header Unit (MMY-MUP2401\*)

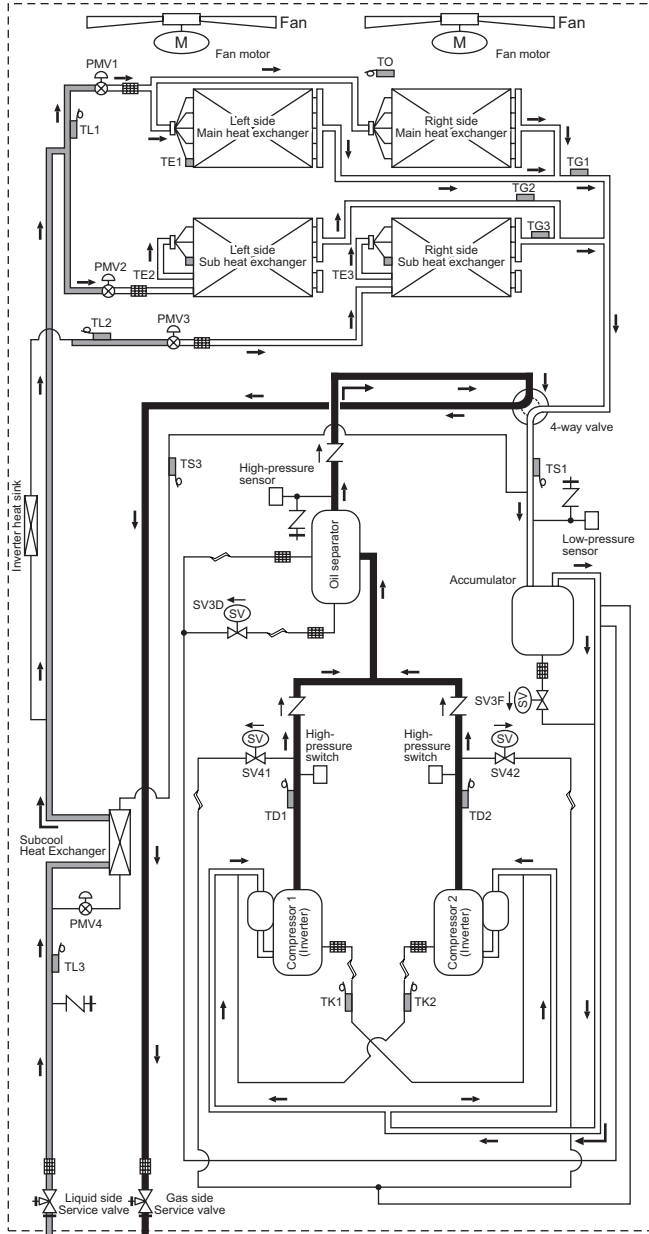

Follower Unit (MMY-MUP1401\*)

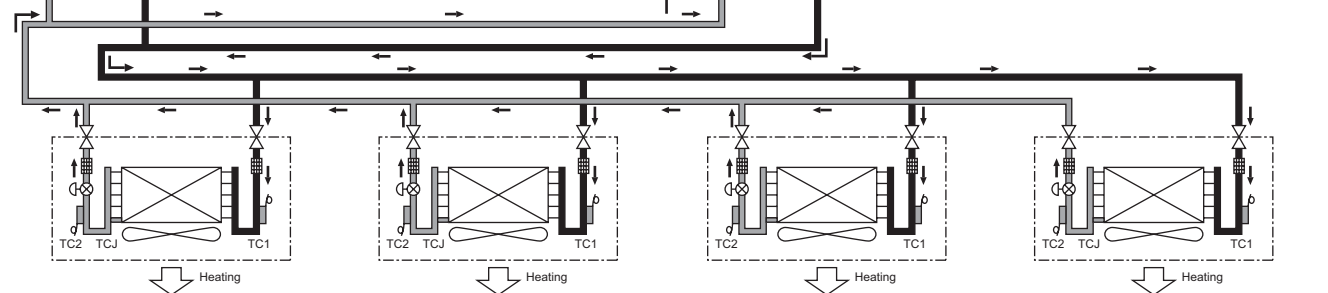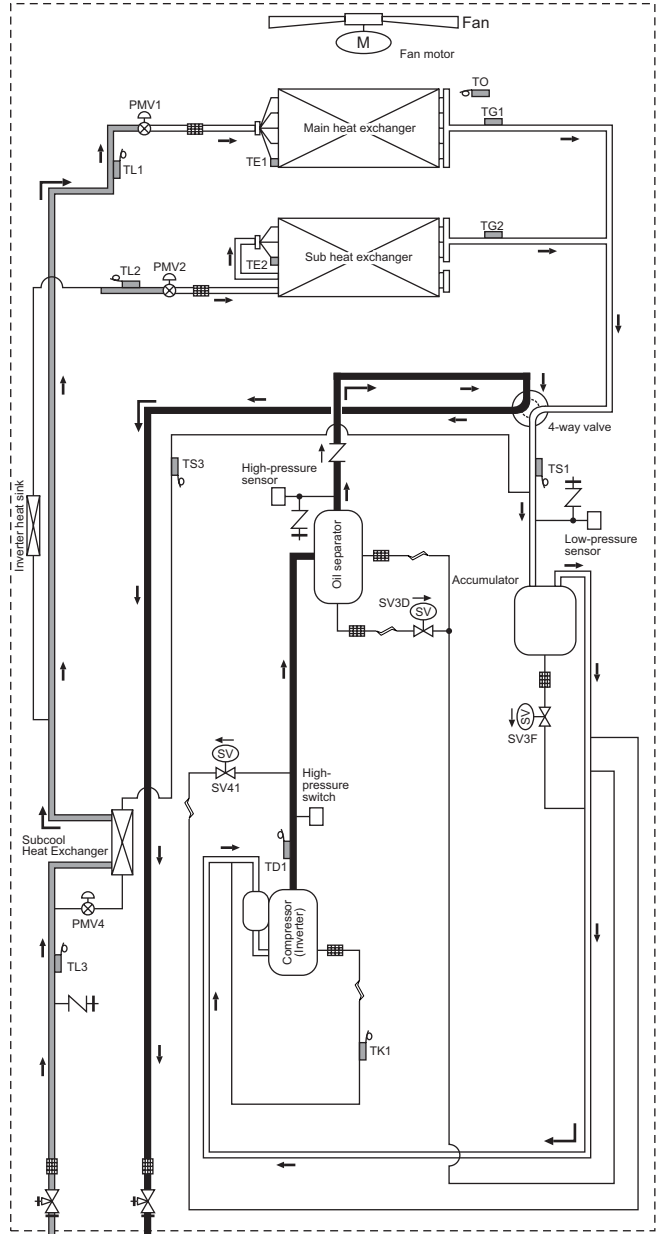

Outdoor Unit			
4-way valve	ON	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		


High-pressure gas refrigerant    
 Evaporative gas refrigerant (Low pressure)  
 Condensate liquid refrigerant    
 Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))



The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

## 4-4. Refrigerant Flow (Individual Defrost)

Header Unit (MMY-MUP2401\*) Defrost Unit

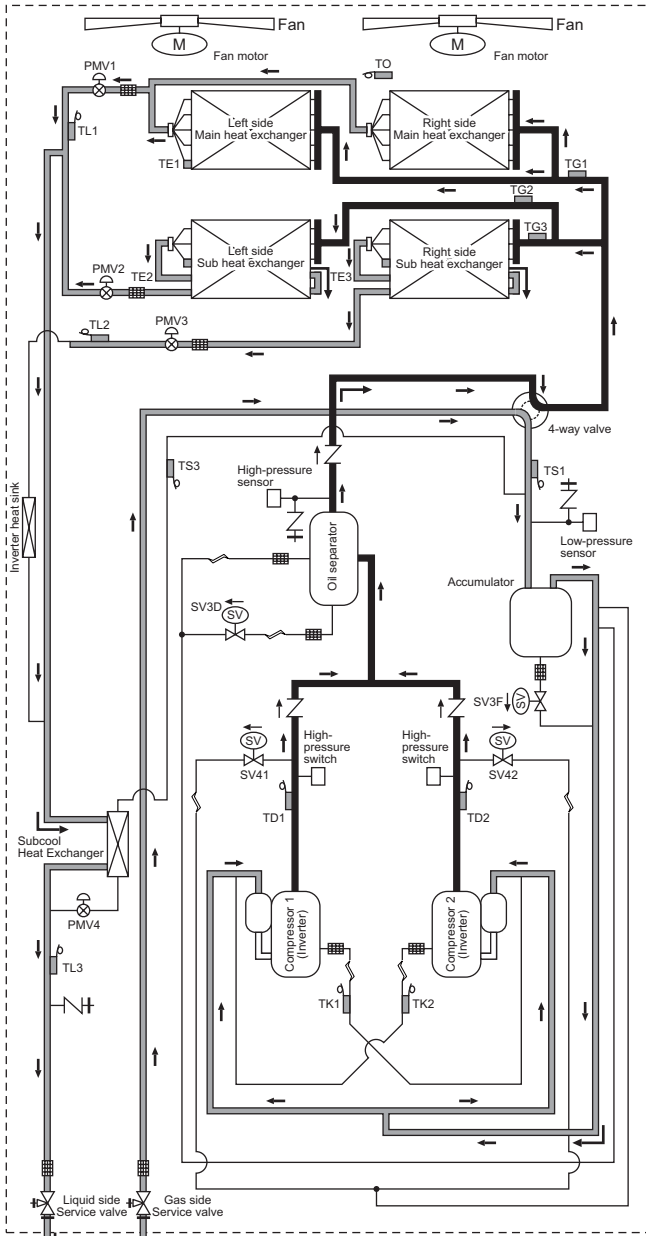

Follower Unit (MMY-MUP1401\*) Heating Unit

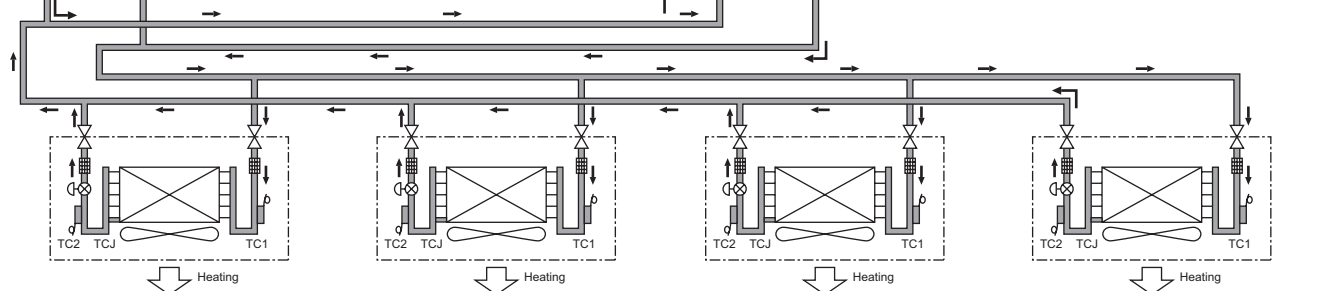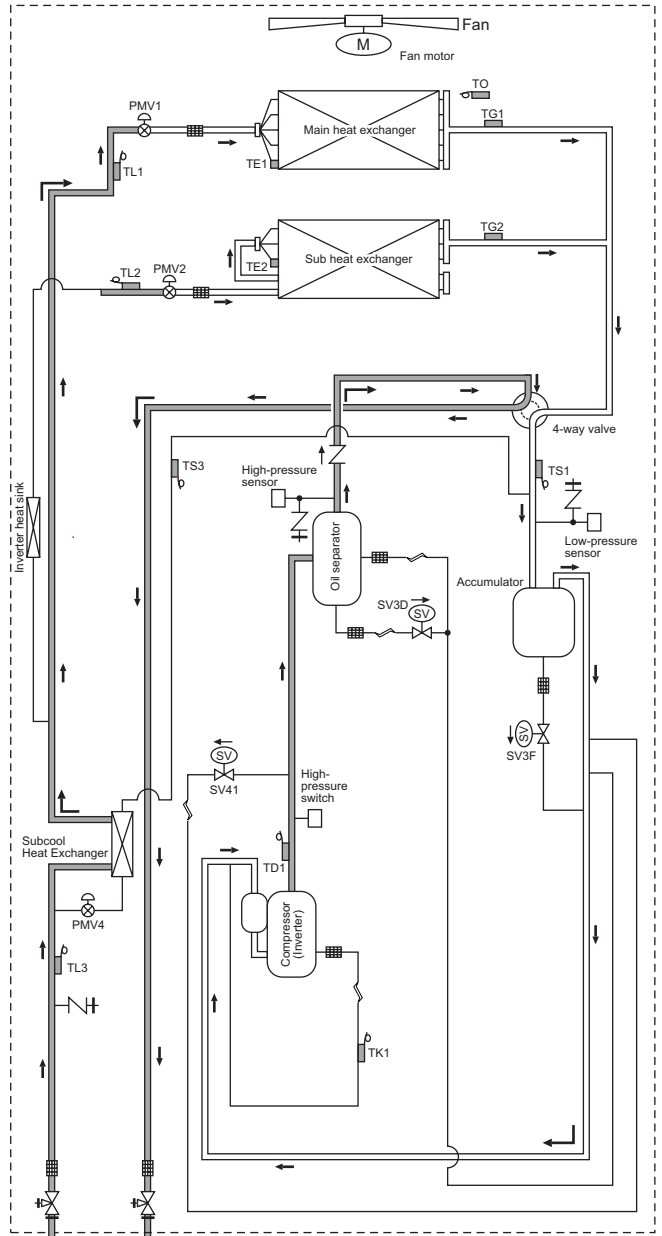

Outdoor Unit (Defrost Unit)		
4-way valve	OFF	Control
PMV1	Control	SV3D Control
PMV2	Control	SV4(n) Control
PMV3	Control	Outdoor fan Control
PMV4	Control	


Outdoor Unit (Heating Unit)		
4-way valve	ON	Control
PMV1	Control	SV3D Control
PMV2	Control	SV4(n) Control
PMV3	Control	Outdoor fan Control
PMV4	Control	

- High-pressure gas refrigerant
- Evaporative gas refrigerant (Low pressure)
- Condensate liquid refrigerant
- Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

### 4-5-1. (1) Refrigerant Flow (Automatic emergency cooling)

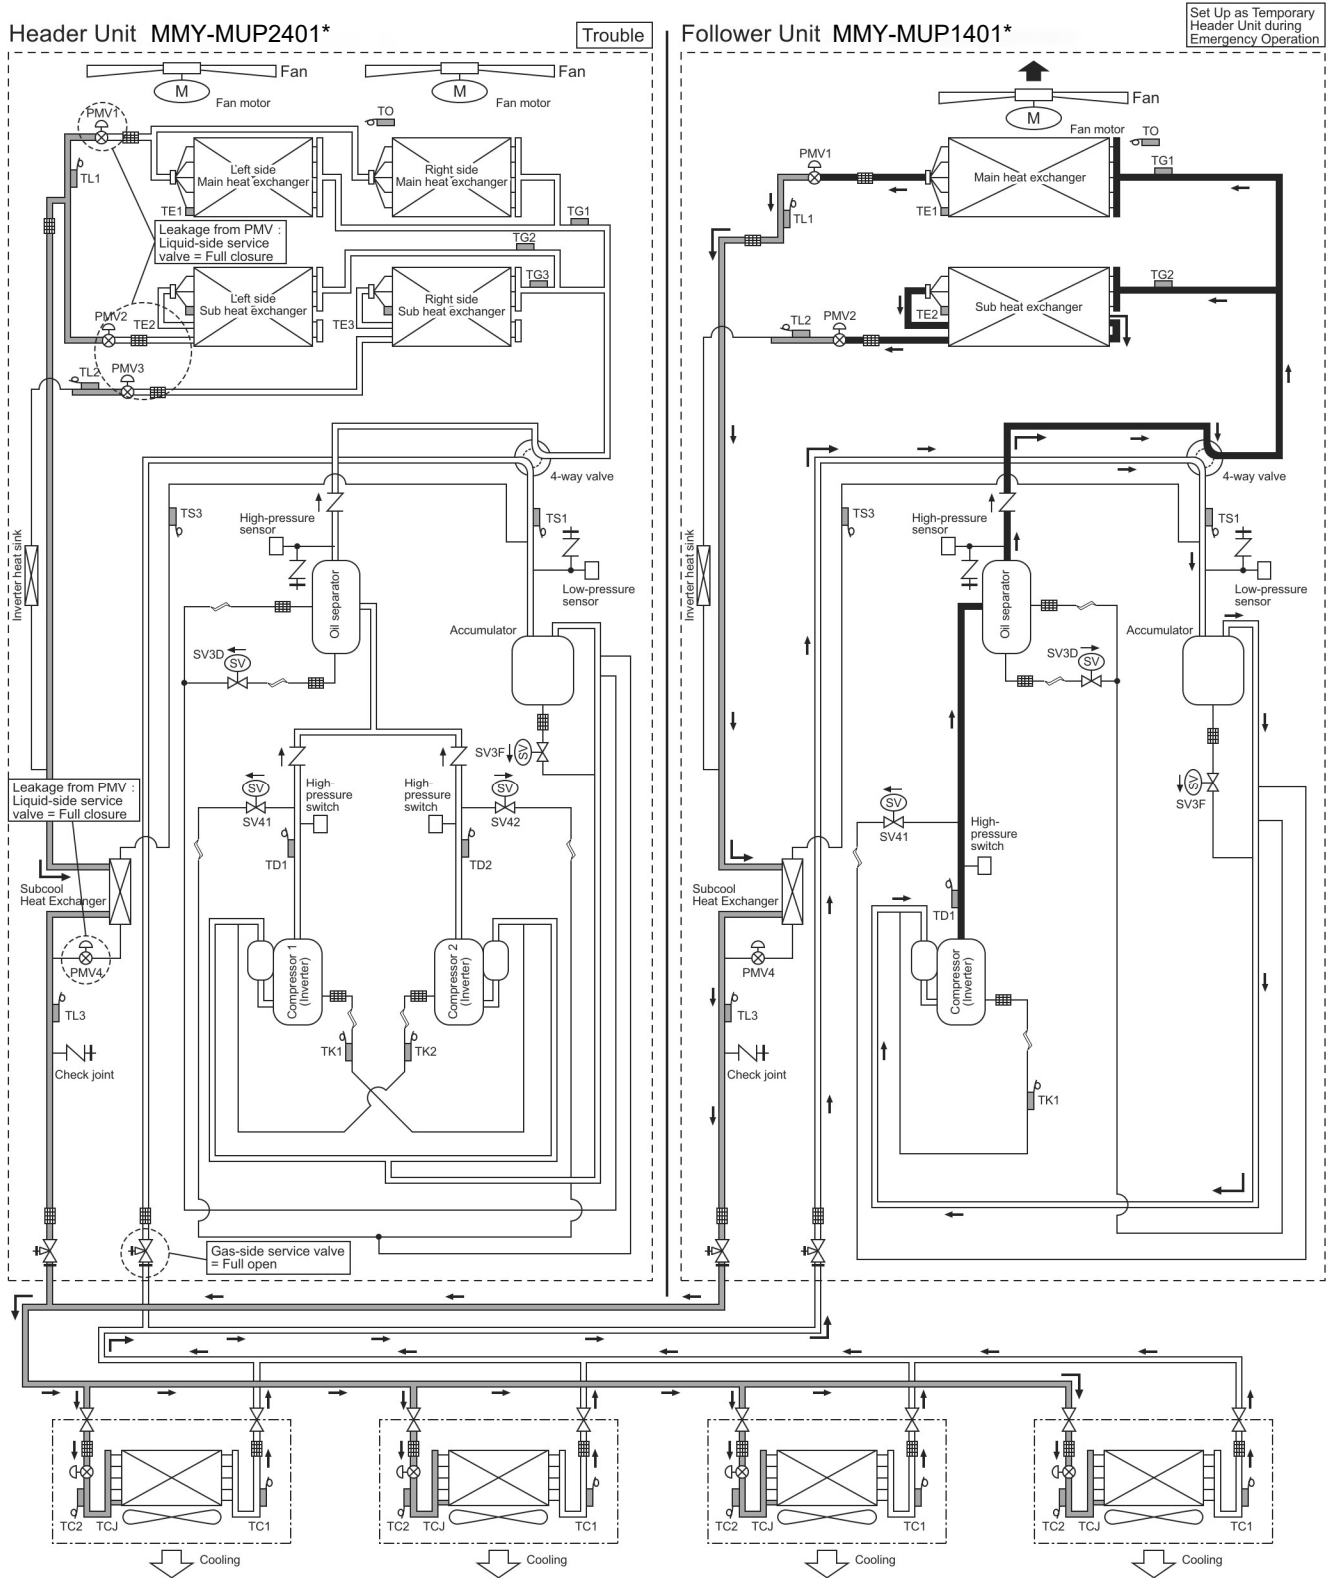

4-way valve	OFF	SV3D	OFF
PMV1	CLOSE	SV3F	OFF
PMV2	CLOSE	SV4(n)	OFF
PMV3	CLOSE	Outdoor fan	OFF
PMV4	CLOSE		

4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		


- High-pressure gas refrigerant
- Evaporative gas refrigerant (Low pressure)
- Condensate liquid refrigerant
- Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".



## (2) Refrigerant Flow (Manual emergency cooling)

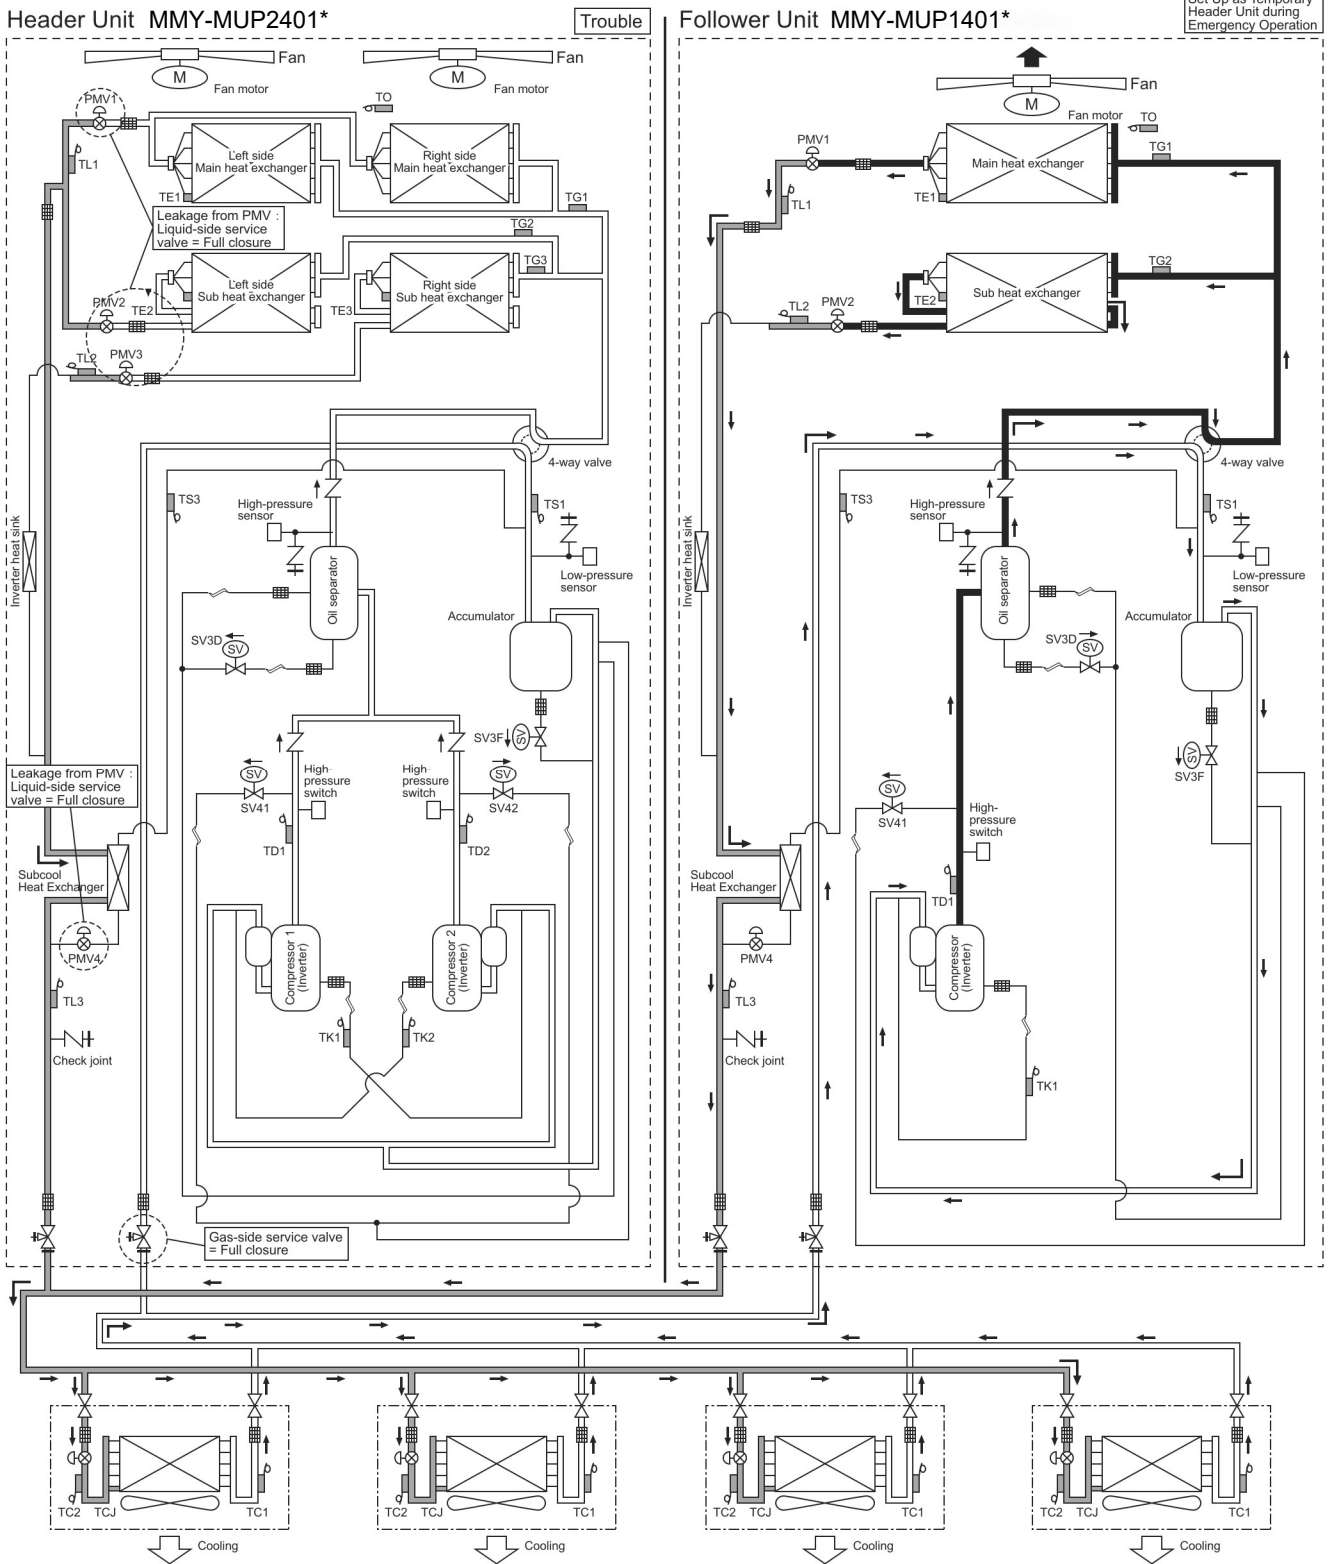

Set Up as Temporary Header Unit during Emergency Operation

Trouble header outdoor unit			
4-way valve	OFF	SV3D	OFF
PMV1	CLOSE	SV3F	OFF
PMV2	CLOSE	SV4(n)	OFF
PMV3	CLOSE	Outdoor fan	OFF
PMV4	CLOSE		


Temporal header outdoor unit			
4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		

- High-pressure gas refrigerant
- Evaporative gas refrigerant (Low pressure)
- Condensate liquid refrigerant
- Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

### 4-5-2. (1) Refrigerant Flow (Automatic emergency heating)

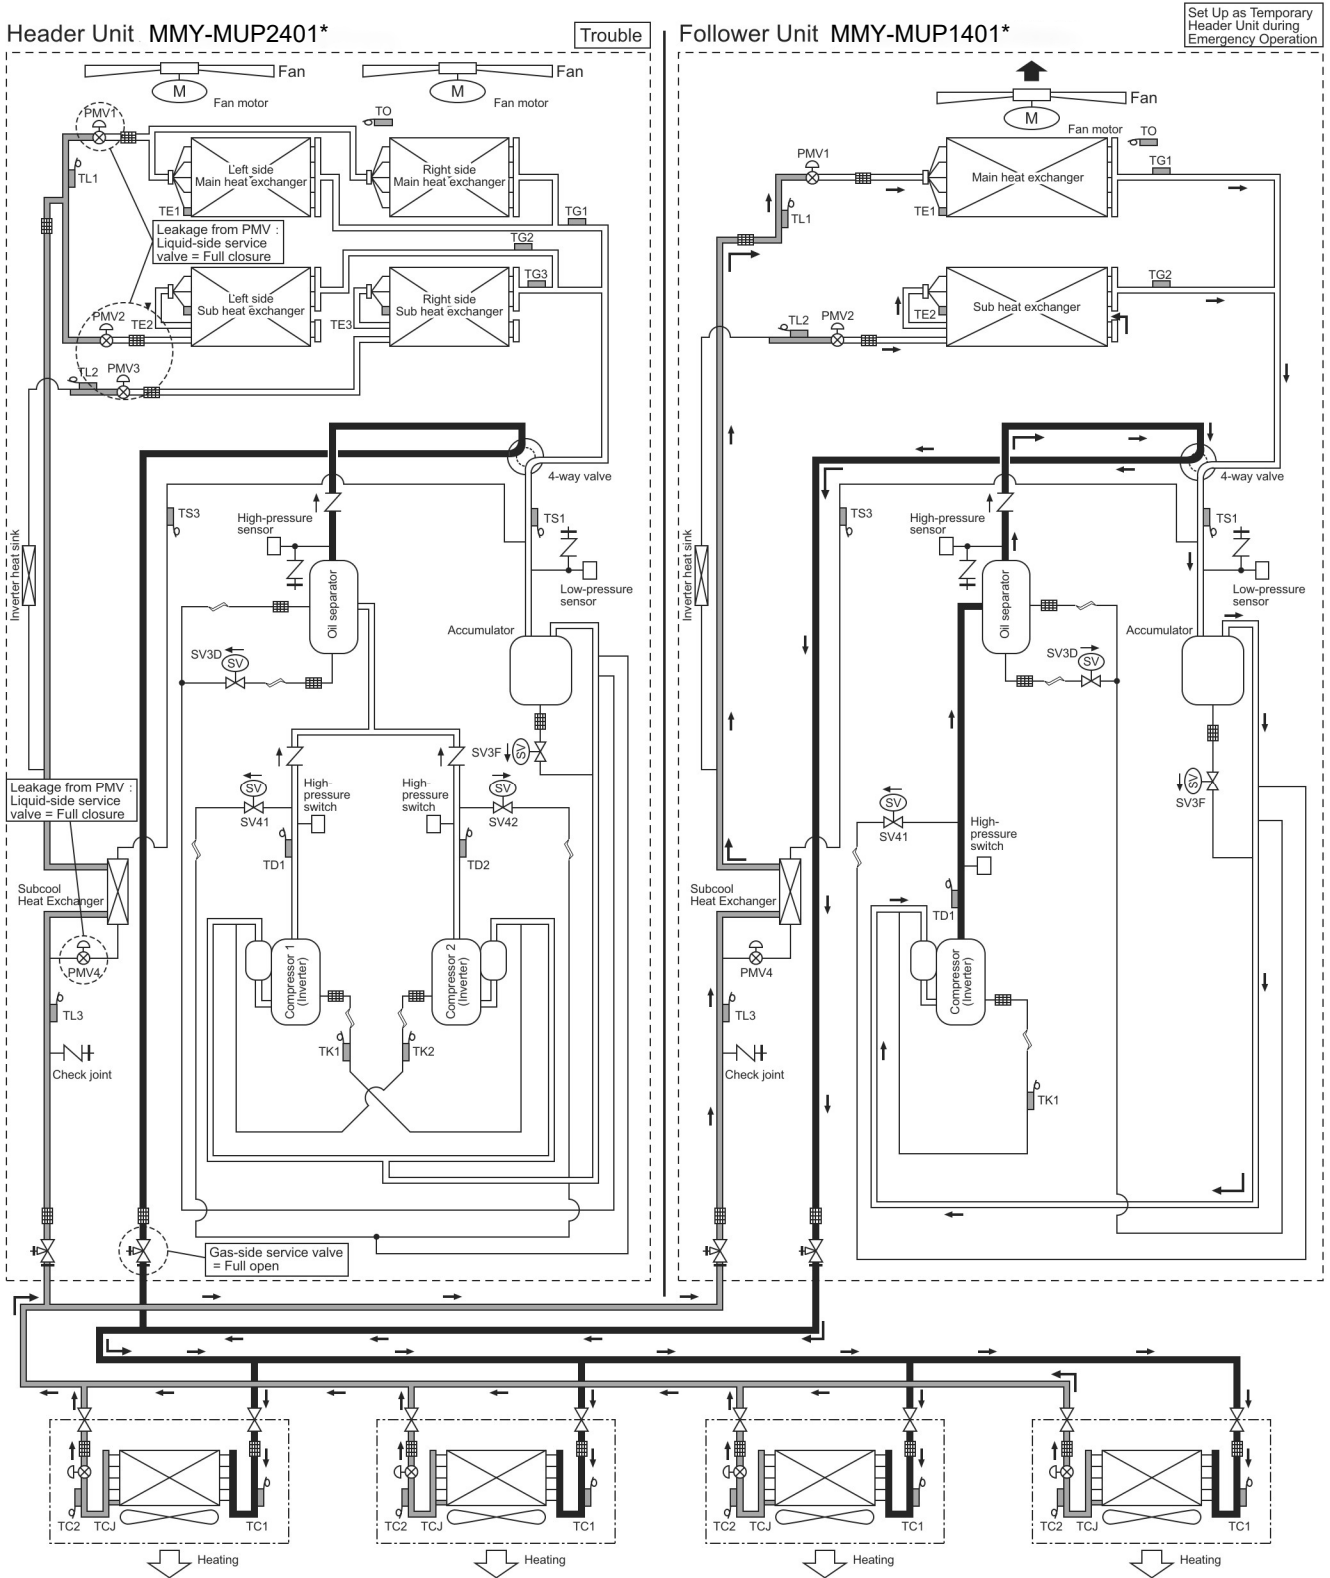

Trouble header outdoor unit			
4-way valve	OFF	SV3D	OFF
PMV1	CLOSE	SV3F	OFF
PMV2	CLOSE	SV4(n)	OFF
PMV3	CLOSE	Outdoor fan	OFF
PMV4	CLOSE		


Temporal header outdoor unit			
4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		

- High-pressure gas refrigerant
- Evaporative gas refrigerant (Low pressure)
- Condensate liquid refrigerant
- Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".

## (2) Refrigerant Flow (Manual emergency heating)

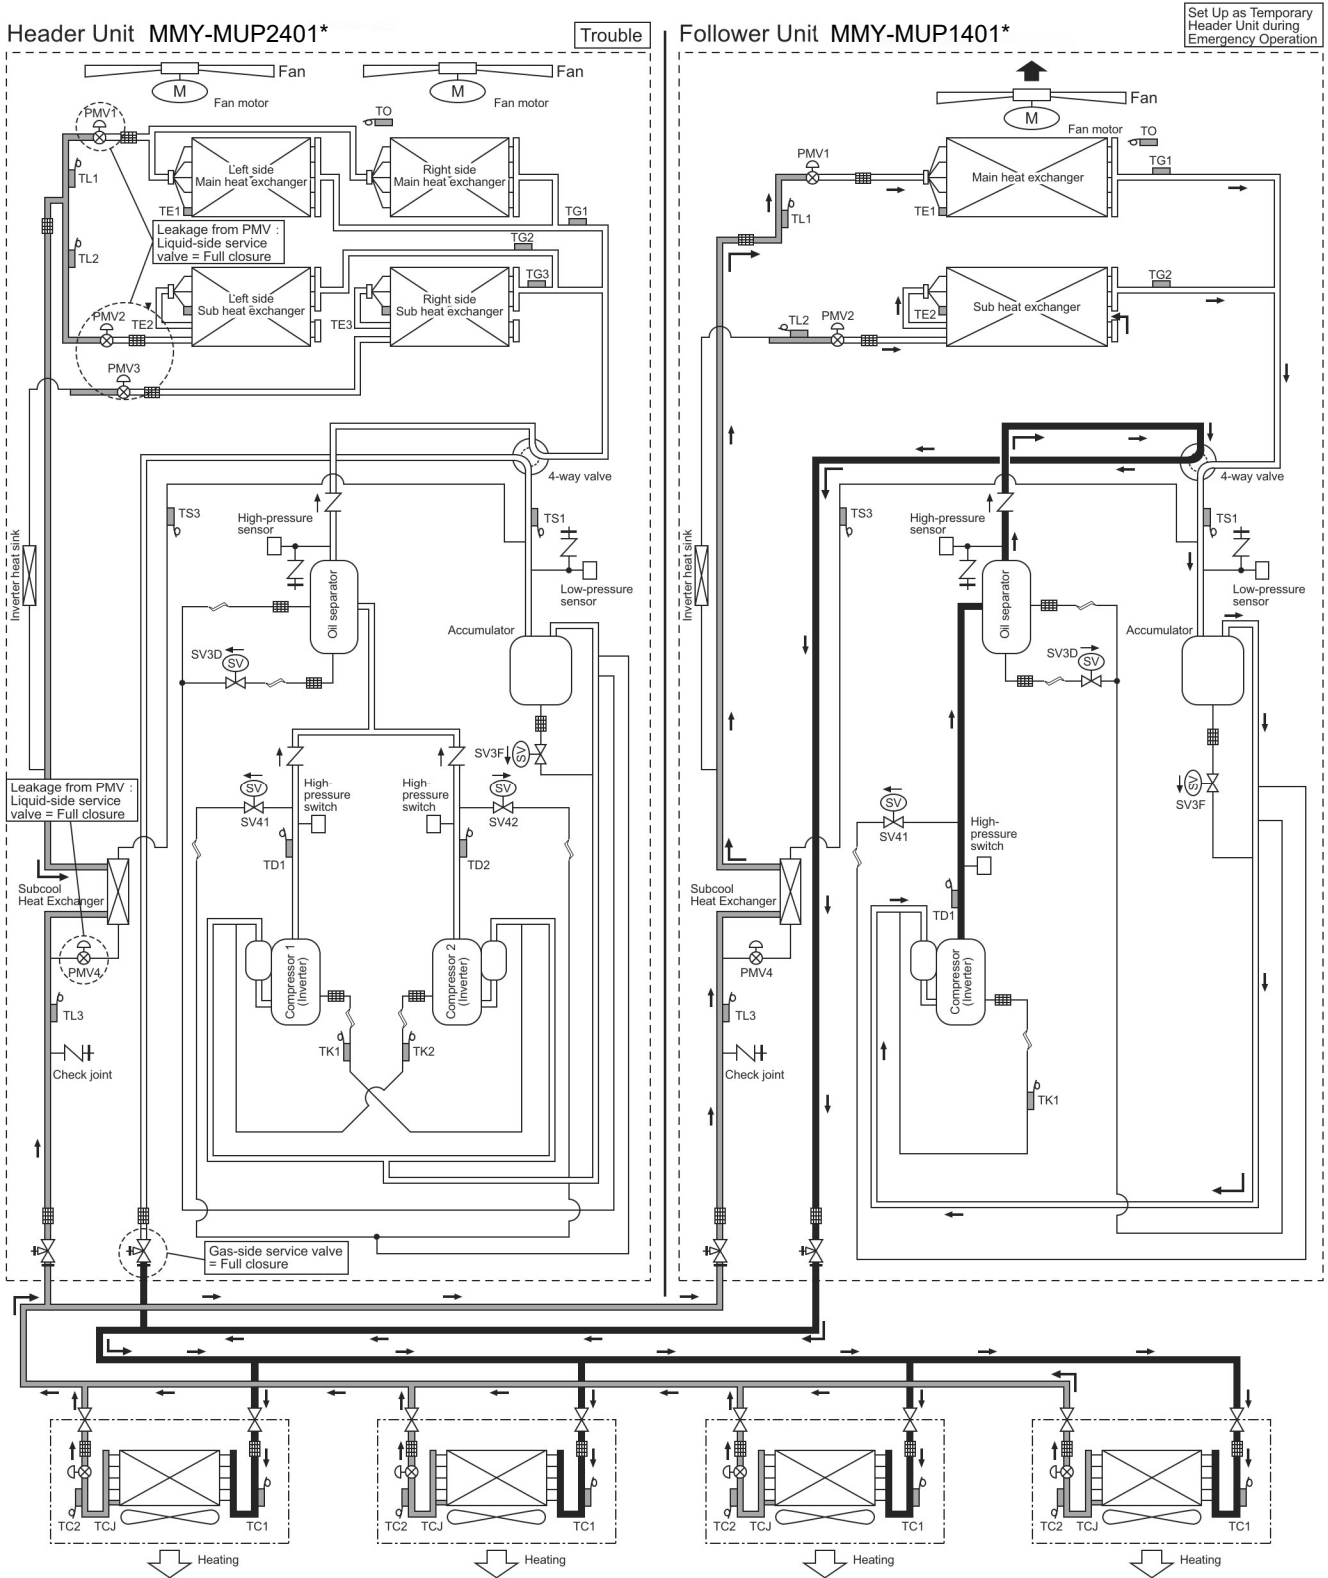

Trouble header outdoor unit			
4-way valve	OFF	SV3D	OFF
PMV1	CLOSE	SV3F	OFF
PMV2	CLOSE	SV4(n)	OFF
PMV3	CLOSE	Outdoor fan	OFF
PMV4	CLOSE		

Temporal header outdoor unit			
4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		


- High-pressure gas refrigerant
- Evaporative gas refrigerant (Low pressure)
- Condensate liquid refrigerant
- Low-pressure circuit (Refrigerant recover line)

(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".



## 4-6. Refrigerant Flow (Reclaim)

Header Unit (MMY-MUP2401\*)

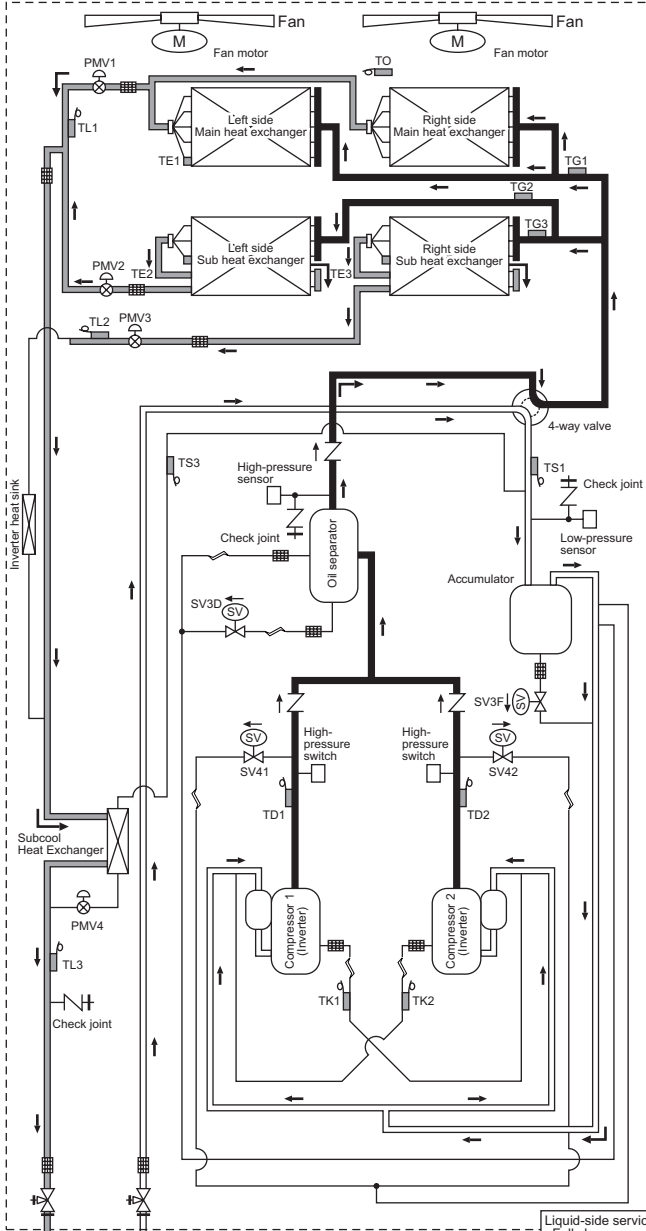

Follower Unit (MMY-MUP1401\*)

Trouble

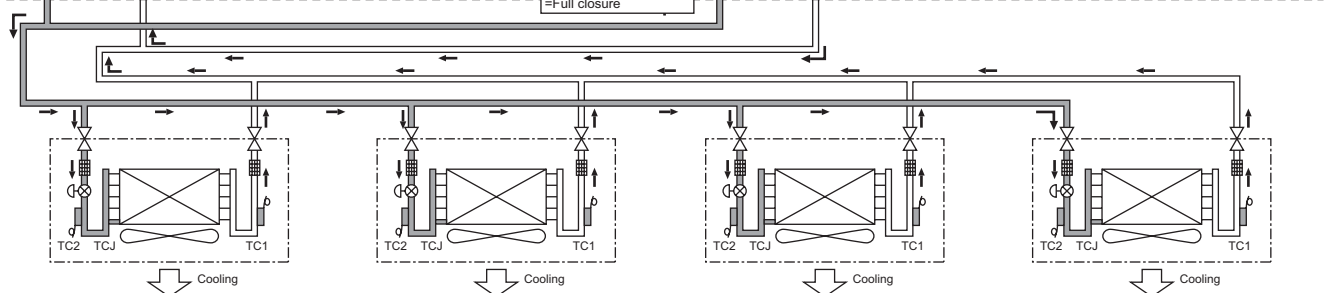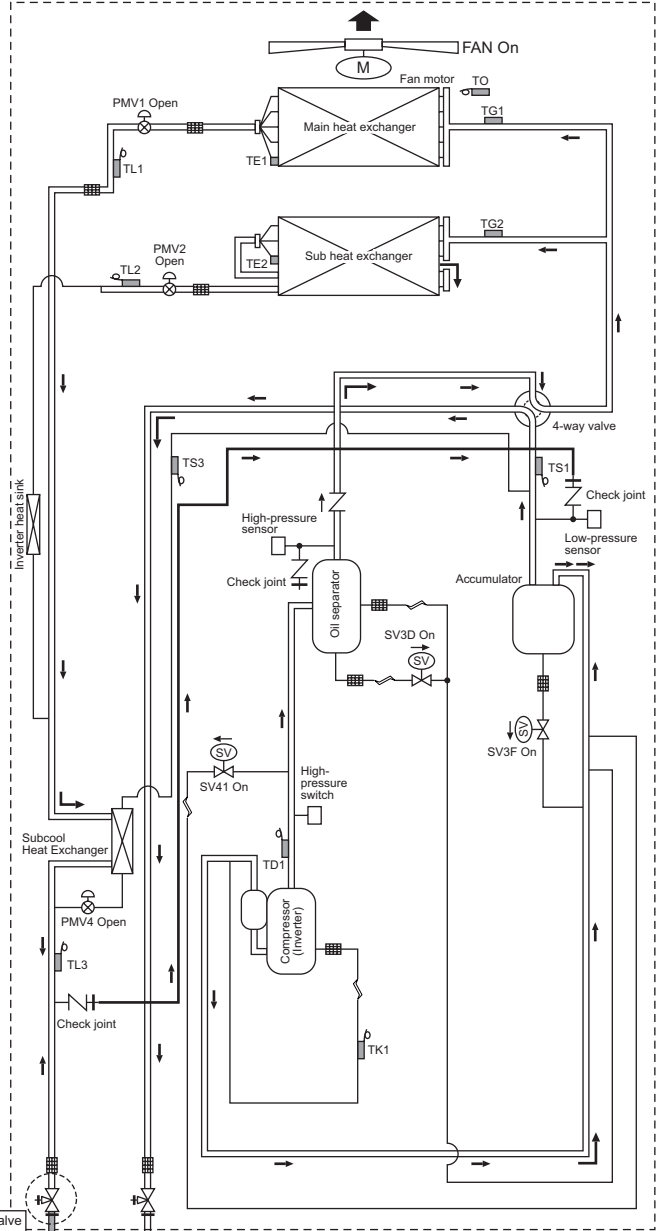

Outdoor Unit			
4-way valve	OFF	SV3D	Control
PMV1	Control	SV3F	Control
PMV2	Control	SV4(n)	Control
PMV3	Control	Outdoor fan	Control
PMV4	Control		





- High-pressure gas refrigerant
- Evaporative gas refrigerant (Low pressure)
- Condensate liquid refrigerant
- Low-pressure circuit (Refrigerant recover line)


(38 HP system described in the example of (24 HP + 14 HP))

The outdoor unit which communication line between indoor and outdoor is connected is the "Header unit". Other outdoor units are called "Follower units".


# 5. CONTROL OUTLINE

## 5-1. Outdoor Unit

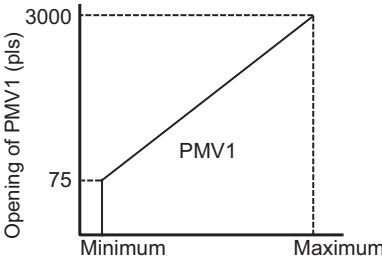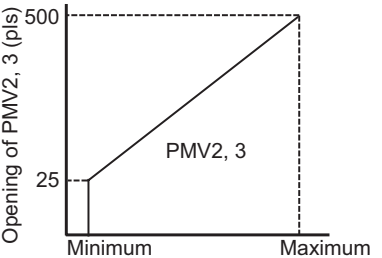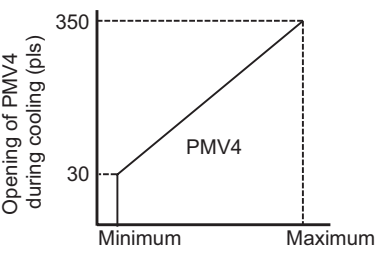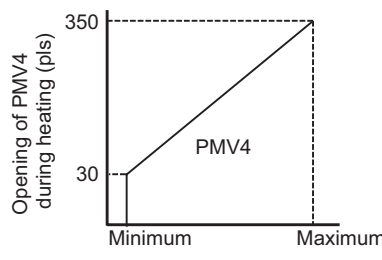Item	Description of operation, numerical data, and other information	Remarks
<p>1. Pulse motor valve (PMV) control</p>	<p>1. PMV1, 2, 3 control (PMV 1 and 2, 3)</p> <p>1) During air conditioner operation, the pulse count of a PMV1 (pulse motor valve 1) is controlled between 75 pls and 3000 pls, During air conditioner operation, the pulse count of a PMV2, 3 is controlled between 25 pls and 500 pls.</p> <p>2) During cooling, the PMV opening is controlled on the basis of measurements provided by the TL temperature sensor and the Pd sensor (subcool control).</p> <p>3) During heating, the PMV opening is controlled on the basis of measurements provided by the TS, TD and TG temperature sensor and the Ps sensor (subcool control).</p> <p>4) PMVs are fully closed when the air conditioner is in thermostat OFF state or upon being tuned off normally or shut down due to an abnormality.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div> <p>2. PMV 4 control</p> <p>1) During cooling, the pulse count of a PMV 4 (pulse motor valve 4) is controlled between 30 pls and 350 pls. The PMV 4 opening is controlled on the basis of measurements provided by the TL3 temperature sensor and Pd sensor (subcool control). or TS3 temperature sensor and Ps sensor (superheat control).</p> <p>2) During heating, the pulse count of a PMV4 is controlled between 30 pls and 350 pls. The PMV 4 operation is controlled by the pulse count of PMV opening of indoor unit and zone judgment. (Indoor refrigerant excess control)</p> <p>3) PMVs are fully closed when the air conditioner is in thermostat OFF state, upon being turned off normally or shut down due to an abnormality.</p> <div style="display: flex; justify-content: space-around; align-items: center;">   </div>	

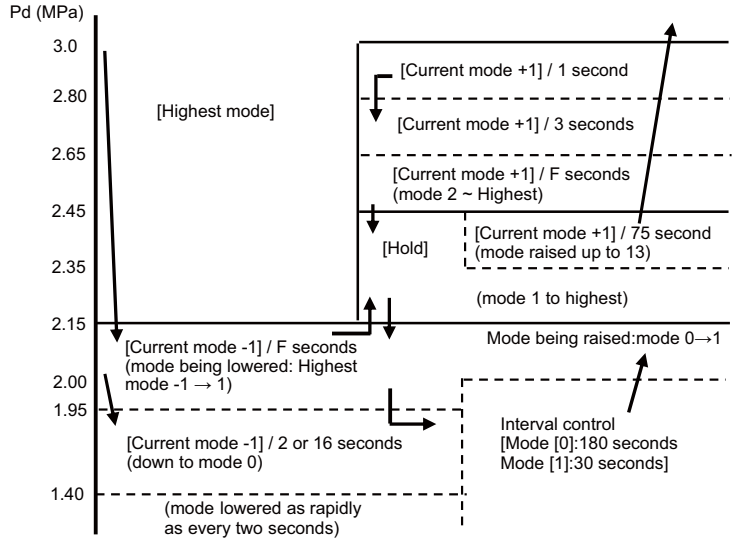Item	Description of operation, numerical data, and other information	Remarks														
<p>2. Outdoor fan control</p>	<p>1. Cooling fan control</p> <ol style="list-style-type: none"> <li>Outdoor fan speed (mode) is controlled on the basis of measurements provided by the Pd sensor.</li> <li>For a specified period after the start of cooling operation, the header outdoor unit controls outdoor fan speed (mode) on the basis of measurements provided by the Pd sensor. Follower units, on the other hand, control outdoor fan speed (mode) on the basis of measurements provided by the TE1 temperature sensor.</li> </ol>  <p>* Available control modes are 0 (at rest) to 63.</p> <p>2. Heating fan control</p> <ol style="list-style-type: none"> <li>Outdoor fan speed (mode) is controlled on the basis of the measurements provided by the TE temperature sensor.</li> <li>If <math>TE &gt; 25\text{ }^{\circ}\text{C}</math> is continuously detected for 8 minutes, the fan maybe turned off. However, this condition is the same as normal thermostat OFF, so that fan operation will be restarted.</li> <li>For a specified period after air conditioner start up and during defrosting this control is disabled.</li> <li>When refrigerant is extremely short supply, this control may cause the air conditioner to be repeatedly turned on and off.</li> </ol> <table border="1" data-bbox="319 1265 1141 1568"> <thead> <tr> <th>TE1 temperature (<math>^{\circ}\text{C}</math>)</th> <th>Control Action</th> </tr> </thead> <tbody> <tr> <td>25</td> <td>Zone A: Lowest mode, timer count for forced compressor shutdown</td> </tr> <tr> <td>8</td> <td>Zone B: -2/15 seconds (down to lowest mode)</td> </tr> <tr> <td>6</td> <td>Zone C: -1/15 seconds (down to lowest mode)</td> </tr> <tr> <td>4</td> <td>Zone D: Hold (staying at current mode)</td> </tr> <tr> <td>2</td> <td>Zone E: +1/15 seconds (up to highest mode)</td> </tr> <tr> <td></td> <td>Zone F: Highest mode</td> </tr> </tbody> </table> <p>Zone A: Lowest mode, timer count for forced compressor shutdown  Zone B: -2/15 seconds (down to lowest mode)  Zone C: -1/15 seconds (down to lowest mode)  Zone D: Hold (staying at current mode)  Zone E: +1/15 seconds (up to highest mode)  Zone F: Highest mode  TE1 temperature (<math>^{\circ}\text{C}</math>)</p> <p>3. Upper limit shift correction control in outdoor fan mode while operating in heating mode</p> <p>... This is a control that lowers the upper limit of the outdoor fan speed during heating operation when the air conditioning load is low and the number of indoor units operating is small.</p> <ol style="list-style-type: none"> <li>Lowers the current fan mode upper limit by -1 mode</li> <li>After that, while the conditions are met, the mode will be down every 30 seconds.</li> <li>The lower limit of the mode down is the fan mode "54".</li> <li>When the comp is turned off, this control is canceled and it returns to the initial setting upper limit mode.</li> <li>When the number of indoor driving increases, one mode will be up every 30 seconds.</li> </ol>	TE1 temperature ( $^{\circ}\text{C}$ )	Control Action	25	Zone A: Lowest mode, timer count for forced compressor shutdown	8	Zone B: -2/15 seconds (down to lowest mode)	6	Zone C: -1/15 seconds (down to lowest mode)	4	Zone D: Hold (staying at current mode)	2	Zone E: +1/15 seconds (up to highest mode)		Zone F: Highest mode	<ul style="list-style-type: none"> <li>The fan speed corresponding to the highest mode varies with the HP capacity of the outdoor unit.</li> <li>Pd control point may change depending on conditions and operation mode</li> <li>TE sensor temperature is the lowest temperature by comparing TE 1, 2, 3</li> <li>The fan speed corresponding to the highest mode varies with the HP capacity of the outdoor unit.</li> <li>Mode down is valid only when TH(x) temperature <math>&lt; 75\text{ }^{\circ}\text{C}</math></li> <li>Mode up is valid only when TH(x) temperature <math>\geq 80\text{ }^{\circ}\text{C}</math></li> </ul>
TE1 temperature ( $^{\circ}\text{C}$ )	Control Action															
25	Zone A: Lowest mode, timer count for forced compressor shutdown															
8	Zone B: -2/15 seconds (down to lowest mode)															
6	Zone C: -1/15 seconds (down to lowest mode)															
4	Zone D: Hold (staying at current mode)															
2	Zone E: +1/15 seconds (up to highest mode)															
	Zone F: Highest mode															

Item	Description of operation, numerical data, and other information	Remarks
3. Capacity control	<ol style="list-style-type: none"> <li>1) The compressors of the header and follower units are controlled on the basis of capacity demand issued by indoor controllers.</li> <li>2) The two compressors featured in an outdoor unit operate on a rotational basis, so that, every time they come to stop, their order of startup changes.</li> <li>3) When one or more follower outdoor units are connected, the system will be started next time between all the outdoor units including the header outdoor unit when the system is stopped (including thermostat-off) or the power is reset while 24 hours or more has passed on the accumulated operating time. Reverse the priority of time.</li> </ol>	<ul style="list-style-type: none"> <li>• The outdoor rotation control may be performed even when the insufficient refrigerant state is not released even if the indoor refrigerant recovery control is performed.</li> </ul>
4. Oil level detection control	<ol style="list-style-type: none"> <li>1) TK1,2 sensor detection temperature and prediction TK1, 2 sensor temperature is used to judge whether there is an appropriate amount of oil in the compressor case. This control is performed independently by the header outdoor unit and follower outdoor units.</li> <li>2) Based on the relationship between the TK detection temperature of the compressor into and the predicted TK sensor temperature, it is judged whether the oil level in the compressor case is appropriate, and if it is insufficient, the upper limit of the compressor speed and SV3D valve operate.</li> <li>3) If the shortage is not resolves by the operation of 2), shift to the oil recovery operation.</li> <li>4) This control function is performed whenever at least one compressor is in operation.</li> </ol>	<ul style="list-style-type: none"> <li>• The predicted TK sensor temperature is the predicted value of the TK sensor temperature when the oil is in proper condition</li> <li>• SV3D valve: Solenoid valve for oil return of oil separator</li> <li>• Oil level judgment guide <ol style="list-style-type: none"> <li>① When predicted -TK &lt; 10°C, the oil level is appropriate</li> <li>② When predicted -TK ≥ 10°C, the oil level is insufficient</li> </ol> </li> </ul>

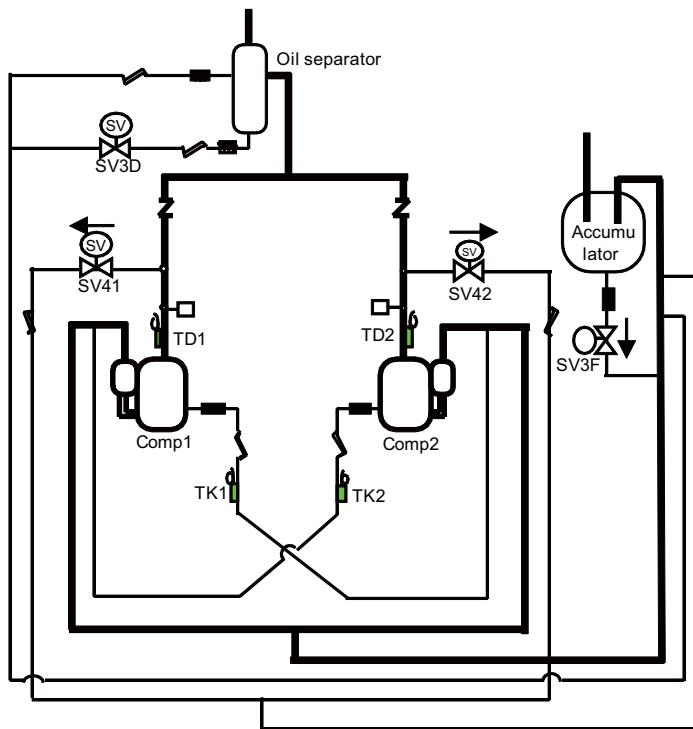

Item	Description of operation, numerical data, and other information	Remarks
5. Oil recovery control	<p>This is a control for preventing oil shortage in the compressor between the outdoor units, and oil equalization control is performed as follows during cooling operation and heating operation.</p> <p>[1] During cooling operation When the oil level of any compressor in the outdoor unit is determined to be insufficient due to the stagnation of refrigerating machine oil in the gas pipes and the indoor unit during cooling operation, this control recovers the oil from the indoor unit and evens oil levels between the outdoor units by increasing the compression frequency of the outdoor unit that detected drop of the oil level. This control is managed outside the header unit.</p> <p>1) Control start condition</p> <ul style="list-style-type: none"> <li>• The operating time of the compressor in which an insufficient oil level is detected exceeds 15 minutes</li> <li>• The operating time of the compressor in which an insufficient oil level is detected exceeds 30 minutes</li> <li>• The operating time of the compressor in which an insufficient oil level is detected exceeds 45 minutes</li> <li>• When the operating time of the compressor in which an insufficient oil level is detected exceeds 60 minutes, it causes an abnormal stop of the compressor.</li> </ul> <p>2) Control content</p> <ul style="list-style-type: none"> <li>• The operating compressor is operated at the target speed, the OFF speed is started, and the compressor is operated at the target speed.</li> <li>• Switch control mode in the indoor unit to the cooling oil (refrigerant) recovery control mode, and open the PMV opening of the indoor unit by a certain opening.</li> <li>• After the recovery control is performed for a predetermined time, the recovery control ends and the normal cooling operation is resumed.</li> </ul> <p>3) During heating operation This control can recover the stagnated oil in the piping or indoor heat exchanger and return it to the compressor by defrosting operation when the oil level continues to decrease even if the compressor oil level has been detected and the oil return control from the oil separator has functioned.</p> <p>4) Reverse defrost control is performed every 15 minutes after an insufficient oil level is confirmed during heating operation.</p> <p>5) When the operating time of the compressor in which an insufficient oil level is detected exceeds 60 minutes, it causes an abnormal stop of the compressor.</p>	<ul style="list-style-type: none"> <li>• The shortage is confirmed when the shortage continues even if the recovery operation (SV3D valve is turned on) is performed for each outdoor unit when the shortage is detected.</li> <li>* Depending on the number of indoor units when an insufficient oil level is confirmed, this control determines whether to recover the oil from only the operating indoor units or all the indoor units.</li> <li>• Oil level confirmation timer operates when an insufficient oil level is detected.</li> </ul>
6. Heating refrigerant (oil) recovery control	<p>Since the indoor unit that is stopped during heating operation closes the PMV, liquid refrigerant may accumulate in the heat exchanger, resulting in a refrigerant shortage condition. This control is to recover the liquid refrigerant to return it to the outdoor unit when a refrigerant shortage is detected.</p> <p>The PMV opening of the stopped indoor unit is slightly opened to return the refrigerant to the outdoor unit, but if the insufficient refrigerant state is still not resolved, heating refrigerant recovery control is performed.</p> <p>This control also recovers the refrigerant in Indoor/Outdoor unit after defrosting and the oil in the outdoor heat exchanger during heating overload operation. It is managed by the header outdoor unit.</p> <p>[1] Heating pause room PMV minute opening control</p> <ul style="list-style-type: none"> <li>• Control start condition When all the following conditions are satisfied</li> <li>• There are units with heating thermostat ON and other than thermostat ON (stop/thermostat OFF).</li> <li>• When the outdoor unit determines the refrigerant shortage condition</li> <li>• When the outdoor PMV opening exceeds the specified opening or the TD sensor temperature exceeds the specified value</li> <li>• Control content When the control starts, the PMV in the indoor unit during stop opens by a minute opening.</li> </ul> <p>[2] Heating refrigerant recovery control Control start condition</p> <ul style="list-style-type: none"> <li>• At the start of heating operation (when Comp. is turned on from Comp. OFF)</li> <li>• During heating operation transition after defrosting</li> <li>• 40 minutes have passed since the refrigerant shortage state was judged after starting the PMV minute opening control in the heating pause room.</li> </ul>	



Item	Description of operation, numerical data, and other information	Remarks
7. Defrosting control (Reverse defrosting method)	<ul style="list-style-type: none"> <li>• The reverse defrosting method is used for the outdoor unit in a single system, and the individual reverse defrosting method is used for the outdoor units in a connected system.</li> <li>• In the individual reverse defrosting, in order to prevent the cold air from dropping during defrosting, the Gr in which the unit that satisfies the defrosting start condition exists is switched to the cooling position of the four-way valve to perform the defrosting operation while It will be the operation method to continue the heating operation.</li> </ul> <p>1. Defrosting start condition (single and common system common)</p> <ul style="list-style-type: none"> <li>• During the heating operation, if the TE sensor detected temperature falls below the predicted TE sensor temperature by a specified amount, or if the TE sensor detected temperature falls below the frosting temperature for 300 minutes, the defrosting operation starts. (After start-up or when switching from cooling to heating, frost judgment is performed and the defrosting operation is started according to the judgment result.)</li> </ul> <p>* In the case of the coupled system, when any of the outdoor units satisfies the defrosting start condition, all the units in the group to which the unit belongs start defrosting operation, and the other Gr units continue heating operation.</p> <p>① <u>Reverse defrosting method (the outdoor unit is a single system)</u></p> <p>2. Defrost control content</p> <ol style="list-style-type: none"> <li>1) Stop the compressor that is running.</li> <li>2) After a certain period of time, the four-way valve is turned off and the outdoor fan is stopped.</li> <li>3) Turn on the compressor that is off and operate it at the target speed for defrost control.</li> </ol> <p>3. Defrost termination condition</p> <p>When the TE sensor temperature detection value exceeds a certain value (standard 12 °C) after a certain time has passed since the defrost control was started, the defrost end condition will be set and the defrost end control will be performed.</p> <p>4. Defrost end control content</p> <ol style="list-style-type: none"> <li>① Stop the compressor again.</li> <li>② Turns on the four-way valve after a certain period of time.</li> <li>③ Control the refrigerant recovery in the heating room. For control details, see "5. Oil Recovery Control".</li> </ol> <p>② <u>Individual defrost method (outdoor unit is combined system)</u></p> <p>2. Outdoor unit grouping method</p> <p>The outdoor unit is divided into Gr1 and Gr2 when the power is turned on.</p> <p>3. Defrost control content</p> <ol style="list-style-type: none"> <li>1) If any of the units satisfy the defrosting start conditions, all the stopped outdoor units are started, the operating unit operates the compressor at the minimum speed, and after a certain period of time, only the defrosting unit has a four-way valve. To turn off the outdoor fan.</li> <li>2) Heating Gr continues heating operation as it is</li> <li>3) The defrosting Gr unit controls the compressor rotation speed so that the Pd and Ps detection values of each unit become the target values.</li> </ol> <p>4. Defrost termination condition</p> <p>When the TE sensor temperature detection value exceeds a certain value (standard 12 ° C) after a certain time has passed since the defrost control was started, the defrost end condition will be set and the defrost end control will be performed.</p> <p>* When the defrosting end conditions are met for all outdoor units, the defrosting end control is performed. If any unit does not meet the defrost termination conditions, the outdoor unit that satisfies the defrost termination conditions continues defrosting operation.</p> <p>5. Defrost end control content</p> <ol style="list-style-type: none"> <li>1) Defrosting Gr unit <ol style="list-style-type: none"> <li>① Operates the compressor at standby speed.</li> <li>② After a certain period of time, the four-way valve turns on.</li> <li>③ Shift to heating start pattern control.</li> </ol> </li> <li>2) Unit of heating Gr <ol style="list-style-type: none"> <li>① When all the outdoor units included in the defrosting Gr turn on the four-way valve, the normal heating operation is restored.</li> <li>② The outdoor unit to be stopped stops its operation.</li> </ol> </li> </ol>	<ul style="list-style-type: none"> <li>• TE sensor detection temperature is the lowest temperature of TE1, TE2, TE3</li> <li>• Frosting temperature is -1.5 ° C</li> <li>• After the power is turned on, for the first time, the defrosting operation is continued for 25 minutes below the frosting temperature only when the heat exchanger is frosted.</li> <li>• Fan mode may be controlled during defrosting for cycle protection.</li> <li>• The compressor speed during defrost control is controlled below 85.0rps.</li> <li>• TE sensor detection temperature is the lowest temperature of TE1, TE2, TE3</li> <li>• Frosting temperature is -1.5 ° C</li> <li>• Fan mode may be controlled during defrosting for cycle protection.</li> <li>• The compressor speed of the defrost unit during individual reverse defrost control is controlled at 60.0rps or less.</li> <li>• The compressor speed during standby operation is 15.0 ~ 30.0rps.</li> </ul>




Item	Description of operation, numerical data, and other information	Remarks														
8. Release valve control	<p>(1) SV4 gas balance control  This control turns on SV4 when the compressor is stopped to balance the gas and reduce the starting load when the compressor is turned on next time. This control is performed independently by the center unit and each terminal unit.</p> <p>① Control condition</p> <ul style="list-style-type: none"> <li>• At power on</li> <li>• When the compressor is switched from ON to OFF during cooling operation or heating operation.</li> </ul> <p>② Control content</p> <ul style="list-style-type: none"> <li>• SV4 (x) is turned on when the power is turned on, and then turned off when <math>\Delta P</math> (<math>= P_d - P_s</math>) becomes 2.0 or less.</li> <li>• SV4 (x) turns on when the compressor turns off.  (Turns on when <math>\Delta P</math> (<math>P_d - P_s</math>) is 3.0 or more, and turns off when <math>\Delta P</math> (<math>P_d - P_s</math>) is 2.0 or less.)</li> </ul> <p>(2) SV4 high pressure release control  This control is a control to suppress the high pressure rise during cooling operation and heating operation. This control is performed independently by the header unit and each follower unit.</p> <p>① Control condition</p> <ul style="list-style-type: none"> <li>• Compressor ON</li> </ul> <p>② Control content</p> <ul style="list-style-type: none"> <li>• When <math>P_d \geq P1</math>, SV4 (x) is turned on.</li> <li>• When <math>P_d \leq P2</math>, SV4 (x) is turned off.</li> </ul> <p>* P1 and P2 of each outdoor unit are as follows</p> <table border="1" data-bbox="339 842 1054 1021"> <thead> <tr> <th rowspan="2">Pd control point</th> <th rowspan="2">Heating</th> <th colspan="2">Cooling</th> </tr> <tr> <th>Starting ranking first</th> <th>Starting ranking less than second</th> </tr> </thead> <tbody> <tr> <td>P1</td> <td>3.38MPa</td> <td>3.70MPa</td> <td>3.70MPa</td> </tr> <tr> <td>P2</td> <td>3.33MPa</td> <td>3.68MPa</td> <td>3.68MPa</td> </tr> </tbody> </table> <p>③ Release condition</p> <ul style="list-style-type: none"> <li>• When the system is stopped and the thermostat is off</li> </ul> <p>(3) SV4 low pressure release control</p> <ul style="list-style-type: none"> <li>• The purpose of this control is to protect the <math>P_s</math> drop during compression ON.</li> <li>• This control is performed independently by the header unit and each follower unit.</li> </ul> <p>① Control condition</p> <p>The outdoor unit that is turned on will judge each item individually.</p> <p>② Control content</p> <ul style="list-style-type: none"> <li>• When <math>P_s \leq 0.16</math>, turn on SV4 (x).</li> <li>• When <math>P_s \geq 0.20</math>, SV4 (x) is turned off.</li> </ul> <p>③ Release condition</p> <ul style="list-style-type: none"> <li>• When the system is stopped and the thermostat is off</li> </ul>	Pd control point	Heating	Cooling		Starting ranking first	Starting ranking less than second	P1	3.38MPa	3.70MPa	3.70MPa	P2	3.33MPa	3.68MPa	3.68MPa	
Pd control point	Heating			Cooling												
		Starting ranking first	Starting ranking less than second													
P1	3.38MPa	3.70MPa	3.70MPa													
P2	3.33MPa	3.68MPa	3.68MPa													

Item	Description of operation, numerical data, and other information	Remarks																		
9. Capacity release control	<p>This control is a capacity release control that is performed for the purpose of suppressing the thermostat-OFF due to freezing prevention due to excessive capacity even in Min Hz during cooling small capacity operation.</p> <p>① Control condition Perform when all the following conditions are met.</p> <ul style="list-style-type: none"> <li>• It is an outdoor unit with startup priority 1.</li> <li>• When the compressor frequency is less than A Hz during cooling operation</li> </ul> <table border="1" data-bbox="347 409 654 510"> <thead> <tr> <th>Compressor</th> <th>A [Hz]</th> </tr> </thead> <tbody> <tr> <td>(77cc A3)</td> <td>25.0</td> </tr> <tr> <td>(120cc K4)</td> <td>20.5</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>• When TD(X) ≤ 96 °C</li> </ul> <p>② Control content</p> <ul style="list-style-type: none"> <li>• When any of the indoor units that are thermostat-ON detects TCJ ≤ 3 °C or TC1 ≤ 3 °C while any of the compressors is ON, SV4 (x) is turned ON.</li> <li>• When any of the indoor units that are thermostat-ON detects TCJ &gt; 7 °C or TC1 &gt; 7 °C while any compressor is ON, SV4 (x) is turned OFF.</li> </ul> <p>③ Release condition</p> <ul style="list-style-type: none"> <li>• When the system is stopped and the thermostat is off</li> <li>• When TD (X) &gt; 102 °C is detected</li> <li>• When the compressor frequency is above A [Hz]</li> </ul>	Compressor	A [Hz]	(77cc A3)	25.0	(120cc K4)	20.5													
Compressor	A [Hz]																			
(77cc A3)	25.0																			
(120cc K4)	20.5																			
10. High pressure release compressor shut down	<p>This control function is aimed at automatically shutting down a compressor in an outdoor unit depending on Pd. It is individually performed by the header unit and each follower unit.</p> <p>1) Control details</p> <ul style="list-style-type: none"> <li>• Compressors are shut down when Pd reaches or exceeds P0</li> <li>• The Pd control point P0 is switched according to the start priority of the outdoor unit</li> <li>• The compressor restart prevention timer (2 minutes 30 seconds) is set, and the control terminated.</li> </ul> <table border="1" data-bbox="347 1111 981 1301"> <thead> <tr> <th colspan="2">Pd control point P0</th> <th>Cooling</th> <th>Heating</th> </tr> </thead> <tbody> <tr> <td rowspan="2">Outdoor unit priority1</td> <td>compressor1</td> <td>3.77MPa</td> <td>3.53MPa</td> </tr> <tr> <td>compressor2</td> <td>3.72MPa</td> <td>3.49MPa</td> </tr> <tr> <td rowspan="2">Except outdoor unit priority1</td> <td>compressor1</td> <td>3.72MPa</td> <td>3.45MPa</td> </tr> <tr> <td>compressor2</td> <td>3.72MPa</td> <td>3.41MPa</td> </tr> </tbody> </table>	Pd control point P0		Cooling	Heating	Outdoor unit priority1	compressor1	3.77MPa	3.53MPa	compressor2	3.72MPa	3.49MPa	Except outdoor unit priority1	compressor1	3.72MPa	3.45MPa	compressor2	3.72MPa	3.41MPa	
Pd control point P0		Cooling	Heating																	
Outdoor unit priority1	compressor1	3.77MPa	3.53MPa																	
	compressor2	3.72MPa	3.49MPa																	
Except outdoor unit priority1	compressor1	3.72MPa	3.45MPa																	
	compressor2	3.72MPa	3.41MPa																	
11. Case heater control	<p>This control function is aimed at preventing the accumulation of refrigerant in those case, and is performed by all outdoor units.</p> <p>If the power supply has not been turned on for a specified period before a post-installation test run. Compressor failure may occur.</p> <p>Similarly, when starting compressors after a long period of no power supply, it is recommended that the power supply be turned on for a while before operation is resumed, just like a post-installation test run.</p> <p>This control function is sometimes used alongside an electrical changing of the compressor motor windings. In this case, a changing sound may be heard, but this is normal.</p> <p>1) Control details</p> <ul style="list-style-type: none"> <li>• The heaters are turned on while the compressors are turned off.</li> <li>• The heaters are turned off when TO sensor temperature becomes ≥ 28 °C, and are turned back on when TO sensor temperature becomes ≤ 25 °C.</li> <li>• When the compressors are turned on, the heaters are kept on for 10 minutes.</li> </ul>																			



Item	Description of operation, numerical data, and other information	Remarks																														
12. Inverter P.C.board control for compressor	<p>(1) Current, power release value control The purpose of this control is to prevent high pressure rise and overheating of electric parts by reducing the compressor speed when the maximum current and maximum power value set for each model are exceeded.</p> <p>The maximum current and power value for each horsepower of each model are as follows</p> <table border="1" data-bbox="363 387 850 678"> <thead> <tr> <th>HP</th> <th>Maximum current</th> <th>Maximum power</th> </tr> </thead> <tbody> <tr> <td>24*</td> <td>27.00A</td> <td>17.21kW</td> </tr> <tr> <td>22*</td> <td>25.50A</td> <td>16.25kW</td> </tr> <tr> <td>20</td> <td>36.00A</td> <td>22.94kW</td> </tr> <tr> <td>18</td> <td>34.00A</td> <td>21.67kW</td> </tr> <tr> <td>16</td> <td>30.50A</td> <td>19.44kW</td> </tr> <tr> <td>14</td> <td>27.50A</td> <td>17.52kW</td> </tr> <tr> <td>12</td> <td>24.50A</td> <td>15.61kW</td> </tr> <tr> <td>10</td> <td>20.50A</td> <td>13.06kW</td> </tr> <tr> <td>8</td> <td>15.40A</td> <td>9.81kW</td> </tr> </tbody> </table> <p>*2 For comp models, it is the maximum value per comp.</p> <p>Even when the TH sensor temperature <math>\geq 81^{\circ}\text{C}</math>, the compressor speed is reduced, and when the TH sensor temperature <math>&lt; 73^{\circ}\text{C}</math> continues, the rotation speed increase is permitted.</p> <p>(2) Heat sink overheat abnormality            ① Stop the compressor operation when the TH sensor temperature exceeds <math>93^{\circ}\text{C}</math>.            ② When the above is stopped, the abnormal count is set to 1, and it restarts after 2 minutes and 30 seconds.            If you continue the operation for 10 minutes or more after restarting, the trouble count will be cleared            ③ A trouble is confirmed with a trouble count of "4".</p> <p>(3) High pressure SW control            ① Inverter compressor stops driving the compressor when the high pressure SW is operating.            ② When the above is stopped, the abnormal count is set to 1, and it restarts after 2 minutes and 30 seconds.            If you continue the operation for 10 minutes or more after restarting, the trouble count will be cleared.            ③ The trouble count becomes "4" and the trouble is confirmed.            The above display is "P04".</p>	HP	Maximum current	Maximum power	24*	27.00A	17.21kW	22*	25.50A	16.25kW	20	36.00A	22.94kW	18	34.00A	21.67kW	16	30.50A	19.44kW	14	27.50A	17.52kW	12	24.50A	15.61kW	10	20.50A	13.06kW	8	15.40A	9.81kW	
HP	Maximum current	Maximum power																														
24*	27.00A	17.21kW																														
22*	25.50A	16.25kW																														
20	36.00A	22.94kW																														
18	34.00A	21.67kW																														
16	30.50A	19.44kW																														
14	27.50A	17.52kW																														
12	24.50A	15.61kW																														
10	20.50A	13.06kW																														
8	15.40A	9.81kW																														

Item	Description of operation, numerical data, and other information	Remarks
13. Heat sink condensation prevention control	<p>Since the refrigerant cooling heat sink cools the device by the refrigerant temperature of the liquid pipe, if the liquid pipe temperature drops due to a gas shortage cycle, dew condensation on the device may occur. Therefore, the control is for the purpose of preventing dew condensation on the element.</p> <p>1) Control condition</p> <ul style="list-style-type: none"> <li>• Compressor ON</li> <li>• Do not execute this control during startup control</li> <li>• Do not execute this control during defrosting operation</li> </ul> <p>2) Control content</p> <p>① During cooling operation, when <math>TO-TL2 \geq 5K</math> is continued for 5 minutes</p> <p>② During heating operation, at the time point when <math>TO</math> supplement-<math>TL2 \geq 5K</math> is continued for 5 minutes</p> <ul style="list-style-type: none"> <li>• The system will be stopped outside the center room, and the system restart prevention timer will be set.</li> <li>• Outside the terminal room, the compressor of the unit that detected the abnormality is turned off to prevent the compressor from restarting. Set the timer and send the [compressor start permission: OFF] signal outside the center room.</li> <li>• Abnormality count is [1].</li> </ul>	

## 5-2. Indoor Unit

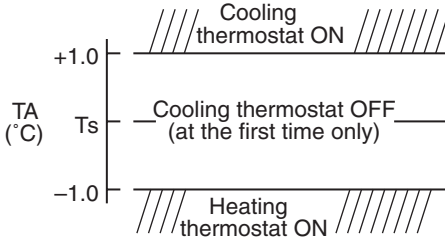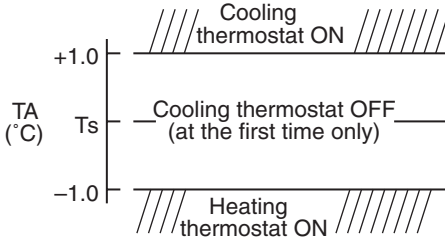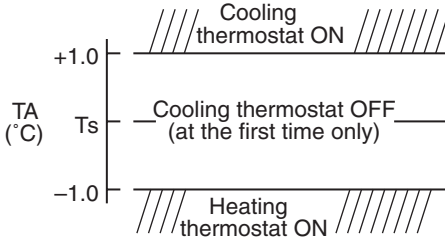No.	Item	Outline of specifications	Remarks														
1	When power supply is reset	1) Distinction of outdoor unit When the power supply is reset, the outdoors are distinguished and the control is selected according to the distinguished result. 2) Setting of indoor fan speed and existence of air direction adjustment Based on EEPROM data, select setting of the indoor fan speed and the existence of air direction adjustment. 3) If resetting the power supply during occurrence of a trouble, the check code is once cleared. After ON/OFF button of the remote controller was pushed and the operation was resumed, if the abnormal status continues, the check code is again displayed on the remote controller.															
2	Operation mode selection	1) Based on the operation mode selecting command from the remote controller, the operation mode is selected. <table border="1" data-bbox="451 846 1117 1153" style="margin: 10px 0;"> <thead> <tr> <th>Remote controller command</th> <th>Control outline</th> </tr> </thead> <tbody> <tr> <td>STOP</td> <td>Air conditioner stops.</td> </tr> <tr> <td>FAN</td> <td>Fan operation</td> </tr> <tr> <td>COOL</td> <td>Cooling operation</td> </tr> <tr> <td>DRY</td> <td>Dry operation</td> </tr> <tr> <td>HEAT</td> <td>Heating operation</td> </tr> </tbody> </table> <div style="margin: 10px 0;"> <table border="1" data-bbox="451 1153 1117 1388" style="width: 100%;"> <tr> <td style="width: 30%;">           AUTO (SHRM only)         </td> <td> <ul style="list-style-type: none"> <li>TA and Ts automatically select COOL/ HEAT operation mode for operation.</li> <li>The operation is performed as shown in the following figure according to TA value at the first time only.                (In the range of <math>T_s - 1 &lt; TA &lt; T_s + 1</math>, Cooling thermostat OFF (Fan) / Setup air volume operation continues.)</li> </ul>  </td> </tr> </table> <p style="margin-top: 10px;">* Only SHRM can select automatic mode.            While a wireless remote controller is used, the mode is notified by "Pi Pi" (two times) receiving sound and the alternate flashing of [TIMER ☹] and [READY ☺].            To clear the alternate flashing, change the mode on the wireless remote controller.</p> </div>	Remote controller command	Control outline	STOP	Air conditioner stops.	FAN	Fan operation	COOL	Cooling operation	DRY	Dry operation	HEAT	Heating operation	AUTO (SHRM only)	<ul style="list-style-type: none"> <li>TA and Ts automatically select COOL/ HEAT operation mode for operation.</li> <li>The operation is performed as shown in the following figure according to TA value at the first time only.                (In the range of <math>T_s - 1 &lt; TA &lt; T_s + 1</math>, Cooling thermostat OFF (Fan) / Setup air volume operation continues.)</li> </ul> 	TA: Room temp. Ts: Setup temp.
Remote controller command	Control outline																
STOP	Air conditioner stops.																
FAN	Fan operation																
COOL	Cooling operation																
DRY	Dry operation																
HEAT	Heating operation																
AUTO (SHRM only)	<ul style="list-style-type: none"> <li>TA and Ts automatically select COOL/ HEAT operation mode for operation.</li> <li>The operation is performed as shown in the following figure according to TA value at the first time only.                (In the range of <math>T_s - 1 &lt; TA &lt; T_s + 1</math>, Cooling thermostat OFF (Fan) / Setup air volume operation continues.)</li> </ul> 																
3	Room temp. control	1) Adjustment range: Remote controller setup temperature (°C) <table border="1" data-bbox="451 1921 1117 2049" style="margin: 10px 0;"> <thead> <tr> <th></th> <th>COOL/DRY</th> <th>HEAT</th> <th>AUTO*</th> </tr> </thead> <tbody> <tr> <td>Wired type</td> <td>18 to 29</td> <td>18 to 29</td> <td>18 to 29</td> </tr> <tr> <td>Wireless type</td> <td>17 to 30</td> <td>17 to 30</td> <td>17 to 30</td> </tr> </tbody> </table>		COOL/DRY	HEAT	AUTO*	Wired type	18 to 29	18 to 29	18 to 29	Wireless type	17 to 30	17 to 30	17 to 30	* For SHRM only		
	COOL/DRY	HEAT	AUTO*														
Wired type	18 to 29	18 to 29	18 to 29														
Wireless type	17 to 30	17 to 30	17 to 30														


No.	Item	Outline of specifications	Remarks																
3	Room temp. control (Continued)	<p>2) Using the Item code 06, the setup temperature in heating operation can be compensated.</p> <table border="1" data-bbox="451 288 1102 376"> <thead> <tr> <th>Setup data</th> <th>0</th> <th>2</th> <th>4</th> <th>6</th> </tr> </thead> <tbody> <tr> <td>Setup temp. compensation</td> <td>+0°C</td> <td>+2°C</td> <td>+4°C</td> <td>+6°C</td> </tr> </tbody> </table> <p>Setting at shipment</p> <table border="1" data-bbox="451 427 1102 580"> <thead> <tr> <th>Model</th> <th>Set data</th> </tr> </thead> <tbody> <tr> <td>Floor standing cabinet, Floor standing concealed, Floor standing</td> <td>0</td> </tr> <tr> <td>Other models</td> <td>2</td> </tr> </tbody> </table>	Setup data	0	2	4	6	Setup temp. compensation	+0°C	+2°C	+4°C	+6°C	Model	Set data	Floor standing cabinet, Floor standing concealed, Floor standing	0	Other models	2	<p>Shift of return air temperature in heating operation</p> <p>Except while sensor of the remote controller is controlled (Code No. [32], "0001")</p>
Setup data	0	2	4	6															
Setup temp. compensation	+0°C	+2°C	+4°C	+6°C															
Model	Set data																		
Floor standing cabinet, Floor standing concealed, Floor standing	0																		
Other models	2																		
4	Automatic capacity control	<p>1) Based on the difference between TA and Ts, the operation capacity is determined by the outdoor unit.</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="467 779 735 1160"> <p><b>COOL</b></p> </div> <div data-bbox="815 779 1090 1160"> <p><b>HEAT</b></p> </div> </div>	<p>Ts: Setup temp. TA: Room temp.</p>																
5	Automatic cooling/heating control	<p>1) The judgment of selecting COOL/HEAT is carried out as shown below. When +1.5 exceeds against Tsh 10 minutes and after thermostat OFF, heating operation (Thermostat OFF) exchanges to cooling operation. Description in the parentheses shows an example of cooling ON/OFF.</p> <div style="text-align: center;"> </div> <p>When -1.5 lowers against Tsc 10 minutes and after thermostat OFF, cooling operation (Thermostat OFF) exchanges to heating operation.</p> <p>2) For the automatic capacity control after judgment of cooling/heating, see Item 4.</p> <p>3) For temperature compensation of room temp. control in automatic heating, see Item 3.</p>	<p>* For SHRM only Tsc: Setup temp. in cooling operation Tsh: Setup temp. in heating operation + temp. compensation of room temp. control</p>																

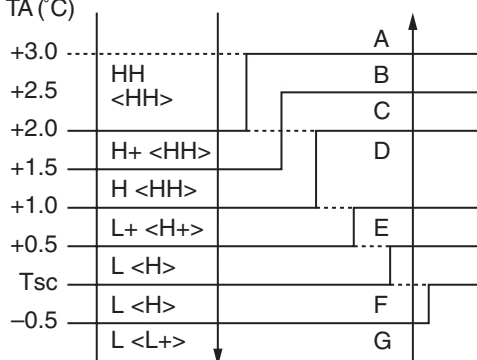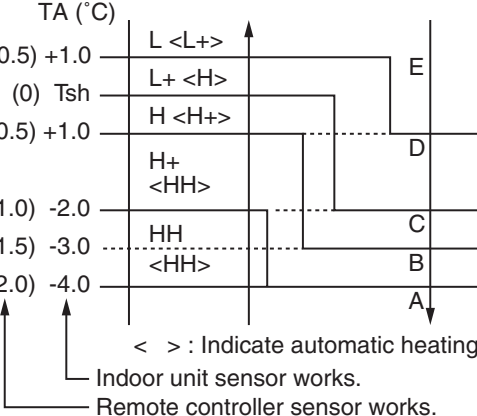

No.	Item	Outline of specifications	Remarks
6	Air speed selection	<p>1) By the command from remote control, fan speed is changed. ((HH), (H+), (H), (L+), (L) or [AUTO])</p> <p>2) When the air speed mode [AUTO] is selected, the air speed varies by the difference between TA and Ts.</p> <p><b>&lt;COOL&gt;</b></p>  <p style="text-align: center;">&lt; &gt; : Indicate automatic cooling.</p> <ul style="list-style-type: none"> <li>• Air speed mode [AUTO] in case when remote controller sensor works is equal to that in case when indoor unit sensor works.</li> <li>• If the air speed has been changed once, it is not changed for 3 minutes. However when the air volume is changed, the air speed changes.</li> <li>• When cooling operation has started, select a downward slope for the air speed, that is, the high position.</li> <li>• If the temperature is just on the difference boundary, the air speed does not change.</li> </ul> <p><b>&lt;HEAT&gt;</b></p>  <p style="text-align: center;">&lt; &gt; : Indicate automatic heating.</p> <p style="text-align: center;">↑ Indoor unit sensor works. ↓ Remote controller sensor works.</p> <p>Value in the parentheses indicates one when sensor of the remote controller works. Value without parentheses indicates one when sensor of the indoor unit sensor works.</p> <ul style="list-style-type: none"> <li>• If the air speed has been changed once, it is not changed for 1 minute. However when the air speed changed, the air speed changes.</li> <li>• When heating operation has started, select an upward slope for the air speed, that is, the high position.</li> <li>• If the temperature is just on the difference boundary, the air speed does not change.</li> <li>• In <math>TC2 \geq 60^{\circ}C</math>, the air speed increases by 1 step.</li> </ul>	<p>HH &gt; H+ &gt; H &gt; L+ &gt; L &gt; UL</p> <p>Fan speed 4-way cassette Compact 4-way 2-way cassette 1-way cassette (SH)</p> <p>Depending on the remote controller used, (H+) and (L+) cannot be selected.</p> <p>For 1-way cassette(YH), Floor Standing Concealed Type, or Floor Standing Cabinet Type, (HH), (H), (L) or [AUTO] can be selected regardless of remote controller models.</p> <p>Code No. 32 0000: Indoor unit sensor (Main unit) 0001: Remote controller sensor</p> <p>TC2: Indoor heat exchanger sensor temperature</p>









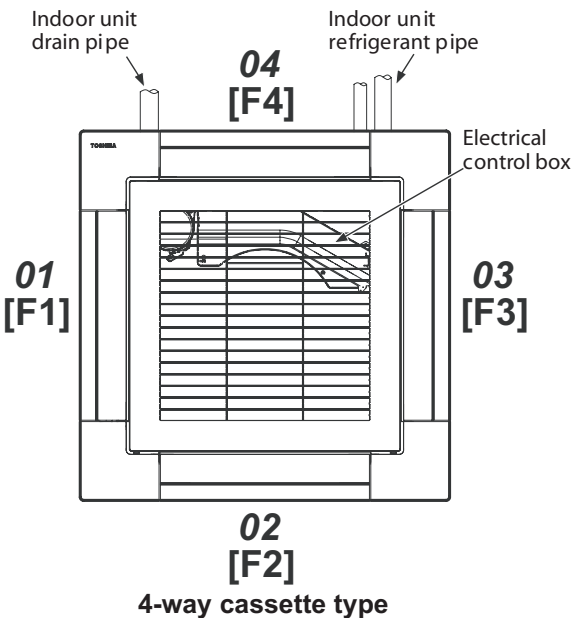
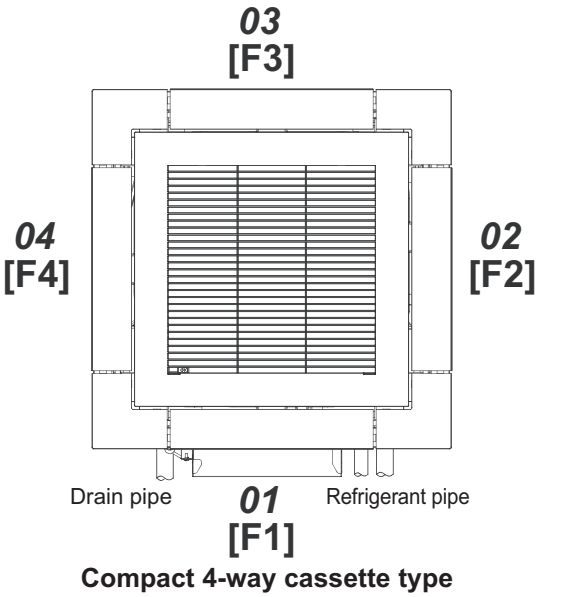

No.	Item	Outline of specifications	Remarks																																																																																																																																																																																																																																																																																																																																			
6	Air speed selection (Continued):	<p><b>4-way, compact 4-way (only UP015), 2-way, 1-way (SH)</b> (Air speed selection of UP012 or less and UP018 for Compact 4-way are only Standard.)</p> <table border="1"> <thead> <tr> <th>CODE No. [5d]</th> <th colspan="2">Standard</th> <th colspan="2">Type 1</th> <th colspan="2">Type 3</th> <th colspan="2">Type 6</th> </tr> <tr> <th>SW501 (1)/(2)</th> <th colspan="2">0000</th> <th colspan="2">0001</th> <th colspan="2">0003</th> <th colspan="2">0006</th> </tr> <tr> <th>SW501 (1)/(2)</th> <th colspan="2">OFF/OFF</th> <th colspan="2">ON/OFF</th> <th colspan="2">OFF/ON</th> <th colspan="2">ON/ON</th> </tr> <tr> <th>Tap</th> <th>COOL</th> <th>HEAT</th> <th>COOL</th> <th>HEAT</th> <th>COOL</th> <th>HEAT</th> <th>COOL</th> <th>HEAT</th> </tr> </thead> <tbody> <tr><td>F1</td><td></td><td></td><td></td><td></td><td>HH</td><td>HH</td><td>HH</td><td>HH</td></tr> <tr><td>F2</td><td></td><td></td><td>HH</td><td>HH</td><td></td><td></td><td></td><td></td></tr> <tr><td>F3</td><td></td><td></td><td></td><td>H+</td><td>H+, H</td><td>H+, H</td><td>H+, H, L+, L</td><td>H+, H, L+, L</td></tr> <tr><td>F4</td><td></td><td></td><td>H+</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>F5</td><td></td><td>HH</td><td></td><td>H</td><td></td><td></td><td></td><td></td></tr> <tr><td>F6</td><td>HH</td><td></td><td>H+</td><td></td><td>L+</td><td>L+</td><td></td><td></td></tr> <tr><td>F7</td><td>H+</td><td>H+</td><td></td><td></td><td>L</td><td>L</td><td></td><td></td></tr> <tr><td>F8</td><td></td><td>H</td><td></td><td>L+</td><td></td><td></td><td></td><td></td></tr> <tr><td>F9</td><td>H</td><td></td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td></tr> <tr><td>FA</td><td></td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>FB</td><td>L+</td><td>L</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>FC</td><td>L</td><td></td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>FD</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td></tr> </tbody> </table> <p><b>Compact slim duct</b></p> <table border="1"> <thead> <tr> <th>CODE No. [5d]</th> <th colspan="2">Standard (10Pa)</th> <th colspan="2">Type 1 (20Pa)</th> <th colspan="2">Type 3 (30Pa)</th> </tr> <tr> <th>SW501 (1)/(2)</th> <th colspan="2">0000</th> <th colspan="2">0001</th> <th colspan="2">0003</th> </tr> <tr> <th>SW501 (1)/(2)</th> <th colspan="2">OFF/OFF</th> <th colspan="2">ON/OFF</th> <th colspan="2">OFF/ON</th> </tr> <tr> <th>Tap</th> <th>COOL</th> <th>HEAT</th> <th>COOL</th> <th>HEAT</th> <th>COOL</th> <th>HEAT</th> </tr> </thead> <tbody> <tr><td>F1</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>F2</td><td></td><td></td><td></td><td></td><td>HH</td><td>HH</td></tr> <tr><td>F3</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>F4</td><td></td><td></td><td>HH</td><td>HH</td><td>H+</td><td>H+</td></tr> <tr><td>F5</td><td></td><td></td><td></td><td></td><td></td><td></td></tr> <tr><td>F6</td><td></td><td></td><td></td><td></td><td>H</td><td>H</td></tr> <tr><td>F7</td><td>HH</td><td>HH</td><td>H+</td><td>H+</td><td></td><td></td></tr> <tr><td>F8</td><td></td><td></td><td>H</td><td>H</td><td>L+</td><td>L+</td></tr> <tr><td>F9</td><td>H+</td><td>H+</td><td></td><td></td><td>L</td><td>L</td></tr> <tr><td>FA</td><td>H</td><td>H</td><td>L+</td><td>L+</td><td></td><td></td></tr> <tr><td>FB</td><td>L+</td><td>L+</td><td>L</td><td>L</td><td></td><td></td></tr> <tr><td>FC</td><td>L</td><td>L</td><td></td><td></td><td></td><td></td></tr> <tr><td>FD</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td><td>LL</td></tr> </tbody> </table> <p><b>Floor standing</b></p> <table border="1"> <thead> <tr> <th>CODE No. [5d]</th> <th colspan="2">Standard</th> </tr> <tr> <th>SW501 (1)/(2)</th> <th colspan="2">0000</th> </tr> <tr> <th>SW501 (1)/(2)</th> <th colspan="2">OFF/OFF</th> </tr> <tr> <th>Tap</th> <th>COOL</th> <th>HEAT</th> </tr> </thead> <tbody> <tr><td>F1</td><td></td><td></td></tr> <tr><td>F2</td><td></td><td></td></tr> <tr><td>F3</td><td></td><td></td></tr> <tr><td>F4</td><td></td><td></td></tr> <tr><td>F5</td><td></td><td>HH</td></tr> <tr><td>F6</td><td>HH</td><td></td></tr> <tr><td>F7</td><td>H+</td><td>H+</td></tr> <tr><td>F8</td><td></td><td>H</td></tr> <tr><td>F9</td><td>H</td><td></td></tr> <tr><td>FA</td><td></td><td>L+</td></tr> <tr><td>FB</td><td>L+</td><td>L</td></tr> <tr><td>FC</td><td>L</td><td></td></tr> <tr><td>FD</td><td>LL</td><td>LL</td></tr> </tbody> </table>	CODE No. [5d]	Standard		Type 1		Type 3		Type 6		SW501 (1)/(2)	0000		0001		0003		0006		SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON		ON/ON		Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT	COOL	HEAT	F1					HH	HH	HH	HH	F2			HH	HH					F3				H+	H+, H	H+, H	H+, H, L+, L	H+, H, L+, L	F4			H+						F5		HH		H					F6	HH		H+		L+	L+			F7	H+	H+			L	L			F8		H		L+					F9	H		L+	L					FA		L+	L						FB	L+	L							FC	L								FD	LL	LL	LL	LL	LL	LL	LL	LL	CODE No. [5d]	Standard (10Pa)		Type 1 (20Pa)		Type 3 (30Pa)		SW501 (1)/(2)	0000		0001		0003		SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON		Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT	F1							F2					HH	HH	F3							F4			HH	HH	H+	H+	F5							F6					H	H	F7	HH	HH	H+	H+			F8			H	H	L+	L+	F9	H+	H+			L	L	FA	H	H	L+	L+			FB	L+	L+	L	L			FC	L	L					FD	LL	LL	LL	LL	LL	LL	CODE No. [5d]	Standard		SW501 (1)/(2)	0000		SW501 (1)/(2)	OFF/OFF		Tap	COOL	HEAT	F1			F2			F3			F4			F5		HH	F6	HH		F7	H+	H+	F8		H	F9	H		FA		L+	FB	L+	L	FC	L		FD	LL	LL	Standard or Type 1, 3, or 6 can be selected with Code No. [5d] or switching of SW501 on P.C. board.
CODE No. [5d]	Standard		Type 1		Type 3		Type 6																																																																																																																																																																																																																																																																																																																															
SW501 (1)/(2)	0000		0001		0003		0006																																																																																																																																																																																																																																																																																																																															
SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON		ON/ON																																																																																																																																																																																																																																																																																																																															
Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT	COOL	HEAT																																																																																																																																																																																																																																																																																																																														
F1					HH	HH	HH	HH																																																																																																																																																																																																																																																																																																																														
F2			HH	HH																																																																																																																																																																																																																																																																																																																																		
F3				H+	H+, H	H+, H	H+, H, L+, L	H+, H, L+, L																																																																																																																																																																																																																																																																																																																														
F4			H+																																																																																																																																																																																																																																																																																																																																			
F5		HH		H																																																																																																																																																																																																																																																																																																																																		
F6	HH		H+		L+	L+																																																																																																																																																																																																																																																																																																																																
F7	H+	H+			L	L																																																																																																																																																																																																																																																																																																																																
F8		H		L+																																																																																																																																																																																																																																																																																																																																		
F9	H		L+	L																																																																																																																																																																																																																																																																																																																																		
FA		L+	L																																																																																																																																																																																																																																																																																																																																			
FB	L+	L																																																																																																																																																																																																																																																																																																																																				
FC	L																																																																																																																																																																																																																																																																																																																																					
FD	LL	LL	LL	LL	LL	LL	LL	LL																																																																																																																																																																																																																																																																																																																														
CODE No. [5d]	Standard (10Pa)		Type 1 (20Pa)		Type 3 (30Pa)																																																																																																																																																																																																																																																																																																																																	
SW501 (1)/(2)	0000		0001		0003																																																																																																																																																																																																																																																																																																																																	
SW501 (1)/(2)	OFF/OFF		ON/OFF		OFF/ON																																																																																																																																																																																																																																																																																																																																	
Tap	COOL	HEAT	COOL	HEAT	COOL	HEAT																																																																																																																																																																																																																																																																																																																																
F1																																																																																																																																																																																																																																																																																																																																						
F2					HH	HH																																																																																																																																																																																																																																																																																																																																
F3																																																																																																																																																																																																																																																																																																																																						
F4			HH	HH	H+	H+																																																																																																																																																																																																																																																																																																																																
F5																																																																																																																																																																																																																																																																																																																																						
F6					H	H																																																																																																																																																																																																																																																																																																																																
F7	HH	HH	H+	H+																																																																																																																																																																																																																																																																																																																																		
F8			H	H	L+	L+																																																																																																																																																																																																																																																																																																																																
F9	H+	H+			L	L																																																																																																																																																																																																																																																																																																																																
FA	H	H	L+	L+																																																																																																																																																																																																																																																																																																																																		
FB	L+	L+	L	L																																																																																																																																																																																																																																																																																																																																		
FC	L	L																																																																																																																																																																																																																																																																																																																																				
FD	LL	LL	LL	LL	LL	LL																																																																																																																																																																																																																																																																																																																																
CODE No. [5d]	Standard																																																																																																																																																																																																																																																																																																																																					
SW501 (1)/(2)	0000																																																																																																																																																																																																																																																																																																																																					
SW501 (1)/(2)	OFF/OFF																																																																																																																																																																																																																																																																																																																																					
Tap	COOL	HEAT																																																																																																																																																																																																																																																																																																																																				
F1																																																																																																																																																																																																																																																																																																																																						
F2																																																																																																																																																																																																																																																																																																																																						
F3																																																																																																																																																																																																																																																																																																																																						
F4																																																																																																																																																																																																																																																																																																																																						
F5		HH																																																																																																																																																																																																																																																																																																																																				
F6	HH																																																																																																																																																																																																																																																																																																																																					
F7	H+	H+																																																																																																																																																																																																																																																																																																																																				
F8		H																																																																																																																																																																																																																																																																																																																																				
F9	H																																																																																																																																																																																																																																																																																																																																					
FA		L+																																																																																																																																																																																																																																																																																																																																				
FB	L+	L																																																																																																																																																																																																																																																																																																																																				
FC	L																																																																																																																																																																																																																																																																																																																																					
FD	LL	LL																																																																																																																																																																																																																																																																																																																																				
		3)In heating operation, the mode changes to [LL] if thermostat is turned off.																																																																																																																																																																																																																																																																																																																																				





No.	Item	Outline of specifications	Remarks															
7	Prevention of cold air discharge	<p>1. In heating operation, the higher temperature of TC2 sensor and TCJ sensor is compared with temperature of TC1 sensor and then the lower temperature is used to set the upper limit of the fan tap.</p> <ul style="list-style-type: none"> <li>When B zone has continued for 6 minutes, the operation shifts to C zone.</li> <li>In defrost time, the control point is set to +6°C.</li> </ul> <p>A zone: OFF  B zone: Over 26°C, below 28°C, ULTRA LOW (LL)  C zone: Over 28°C, below 30°C, LOW (L)  D zone: Over 30°C, below 32°C, MED (H)  E zone: HIGH (HH)</p>	<p>TCJ: Temperature of indoor heat exchanger sensor</p> <ul style="list-style-type: none"> <li>In D and E zones, priority is given to remote controller air speed setup.</li> <li>In A zone “” is displayed.</li> </ul>															
8	Freeze prevention control (Low temp. release)	<p>1. In all cooling operation, the air conditioner operates as described below based upon temp. detected by TC1, TC2 and TCJ sensors.</p> <ul style="list-style-type: none"> <li>When “J” zone is detected for 5 minutes, the thermostat is forcedly off.</li> <li>In “K” zone, the timer count is interrupted, and held.</li> <li>When “I” zone is detected, the timer is cleared and the operation returns to the normal operation.</li> <li>If “J” zone continues, operation of the indoor fan in LOW mode continues until it reaches the “I” zone. It is reset when the following conditions are satisfied.</li> </ul> <p><b>Reset conditions</b></p> <ol style="list-style-type: none"> <li>TC1 ≥ 12°C and TCJ ≥ 12°C</li> <li>20 minutes passed after stop.</li> </ol> <table border="1" data-bbox="754 1346 1074 1458"> <thead> <tr> <th></th> <th>TC1</th> <th>TC2, TCJ</th> </tr> </thead> <tbody> <tr> <td>P1</td> <td>10°C (5°C)</td> <td>-10°C</td> </tr> <tr> <td>Q1</td> <td>0°C</td> <td>-14°C</td> </tr> </tbody> </table> <p>2. In all cooling operation, the air conditioner operates as described below based upon temp. detected by TCJ sensors.</p> <ul style="list-style-type: none"> <li>When “M” zone is detected for 45 minutes, the thermostat is forcedly off.</li> <li>In “N” zone, the timer count is interrupted and held.</li> <li>When shifting to “M” zone again, the timer count restarts and continues.</li> <li>If “L” zone is detected, the timer is cleared and the operation returns to normal operation.</li> </ul> <p><b>Reset conditions</b></p> <ol style="list-style-type: none"> <li>TC1 ≥ 12°C and TCJ ≥ 12°C</li> <li>20 minutes passed after stop.</li> </ol> <table border="1" data-bbox="807 1962 1074 2074"> <thead> <tr> <th></th> <th>TCJ</th> </tr> </thead> <tbody> <tr> <td>P2</td> <td>5°C</td> </tr> <tr> <td>Q2</td> <td>-2.0°C</td> </tr> </tbody> </table>		TC1	TC2, TCJ	P1	10°C (5°C)	-10°C	Q1	0°C	-14°C		TCJ	P2	5°C	Q2	-2.0°C	<p>TC1: Temperature of indoor heat exchanger sensor</p> <p><b>( ) value:</b>  When the power supply is turned on, the forced thermostat becomes OFF if the temperature is less than this indicated temperature.</p>
	TC1	TC2, TCJ																
P1	10°C (5°C)	-10°C																
Q1	0°C	-14°C																
	TCJ																	
P2	5°C																	
Q2	-2.0°C																	




No.	Item	Outline of specifications	Remarks
9	Refrigerant (Oil) recovery control in cooling operation	<p>The indoor unit which is under STOP/Thermostat-OFF status or which operates in [FAN] mode performs the following controls when it received the refrigerant oil recovery signal from the outdoor unit at the cooling operation.</p> <ol style="list-style-type: none"> <li>1) Opens PMV of the indoor unit with a constant opening degree.</li> <li>2) Operates the drain pump for approx. 1 minute during recovery control and after finish of control. Louvers may open depending on indoor unit types.</li> </ol>	<ul style="list-style-type: none"> <li>• Recovery operation normally takes place when it detect that the refrigerant is less.</li> <li>• A model with a drain pump : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (YH) (SH)</li> </ul>
10	Refrigerant (Oil) recovery control in heating operation	<p>The indoor unit which is under STOP/Thermostat-OFF status or which operates in [FAN] mode performs the following controls when it received the refrigerant (Oil) recovery signal from the outdoor unit at the heating operation.</p> <ol style="list-style-type: none"> <li>1) Opens PMV of the indoor unit with a constant opening degree.</li> <li>2) Detects temperature of TC2 and then closes PMV.</li> <li>3) Counts No. of recovery controls and operates the indoor fan and the drain pump for approx. 1 minute after finish of recovery control until the control count reaches the specified count. Louvers may open depending on indoor unit types.</li> </ol>	<ul style="list-style-type: none"> <li>• The indoor unit which is under thermostat-OFF (COOL) status or which operates in [FAN] mode stops the indoor fan and displays [READY ].</li> <li>• Recovery operation normally takes place when it detect that the refrigerant is less.</li> <li>• A model with a drain pump : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (YH) (SH)</li> </ul>
11	Compensation control for short intermittent operation	<ol style="list-style-type: none"> <li>1) For 3 minutes after start of operation, the operation is forcedly continued even if the unit enters in Thermostat-OFF condition.</li> <li>2) However the thermostat is OFF giving prior to COOL/HEAT selection, READY  for operation and protective control.</li> </ol>	Usually the priority is given to 5 minutes at outdoor controller side.
12	Drain pump control	<ol style="list-style-type: none"> <li>1) In cooling operation (including DRY operation), this control anytime operates the drain pump.</li> <li>2) During operation of the drain pump, if the float switch operates, the drain pump continuously operates and a check code is issued.</li> <li>3) During stop status of the drain pump, if the float switch operates, the thermostat is forcedly off and this control operates the drain pump. After continuous operation of the float switch for approx. 5 minutes, this control stops the operation and a check code is issued.</li> </ol>	<p>Check Code [P10]</p> <ul style="list-style-type: none"> <li>• A model with a drain pump : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (YH) (SH)</li> </ul>
13	Elimination of retained heat	<ol style="list-style-type: none"> <li>1) When the unit stopped from [HEAT] operation, the indoor fan operates with [L] for approx. 30 seconds.</li> </ol>	
14	HA control	<ol style="list-style-type: none"> <li>1) ON/OFF operation is available by input of HA signal from the remote site when connected to remote controller or the remote ON/OFF interface.</li> <li>2) HA control outputs ON/OFF status to HA terminal.</li> <li>3) The input-output specifications of HA conform to JEMA standard.</li> </ol>	<p>When using HA terminal (CN61) for the remote ON/OFF, a connector sold separately is necessary.</p> <p>In case of group operation, use the connector to connect HA terminal to either master or follower indoor unit.</p>

No.	Item	Outline of specifications	Remarks																																																
15	Display of filter sign [  ] (Not provided to the wireless type)	<p>1) The filter sign is displayed with LC by sending the filter-reset signal to the remote controller when the specified time (150H/2500H) elapsed as a result of integration of the operation time of the indoor fan.</p> <p>2) The integrated timer is cleared when the filter-reset signal is received from the remote controller. In this time, if the specified time elapsed, the counted time is reset and the liquid crystal display is deleted.</p> <table border="1"> <thead> <tr> <th>Filter service life</th> <th>2500H</th> <th>150H</th> </tr> </thead> <tbody> <tr> <td>Type</td> <td>4-way cassette type Compact 4-way cassette type 1-way cassette type (SH, YH) 2-way cassette type</td> <td>Floor standing type Floor standing concealed type Floor standing cabinet type</td> </tr> </tbody> </table>	Filter service life	2500H	150H	Type	4-way cassette type Compact 4-way cassette type 1-way cassette type (SH, YH) 2-way cassette type	Floor standing type Floor standing concealed type Floor standing cabinet type	[  FILTER] goes on. The filter sign is not displayed in RBC-ASCU11*.																																										
Filter service life	2500H	150H																																																	
Type	4-way cassette type Compact 4-way cassette type 1-way cassette type (SH, YH) 2-way cassette type	Floor standing type Floor standing concealed type Floor standing cabinet type																																																	
16	Display of [READY] [HEAT READY]	<p>&lt; <b>READY</b> &gt; Displayed on the remote controller</p> <p>1) When the following check codes are indicated</p> <ul style="list-style-type: none"> <li>• Open phase of power supply wiring [P05] was detected.</li> <li>• There is an indoor unit that detected the indoor overflow [P10].</li> <li>• There is an indoor unit that detected the interlock alarm [L30].</li> </ul> <p>2) During Force Thermostat-OFF</p> <ul style="list-style-type: none"> <li>• [COOL/DRY] operation is unavailable because the other indoor unit operates with [HEAT] mode.</li> <li>• [HEAT] operation is unavailable because COOL priority (SW11-bit1 of the Outdoor I/F P. C. board is ON) is set and the other indoor unit operates with [COOL/DRY] mode.</li> </ul> <p>3) The above indoor units that cannot operate stay in Thermostat-OFF status.</p> <p>4) The indoor fan stops because the system performs [Recovery operation for heating refrigerant (Oil)].</p> <p>&lt; <b>HEAT READY</b> &gt; Displayed on the remote controller The indoor fan stops in order to prevent discharge of cool air when heating operation started or during heating operation. (including the defrost operation during thermostat-OFF)</p>	<ul style="list-style-type: none"> <li>• &lt; <b>READY</b> &gt; display No display for wireless type remote controller</li> <li>• &lt; <b>HEAT READY</b> &gt; display</li> </ul>																																																
17	Selection of central control mode	<p>1) Selection of the contents that can be operated by the remote controller at the indoor unit side is possible according to setting at the central controller side.</p> <p>2) Setting contents</p> <table border="1"> <thead> <tr> <th rowspan="2">Operation from TCC-LINK central control</th> <th colspan="6">Operation on remote controller</th> </tr> <tr> <th>ON/OFF setting</th> <th>Operation selection</th> <th>Timer setting</th> <th>Temp. setting</th> <th>Air speed setting</th> <th>Air direction setting</th> </tr> </thead> <tbody> <tr> <td>Individual</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>[Central 1]</td> <td>×</td> <td>○</td> <td>×</td> <td>○</td> <td>○</td> <td>○</td> </tr> <tr> <td>[Central 2]</td> <td>×</td> <td>×</td> <td>×</td> <td>×</td> <td>○</td> <td>○</td> </tr> <tr> <td>[Central 3]</td> <td>○</td> <td>×</td> <td>○</td> <td>×</td> <td>○</td> <td>○</td> </tr> <tr> <td>[Central 4]</td> <td>○</td> <td>×</td> <td>○</td> <td>○</td> <td>○</td> <td>○</td> </tr> </tbody> </table> <p>(○: Operation possible ×: Operation impossible)</p>	Operation from TCC-LINK central control	Operation on remote controller						ON/OFF setting	Operation selection	Timer setting	Temp. setting	Air speed setting	Air direction setting	Individual	○	○	○	○	○	○	[Central 1]	×	○	×	○	○	○	[Central 2]	×	×	×	×	○	○	[Central 3]	○	×	○	×	○	○	[Central 4]	○	×	○	○	○	○	
Operation from TCC-LINK central control	Operation on remote controller																																																		
	ON/OFF setting	Operation selection	Timer setting	Temp. setting	Air speed setting	Air direction setting																																													
Individual	○	○	○	○	○	○																																													
[Central 1]	×	○	×	○	○	○																																													
[Central 2]	×	×	×	×	○	○																																													
[Central 3]	○	×	○	×	○	○																																													
[Central 4]	○	×	○	○	○	○																																													

No.	Item	Outline of specifications	Remarks
18	Louver control	<p>1) Louver position setup</p> <ul style="list-style-type: none"> <li>When the louver position is changed, the position moves necessarily to downward discharge position once to return to the set position.</li> <li>The louver position can be set up in the following operation range.</li> </ul> <p><b>In cooling/dry operation</b>                      <b>In heating/fan operation</b></p>   <ul style="list-style-type: none"> <li>In group twin/triple operation, the louver positions can be set up collectively or individually.</li> <li>In case that HEAT refrigerant recovery control was performed in STOP status, the louver position becomes horizontal when the operation is resumed.</li> </ul> <p>2) Swing setup 4-way cassette, Compact 4-way, 2-way cassette, 1-way cassette (SH), Floor standing :</p> <ul style="list-style-type: none"> <li>[SWING] is displayed and the following display is repeated.</li> </ul> <p><b>In all operations</b></p>  <ul style="list-style-type: none"> <li>In group operation, the louver positions can be set up collectively or individually.</li> </ul> <p>1-way cassette (YH) :</p> <ul style="list-style-type: none"> <li>[SWING] is displayed and the following display is repeated.</li> </ul> <p><b>In all operations</b></p>  <ul style="list-style-type: none"> <li>In group operation, the louver positions can be set up collectively or individually.</li> </ul> <p>3) When the unit stopped or the warning was output, the louver is automatically set to full closed position.</p> <p>4) When PRE-HEAT (Heating ready) is displayed (Heating operation started or defrost operation is performed), heating thermostat is off or self-cleaning is performed, the louver is automatically set to horizontal discharge position.</p> <p>* The louver which air direction is individually set or the locked louver closes fully when the unit stops and the louver is automatically set to horizontal discharge position when PRE-HEAT (Heating ready) is displayed, heating thermostat is off.</p>	Subject model : 4-way cassette Compact 4-way 2-way cassette 1-way cassette (SH)

No.	Item	Outline of specifications	Remarks
18	Louver control (Continued)	<p><b>&lt;&lt;Individual air direction setup&gt;&gt;</b></p> <ul style="list-style-type: none"> <li>Pushing  Louver select button enables every discharge port to set up the air direction. The louver numbers that are displayed on the display part correspond to those in the following figure.</li> <li>In case of no input (key operation) for approx. 5 seconds during setting of individual air direction (during displaying of louver No. on the remote controller screen), the remote controller screen returns to the normal display screen.</li> <li>For the air direction illustration during normal operation, the air direction of the least No. among the louvers which are block-set is displayed.</li> <li>While individual air direction is being set, the remote controller operation (Illustration of air direction) and operation of the real machine are linked.</li> <li>When selecting a case,  Louver select button is not pushed or louver No. is not displayed, the air directions of all the louvers are collectively set up.</li> </ul> <div style="text-align: center;">  <p><b>02 [F2]</b> 4-way cassette type</p>  <p><b>01 [F1]</b> Compact 4-way cassette type</p> </div>	<p>Subject model : 4-way cassette Compact 4-way</p> <p>Setup from the remote controller without  button is unavailable.</p>

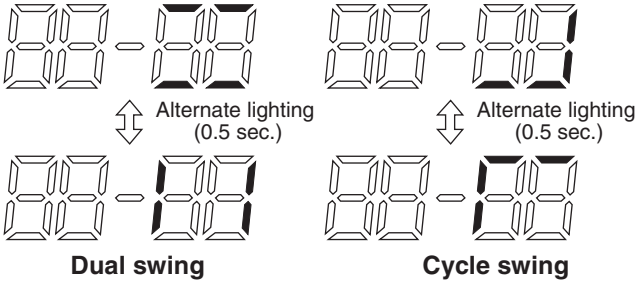No.	Item	Outline of specifications	Remarks												
18	Louver control (Continued)	<p><b>&lt;&lt;Selection of Swing mode&gt;&gt;</b></p> <ul style="list-style-type: none"> <li>For the Swing mode, the following three types of modes are selectable and settable by keeping Swing/Direction  button pushed for 4 seconds or more on the remote controller. (In the case of RBC-AMT*) Swing mode can be selected by Code No.(DN) setup [F0].</li> </ul> <ol style="list-style-type: none"> <li>Standard (4 pieces: same phase) swing → Data: [0001 (At shipment)] When Swing operation is selected, four louvers align at the horizontal discharge position and then start the Swing operation at the same time.</li> <li>Dual swing → Data: [0002] When operation is selected, the louvers of louver No. [1] and [03] move to the horizontal discharge position, the louvers of louver No. [02] and [04] move to the downward discharge position and then start the Swing operation at the same time.</li> <li>Cycle swing → Data: [0003] When operation is selected, the louver No. [01] moves to the horizontal discharge position, [03] to the downward discharge position, [02] and [04] to the middle position and then start the Swing operation at the same time. <ul style="list-style-type: none"> <li>In case of selecting the Swing mode, “Dual swing” or “Cycle swing”, the following numerals is displayed at the center of the remote controller screen for approx. 3 seconds when  button was pushed to select [SWING]. (No display for the standard swing) (In the case of RBC-AMT*)</li> </ul> </li> </ol> <div style="text-align: center;">  <p><b>Dual swing</b>                      <b>Cycle swing</b></p> </div> <p><b>&lt;&lt;Louver lock (Louver fix)&gt;&gt;</b></p> <ul style="list-style-type: none"> <li>For the air direction setup for each discharge port, the louver position can be locked during the normal operation.</li> <li>An arbitrary air direction of an arbitrary louver can be registered and set by keeping  button pushed for 4 seconds or more on the remote controller. (In the case of RBC-AMT*) Louver lock can be selected by Code No.(DN) setup [F1], [F2], [F3] or [F4]. (In the case of RBC-ASCU11*)</li> <li>The louver lock can be set by registering the setup data to Code No.(DN) [F1] to [F4] according to the following table.</li> </ul> <table border="1" data-bbox="443 1814 1114 1982"> <thead> <tr> <th>Code No.(DN)</th> <th>Objective louver No.</th> <th>Setup data</th> </tr> </thead> <tbody> <tr> <td>F1</td> <td>01</td> <td rowspan="4">0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position</td> </tr> <tr> <td>F2</td> <td>02</td> </tr> <tr> <td>F3</td> <td>03</td> </tr> <tr> <td>F4</td> <td>04</td> </tr> </tbody> </table>	Code No.(DN)	Objective louver No.	Setup data	F1	01	0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position	F2	02	F3	03	F4	04	<p>Subject model : 4-way cassette Compact 4-way</p> <p>Carry out setting operation during stop of the unit; otherwise the unit stops operation.</p> <p>Carry out setting operation during stop of the unit; otherwise the unit stops operation.</p>
Code No.(DN)	Objective louver No.	Setup data													
F1	01	0000: Release (At shipment) 0001: Horizontal discharge position ~ 0005: Downward discharge position													
F2	02														
F3	03														
F4	04														

No.	Item	Outline of specifications	Remarks																		
18	Louver control (Continued)	<ul style="list-style-type: none"> <li>If there is the locked louver in the unit, [  ] goes on the remote controller screen.</li> <li>While the following controls are performed, the louvers operate even if executing the louver lock.</li> </ul> <table border="1" data-bbox="459 360 1369 613"> <thead> <tr> <th></th> <th>Control which ignores lock</th> <th>Objective louver No.</th> </tr> </thead> <tbody> <tr> <td>①</td> <td>Operation stop</td> <td>Full-close position</td> </tr> <tr> <td>②</td> <td>When heating operation started</td> <td>Horizontal discharge position</td> </tr> <tr> <td>③</td> <td>Heating thermostat OFF</td> <td>Horizontal discharge position</td> </tr> <tr> <td>④</td> <td>During defrost operation</td> <td>Horizontal discharge position</td> </tr> <tr> <td>⑤</td> <td>Initialize operation</td> <td>Full-close position</td> </tr> </tbody> </table> <ul style="list-style-type: none"> <li>The real louver corresponding to the louver No. displayed on the remote controller screen during setting of louver lock operates swinging.</li> </ul>		Control which ignores lock	Objective louver No.	①	Operation stop	Full-close position	②	When heating operation started	Horizontal discharge position	③	Heating thermostat OFF	Horizontal discharge position	④	During defrost operation	Horizontal discharge position	⑤	Initialize operation	Full-close position	<p>For the setting operation, refer to [How to set louver lock] of Installation Manual.</p> <p>It is position check operation and it does not link with the real louver and air direction setup (Illustration on the remote controller screen).</p>
	Control which ignores lock	Objective louver No.																			
①	Operation stop	Full-close position																			
②	When heating operation started	Horizontal discharge position																			
③	Heating thermostat OFF	Horizontal discharge position																			
④	During defrost operation	Horizontal discharge position																			
⑤	Initialize operation	Full-close position																			
19	DC motor	<ol style="list-style-type: none"> <li>When the fan starts, positioning is performed for the starter and the rotor. (Vibrate slightly)</li> <li>DC motor operates according to the command from the indoor controller.</li> </ol> <p><b>(Note)</b> If the fan rotates by entry of outside air, etc while the air conditioner stopped, the indoor unit may operate as the fan motor stops.</p> <p><b>(Note)</b> If the fan lock was detected, the operation of the indoor unit stops and the check code is displayed.</p>	<p>Check code [P12] Subject model : Compact slim duct 4-way cassette Compact 4-way 2-way cassette 1-way cassette (SH) Floor standing</p>																		
20	Power saving mode	<p>(In the case of RBC-AMT*)</p> <ol style="list-style-type: none"> <li>Push the  button on the remote controller</li> <li>The “” segment lights up on the wired remote controller display.</li> <li>The requirement capacity ratio is limited to approximately 75 %.</li> <li>If the power saving operation is enabled, the settings are retained when the operation is stopped, when the mode is changed, or when the power is reset. The power saving operation will be enabled at the next time the operation starts.</li> </ol> <ul style="list-style-type: none"> <li>The operation may differ depending on the connected outdoor unit. Refer to the Service Manual of the outdoor unit.</li> </ul>																			



# 6. APPLIED CONTROL AND FUNCTIONS

## 6-1. Optional connector Specifications of Indoor P.C.Board

(MCC-1643)

Connector No.	Color	Function	4-way Smart Cassette	Compact 4-way Smart Cassette	2-way Cassette	1-way Cassette (SH)	Floor standing	Pin No.	Specifications	Remarks
CN32	White	Ventilation output	○	○	○	○	○	① ②	DC12V Output (Open collector)	Setting at shipment: Interlock of ON by indoor unit operation, with OFF by stop operation * The single operation setting by FAN button on the remote controller is performed on the remote controller (DN=31).
CN34	Red	Input for float SW	●	●	●	●	X (With short-circuit connector)	① ② ③	DC12V NC Float SW input	Normal when between ①-③ short-circuits, but abnormal when open-circuits. (check code "P10" appears)
CN61	Yellow	HA	○	○	○	○	○	① ② ③ ④ ⑤ ⑥	ON/OFF input 0V (COM) Remote controller prohibited input Operation output (Open collector) DC12V (COM) Warning output (Open collector)	HA ON/OFF input (J01: YES/NO=Pulse (At shipment from factory) /Static input selection) Permission/Prohibition of remote controller operation stop is performed by input. Operation ON (Answer back of HA) Warning output ON
CN71	White	CHK Operation check	○	○	○	○	○	① ②	Check mode input 0V	This check is used to check indoor operation. (Performs operation of indoor fan "H", Louver horizontal and Drain pump ON without communication with outdoor and remote controller)
CN72	White	DISP Exhibition mode	○	○	○	○	○	① ②	DISP mode input 0V	Communication is available by indoor unit and remote controller only (When the power is turned on). Shortening time of timer (Always)
CN81	Black	Output for PMV relay	△	△	△	△	△	① ② ③ ④ ⑤	DC12V EP valve output (Open collector) Balance valve output (Open collector) Suction valve output (Open collector) Discharge valve output (Open collector)	
CN309	Yellow	Output power supply for option	○	○	○	○	○	① ③	AC230V AC230V	This can be used as power supply for option devices.
CN501	White	(For service)	X	X	X	X	X	—		
CN521	Red	Connection for option P.C.board	△	△	△	△	△	① ② ③ ④ ⑤	DC12V DC5V Send Receive 0V	Connected Application control kit (TCB-PCUC2E)

● : Use in standard, ○ : Available, △ : Use by connecting parts sold separately, X : Unavailable

\* To use the functions operated by CN60, CN80, CN70 and CN73, which are provided for other P.C.board, use the Application control kit (TCB-PCUC2E) sold separately.

(MCC-1744)

Connector No.	Color	Function	Floor standing concealed	Floor standing cabinet	Pin No.	Specifications	Remarks
CN032	White	Ventilation output	○	○	① DC12V (COM) ② Output (Open collector)	Setting at shipment: Interlock of ON by indoor unit operation, with OFF by stop operation * The single operation setting by FAN button on the remote controller is performed on the remote controller (DN=31). Output is AC200V when louver is ON.	
CN033	White	Louver output	×	×	① AC230V ③ AC230V	Normal when between ①-③ short-circuits, but abnormal when open-circuits. (check code "P10" appears)	
CN034	Red	Input for float SW	×	×	① DC12V ② NC ③ Float SW input	Normal when between ①-③ short-circuits, but abnormal when open-circuits. (check code "P10" appears)	
CN060	White	Option output	○	○	① DC12V (COM) ② Defrost output (Open collector) ③ Thermostat-off output (Open collector) ④ Cooling output (Open collector) ⑤ Heating output (Open collector) ⑥ Fan output (Open collector)	ON when outdoor unit is on defrost operation. ON when actual thermostat is ON (Comp. ON). ON when the operation mode is on cooling system (Cool, Dry, Auto (Cooling)). ON when the operation mode is on heating system (Heat, Auto (Heating)). ON when the indoor fan is on, (When an air cleaner is used) OFF when the clean operation is on.	
CN061	Yellow	HA	○	○	① ON/OFF input ② 0V (COM) ③ Remote controller prohibited input ④ Operation output (Open collector) ⑤ DC12V (COM) ⑥ Warning output (Open collector)	HA ON/OFF input (J01: YES/NO=Pulse (At shipment from factory) /Static input selection) Permission/Prohibition of remote controller operation stop is performed by input. Operation ON (Answer back of HA) Warning output (Open collector)	
CN068	Blue	Drain pump output	×	×	① AC230V ③ AC230V	Output is AC200V in cooling and float SW operation.	
CN070	White	Filter	○	○	① Input ② 0V	Option abnormal input (Display of protective operation for equipment installed to the outside) * Perform the settings having option abnormal input from the remote controller. (DN [2A] = 0002 → 0001).	
CN071	White	CHK Operation check	○	○	① Check mode input ② 0V	Use for operation check of indoor unit. (Performs operation of indoor fan "H", Louver horizontal and Drain pump ON without communication with outdoor and remote controller)	
CN072	White	DISP Exhibition mode	○	○	① DISP mode input ② 0V	Communication is available by indoor unit and remote controller only (When the power is turned on). Shortening time of timer (Always)	
CN073	Red	EXCT demand	○	○	① Demand input ② 0V	Forced thermostat OFF operation for indoor unit	
CN080	Green	External abnormal input	○	○	① DC12V ② NC ③ External abnormal input	Make the check code of "L30" occur (by continuing operation for one min) and perform the forced stop.	
CN081	Black	Output for PMV relay	△	△	① DC12V ② EP valve output (Open collector) ③ Balance valve output (Open collector) ④ Suction valve output (Open collector) ⑤ Discharge valve output (Open collector)		
CN309	Yellow	Output power supply for option	○	○	① AC230V ③ AC230V	This can be used as power supply for option devices.	
CN501	White	(For service)	×	×	① AC230V		

● : Use in standard, ○ : Available, △ : Use by connecting parts sold separately, × : Unavailable

## 6-2. Test Operation of Indoor Unit

### ▼ Check function for operation of indoor unit (Functions at indoor unit side)

This function is provided to check the operation of the indoor unit individually without connecting to the remote controller or the outdoor unit. This function can be used regardless of operation or stop of the system. However, it is recommend to avoid using this function for along time, otherwise the trouble of the equipment may occurred.

#### [How to operate]

- 1) Short-circuit CHK pin (CN71 on the indoor P.C. board).  
The operation mode may differ according to the indoor unit status at that time.  
Normal time: Both float SW and fan motor are normal.  
Abnormal time: Either one of float SW or fan motor is abnormal.
- 2) During the normal time, the minimum opening degree (30pls) of the indoor PMV can be set only when both CHK pin (CN71) and DISP pin (CN72) on the indoor P.C.board are short-circuited. If the short-circuit at DISP pin (CN72) is opened, the indoor PMV will be at the maximum opening degree (1500pls) When open DISP pin, the maximum opening degree (1500 pls) can be obtained again.
  - For the detailed positions of CHK pin (CN71 on indoor P.C. board) and DISP pin (CN72 on indoor P.C. board), refer to the indoor P.C. board.

#### [How to clear]

Open CHK pin. If the system is on operation, it will temporarily stop then automatically restart after a while.

	Short-circuit of CHK pin		
	Normal time		Abnormal time
	DISP pin open	DISP pin short circuit	
Fan motor	(H)	(H)	Stop
Indoor PMV (*)	Max. opening degree (1500 pls)	Min. opening degree (30 pls)	Min. opening degree (30 pls)
Louver	Vertical	Vertical	Immediate stop
Communication	All ignored	All ignored	All ignored
P.C. board LED	Lights	Lights	Flashes

\* The actual indoor PMV opening degree may differ from the described values due to adjustment depending on PMV types.

- To exchange the indoor PMV coil, set the indoor PMV to Max. opening degree.

### 6-3. Method to Set Indoor Unit Function DN Code

(When performing this task, be sure to use a wired remote controller.)

#### ◆ Procedure


Be sure to stop the air conditioner before making settings


<RBC-AMT\*>

- 1** Push the  +  +  buttons simultaneously and hold for at least 4 seconds.

The unit No. displayed first is the address of the header indoor unit in group control.

Then the fan and louver of the selected indoor unit move.

- 2** Each time the “Select unit” side of the  button is pressed, one of the indoor unit Nos. under group control is displayed in turn. Then the fan and louver of the selected indoor unit move.


- 3** Use the  button to select the CODE No. (DN code) of the desired function.

- 4** Use the  button to select the desired SET DATA associated with the selected function.


- 5** Push the  button. (The display changes from flashing to steady.)

- To change the selected indoor unit, go back to step **2**.
- To change the selected function, go back to step **3**.


- 6** When the  button is pushed, the system returns to normal off state.

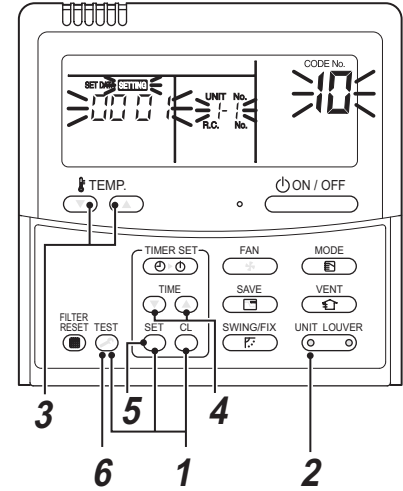


<RBC-ASCU11\*>

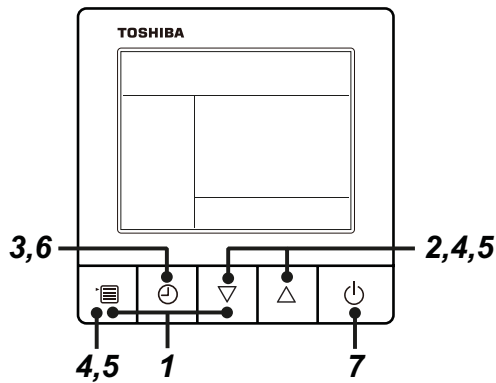

- 1 Push and hold menu button and [ ∇ ] setting button simultaneously for 10 seconds or more.**
  - After a while, the display flashes as shown in the figure. “ALL” is displayed as indoor unit numbers during initial communication immediately after the power has been turned on.

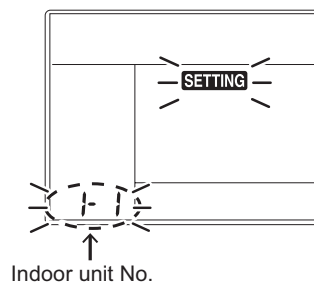

- 2 Each time [ ∇ ] [ △ ] setting button is pushed, indoor unit numbers in the group control change cyclically. Select the indoor unit to change settings for.**
  - The fan of the selected indoor unit runs . The indoor unit can be confirmed for which to change settings.
- 3 Push OFF timer button to confirm the selected indoor unit.**

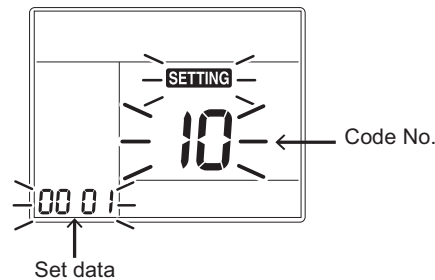

- 4 Push the menu button to make Code No. [ 04 ] flash. Change Code No. [ 04 ] with [ ∇ ] [ △ ] setting button.**
- 5 Push the menu button to make Set data [ 0001 ] flash. Change Set data [ 0001 ] with [ ∇ ] [ △ ] setting button.**
  - Priority set 0001 No priority set 0000
- 6 Push OFF timer button to complete the set up.**
  - To change other settings of the selected indoor unit, repeat from Procedure 4.
- 7 When all the settings have been completed, push ON/OFF button to finish the settings. (Return to the normal mode)**
  - “ SETTING ” flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while “ SETTING ” is flashing.)
  - To change settings of another indoor unit, repeat from Procedure 1.

## Indoor unit function Code No. (DN Code) table

(includes functions needed to perform applied control on site)

DN	Item	Description	At shipment
01	Filter display delay timer	0000: None 0002: 2500H 0004: 10000H 0001: 150H 0003: 5000H	Depending on model type
02	Dirty state of filter	0000: Standard 0001: High degree of dirt (Half of standard time)	0000: Standard
03	Central control address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed
04	Specific indoor unit priority	0000: No priority 0001: Priority	0000: No priority
06	Heating temp. shift	0000: 0 °C 0002: +2 °C to 0001: +1 °C 0010: +10 °C (Up to +6 recommended)	Depending on model type
0b	Demand control (CN73 / CN4)	0000: Demand input 0002: Card input setup.1 0003: Fire alarm input (Normal open) 0004: Card input setup.2 0005: Fire alarm input (Normal close) 0001: O2 sensor input	0000: Demand input
0d	Existence of [AUTO] mode	0000: Provided 0001: Not provided (Automatic selection from connected outdoor unit)	0001: Not provided
0F	Cooling only	0000: Heat pump 0001: Cooling only (No display of [AUTO] [HEAT])	0000: Heat pump
10	Type	Refer to <b>Type DN code "10" list</b>	Depending on model type
11	Indoor unit capacity	0000: Unfixed 0001 to 0034 Refer to Indoor Unit Capacity DN code "11" list	According to capacity type
12	Line address	0001: No.1 unit to 0064: No.30 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed
13	Indoor unit address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed
14	Group address	0000: Individual 0001: Header unit of group 0002: Follower unit of group 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)	00Un/0099: Unfixed
19	Louver type (Air direction adjustment)	0000: No louver 0004: (4-way Air Discharge Cassette type, etc.) 0001: Swing only	Depending on model type
1E	Temp difference of [AUTO] mode selection COOL → HEAT, HEAT → COOL	0000: 0 °C to 0010: 10 °C (Ts ± 5°C) Ts: Remote controller setup temp.	0003: 3 °C (Ts ± 1.5 °C)
28	Automatic restart of power failure	0000: None 0001: Restart	0000: None
2A	Selection of option/Trouble input (TCB-PCUC2E: CN3)	0000: Filter input 0002: None 0001: Alarm input (Air washer, etc.)	0002: None
2E	HA terminal (CN61) select	0000: Usual 0002: Fire alarm input (arbiter contact) 0003: Card input setup.2 0001: Card input setup.1	0000: Usual (HA terminal)
31	Ventilating fan control	0000: Unavailable 0001: Available	0000: Unavailable
32	TA sensor selection	0000: Indoor unit TA sensor 0001: Remote controller sensor	0000: Indoor unit TA sensor
33	Temperature unit select	0000: °C 0001: °F	0000: °C

DN	Item	Description		At shipment
<b>5d</b>	External static pressure High-ceiling adjustment (Air flow selection)	Refer to next page.		0000: Standard
<b>60</b>	Timer setting (wired remote controller)	0000: Available (can be performed)	0001: Unavailable (cannot be performed)	0000: Available
<b>77</b>	Dual set point	0000: Unavailable	0002: Available	0000: Unavailable
<b>79</b>	Alarm output setup of the header unit	0000: Not including the state of following unit	0001: Including the state of following unit	0000: Not including the state of following unit
<b>b3</b>	Soft cooling	0000: Unavailable	0001: Available	0001: Available
<b>b5</b>	Occupancy sensor/ Wireless A-B selection Provided / None	0000: None 0002: Wireless remote controller provided	0001: Occupancy sensor provided	0000: None
<b>b6</b>	Occupancy sensor Enable / Invalid (Absence time judgment time)	0000: Invalid 0002: 60min. 0005: 150min.	0001: 30min. 0004: 120min.	0002: Enable (60 min.)
<b>b7</b>	Occupancy sensor operation at absent time	0000: Stand by	0001: operation stop	0000: Stand by
<b>CF</b>	Indoor unit case type	0000: Standard Model	0001: larger case model	Depending on model type
<b>d0</b>	Whether the power saving mode can be set by the remote controller	0000: Invalid	0001: Valid	0001: Valid
<b>E6</b>	Wireless remote controller A-B selection	0000: A	0001: B	0000: A
<b>F0</b>	Swing mode	0001 : Standard 0003 : Cycle swing	0002 : Dual swing	0001: Standard
<b>F1</b>	Louver fixed position (Louver No.1)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
<b>F2</b>	Louver fixed position (Louver No.2)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
<b>F3</b>	Louver fixed position (Louver No.3)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
<b>F4</b>	Louver fixed position (Louver No.4)	0000 : Release 0005 : Downward discharge position	0001 : Horizontal discharge position	0000: Not fixed
<b>F6</b>	Presence of Application control kit (TCB-PCUC2E)	0000: None	0001: Exist	0000: None
<b>FC</b>	Communication protocol	0000: TCC-LINK	0003: TU2C-LINK	0000: TCC-LINK
<b>Fd</b>	Priority operation mode (FS unit)	0000: Heating	0001: Cooling	0000: Heating
<b>FE</b>	FS unit address	0001: No.1 unit to 0064: No.64 unit ... TCC-LINK 0001: No.1 unit to 0128: No.128 unit ... TU2C-LINK 00Un: Unfixed (When using U series remote controller) 0099: Unfixed (Other than U series remote controller)		00Un/0099: Unfixed
<b>103</b>	Remote controller	0000: Use	0001: Do not use	0000 : Use

DN	Item	Description	At shipment
180	Notice code number 01	Judged notice code is set.	0000: None
181	Notice code number 02		0000: None
182	Notice code number 03		0000: None
183	Notice code number 04		0000: None
184	Notice code number 05		0000: None
185	Notice code number 06		0000: None
186	Notice code number 07		0000: None
187	Notice code number 08		0000: None
188	Notice code number 09		0000: None
189	Notice code number 10		0000: None
1FC	Indoor Unit terminating resistance	0000: OFF                      0001: ON	0000 : OFF

\*1 Display order of "00Un" and "0099" varies depending on remote controller models or communication types.

For Central control address (DN [03]), Indoor unit address (DN [13]), FS unit address (DN [FE])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ...
	TCC-LINK	... ⇔ 0064 ⇔ 00Un ⇔ 0001 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0064 ⇔ 0099 ⇔ 0001 ⇔ ...

For Line address (DN [12])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0128 ⇔ 00Un ⇔ 0001 ⇔ ...
	TCC-LINK	... ⇔ 0030 ⇔ 00Un ⇔ 0001 ⇔ ...
Other than U series	TCC-LINK	... ⇔ 0030 ⇔ 0099 ⇔ 0001 ⇔ ...

For Group address (DN [14])

Remote controller	Communication type	Display order
U series	TU2C-LINK	... ⇔ 0002 ⇔ 00Un ⇔ 0000 ⇔ ...
	TCC-LINK	
Other than U series	TCC-LINK	... ⇔ 0002 ⇔ 0099 ⇔ 0000 ⇔ ...

\*2 Communication protocol can be automatically switched with the setup in the outdoor unit during installation.



## [5d] External static pressure & High-ceiling adjustment

### <Compact Slim Duct type>

Set data	External static pressure	
0000	10 Pa	Standard (Factory default)
0001	20 Pa	High static pressure 1
0003	30 Pa	High static pressure 2

### <4-way Cassette, 2-way Cassette, 1-way Cassette SH Type>

Set data	High-ceiling adjustment	
0000	Standard (Factory default)	
0001	High ceiling 1	
0003	High ceiling 3	

### <Compact 4-way Cassette>

Set data	High-ceiling adjustment	
0000	Standard (Factory default)	
0001	High ceiling 1 (UP015 only)	
0003	High ceiling 3 (UP015 only)	

### <Under Ceiling type>

Set data	High-ceiling adjustment	
0000	Standard (Factory default)	
0003	High ceiling 1	

### <Concealed Duct Type>

Set data	External static pressure	
0000	40 Pa	UP024 to 030 (Factory default)
0001	30 Pa	UP007 to 018 (Factory default)
0002	65 Pa	—
0003	50 Pa	UP036 to 056 (Factory default)
0004	80 Pa	—
0005	100 Pa	—
0006	120 Pa	—

### <Slim Duct type>

Set data	External static pressure	
0000	10 Pa	Standard (Factory default)
0001	20 Pa	High static pressure 1
0003	35 Pa	High static pressure 2
0006	50 Pa	High static pressure 3

### <Concealed Duct High Static Pressure Type (6 HP or less)>

Set data	External static pressure	
0000	100 Pa	Standard (Factory default)
0001	50 Pa	—
0002	75 Pa	—
0003	150 Pa	—
0004	125 Pa	—
0005	175 Pa	—
0006	200 Pa	—

### <Concealed Duct High Static Pressure Type (8, 10 HP)>

Set data	External static pressure	
0000	150 Pa	Standard (Factory default)
0001	50 Pa	—
0002	83 Pa	—
0003	217 Pa	—
0004	117 Pa	—
0005	183 Pa	—
0006	250 Pa	—

**Type**  
**DN code "10"**

Value	Type	Model
0000	1-way cassette	MMC-UP***HP*
0001	4-way cassette	MML-UP***H*
0002	2-way cassette	MML-UP***BH*
0003	1-way cassette	MMF-UP***H
0006	Concealed Duct / High Static Pressure	MMU-UP***H*
0007	Under Ceiling	MMU-UP***WH*
0008	High Wall	MMK-UP***HP*
0010	Floor standing cabinet	MMD-UP***HFP*
0011	Floor standing concealed	MML-UP***NHP*
0013	Floor standing type	MMU-UP***YH*
0014	Compact 4-way cassette	MMU-UP***SH*
0015	Slim duct	MMD-UP***SPHY*
0016	Fresh Air Intake indoor unit (Duct type)	MMD-UP***M*H*
0018	Bi-flow Console	MMU-UP***MH*
0060	Hot Water Module	MMW-UP***LQ*

**Indoor Unit Capacity**  
**DN code "11"**

Value	Capacity
0000*	Invalid
0044	003 type
0041	005 type
0001	007 type
0002	008 type
0003	009 type
0004	010 type
0005	012 type
0006	014 type
0007	015 type
0008	017 type
0009	018 type
0010	020 type
0011	024 type
0012	027 type
0013	030 type
0015	036 type
0017	048 type
0018	056 type
0021	072 type
0023	096 type
0024	112 type
0025	128 type

\* "0000" is default value stored in EEPROM mounted on service P.C. board

#### 6-4. Method to set Outdoor Unit Function Code No. (DN )

The settings can be changed by operating the switches on the interface board.

In the TU2C-Link communication system, it can also be done by operating the wired remote controller.

#### ◆ Applicable controls setup

(settings at the site)


Basic procedure

Be sure to stop the air conditioner before making settings.

(Change the setup while the air conditioner is networking.)

#### When switching settings from the interface P.C. board of the outdoor unit


1. Set the rotary switch of the interface P.C. board on the outdoor unit to SW01= [9], SW02= [1] and SW03= [1].
2. The 7-segment display shows “d n.S E t”.
3. When SW04 is pressed, the 7-segment display switches to “d n.0 0 1” and the outdoor unit code NO. [001] is displayed.
4. Change outdoor unit code NO. [\* \* \* ] with SW05 or SW06.  
Press SW05 to advance the code. Press and hold SW05 to advance in 5 steps.  
Press SW06 to return the code. Press and hold SW06 to return in 5 steps.
5. When SW04 is pressed, the 7-segment display blinks “d.\* \* \* \*” and the setting data [\* \* \* \*] being set is displayed.
6. Change setting data [\* \* \* \*] with SW05 or SW06.  
Press SW05 to advance the data. Press SW06 to return the setting data.
7. Push and hold SW04 for more than 2 seconds.  
When the flashing stops and remain lit on the display, the setting is complete.  
(To return to the item code setting after completing the setting, or to return to the item code setting without setting, press SW04 once.)
8. Set the rotary switch on the interface P.C. board of the outdoor unit back to SW01= [1], SW02= [1], SW03= [ 1].
9. Reset the power of the outdoor unit (power off for one minute or more) .

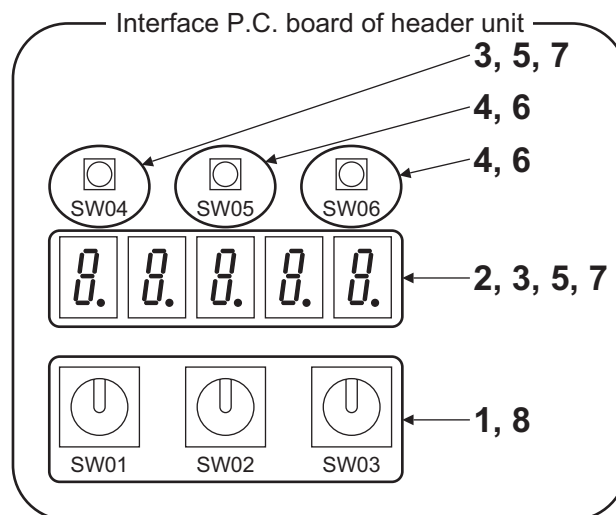

## When switching from the wired remote controller (RBC-ASCU11\*)


### Basic procedure

Be sure to stop the air conditioner before making settings.  
(Change the setup while the air conditioner is not working.)

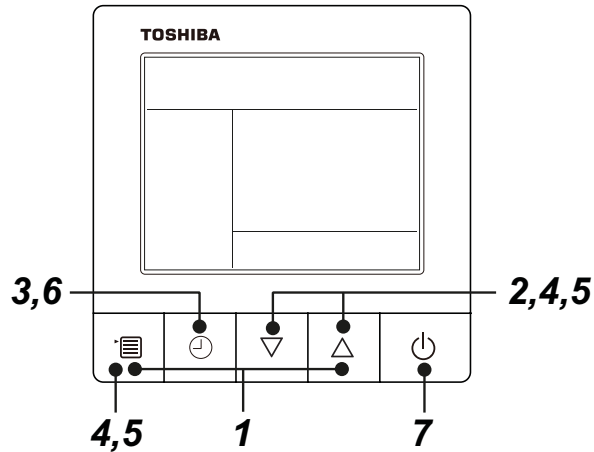

### 1 Push and hold menu button and [ $\Delta$ ] setting button simultaneously for 10 seconds or more.


- After a while, the display flashes as shown in the figure. "ALL" is displayed as outdoor unit numbers during initial communication immediately after the power has been turned on.

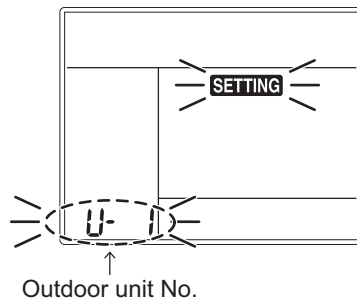

### 2 Each time [ $\nabla$ ] [ $\Delta$ ] setting button is pushed, outdoor unit numbers in the group control change cyclically. Select the outdoor unit to change settings for.

- The fan of the selected outdoor unit runs. The outdoor unit can be confirmed for which to change settings.

### 3 Push OFF timer button to confirm the selected outdoor unit.

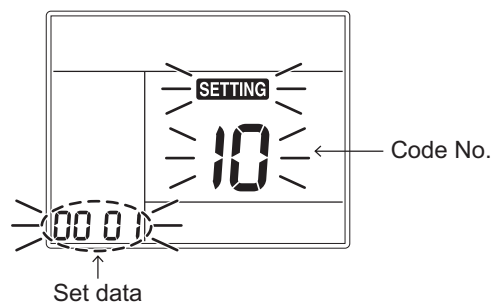

- 4** Push the menu button to make Code No. [\*\*] flash.  
Change Code No. [\*\*] with [▽] [△] setting button.
- 5** Push the menu button to make Set data [\*\*\*\*] flash.  
Change Set data [\*\*\*\*] with [▽] [△] setting button.
- 6** Push OFF timer button to complete the set up.
  - To change other settings of the selected outdoor unit, repeat from Procedure **4** .
- 7** When all the settings have been completed, push ON/OFF button to finish the settings.  
(Return to the normal mode).
  - “SETTING” flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while “SETTING” is flashing.)
  - To change settings of another outdoor unit, repeat from Procedure **1** .





## 6-5. Applied Control of Indoor Unit

### Control system using Remote location ON/OFF control box (TCB-IFCB-4E2)

#### Wiring and setting


- In the case of group control, the control system functions as long as it is connected to one of the indoor units (control P.C. board) in the group. If it is desired to access the operation and trouble statuses of other units, relevant signals must be brought to it from those units individually.

#### ▼ Control items

- |                               |   |
|-------------------------------|---|
| (1) Start / Stop input signal | Start / stop of unit  |
| (2) In-operation signal       | Output present while unit in normal operation   |
| (3) Check code Output         | present while alarm (e.g. serial communication trouble or operation of protective device for indoor / outdoor unit) being activated |

#### ▼ Wiring diagram of control system using Remote location ON/OFF control box (TCB-IFCB-4E2)

- Input IFCB-4E2: No-voltage ON / OFF serial signal
- Output No-voltage contact (in-operation and check code indication)  
Contact capacity: Max. AC 240 V, 0.5 A

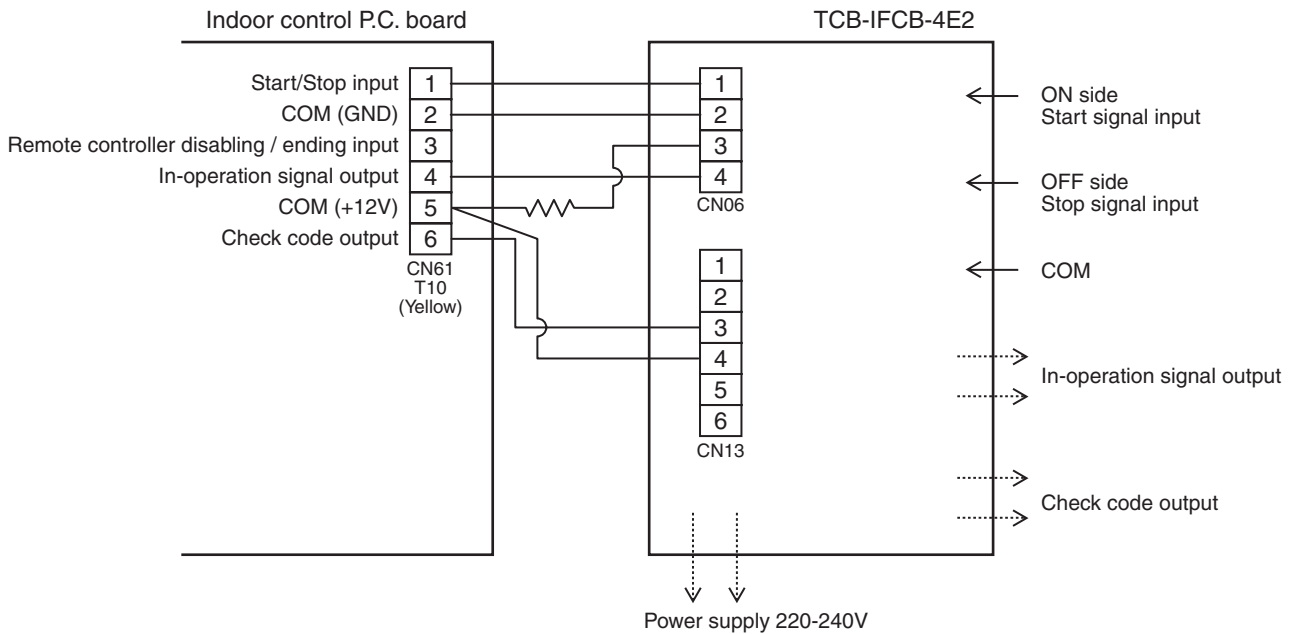



## ▼ Ventilating fan control from remote controller

### [Function]

- The start / stop operation can be operated from the wired remote controller when air to air heat exchanger or ventilating fan is installed in the system.
- The fan can be operated even if the indoor unit is not operating.
- Use a fan which can receive the no-voltage normally-open contact as an outside input signal.
- In a group control, the units are collectively operated and they cannot be individually operated.

### 1. Operation

Handle a wired remote controller in the following procedure.

- \* Use the wired remote controller during stop of the system.
- \* Be sure to set up the wired remote controller to the header unit. (Same in group control)
- \* In a group control, if the wired remote controller is set up to the header unit, both header and follower units are simultaneously operable.

#### <RBC-AMT32E>

- 1 Push concurrently  +  +  buttons for 4 seconds or more.**

The unit No. displayed firstly indicates the header indoor unit address in the group control. In this time, the fan of the selected indoor unit turns on.

- 2 Every pushing  button (left side of the button), the indoor unit numbers in group control are displayed successively.**

In this time, the fan of the selected indoor unit only turns on.

- 3 Using the setup temp  or  button, specify the CODE No. 31.**

- 4 Using the timer time  or  button, select the SET DATA. (At shipment: 0000)**

The setup data are as follows:

SET DATA	Handling of operation of air to air heat exchanger or ventilating fan
0000	Unavailable (At shipment)
0001	Available


- 5 Push  button. (OK if display goes on.)**

- To change the selected indoor unit, go to the procedure 2 ).
- To change the item to be set up, go to the procedure 3 ).

- 6 Pushing  returns the status to the usual stop status.**

- \* The ventilating fan control may be unavailable depending on the remote controllers. (RBC-ASCU11-E does not have this function.)

### 2. Wiring

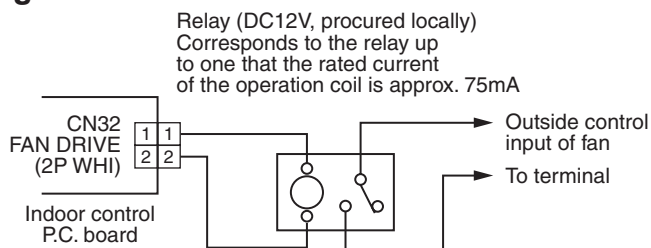

**Note)** Determine the cable length between the indoor control P.C. board and the relay within 2m.

## ▼ Auto-off feature control


### [Function]

- This function controls the indoor units individually. It is used when the start operation from outside is unnecessary but the stop operation is necessary.
- A card switch box or card lock helps protect customers from forgetting to turn off the indoor unit. (not including the following Card Input 2)
- It is connected with connector on the indoor control P.C. board, and switched with the Code No. and jumper wire setup for use.
- Available connectors are CN61 or CN73. For models without CN73, CN4 on the optional Application control kit (TCB-PCUC2E) can be used.
- \* Leaving-ON prevention control cannot be set with both CN61 and CN73 (CN4). If both of them are set, CN73 (CN4) setting automatically turns to a factory default.

### [Setup method]


#### (1) Wiring

##### Connecting to the CN61 connector

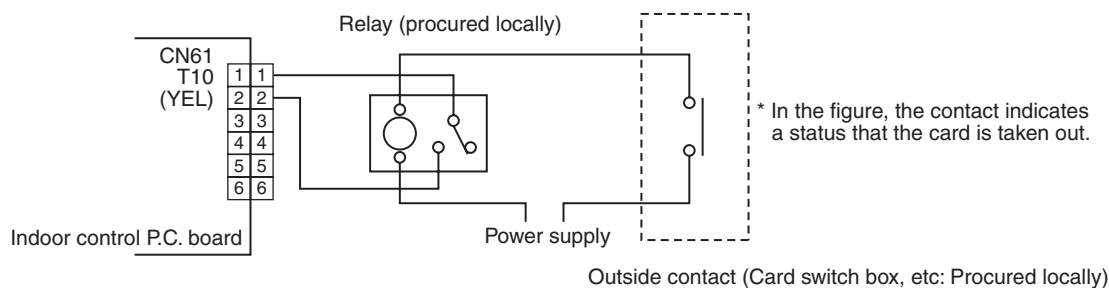

**NOTE)** Determine the cable length between the indoor control P.C. board and the relay within 3m.

##### Connecting to the Application control kit (TCB-PCUC2E, connector : CN4)

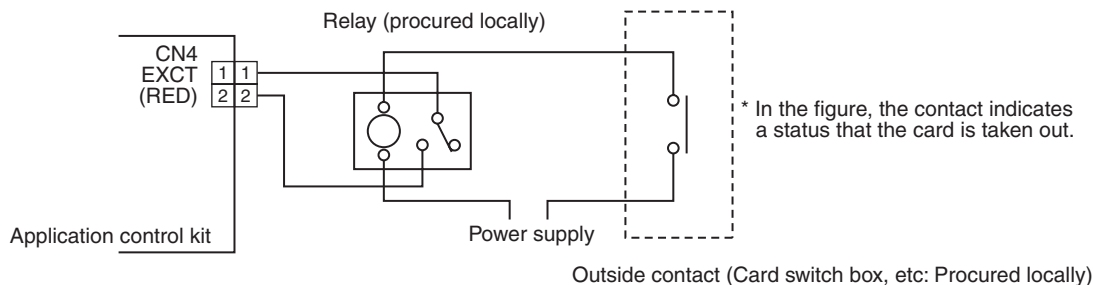

**NOTE)** Determine the cable length between the indoor control P.C. board and the relay within 3m.

#### (2) Code (DN) setup

Set Code (DN) according to "Indoor unit function Code No. (DN Code) table".

Connector	Jumper wire (J01)	Code No. (DN)	Set data	Function
CN61	Short-circuit (Factory default)	002E	0000 (Factory default)	"HA normal setup" (pulse)
			0001	"Card Input 1" setup
			0003	"Card Input 2" setup
	Open-circuit (cut)		0000 (Factory default)	"HA normal setup" (Static)
			0001	"Card Input 3" setup
			0003	"Card Input 4" setup
CN73 (CN4)	Short-circuit (Factory default) or Open-circuit (cut)	000b	0000 (Factory default)	"EXCT demand" setup (Forced thermostat-OFF)
		0002	"Card Input 3" setup	
		0004	"Card Input 4" setup	

\* If you set "Card Input 1 to 4" for Code No. of CN61 and CN73, Code No. 000b setup becomes unavailable and the functions of Card Input 3 or 4 in CN73 cannot be used.

## [Control items]

Code No. (DN)	Code No. (DN)	
	ON (Status that card is inserted)	OFF (Status that card is taken out)
Card Input 1	Manual prohibition release (Manual operation)	Manual prohibition (Operation stop)
Card Input 2	Manual prohibition release (Automatic operation)	Manual prohibition (Operation stop)
Card Input 3	Operation status continues (Do nothing)	Operation status continues and setting temperature changes (COOL/DRY: 29°C, HEAT: 18°C)
Card Input 4	Manual prohibition release (The status returns to operating condition before removing the card.)	Manual prohibition (Operation stop)

\* For the card switch box that does not involve contact operation described above, convert signals with a relay including a normally-closed contact.

## ■ Power peak-cut from indoor unit

When the relay is turned on, a forced thermostat OFF operation starts.

- For indoor P.C. boards other than MCC-1643, the “EXCT” is input with connector CN73 on the P.C. board. MCC-1643 requires Application control kit (TCB-PCUC2E) for input of a forced thermostat OFF “EXCT”. Please refer to the manual of Application control kit for a detailed setting.

## 6-6. Applied Control for Outdoor Unit

The outdoor fan high static pressure support and priority operation mode setting (cooling / heating / number of units / or priority indoor unit) functions are available by setting relevant switches provided on the interface P.C. board of the outdoor unit.

### 6-6-1. Outdoor Fan High Static Pressure Shift

#### Purpose/characteristics

Outdoor DN Code (O.DN) Setting Operation	Operation
O.DN [19] = 0000	Normal operation
O.DN [19] = 0001	Outdoor Fan High Static Pressure operation

#### Setup

Turn ON the DIP switch [SW10, Bit 2] provided on the interface P.C. board of the outdoor unit. This function must be enabled with every discharge duct connected outdoor unit for both of the header and follower units.

#### Specifications

Increase the speed of the propeller fan units on the outdoor fan to allow the installation of a duct with a maximum external static pressure not greater than specified in the table below. If a discharge duct with a resistance greater than 15 Pa (1.5 mmAq) is to be used, enable this function. The maximum external static pressures of single units are shown below (Table 1). In the case of combined use of multiple outdoor units, set all the units to the same maximum external static pressure as the one with the lowest maximum external static pressure.

**Table 1:** Maximum External Static Pressures of Single Outdoor Units

Model	MMY-MUP	0801*	1001*	1201*	1401*	1601*
Maximum external static pressure	(Pa)	80	80	80	80	80
(*) Outdoor unit air flow	(m <sup>3</sup> /min)	165	175	195	198	255
Model	MMY-MUP	1801*	2001*	2201*	2401*	
Maximum external static pressure	(Pa)	80	80	80	80	
(*) Outdoor unit air flow	(m <sup>3</sup> /min)	280	265	275	275	

(\*) Calculate duct resistance from outdoor unit air flow.

## 6-6-2. Priority Operation Mode Setting

### Purpose/characteristics

This function allows switching between priority cooling and priority heating.

Four patterns of priority operation mode setting are available as shown in the table below. Select a suitable priority mode according to the needs of the customer.

### Setup

#### CAUTION

---

In the case of the priority indoor unit mode, it is necessary to set up the specific indoor unit chosen for priority operation (a single unit only).

---

(1) Outdoor unit setup method (header unit)

Outdoor DN Code (O.DN) Setting	Operation
O.DN [18] = 0000	Priority heating (factory default)
O.DN [18] = 0001	Priority cooling
O.DN [18] = 0002	Priority operation based on No. of units in operation (priority given to the operation mode with the largest share of units in operation)
O.DN [18] = 0003	Priority indoor unit (priority given to the operation mode of the specific indoor unit set up for priority operation)



- (2) Indoor unit setup method for priority indoor unit mode  
 The setting can be changed only when the system is at rest. (Be sure to turn off the system prior to this operation.)

<RBC-AMT\*>

- 1** Push the **TEST** + **SET** + **CL** buttons simultaneously and hold for at least 4 seconds. The display window will start flashing in a little while.


Verify that the displayed CODE No. is 10.

- If the displayed CODE No. is not 10, press the **TEST** button to erase the display and repeat the procedure from the beginning.  
 (Note that the system does not respond to remote controller operation for about 1 minute after the **TEST** button is pushed.)  
 (In the case of group control, the indoor unit No. displayed first indicates the header unit.)

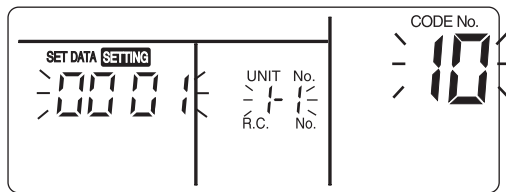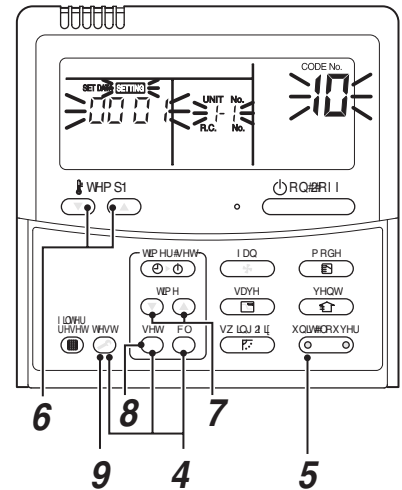

- 2** Each time the **UNIT LOUVER** button is pushed, one of the indoor unit Nos. under group control is displayed in turn. Select the indoor unit whose setting is to be changed.


The fan and flap of the selected indoor unit then come on, so that the position of this unit can be confirmed.

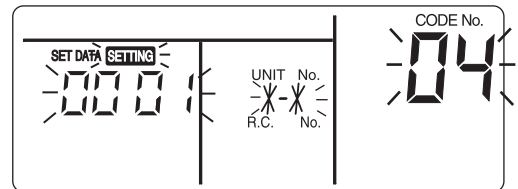

- 3** Use the **TEMP.** button to select the CODE No. 04.  
**4** Use the **TIME** button to select the SET DATA 0001.  
 Priority set 0001 No priority set 0000  
**5** Push the **SET** button.

The setup is finished when the display changes from flashing to steady.

- 6** Upon finishing the setup, push the **TEST** button. (This finalizes the setting.)  
 When the **TEST** button is pushed, the display goes blank, and the system returns to normal off state.  
 (Note that the system does not respond to remote controller operation for about 1 minute after the **TEST** button is pushed.)

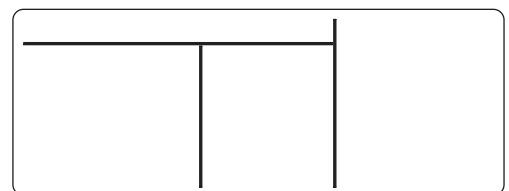


**NOTE**


Priority can be given to only one indoor unit. If more than one indoor unit is accidentally set to priority, an check code (L5 or L6: Duplicated indoor unit priority setting) will be displayed. All units displaying L5 have been set to 0001 (priority). Keep the unit to which priority should be given as it is, and change the value back to 0000 (no priority) for all the rest.

Check code	Description
L5	Duplicated indoor unit priority setting (The unit is set to 0001.)
L6	Duplicated indoor unit priority setting (The unit is set to 0000.)


<RBC-ASCU11\*>

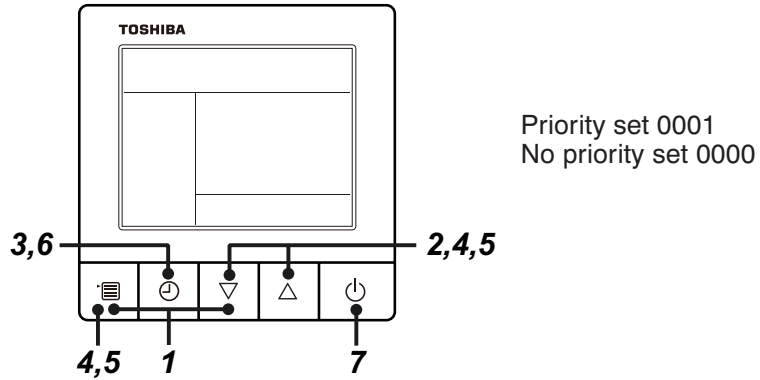

- 1 Push and hold menu button and [▽] setting button simultaneously for 10 seconds or more.**
  - After a while, the display flashes as shown in the figure. “ALL” is displayed as indoor unit numbers during initial communication immediately after the power has been turned on.

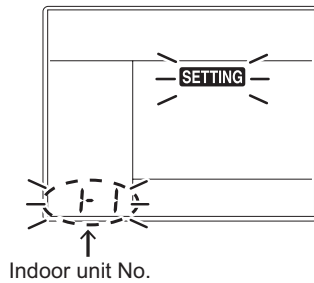

- 2 Each time [▽][△] setting button is pushed, indoor unit numbers in the group control change cyclically. Select the indoor unit to change settings for.**
  - The fan of the selected indoor unit runs. The indoor unit can be confirmed for which to change settings.
- 3 Push OFF timer button to confirm the selected indoor unit.**

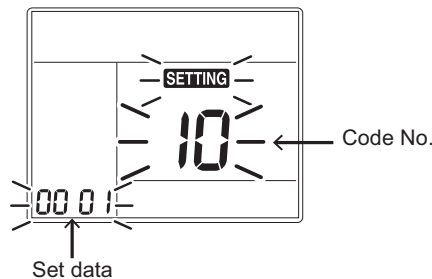

- 4 Push the menu button to make Code No. [04] flash. Change Code No. [04] with [▽][△] setting button.**
- 5 Push the menu button to make Set data [0001] flash. Change Set data [0001] with [▽][△] setting button.**

Priority set 0001      No priority set 0000

- 6 Push OFF timer button to complete the set up.**
  - To change other settings of the selected indoor unit, repeat from Procedure 4.
- 7 When all the settings have been completed, push ON/OFF button to finish the settings. (Return to the normal mode)**

“SETTING” flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while “SETTING” is flashing.)

  - To change settings of another indoor unit, repeat from Procedure 1.

### 6-6-3. Applied Control of Outdoor Unit

Optional control P.C. boards provide access to a range of functions as listed below.

No.	Function	Outdoor unit for control P.C. board Connection	Control P.C. board to be used			Outdoor unit interface P.C. board setting*			
			TCB-PCDM4E	TCB-PCMO4E	TCB-PCIN4E	Connector No.	DIP SW No.	Bit ON	Outdoor unit DN Code (O.DN)
1	Power peak-cut Control (Standard) *Limit a maximum capacity	Header unit	✓	—	—	CN513 (blue)	—	—	[009]=0 (Factory default)
	Power peak-cut Control (Standard) *Limit a maximum power	Header unit	✓	—	—	CN513 (blue)	—	—	[009]=1
	Power peak-cut Control (For one input function) *Limit a maximum capacity	Header unit	✓	—	—	CN513 (blue)	SW105	1	[009]=0 (Factory default)
	Power peak-cut Control (For one input function) *Limit a maximum power	Header unit	✓	—	—	CN513 (blue)	SW105	1	[009]=1
2	Power peak-cut Control (Enhanced Function) *Limit a maximum capacity	Header unit	✓	—	—	CN513 (blue)	SW105	2	[009]=0 (Factory default)
	Power peak-cut Control (Enhanced Function) *Limit a maximum power	Header unit	✓	—	—	CN513 (blue)	SW105	2	[009]=1
3	Snowfall Fan Control	Header unit	—	✓	—	CN509 (black)	—	—	—
4	External master ON/OFF Control	Header unit	—	✓	—	CN512 (blue)	—	—	—
5	Night operation (Sound reduction) Control	Header unit	—	✓	—	CN508 (red)	—	—	—
6	Operation Mode Selection Control	Header unit	—	✓	—	CN510 (white)	—	—	[008]=0 (Factory default)
	Operation Mode Selection Control (forced choice)	Header unit	—	✓	—	CN510 (white)	—	—	[008]=1
7	Trouble/Operation output	Header unit	—	—	✓	CN511 (green)	—	—	—
8	Compressor Operation Output	Individual outdoor unit	—	—	✓	CN514 (green)	—	—	[012]=0 (Factory default)
9	Operating Rate Output	Header unit	—	—	✓	CN514 (green)	—	—	[012]=1

To limit a maximum power, set the outdoor unit O.DN code to [009]=1, and set the criteria value of a maximum power consumption with O.DN code [00A], [00B], [00C] and [00D]. Input the values for both cooling and heating.

Outdoor unit DN Code (O.DN) [00C], [00D]

Criteria value setting for a maximum cooling power

(e.g.) When the maximum standard value of cooling power consumption is set as 19.35 kW = 19.35kW

Outdoor unit DN Code (O.DN)	[00C]	[00D]
Value	19	35

Outdoor unit DN Code (O.DN) [00A], [00B]


Criteria value setting for a maximum heating power

(e.g.) When the maximum standard value of heating power consumption is set as 14.00 kW = 14.00kW

Outdoor unit DN Code (O.DN)	[00A]	[00B]
Value	14	00


### Layout of Outdoor Unit Interface P.C. Board

\* For Applicable controls, switch the DIP SW on the P.C. board or set the outdoor unit O.DN.

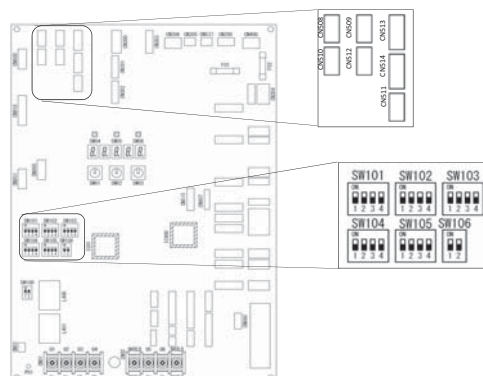



### 6-6-3-1. Power peak-cut Control (Standard)(1) Four-core cable support

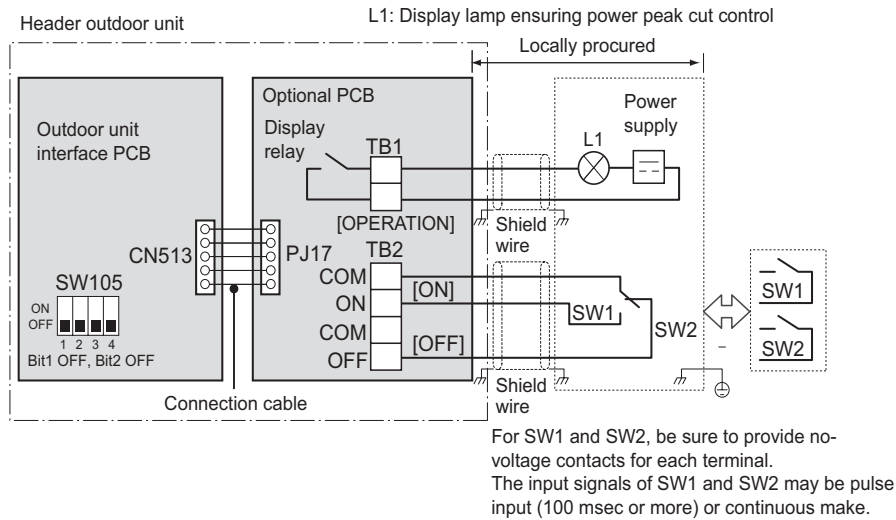

#### Operation

The demand request signal from the outside restricts the maximum capability (or maximum electric power) of an outdoor unit.

L1: Power peak-cut control indication lamp  
SW1: Power peak-cut control ON switch (ON as long as target power peak-cut control has been reached or exceeded, normally OFF)\*1

SW2: Power peak-cut control OFF switch (OFF as long as target power peak-cut control has not been reached or exceeded, normally ON)\*1

\*1 The inputs of SW1 and SW2 can be either pulse (100 msec or longer) or step signals.

Do not turn on SW1 and SW2 simultaneously.

\* Be sure to provide a contact for each terminal.

#### Power peak-cut control settings

[2-stage switching] < SW105 bit1 OFF, bit2 OFF >

Demand: power peak-cut control

Control item	Optional P.C.board		Outdoor unit interface P.C.board				
	Input		Display relay	SW105		Outdoor unit DN Code [00E]	
	SW1	SW2	(L1)	Bit1	Bit2	Factory default [00E] = 15	[00E] = 0 to 10
Input demand OFF signal to release the demand	OFF	ON	OFF	OFF	OFF	100% (normal operation)	100% (normal operation)
Input demand ON signal to control the demand	ON	OFF	ON	OFF	OFF	0% (forced stop)	Approx. X (50% to 100%) (upper limit regulated)

\* The upper limit X% can be regulated with the outdoor DN Code (O.DN) [00E].

Outdoor unit DN Code (O.DN) [00E]	X
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15 (factory default)	0% (forced stop)

#### Note 1: Specifications of display relay contact

- The terminal for display output ([Operation] terminal) must satisfy the following electrical rating.

<Electrical Rating>  
220 to 240 VAC, 10 mA or more, 1 A or less  
24 VAC, 10 mA or more, 1 A or less (non-conductive load)


When connecting a conductive load (e.g. relay coil) to the display relay load, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

#### Note 2: COM contact specifications

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 Ω.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

## (2) Two-core cable support

Setting SW105 bit1 on I/F P.C.board of the header outdoor unit to ON allows ON/OFF power peak-cut control to be switched using [ON] terminal input (SW1) alone.

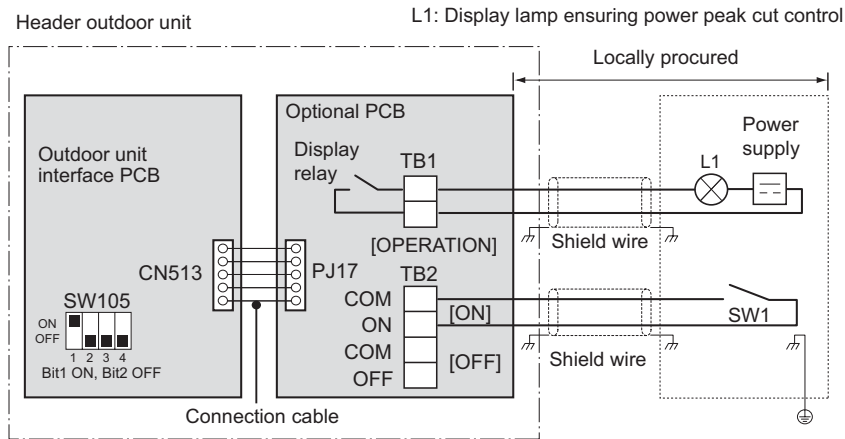

[2-stage switching] < SW105 bit1 ON, bit2 OFF >

Power peak-cut control turns ON when SW 1 in the wiring example is ON (continuous make).

Demand: power peak-cut control

Control item	Optional P.C.board		Outdoor unit interface P.C.board			
	Input	Display relay	SW105		Outdoor unit DN Code [00E]	
	SW1	(L1)	Bit1	Bit2	Factory default [00E] = 15	[00E] = 0 to 10
Input demand OFF signal to release the demand	OFF	OFF	ON	OFF	100% (normal operation)	100% (normal operation)
Input demand ON signal to control the demand	ON	ON	ON	OFF	0% (forced stop)	Approx. X (50% to 100%) (upper limit regulated)

\* The upper limit X% can be regulated with the outdoor DN Code (O.DN) [00E].

Outdoor unit DN Code (O.DN) [00E]	X
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15 (factory default)	0% (forced stop)

### Note 1: Specifications of display relay contact

- The terminal for display output ([Operation] terminal) must satisfy the following electrical rating.


<Electrical Rating>  
 220 to 240 VAC, 10 mA or more, 1 A or less  
 24 VAC, 10 mA or more, 1 A or less (non-conductive load)

When connecting a conductive load (e.g. relay coil) to the display relay load, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

### Note 2: COM contact specifications

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 Ω.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

The optional P.C. board should be connected to the header outdoor unit (U1).

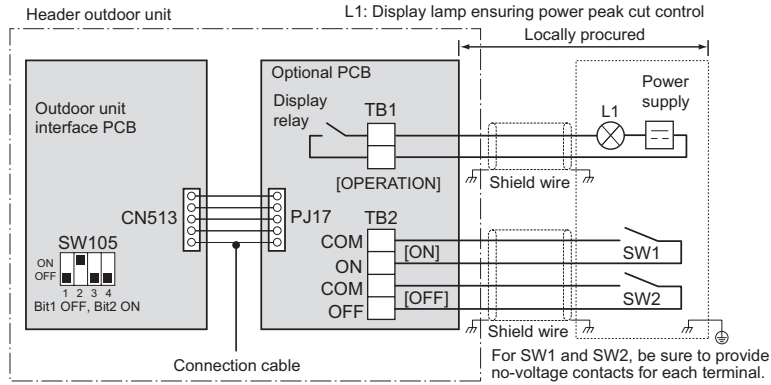

### 6-6-3-2. Power peak-cut Control (Extended)

#### Operation

The demand request signal from the outside restricts the maximum capability (or maximum electric power) of an outdoor unit.

L1: Power peak-cut control indication lamp

SW1: Power peak-cut control ON switch\*1

SW2: Power peak-cut control OFF switch\*1

\*1 The inputs of SW1 and SW2 can be either pulse (100 msec or longer) or step signals.

\* Be sure to provide a contact for each terminal.

#### Extended power peak-cut control settings

[4-stage switching] <SW105 Bit1 ON, Bit2 ON>

Demand: power peak-cut control

Control item	Optional P.C.board			Outdoor unit interface P.C.board			
	Input		Display relay	SW105		Outdoor DN Code [***]	
	SW1	SW2	(L1)	Bit1	Bit2	Factory default [00E] = 15, [00F] = 8, [010] = 4	[00E] = X, [00F] = Y, [010] = Z
Input demand OFF signal to release the demand	OFF	OFF	OFF	OFF	ON	100% (normal operation)	100% (normal operation)
Input demand ON signal to control the demand	ON	OFF	ON			Approx. 80% (upper limit regulated)	Approx. Z% (50% to 100%) (upper limit regulated)
Input demand ON signal to control the demand	OFF	ON	ON			Approx. 60% (upper limit regulated)	Approx. Y% (50% to 100%) (upper limit regulated)
Input demand ON signal to control the demand	ON	ON	ON			0% (forced stop)	Approx. X% (50% to 100%) (upper limit regulated)

\*The upper limit X%, Y%, Z% can be regulated with the outdoor DN Code (O.DN) [00E] [00F] [010].

Outdoor unit DN Code (O.DN) [00E]	X
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15 (factory default)	0% (forced stop)

Outdoor unit DN Code (O.DN) [00F]	Y
0	100%
1	95%
2	90%
3	85%
4	80%
5	75%
6	70%
7	65%
8 (factory default)	60%
9	55%
10	50%
15	0% (forced stop)

Outdoor unit DN Code (O.DN) [010]	Z
0	100%
1	95%
2	90%
3	85%
4 (factory default)	80%
5	75%
6	70%
7	65%
8	60%
9	55%
10	50%
15	0% (forced stop)

**Note 1:** Specifications of display relay contact

- The terminal for display output ([Operation] terminal) must satisfy the following electrical rating.

<Electrical Rating> 220 to 240 VAC, 10 mA or more, 1 A or less 24 VAC, 10 mA or more, 1 A or less (non-conductive load)
---

When connecting a conductive load (e.g. relay coil) to the display relay load, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit. The optional P.C. board should be connected to the header outdoor unit (U1).

**Note 2:** COM contact specifications

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 Ω.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

**[Power peak-cut control through electric power]**

For the Power peak-cut control, the Power peak-cut control through electric power can be set by Outdoor unit DN code (O.DN) [009].

The Power peak-cut control through electric power regulates outdoor unit output so that power consumption does not exceed the upper limit value set.

(1) To change into the power peak-cut control through power, set the outdoor unit DN code to [009] = 1.

\* To return to the power peak-cut control through capacity, set the outdoor unit DN code to [009] = 0.

(2) Check that the criteria value of a maximum power in cooling or heating is set to [00A] to [00D].

For the connected outdoor units system, set the criteria value of a maximum power consumption (the total of each outdoor unit power) to the header outdoor unit.

Outdoor unit DN Code (O.DN) [00C], [00D]

Criteria value setting for a maximum cooling power

(e.g.) When the maximum standard value of cooling power consumption is set as 19.35 kW = 19.35kW

Outdoor unit DN Code (O.DN)	[00C]	[00D]
Value	19	35

Outdoor unit DN Code (O.DN) [00A], [00B]

Criteria value setting for a maximum heating power

(e.g.) When the maximum standard value of heating power consumption is set as 14.00 kW = 14.00kW

Outdoor unit DN Code (O.DN)	[00A]	[00B]
Value	14	00

(3) If ON signal is input from the optional P.C. board, the power peak-cut control through electric power operates.

Input method of ON signal for power peak-cut control is the same as that for normal peak-cut control.

Refer to “Standard”, “For one input function”, or “Enhanced Function”.

The power peak-cut control regulates the outdoor unit capacity so that it does not exceed the upper limit value (X%, Y%, Z% of the criteria value for a maximum power set in (2)) set by [00E] [00F] [010] of (O.DN).

e.g.) If the criteria value of maximum heating power during 80% demand control is set to 14.00kW, the upper limit control becomes 11.2kW (14.00kW×80%=11.20kW), the outdoor unit output is controlled so that the power consumption does not exceed 11.20kW.

NOTE 1: To protect a refrigerant cycle, the power peak-cut may not be operated during the defrost operation, oil recovery operation, or refrigerant recovery operation.

NOTE 2: For demand OFF, the outdoor unit may operate beyond the setting criteria value of a maximum power consumption because the power limit control does not function.


NOTE 3: Power consumption is estimated, causing approx. ±5 % difference from the actual power consumption.

To perform accurate power peak-cut control, use a demand controller and electric power meter.

NOTE 4: The power consumption of the indoor units is not included.

NOTE 5: When power consumption does not decrease or expected effects are not obtained, change the upper limit value of X%, Y%, Z% or the criteria value for a maximum power.



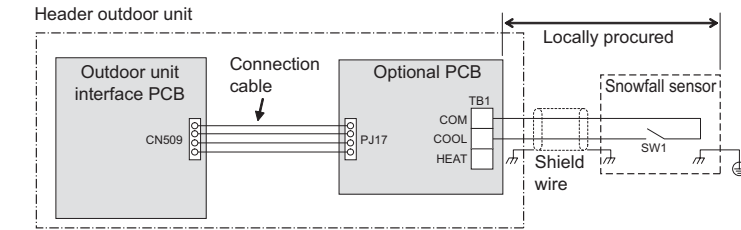

### 6-6-3-3. Snowfall Fan Control



SW1: Snowfall detection switch (snowfall sensor)

#### Operation

An external snowfall signal turns on the outdoor unit fan.

Terminal	Input signal	Operation
COOL (SW1)	ON 	All indoor units operate together
	OFF 	
	ON 	All indoor units operate together
	OFF 	

The input signal is recognized during its rising/falling phase.


(After reaching the top/bottom of the rising/falling edge, the signal must remain there for at least 100 ms.)

The optional P.C. board should be connected to the header outdoor unit (U1).

COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact. DC12 V has a current-limiting resistor of 3.3 Ω.

For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.



### 6-6-3-4. External master ON/OFF Control

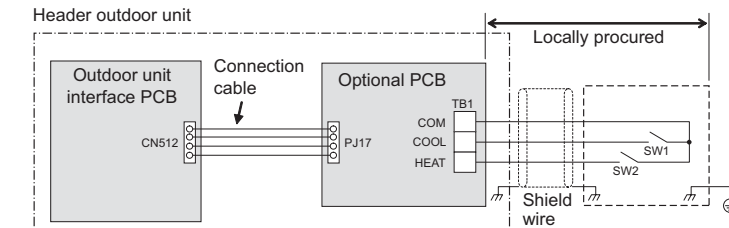

SW1: Operation input switch  
SW2: Stop input switch

#### Operation

The system is started/stopped from the outdoor unit.

Terminal	Input signal	Operation
COOL (SW1)	ON 	Turns on all indoor units
	OFF	
HEAT (SW2)	ON 	Turns off all indoor units
	OFF	


- Input signal is detected in the rising edge between OFF and ON of SW1/SW2 and the control is accepted in 100 msec from the edge.
- When COOL terminals (SW1 and SW2) are simultaneously turned ON, the control turned ON first is valid, and the control turned ON later is invalid.

### CAUTION

- (1) Do not turn on the COOL (SW1) and HEAT (SW2) terminals simultaneously.
- (2) COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact. DC12 V has a current-limiting resistor of 3.3 Ω. For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

The optional P.C. board should be connected to the header outdoor unit (U1).

### 6-6-3-5. Night operation (sound reduction) Control

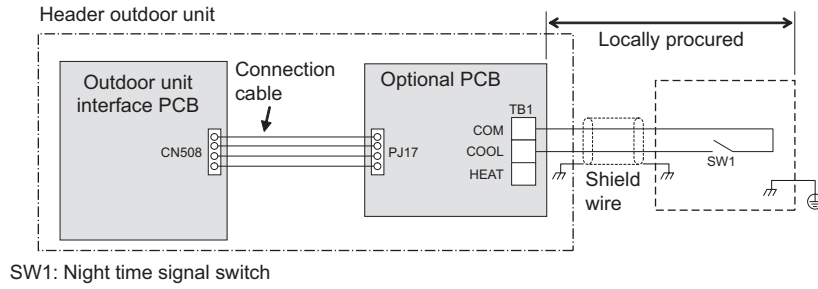

#### Operation

This function decreases noise at night or other times as necessary.

Terminal	Input signal	Operation
COOL (SW1)	ON	Night time control
	OFF	
	ON	Normal operation
	OFF	

The input signal is recognized during its rising/falling phase.  
 (After reaching the top/bottom of the rising/falling edge, the signal must remain there for at least 100 ms.)  
 The optional P.C. board should be connected to the header outdoor unit (U1).


The system's capacity is reduced during low-noise operation.  
 The table below provides a rough guide to this capacity reduction.

Model MMY-	Night operation sound reduction dB(A) *	Capacity	
		COOL	HEAT
MUP0801*	50	Approx. 85%	Approx. 80%
MUP1001*	50	Approx. 70%	Approx. 65%
MUP1201*	50	Approx. 60%	Approx. 55%
MUP1401*	53	Approx. 70%	Approx. 65%
MUP1601*	53	Approx. 70%	Approx. 70%
MUP1801*	54	Approx. 65%	Approx. 65%
MUP2001*	54	Approx. 60%	Approx. 60%
MUP2201*	54	Approx. 55%	Approx. 55%
MUP2401*	54	Approx. 55%	Approx. 55%

Relative to maximum capacity

- \* Position of noise measuring device: 1 m from the front face of the set and 1.5 m above ground (anechoic sound)
- COM terminals have DC12 V output with a basic insulation.  
 Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 Ω.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

### 6-6-3-6. Operation Mode Selection Control

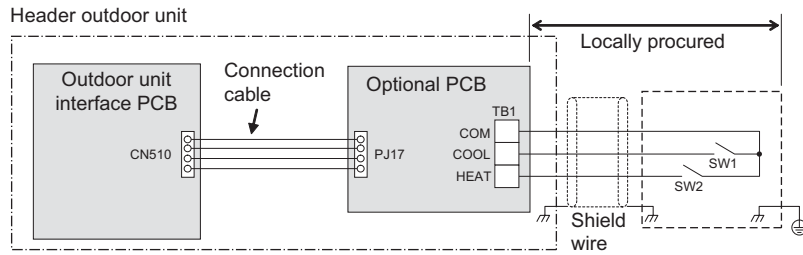

SW1: Cooling mode specified input switch  
SW2: Heating mode specified input switch

#### NOTE

SW1: COOL mode selection switch  
SW2: HEAT mode selection switch

Input signal		Operation
COOL (SW1)	HEAT (SW2)	
OFF	OFF	Normal operation
ON	OFF	Only cooling operation allowed
OFF	ON	Only heating operation allowed

### Indoor unit operation intervention function


The statuses of indoor units operating in a mode other than the selected operation mode can be switched by setting the outdoor DN Code of the header outdoor unit.

The optional P.C. board should be connected to the header outdoor unit (U1).

Outdoor DN Code (O.DN)	Details of Processing				
O.DN [008] = 0 (factory default)	Unallowed indoor units in a mode other than the P.C.board selection modes are not treated as priority (thermostat OFF state).				
	P.C. board selection mode	Input Signal		Remote control	Operation State
		COOL (SW1)	HEAT (SW2)		
	Normal	OFF	OFF	* or Δ	Follow the remote controller.
	Cooling operation only allowed	ON	OFF	* or Δ	
				* or Δ	
Heating operation only allowed	OFF	ON	* or Δ	Thermostat OFF (Air blow operation at blow rate set on remote control)	
O.DN [008]= 1	Input Signal		Remote control		
	P.C. board selection mode	COOL (SW1)	HEAT (SW2)		
	Normal	OFF	OFF	* , Δ , * or * can be selected.	
COOL	ON	OFF	• Only * , Δ or * can be selected. • Indoor units in Heat mode are forcibly switched to the Cool mode.	When using the remote control, (mode select control) indicator is displayed.	
HEAT	OFF	ON	• Only * or * can be selected. • Indoor units in Cool or Dry mode are forcibly switched to the Heat mode.		

- COM terminals have DC12 V output with a basic insulation. Use a switch, such as a relay or photocoupler, insulated from a controller (locally procured) for CO (Change-Over) contact or NO (normally-open) contact.
- DC12 V has a current-limiting resistor of 3.3 Ω.
- For non-voltage contacts, use a relay with minimum applicable load of DC12V,3mA or less.

### 6-6-3-7. Trouble/Operation Output

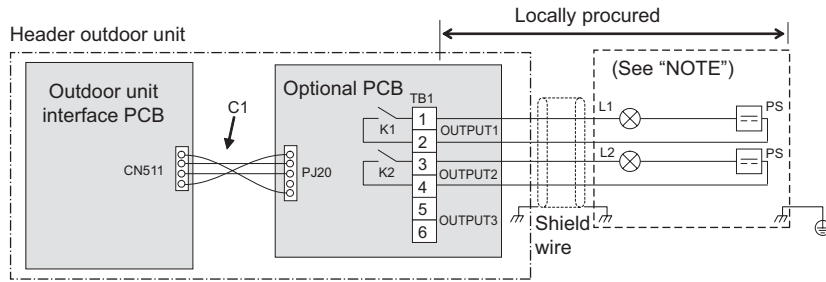

#### Operation

In-operation output: An in-operation indication signal is output as long as at least one indoor unit is in operation in the line.

Trouble output: Trouble indication signal is output if trouble occurs in at least one indoor/outdoor unit in the line.

#### Note 1: Output Relay (K1, K2) Contact Specifications

- Output terminals (OUTPUT1, 2) must satisfy the following electrical rating.
- When connecting a conductive load (e.g. relay coil) to loads K1 and K2, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.


<Electrical Rating>  
 220-240 VAC, 10 mA or more, 1A or less  
 24 VAC, 10 mA or more, 1 A or less (non-conductive load)

C1	Attached connection cable 1 (4wires)
CN511	Connector on interface side (green)
K1, K2	Relays
L1	Trouble indication Lamp
L2	Operation indication Lamp
OUTPUT1	Trouble output
OUTPUT2	Operation output
PJ20	Connector on optional P.C.board side
PS	Power supply unit
TB1	Terminal block

The optional P.C. board should be connected to the header outdoor unit (U1).



### 6-6-3-8. Compressor Operation Output

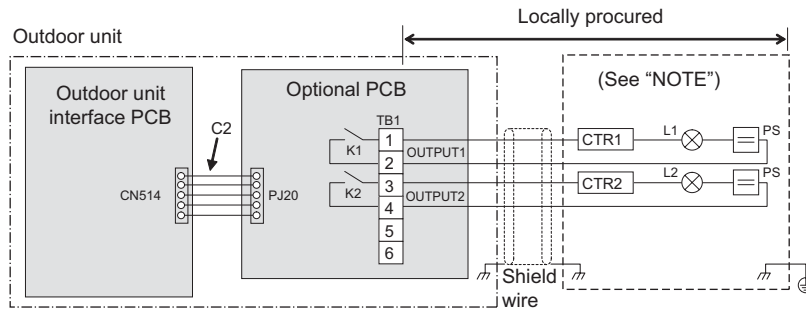


#### Operation

When a compressor is in operation, a relay connected to the output terminal assigned to it is turned on (closed). When it is at rest, the relay is turned off (open). The output terminals are named OUTPUT1 and OUTPUT2 from left to right when facing the front of the outdoor unit, as shown in the diagram.

#### Note 1: Output Relay (K1, K2) Contact Specifications


- Output terminals (OUTPUT1, 2) must satisfy the following electrical rating.
- When connecting a conductive load (e.g. relay coil) to loads K1 and K2 insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

<Electrical Rating>  
 220-240 VAC, 10 mA or more, 1A or less  
 24 VAC, 10 mA or more, 1 A or less (non-conductive load)

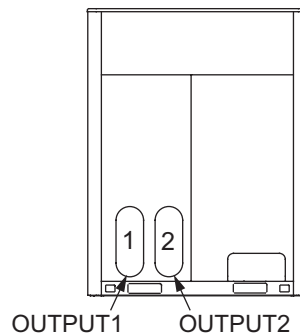

C2	Connector cable 2 (②)
CN514	Connector on interface side (green)
CTR1	Elapsed operation counter 1
CTR2	Elapsed operation counter 2
K1, K2	Relays
L1, L2	Operation indication LEDs
OUTPUT1	Compressor 1 operation output terminal
OUTPUT2	Compressor 2 operation output terminal
PJ20	Connector on optional P.C.board side
PS	Power supply unit
TB1	Terminal block

### 6-6-3-9. Operating Rate Output

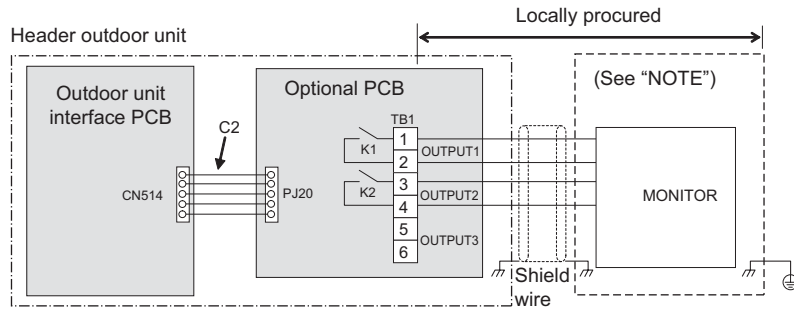

#### Operation

At the output terminals, a signal is present (relay closed) or absent (relay open) in various combinations according to the system operation factor, as shown in the diagram.

The operation rate (FA) is the percentage ratio of the current output of the system to the maximum output (100%).

Function	Outdoor DN Code [O.DN]	OUTPUT1	OUTPUT2	Operation rate (FA)
System operation rate output	O.DN [012] = 1	off	off	FA=0%
		on	off	0% < FA < 20%
		off	on	20% ≤ FA < 35%
		on	on	35% ≤ FA < 50%
		off	off	50% ≤ FA < 65%
		on	off	65% ≤ FA < 80%
		off	on	80% ≤ FA < 95%
		on	on	95% ≤ FA

off = Relay open  
on = Relay closed

C2	Connector cable 2 (2)
CN514	Connector on interface side (green)
K1, K2	Relays
MONITOR	Monitoring device
OUTPUT1	Output terminal for each function
OUTPUT2	Output terminal for each function
PJ20	Connector on optional P.C.board side
TB1	Terminal block

\* Connect the optional P.C. board to the header outdoor unit.

#### Note 1: Output Relay (K1, K2) Contact Specifications

- Output terminals (OUTPUT1, 2) must satisfy the following electrical rating.
- When connecting a conductive load (e.g. relay coil) to loads K1 and K2, insert a surge killer CR (for an AC power supply) or a diode for preventing back electromotive force (for a DC power supply) on the bypass circuit.

<Electrical Rating>  
220-240 VAC, 10 mA or more, 1A or less  
24 VAC, 10 mA or more, 1 A or less (non-conductive load)

## 6-7. Notice Code

- Notice Code is a function only in TC2U-Link communication.
- When the outdoor or indoor unit detects its conditions requiring caution or maintenance, this function notices you to check your units with the spanner mark (Notice code mark) on the wired remote controller or central controller display.
- Even while the notice code mark is displayed, the air conditioner can operate normally.
- A maximum of five notice codes can be issued simultaneously in one system (line).

### 1. Notice Code Mark Display on Wired Remote Controller

Set the notice codes from remote controller so that the notice code mark is displayed on the remote controller display when the outdoor unit issues the notice codes.

Please follow the steps below to set the notice code on the unit.

- (1) Set the notice codes, which will be displayed, on the Indoor unit DN Code (I. DN) "180" to "189" from the remote controller.


Enter one of the notice codes for each DN Code. You can set it on any of "180" to "189".

A maximum 10 types of the notice codes can be set on a single indoor unit.


- (2) A notice code mark will be displayed on the remote controller when any of the 10 notice codes set is received into the remote controller.

If the notice code that is not set is received, a notice code mark is not displayed.


Set the notice code that you want from the remote controller.

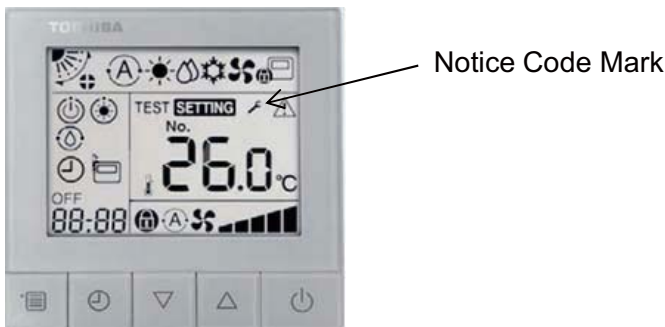

e.g. 1. When the U1 outdoor unit detects and issues the notice code "001", the notice code mark is displayed on the remote controller connected to the indoor unit on which the "001" was set.

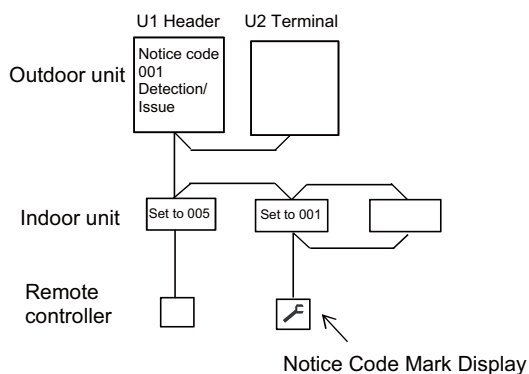

e.g. 2. When the U2 outdoor unit detects and issues the notice code "001" or "022", the notice code mark is displayed on the remote controller connected to the indoor unit on which the "001" or "022" were set.

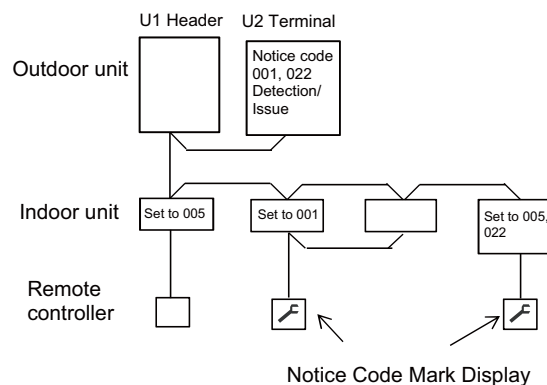

## 2. Notice Code Display (7-segment display) on Outdoor Interface P.C. Board

The notice codes detected or issued from the outdoor unit can be confirmed with 7-segment display on the P.C. board.

(The notice codes detected or issued from the other outdoor unit cannot be displayed.)

(1) Displaying the notice code being issued now

Setting the SW01, SW02, SW03 to 1, 1, 14 respectively displays the notice code being issued from the outdoor unit on the 7-segment display 7-segment display [n. 1. . \*\*\*] \*\*\* : Notice code

Every time SW04 is pushed for 1-second, the display changes and the second notice code or each subsequent code is displayed (up to fifth code).

[n. 1. \*\*\*] (First) to [n. 2. \*\*\*] (Second) to ••• to [n. 5. \*\*\*] (Fifth) to [n. 1. \*\*\*] (First)

(2) Displaying the notice code history

Setting the SW01, SW02, SW03 to 1, 2, 14 respectively displays the notice code history being issued from the outdoor unit on the 7-segment display 7-segment display [h. 1. \*\*\*] \*\*\* : Notice code

Every time SW04 is pushed for 1-second, the display changes and the second notice code or each subsequent code is displayed (up to tenth code history).

[h. 1. \*\*\*] (First) to [h. 2. \*\*\*] (Second) ••• to [h. A. \*\*\*] (Tenth) to [h. 1. \*\*\*] (First)

(3) Clearing the notice code history

To clear the notice code history recorded in the outdoor unit, follow the steps below.

Set the SW01, SW02, SW03 to 2, 15, 8 respectively.

7-segment display [n. c ]

When SW04 is pushed and held for 5-second, the notice code histories recorded in the outdoor unit are cleared.

7-segment display [n. c C L]

## 3. Notice Code List

Notice code No.	Item	Content
001	Compressor maintenance timer over	This notice code is detected or issued from the outdoor unit when the actual operation cumulative time of comp.1 or comp.2 exceeds the compressor maintenance time set. The compressor maintenance time is not set at the factory. To use the notice code, set the compressor maintenance time* on O.DN"007".
022	NFC tag wiring trouble	This notice code is detected or issued from the outdoor unit when NFC tag is removed, failed, or cannot communicate with the outdoor interface P.C. board. The notice code stops when NFC tag communication recovers. (Note) A notice code [022] may be issued when connecting equipment to CN800 of the outdoor interface P.C. board, but this is not a faulty connection or a failure. Issuing of the notice code [022] will stop when the equipment is removed from the CN800 and the power of the outdoor unit is turned off. Determination of NFC tag failure should be performed in a state where no equipment is connected to the CN800.

\* Setting the compressor maintenance time to detect the time exceeded

Enter the compressor maintenance time to be detected as time over into Outdoor unit DN Code (O.DN) "007".

Input values ×1,000=Detection time

e.g. When O.DN [007]=20 is set


20 × 1,000=20,000 hours ••• The notice code "001" is detected and issued when the actual operation cumulative time of comp.1 or comp.2 will exceed 20,000 hours.

## 6-8. System Cooperation Defrosting


### Overview

This is a function in which two systems or three systems of SMMS-u are communicably connected, and the timing of defrosting at each system is offset.

Installing an indoor device of a different system in the same room and performing system cooperation defrosting suppresses the room temperature from dropping while defrosting.

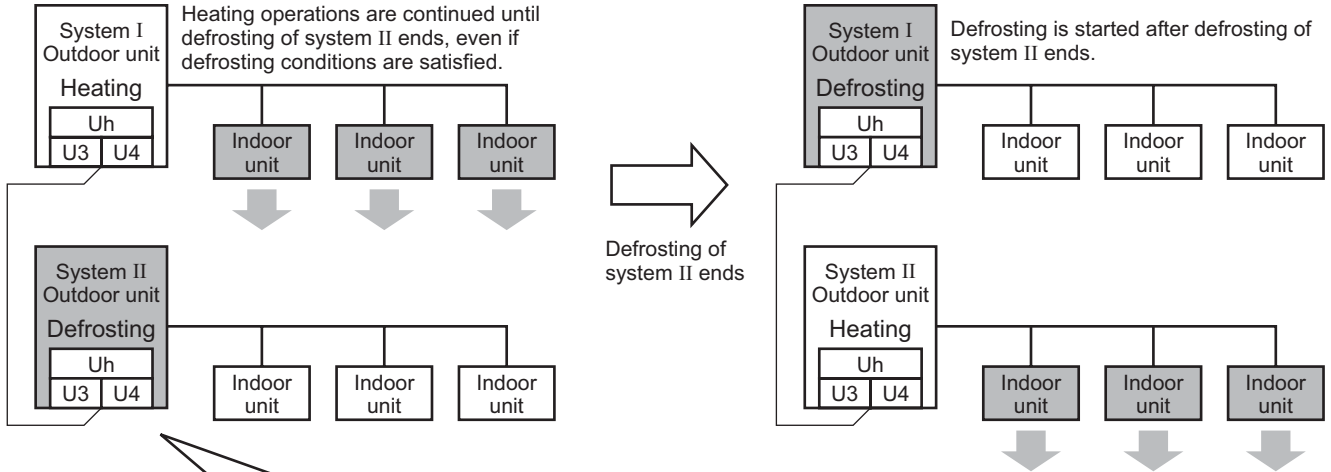

\* During individual defrosting in an outdoor linked system, the system will be deemed to be defrosting even if the header unit is performing heating operations.

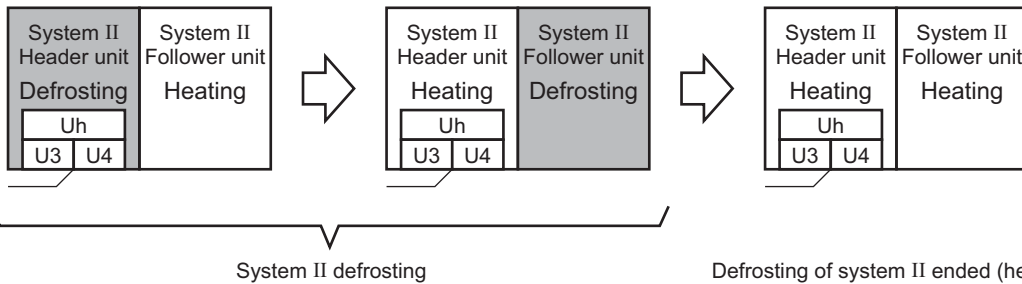

\* In this section, system addresses are indicated by Roman numerals (I, II, III...), to differentiate from system cooperation defrosting setup addresses.





## ■ Operations (contents of control)

- (1) Defrosting conditions for system cooperation defrosting (hereinafter referred to as “cooperation defrosting conditions”) are measured at each system, separately from normal defrosting conditions.  
When multiple systems satisfy the cooperation defrosting conditions at the same time, the system that has satisfied the conditions earlier starts defrosting.
- (2) When a system that has started defrosting earlier is still defrosting, other systems do not perform defrosting but continue heating operations.
- (3) When defrosting of the system that started defrosting earlier ends, the system that has satisfied the cooperation defrosting conditions next starts defrosting.
- (4) When only one system satisfies the cooperation defrosting conditions, that system continues heating operations, and performs defrosting at the point that normal defrosting conditions are satisfied.
- (5) A system that has satisfied normal defrosting conditions starts defrosting to avoid the risk of remaining frost, even if system cooperation defrosting is being performed.

### <Operation examples of system cooperation defrosting>

#### (Example 1) 2-system cooperation defrosting

In a case where cooperation defrosting conditions are satisfied in the order of system II and system I, defrosting is performed in the order of system II and system I.

<b>System I</b>	Heating	→	Heating *1	→	Defrosting *2	→	Heating
<b>System II</b>	Heating	→	Defrosting	→	Heating	→	Heating

\*1 Continue heating without starting defrosting control while system II is defrosting

\*2 Start defrosting after system II ends defrosting

#### (Example 2) 3-system cooperation defrosting

In a case where cooperation defrosting conditions are satisfied in the order of system II, system I and system III, defrosting is performed in the order satisfying conditions among the three systems.

<b>System I</b>	Heating	→	Heating *1	→	Defrosting *2	→	Heating	→	Heating
<b>System II</b>	Heating	→	Defrosting	→	Heating	→	Heating	→	Heating
<b>System III</b>	Heating	→	Heating *1	→	Heating *1	→	Defrosting *3	→	Heating

\*1 Continue heating without starting defrosting control while system II is defrosting

\*2 Start defrosting after system II ends defrosting

#### (Example 3) 2-system cooperation defrosting out of three systems

In a case where cooperation defrosting conditions are satisfied in the order of system II and system III, but system I does not satisfy conditions, system cooperation defrosting is performed by system II and system III alone.

<b>System I</b>	Heating	→	Heating	→	Heating	→	Heating
<b>System II</b>	Heating	→	Defrosting	→	Heating	→	Heating
<b>System III</b>	Heating	→	Heating *1	→	Defrosting *2	→	Heating

\*1 During system II defrosting, don't start defrosting control but continue heating.

\*2 The system II is a defrosting start after the end of defrosting.

### <Examples of not performing system cooperation defrosting>

#### (Example 4) Normal defrosting

In a case in where only system II satisfies defrosting conditions (system cooperation defrosting conditions and normal defrosting conditions), only system II performs defrosting.

<b>System I</b>	Heating	→	Heating	→	Heating
<b>System II</b>	Heating	→	Defrosting	→	Heating
<b>System III</b>	Heating	→	Heating	→	Heating

<b>System I</b>	Stop	→	Stop	→	Stop
<b>System II</b>	Heating	→	Defrosting	→	Heating
<b>System III</b>	Stop	→	Stop	→	Stop

#### (Example 5) Example of not performing system cooperation defrosting

In a case where normal defrosting conditions are satisfied due to sudden increase in frost or the like, defrosting is started to avoid the risk of remaining frost, even if other systems are performing system cooperation defrosting.

<b>System I</b>	Heating	→	Heating *1	→	Defrosting *2	→	Heating
<b>System II</b>	Heating	→	Defrosting	→	Heating	→	Heating


\*1 State where heating operations are continuing while system II is performing cooperation defrosting

\*2 If normal defrosting conditions are satisfied, defrosting is started without awaiting system II to end defrosting.

# 7. TEST OPERATION

## 7-1. Procedure and Summary of Test Operation

A test operation is carried out with the following procedure. When problems or a trouble occurs at any step, remove the causes of the problem or trouble referring to "8 TROUBLESHOOTING."

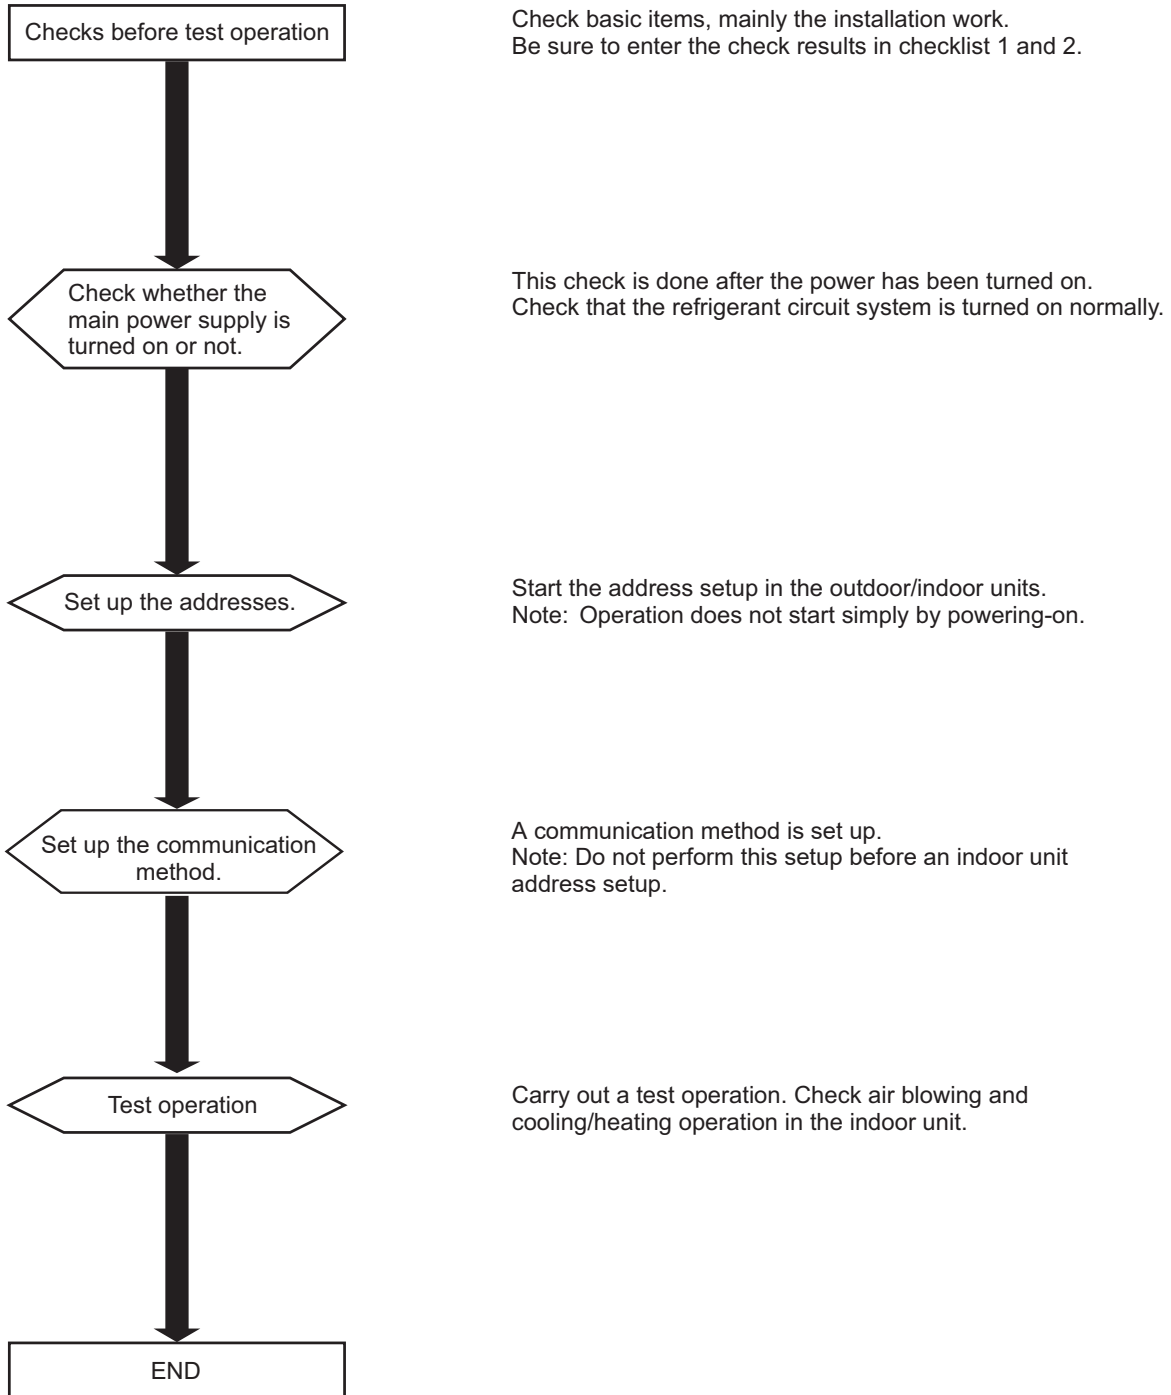



## 7-2. Check Items before Test Operation (before powering-on)


Prior to the test operation, check the following items to verify there are no problems with the installation work.

### Main check items for electric wiring

The communication system differs from previous period model air conditioners.

Check wiring points again carefully.

(1) In the case that a central control system is not connected:

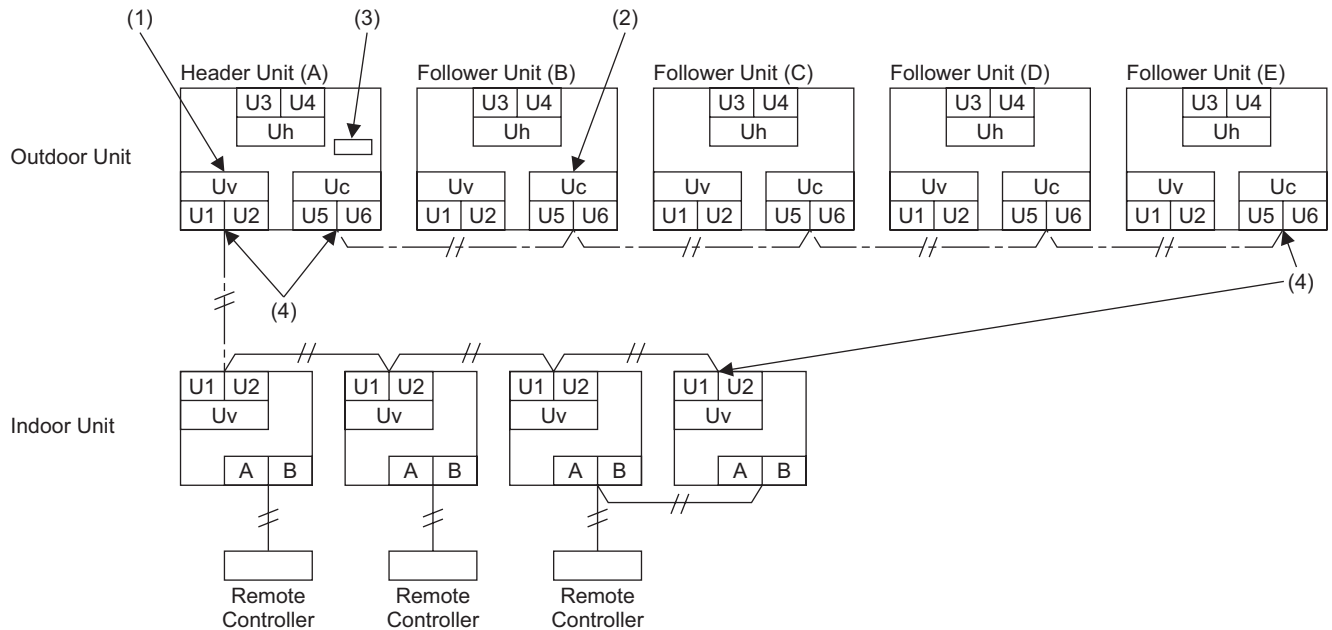


Main check items	Check
(1) Are the indoor and outdoor communication lines of the header unit connected to the U1/U2 (Uv) terminals?	
(2) Is the communication line between outdoor units connected to the U5/U6 (Uc) terminal?	
(3) Is the terminator resistor (SW100-bit 2) on the interface PC board of the header unit turned on? (Set up at shipment from the factory)	
(4) Is the end terminal of the shield wire earthed?	

### NOTE

The figure above does not show all the electric wires.

For details, refer to the installation manuals for the outdoor unit, indoor unit, remote controller, or optional devices.

(2) In the case that a central control system is connected (before address setup)

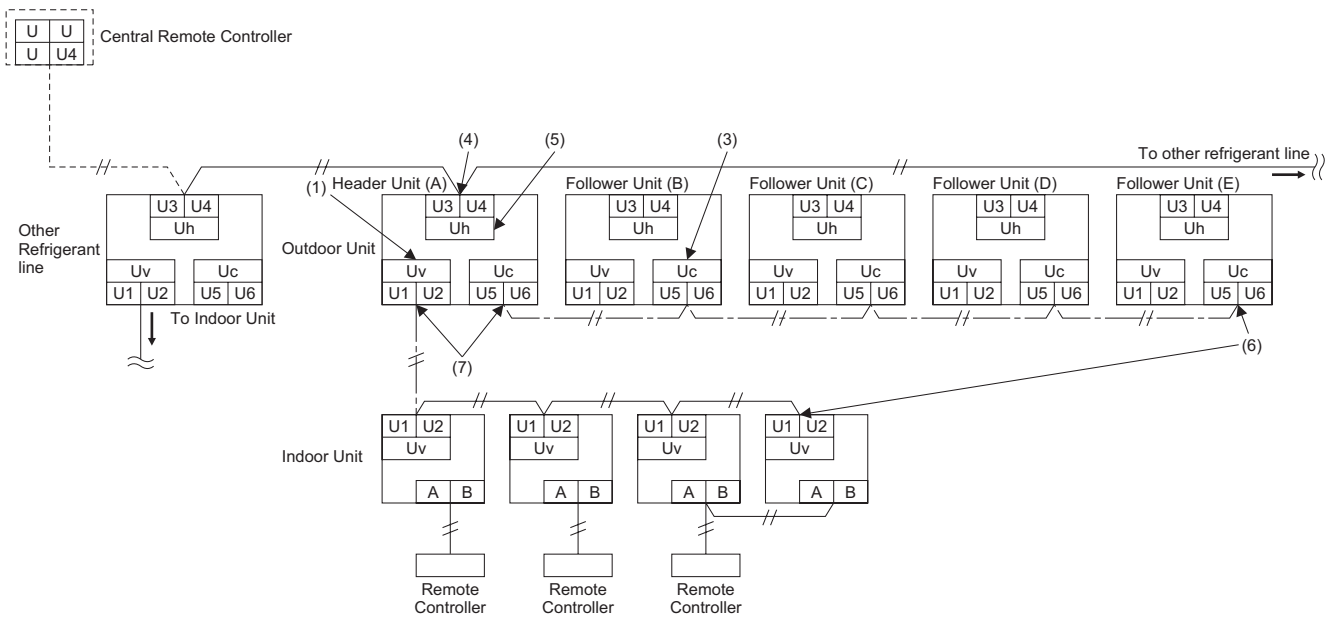

Main check items	Check
(1) Are the indoor and outdoor communication lines of the header unit connected to the U1/U2 (Uv) terminals?	
(2) Is the communication line between outdoor units connected to the U5/U6 (Uc) terminal?	
(3) Is the communication line of the central control system connected to the header unit U3/U4 (Uh) terminals of each refrigerant line? (The communication line of the central control system may be connected to the communication lines of the indoor/outdoor communication lines.)	
(4) Is the terminator resistor (SW100-bit 2 (termination resistance of Uv line) on the interface PC board of the header unit turned on? (Set up at shipment from the factory) * Does the smallest header unit of a system address turn on SW100-bit 1 (termination resistance of Uh line)? Does the header unit of other refrigerant systems turn off SW100-bit 1? (See "7-4-3. Address Setup Procedure" )	
(5) Is the end terminal of the shield wire open?	
(6) Is the end terminal of the shield wire earthed at the header unit side?	
(7) When the refrigerant line and the central control system of the DI-SDI series are connected: → Are Network adapter (TCB-PCNT30TLE2) correctly connected? → When the DI-SDI series operates with group, twin, or triple operation, are the adapters connected to the header unit of the indoor unit?	

#### NOTE

The figure above does not show all the electric wires.  
For details, refer to the installation manuals for the outdoor unit, indoor unit, remote controller, or optional devices.

### Check list 1

• Using Checklist 1, check that there are no problems with the installation work.

Is the capacity of the circuit breaker (Earth leakage breaker) appropriate?	Outdoor total capacity <input type="text"/> A	Header unit (A) <input type="text"/> A Follower unit (B) <input type="text"/> A Follower unit (C) <input type="text"/> A Follower unit (D) <input type="text"/> A Follower unit (E) <input type="text"/> A	Indoor unit <input type="text"/> A
Is the gauge of the power cable correct?		Header unit (A) <input type="text"/> mm <sup>2</sup> Follower unit (B) <input type="text"/> mm <sup>2</sup> Follower unit (C) <input type="text"/> mm <sup>2</sup> Follower unit (D) <input type="text"/> mm <sup>2</sup> Follower unit (E) <input type="text"/> mm <sup>2</sup>	Indoor unit <input type="text"/> mm <sup>2</sup>
Is the control communication line correct?		Indoor-outdoor connection terminals (U1, U2) <input type="text"/> Outdoor-outdoor connection terminals (U5, U6) <input type="text"/> Central control system connection terminals (U3, U4) <input type="text"/>	
Is the power of indoor units supplied collectively?			
Is it grounded to earth?			
Is the resistance sufficient? (10 MΩ or higher)		<input type="text"/> MΩ or higher	
Is the main power voltage sufficient? (within 380-415V ±10%)		<input type="text"/> V	
Is the diameter of connecting pipe correct?			
Is the branch kit correct?			
Is the water drain of the indoor unit arranged so that it flows without accumulation?			
Is the heat insulation of pipes sufficient? (connecting pipes, branch kit)			
Is there no short circuit of discharge air in the indoor/outdoor units?			
After an airtightness test of the pipes, are vacuuming and adding of refrigerant executed?			
Are the valves of all the outdoor units fully opened?			
		Gas side	Liquid side
		Header unit (A)	<input type="text"/>
		Follower unit (B)	<input type="text"/>
		Follower unit (C)	<input type="text"/>
		Follower unit (D)	<input type="text"/>
		Follower unit (E)	<input type="text"/>

- Check the additional amount of refrigerant.

**Checklist 2**

Calculate total additional amount refrigerant from the compensation amount of refrigerant according to total outdoor unit horsepower (A), the additional amount of refrigerant by the pipe diameter on the liquid side and the pipe length (B), the compensation amount of refrigerant according to indoor unit horsepower (C), and the total compensation amount of refrigerant according to the system diversity (D)

$$\begin{aligned}
 \text{Additional amount of refrigerant} &= \underbrace{\text{Compensation amount of refrigerant according to total outdoor unit horsepower}}_{(A)} + \underbrace{\text{Actual liquid pipe length} \times \text{Additional amount of refrigerant per 1 m of liquid pipe}}_{(B)} \\
 &+ \underbrace{\text{Compensation amount of refrigerant according to indoor unit horsepower}}_{(C)} + \underbrace{\text{Compensation amount of refrigerant according to the system diversity}}_{(D)}
 \end{aligned}$$

First, refer to following table below, calculate the the compensation amount of refrigerant according to total outdoor unit horsepower (A)

**<Compensation amount of refrigerant according to total outdoor unit horsepower (A)>**

Total outdoor unit HP	Combination					Compensation by total outdoor unit HP (kg)
	HP					
8	8	-	-	-	-	1.5 kg
10	10	-	-	-	-	1.7 kg
12	12	-	-	-	-	2.3 kg
14	14	-	-	-	-	2.3 kg
16	16	-	-	-	-	1.0 kg
18	18	-	-	-	-	2.0 kg
20	20	-	-	-	-	4.0 kg
22	22	-	-	-	-	5.0 kg
24	24	-	-	-	-	5.5 kg
26	14	12	-	-	-	4.6 kg
28	14	14	-	-	-	4.6 kg
30	18	12	-	-	-	4.3 kg
32	20	12	-	-	-	6.3 kg
34	20	14	-	-	-	6.3 kg
36	24	12	-	-	-	7.8 kg
38	24	14	-	-	-	7.8 kg
40	20	20	-	-	-	8.0 kg
42	24	18	-	-	-	7.5 kg
44	24	20	-	-	-	9.5 kg
46	24	22	-	-	-	10.5 kg
48	24	24	-	-	-	11.0 kg
50	24	14	12	-	-	10.1 kg
52	24	14	14	-	-	10.1 kg
54	20	20	14	-	-	10.3 kg
56	24	20	12	-	-	11.8 kg
58	24	20	14	-	-	11.8 kg
60	24	24	12	-	-	13.3 kg
62	24	24	14	-	-	13.3 kg
64	24	20	20	-	-	13.5 kg
66	24	22	20	-	-	14.5 kg
68	24	24	20	-	-	15.0 kg
70	24	24	22	-	-	16.0 kg
72	24	24	24	-	-	16.5 kg
74	24	24	14	12	-	15.6 kg
76	24	24	14	14	-	15.6 kg
78	24	20	20	14	-	15.8 kg
80	24	24	20	12	-	17.3 kg
82	24	24	20	14	-	17.3 kg
84	24	24	24	12	-	18.8 kg
86	24	24	24	14	-	18.8 kg
88	24	24	20	20	-	19.0 kg
90	24	24	22	20	-	20.0 kg
92	24	24	24	20	-	20.5 kg
94	24	24	24	22	-	21.5 kg
96	24	24	24	24	-	22.0 kg
98	24	24	24	14	12	21.1 kg
100	24	24	24	14	14	21.1 kg
102	24	24	20	20	14	21.3 kg
104	24	24	24	20	12	22.8 kg
106	24	24	24	20	14	22.8 kg
108	24	24	24	24	12	24.3 kg
110	24	24	24	24	14	24.3 kg
112	24	24	24	20	20	24.5 kg
114	24	24	24	22	20	25.5 kg
116	24	24	24	24	20	26.0 kg
118	24	24	24	24	22	27.0 kg
120	24	24	24	24	24	27.5 kg

Next, enter the total length for each liquid pipe diameter in the following table, and then calculate the additional amount of refrigerant by pipe length.

**<Additional amount of refrigerant by pipe length (B)>**

Pipe diameter on the liquid side mm	Standard amount of refrigerant kg/m	Total pipe length on each liquid side m	Additional amount of refrigerant pipe diameter on each liquid side kg
6.4	0.025 ×	=	kg
9.5	0.055 ×	=	kg
12.7	0.105 ×	=	kg
15.9	0.160 ×	=	kg
19.0	0.250 ×	=	kg
22.2	0.350 ×	=	kg
25.4	0.470 ×	=	kg

Then refer to following table below, calculate corrective amount of refrigerant according to indoor unit horsepower (C).

**<Corrective amount of refrigerant according to indoor unit horsepower (C)>**

**<According to indoor unit horsepower (Not include "DX coil interface")>**

Indoor unit capacity rank	Capacity code (Equivalent to HP) HP	Corrective amount of refrigerant kg	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit horsepower kg
003	0.3	0.2 ×		= kg
005	0.6			= kg
007	0.8			= kg
008	0.9			= kg
009	1			= kg
010	1.1			= kg
012	1.25			= kg
014	1.5	0.4 ×		= kg
015	1.7			= kg
018	2			= kg
020	2.25			= kg
024	2.5			= kg
027	3			= kg
030	3.2			= kg
036	4	0.6 ×		= kg
048	5			= kg
056	6			= kg
072	8	1.0 ×		= kg
096	10			= kg

**<According to indoor unit horsepower for DX coil interface>**

AHU capacity HP	Corrective amount of refrigerant kg	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit horsepower kg
8	1.4 ×		= kg
10	1.8 ×		= kg
16	2.9 ×		= kg
18	3.2 ×		= kg
20	3.6 ×		= kg
32	5.8 ×		= kg
36	6.5 ×		= kg
40	7.2 ×		= kg
48	8.6 ×		= kg
54	9.7 ×		= kg
60	10.8 ×		= kg

**<According to indoor unit horsepower for Hot Water Module (HWM)>**

Indoor Unit Capacity HP	Corrective amount of refrigerant kg	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit horsepower kg
2.5			= kg
5			= kg

**<According to indoor unit horsepower for Fresh Air Intake)>**

Corrective amount of refrigerant: 0 kg

**<According to indoor unit horsepower for High Efficiency 4-Way Cassette (MMU-UP\*\*\*\*H\*)>**

Indoor Unit Capacity HP	Corrective amount of refrigerant kg	Number of connected indoor units Number	Corrective amount of refrigerant on each indoor unit horsepower kg
1	0.2		= kg
1.25			= kg
1.7	0.6		= kg
2			= kg
2.5			= kg
3			= kg
3.2			= kg
4			= kg
5			= kg
6			= kg

Next, refer to the following table below, calculate the corrective amount of refrigerant according to system diversity (D)

**Corrective amount of refrigerant varies according to the system diversity (D)**

Diversity D(%)	Corrective amount of refrigerant (kg)
50% ≤ D < 60%	-2.5
60% ≤ D < 70%	-2.0
70% ≤ D < 80%	-1.5
80% ≤ D < 90%	-1.0
90% ≤ D < 95%	-0.5
95% ≤ D	0

Lastly, add the corrective amount of refrigerant according to system diversity (D), the corrective amount of refrigerant according to indoor unit horsepower(C) and the additional amount of refrigerant by the pipe diameter on liquid side and the pipe length (B) to the compensation amount of refrigerant according to total outdoor unit horsepower (A)

This is the final additional amount of refrigerant.

If a minus sign is indicated as the result, the additional amount of refrigerant is zero (0) kg, do not reduce the refrigerant.


Compensation amount of refrigerant according to total outdoor unit horsepower (A)	kg
Additional amount of refrigerant by pipe length (B)	kg
Corrective amount of refrigerant according to indoor unit horsepower (C)	kg
Corrective amount of refrigerant according to system diversity (D)	kg
<b>Total additional amount of refrigerant</b>	kg

### 7-3. Check at Main Power-on

After turning on the main power of the indoor units and outdoor unit in the refrigerant line to conduct a test operation, check the following items in each outdoor and indoor unit.  
(After turning on the main power, be sure to check in order: indoor unit outdoor unit.)

#### <Check on the outdoor unit>

- (1) Check that all the rotary switches, SW01, SW02, and SW03, on the interface PC board of the header unit are set to "1."
- (2) If another check code is displayed on the 7-segment display [B], remove the cause of the problem referring to Section, "8. TROUBLESHOOTING".
- (3) Check that "L08" is displayed on the 7-segment display [B] on the interface PC board of the header unit.  
(L08: Indoor address not set up)  
(If the address setup operation has already been completed during servicing, etc., the above check code is not displayed, and only "U1" is displayed on the 7-segment display [A].)

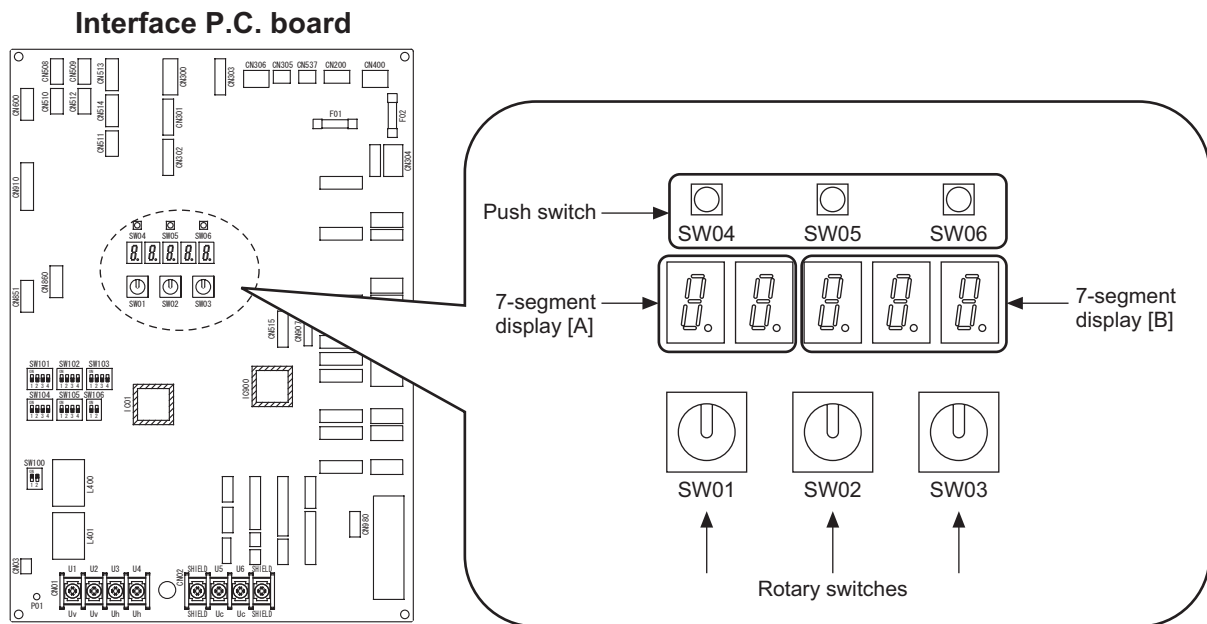


### <Check on the indoor unit>


(1) Display check on the remote controller (in the case of a wired remote controller)

Check that a frame, as shown in the following figure at left, is displayed on the LC display section of the remote controller.

### <RBC-AMT\*>


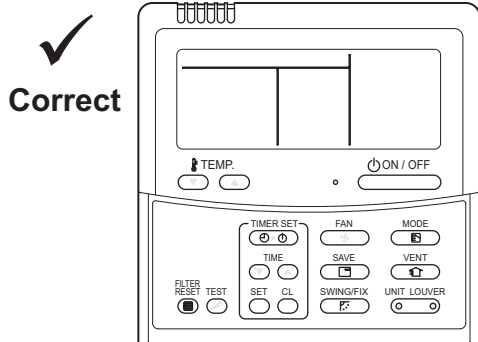


Normal status  
(power supplied and operation stopped)

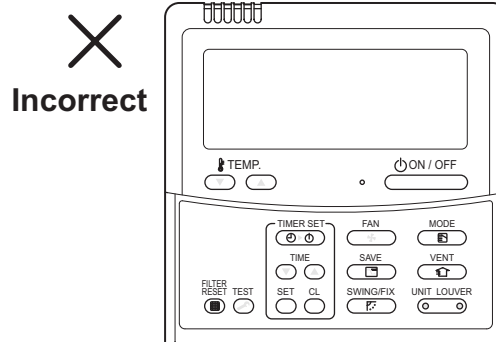

When power is not supplied normally

### <RBC-ASCU11\*>

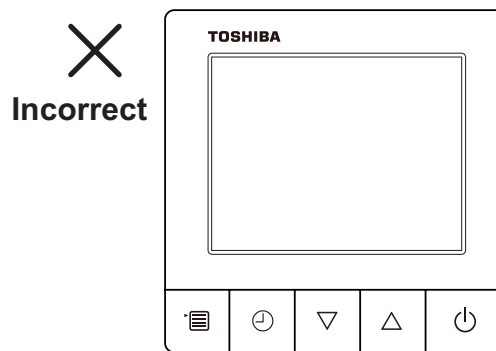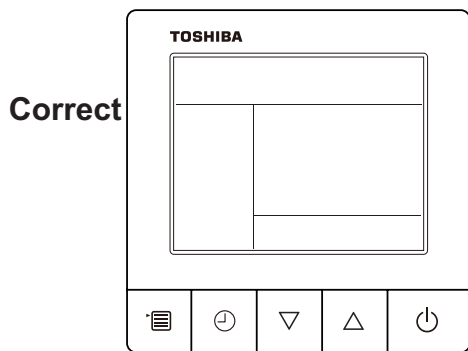

If no frame is displayed, as shown in the above figure at right, the remote controller does not have a normal supply of power; check the following items.

- Check the power supply of the indoor unit.
- Check the cabling between the indoor unit and the remote controller.
- Check whether there is a cutoff of wire around the indoor control PC board or not, and check for connection failures of the connectors.
- Check for failure of the transformer for the indoor electrical control box.
- Check for failure of the indoor control PC board.



## 7-4. Address Setup


This product requires address setup before operation.  
Follow this procedure for address setup.

### 7-4-1. Precautions

- (1) Address setup is not performed simply by turning on the power supply.
- (2) For indoor units, address setup can be done either by manual address setup or by automatic address setup:  
Automatic address setup: Setup from SW06 on the interface P.C. board of the header unit  
Manual address setup: Setup from the wired remote controller. (For details, refer to “7-4-3. Address Setup Procedure.”)
- (3) Automatic setup usually takes about 5 minutes per line. In some cases, however, it may take up to 10 minutes.
- (4) It is unnecessary to operate the air conditioner to achieve address setup.

### 7-4-2. Address Setup and Check Procedure

Procedure	Item	Operation and check contents																																			
1	Header outdoor unit setting	Turn off DIP switch 1 of SW101 on the header outdoor unit interface P.C.boards. And, turn on DIP switch 2 of SW100.																																			
2	Indoor unit power-on	Turn on the power of the indoor unit for the refrigerant line for which the address is to be set up.																																			
3	Outdoor unit power-on	Turn on the power of all the outdoor units for the refrigerant line for which the address is to be set up.																																			
4	7-segment display check	Check that “L08” is displayed on the 7-segment display [B] on the interface PC board of the header unit in the system where the address is to be set up.																																			
5	Address setup start	Confirm the items in “7-4-3. Address Setup Procedure,” and then set up the address according to the operation procedure. (Be careful to note that the setup operation may differ in group control and central control systems.) <b>Note:</b> <b>The address cannot be set up if switches are not operated.</b>																																			
6	Display check after setup	<ul style="list-style-type: none"> <li>• After address setup, “U1” “ ” is displayed on the 7-segment display.</li> <li>• For follower outdoor units, “U2” to “U5” are displayed on the 7-segment display [A].</li> <li>• If a check code is displayed on the 7-segment display [B], remove the cause of the problem referring to “8 TROUBLESHOOTING.”</li> </ul>																																			
7	Communication setting start	Confirm the items in “7-4-3. Address Setup Procedure,” and then set up the communication according to the operation procedure. <b>Note:</b> <b>The address cannot be set up if switches are not operated.</b>																																			
8	Display check after communication setup	<ul style="list-style-type: none"> <li>• After communication setup, “c.c.” “Fin” is displayed on the 7-segment display.</li> <li>• If a unit that has already been set for communication is connected, it cannot be set correctly. In this case, clear the communication settings and set again.</li> </ul>																																			
9	System information check after setup	Using the 7-segment display function, check the system information of the scheduled system. (This check is executed on the interface PC board of the header unit.)																																			
		<table border="1"> <thead> <tr> <th rowspan="2"></th> <th colspan="3">Rotary switch setup</th> <th colspan="2">7-segment display</th> </tr> <tr> <th>SW01</th> <th>SW02</th> <th>SW03</th> <th>[A]</th> <th>[B]</th> </tr> </thead> <tbody> <tr> <td>System capacity</td> <td>1</td> <td>2</td> <td>3</td> <td>[Number of horsepower]</td> <td>[H P]</td> </tr> <tr> <td>Number of connected outdoor units</td> <td>1</td> <td>3</td> <td>3</td> <td>[Number of units]</td> <td>[ P]</td> </tr> <tr> <td>Number of connected indoor units</td> <td>1</td> <td>4</td> <td>3</td> <td>[Number of connected units]</td> <td></td> </tr> <tr> <td>Communication Type</td> <td>2</td> <td>16</td> <td>2</td> <td></td> <td>[Type] Type : 0=TCC-Link, 3=TU2C-Link</td> </tr> </tbody> </table>		Rotary switch setup			7-segment display		SW01	SW02	SW03	[A]	[B]	System capacity	1	2	3	[Number of horsepower]	[H P]	Number of connected outdoor units	1	3	3	[Number of units]	[ P]	Number of connected indoor units	1	4	3	[Number of connected units]		Communication Type	2	16	2		[Type] Type : 0=TCC-Link, 3=TU2C-Link
				Rotary switch setup			7-segment display																														
			SW01	SW02	SW03	[A]	[B]																														
		System capacity	1	2	3	[Number of horsepower]	[H P]																														
Number of connected outdoor units	1	3	3	[Number of units]	[ P]																																
Number of connected indoor units	1	4	3	[Number of connected units]																																	
Communication Type	2	16	2		[Type] Type : 0=TCC-Link, 3=TU2C-Link																																
After the above checks, return rotary switches SW01, SW02, and SW03 to 1/1/1.																																					

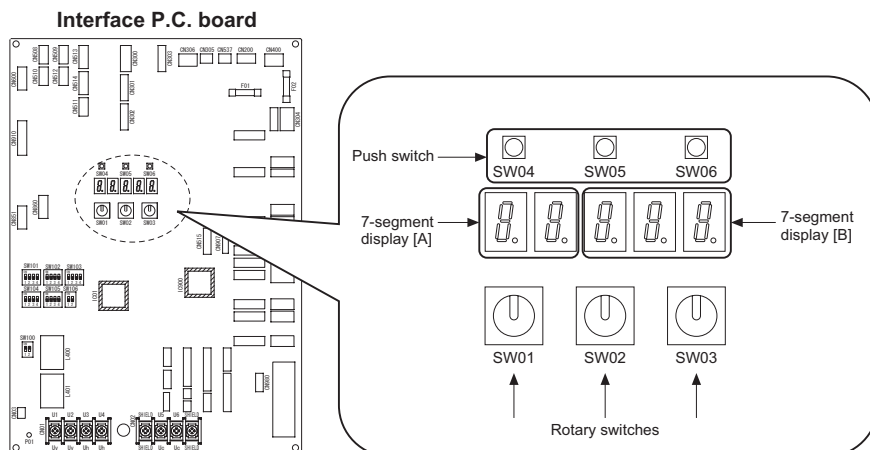


### 7-4-3. Address Setup Procedure

Before setting the address, it is necessary to set the DIP-SW on the header outdoor unit interface P.C. board.

#### 1. Follow the steps below to open the electrical control box cover

- (1) Loosen the screws on the left and right side of the electrical control box cover.
- (2) Remove the screw A for MMY-MUP220 and MUP240.  
(There is no screw A for MMY-MUP080, MUP100, MUP120, MUP140, MUP160, MUP180 and MUP200)
- (3) Hold the lower side of the electrical control box cover to draw it toward you while lifting it up, and remove the electrical control box cover.

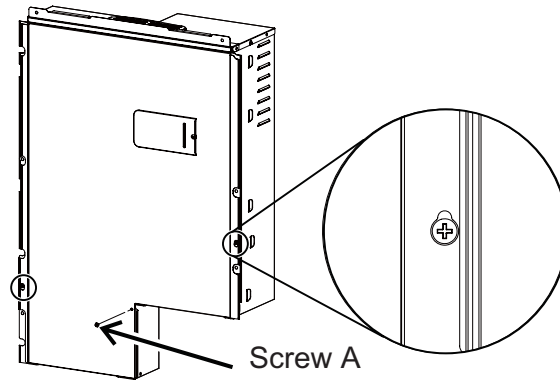

#### 2. Follow the steps below to set the DIP switch on the header outdoor unit interface P.C. board.


##### 2-1. Header outdoor unit setting

Turn on DIP switch 1 of SW101 on the header outdoor unit interface P.C. boards\*.

And, turn on DIP switch 2 of SW100. (Termination resistance of Uv line)

\* Header outdoor unit setting is required also of an outdoor independent system.

#### Interface P.C. board on the header outdoor unit

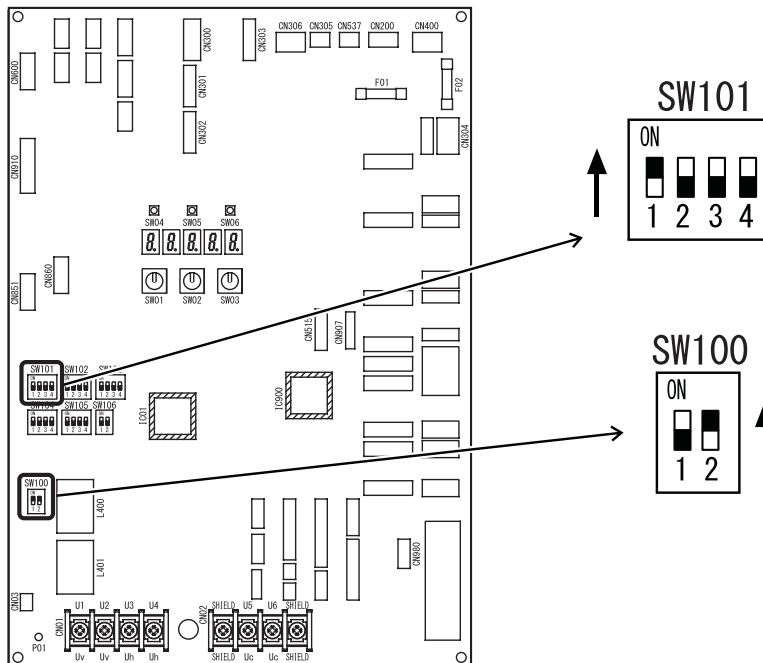

## 2-2.Line (system) address setting

For the central control among two or more refrigerant lines or group control among two or more refrigerant lines, set the line (system) address.

(Example)	Controlling a single refrigerant line centrally	Controlling 2 or more refrigerant lines centrally
System wiring diagram		
Line (system) address setting	No	Set the address

(Example)	Controlling 2 or more refrigerant lines as a group (*)
System wiring diagram	
Line (system) address setting	Set the address

\* Only if each refrigerant line has the same communication type (either TU2C-Link or TCC-Link), the group control among multiple refrigerant lines is available. If one refrigerant line has TU2C-Link and another refrigerant line has TCC-Link in the system, the group control among multiple refrigerant lines is unavailable.


**(1) Set a line (system) address for each system using SW 101 and 102 on the interface P.C. board on the header outdoor unit of each system.  
(Factory default: Address 1)**

### NOTE

Be sure to set a unique address on each system. Do not use a same address as another system (refrigerant line) or a "Digital Inverter" side.

### Interface P.C. board on the header outdoor unit

Line address switches on the outdoor interface PC board (O : switch on, X : switch off)

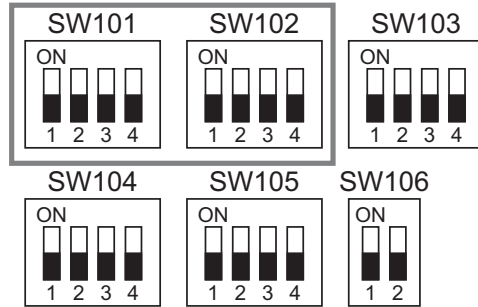

Line (system) address	SW101				SW102			
	1	2	3	4	1	2	3	4
1				X	X	X	X	X
2				X	X	X	X	O
3				X	X	X	O	X
4				X	X	X	O	O
5				X	X	O	X	X
6				X	X	O	X	O
7				X	X	O	O	X
8				X	X	O	O	O
9				X	O	X	X	X
10				X	O	X	X	O
11				X	O	X	O	X
12				X	O	X	O	O
13				X	O	O	X	X
14				X	O	O	X	O

Line (system) address	SW101				SW102			
	1	2	3	4	1	2	3	4
15				X	O	O	O	X
16				X	O	O	O	O
17				O	X	X	X	X
18				O	X	X	X	O
19				O	X	X	O	X
20				O	X	X	O	O
21				O	X	O	X	X
22				O	X	O	X	O
23				O	X	O	O	X
24				O	X	O	O	O
25				O	O	X	X	X
26				O	O	X	X	O
27				O	O	X	O	X
28				O	O	X	O	O


Not used for setup of line address (do not change setup.)

(2) After completing address setting of all systems, turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C. board of the lowest system address number.

**Switch setting (setting example when controlling 2 or more refrigerant lines centrally)  
Outdoor units (setting manually)**

\*The items in bold font must be set manually.

Outdoor unit's interface P.C. board	Header unit	Follower unit	Header unit	Follower unit	Header unit	Factory default
SW101Bit1 (Header unit setting)	<b>ON</b>	(No setting required)	<b>ON</b>	(No setting required)	<b>ON</b>	OFF
SW101Bit 2-4, SW102Bit1-4 (Line (system) address)	<b>1</b>	(No setting required)	<b>2</b>	(No setting required)	<b>3</b>	1
SW100Bit 1 (Terminator of central control line (Uh))	<b>ON</b>	(No setting required)	(No setting required)	(No setting required)	(No setting required)	OFF
SW100Bit2 (Terminator of indoor and outdoor communication line(Uv))	<b>ON</b>	(No setting required)	<b>ON</b>	(No setting required)	<b>ON</b>	OFF

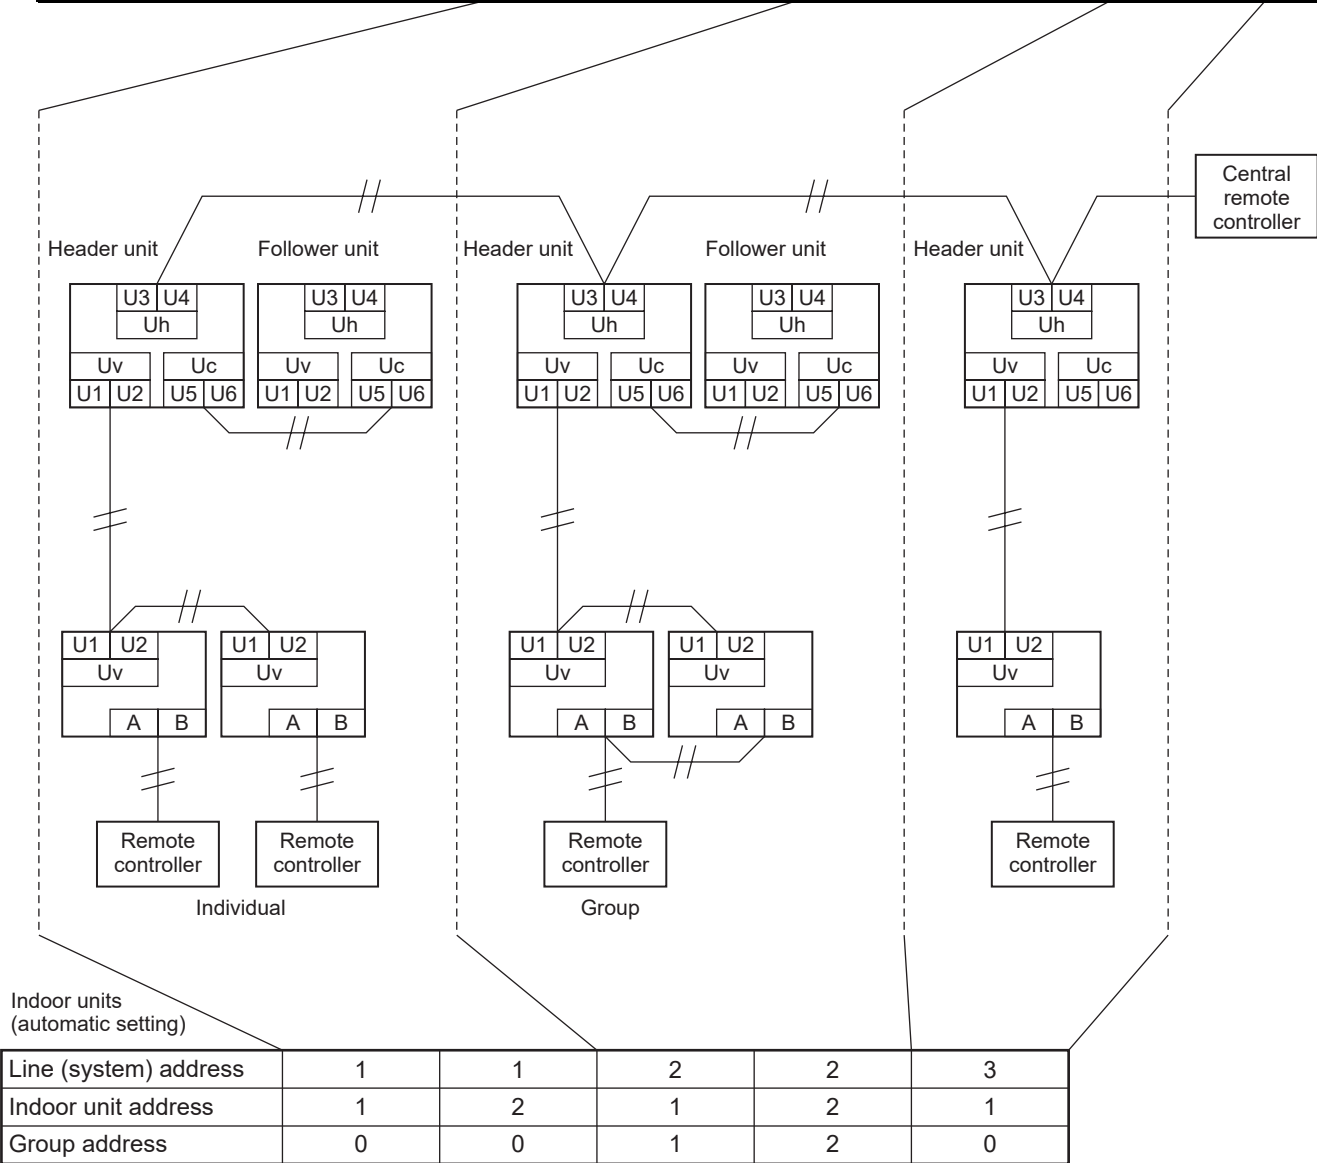


**3. Attach the electrical control box cover.**

## 4. Open the access door cover and follow the steps below to set the address.


### REQUIREMENT

- High voltage parts exist in the electrical control box.  
If you set addresses on an outdoor unit, operate the unit through the access door as shown in the illustration below to avoid electric shock. Do not remove the cover of electrical control box.
- \* After finishing operations, close the access door cover and fix it with the screw.

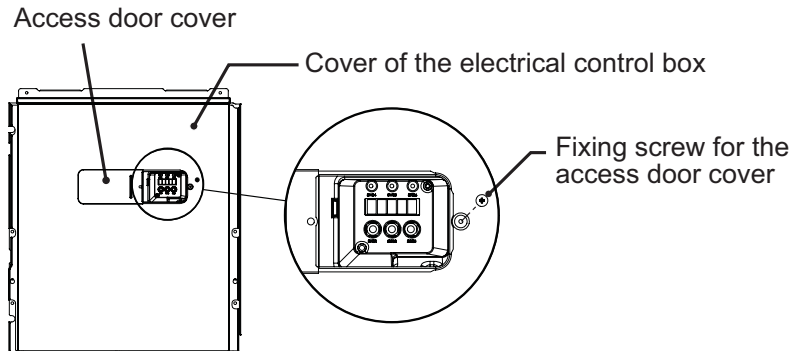


- 1** Turn on indoor units first, and then turn on outdoor units.
- 2** About 1 minute after turning the power on, confirm that the 7-segment display on the interface P.C. board of the header outdoor unit indicates **U. 1. Err (U. 1. flash)** and **L08** alternately at 1 second intervals.
- 3** Press SW06 to start the automatic address setting.  
(It may take up to 10 minutes (normally about 5 minutes) to complete one line's setting.)
- 4** The 7-segment display indicates **Auto 1 → Auto 2 → Auto 3**.  
The setting is complete when the display changes to **U. 1. - - - (U. 1. flash)** or **U. 1. - - - (U. 1. light)**.
- 5** Repeat steps 2 to 4 for other refrigerant lines.
- 6** Set the central control address.  
(For the setting of the central control address, refer to the installation manuals of the central control devices.)

### Interface P.C. board on the header outdoor unit

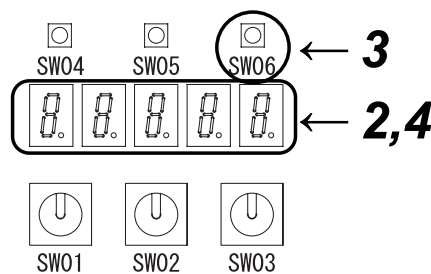

## REQUIREMENT


- When 2 or more refrigerant lines are controlled as a group, be sure to turn on all the indoor units in the group before setting addresses.
- If you set the unit addresses of each line separately, each line's header indoor unit is set separately. In that case, the Code No. "L03" (Indoor header unit overlap) is indicated as running starts. Change the group address to make one unit the header unit using wired remote controller.

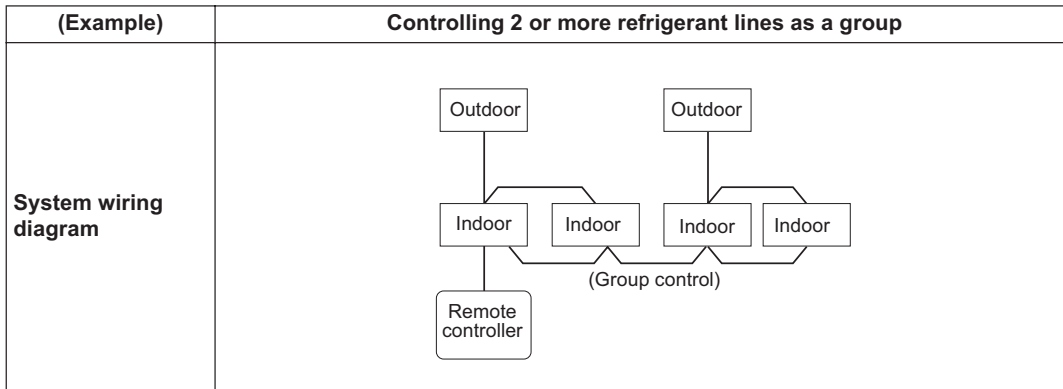

## Manual address setup from the remote controller


With indoor wiring work completed and outdoor wiring work not done—in cases where indoor unit addresses are decided in advance from the wired remote controller, or in cases where addresses are change after address setup.

(Wiring example for 2 refrigerant lines)

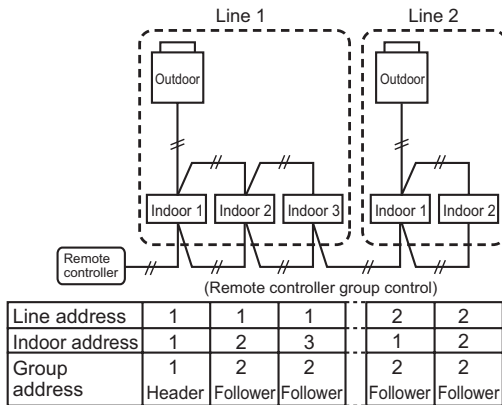

In the above example, where remote controllers are not yet wired, set the address manually after individually connecting the wired remote controller.


(Wiring during manual address setup)

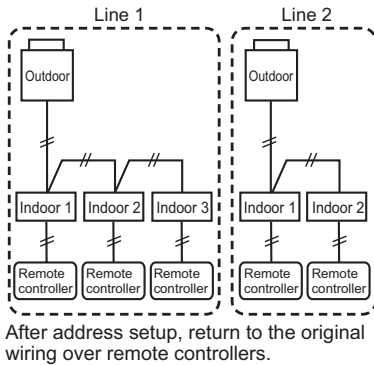

Group address

Individual: 0000  
 Header unit: 0001  
 Follower unit: 0002

In cases of remote controller group control

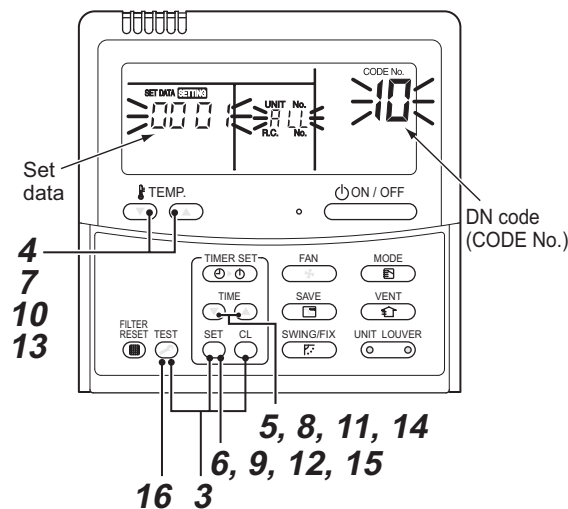

<RBC-AMT\*>

- 1 Arrange one indoor unit and one remote controller set to 1 by 1.
- 2 Turn on the power.
- 3 Push the **SET** + **CL** + **TEST** buttons simultaneously for 4 seconds or more.  
LCD begins blinking.

▼ (Refrigerant line address)

- 4 Using the **TEMP.** buttons, set the DN code to 12.
- 5 Using the **TIME** buttons, set up the line address (match it with the line address on the interface P.C. board of the header unit on the same refrigerant line).
- 6 Push the **SET** button (OK when the display goes on).

▼ (Indoor address)

- 7 Using the **TEMP.** buttons, set the DN code to 13.
- 8 Using the **TIME** buttons, set up the indoor address. (0001~0064)
- 9 Push the **SET** button (OK when the display goes on).

▼ (Group address)

- 10 Using the **TEMP.** buttons, set the DN code to 14.
- 11 Using the **TIME** buttons, set Individual = 0000, Header unit = 0001, Follower unit = 0002.
- 12 Push the **SET** button (OK when the display goes on).

▼ (Central control address)


- 13 Using the **TEMP.** buttons, set DN code to 03.
- 14 Using the **TIME** buttons, set up the central control address. (0001~0064)
- 15 Push **SET** button. (OK when display goes on).
- 16 Push the **TEST** button.

Setup is finished ("Setting up" blinks; when "Setting up" goes off, operation is possible).

- 17 Return to the original wiring over remote controllers.




<RBC-ASCU11\*>

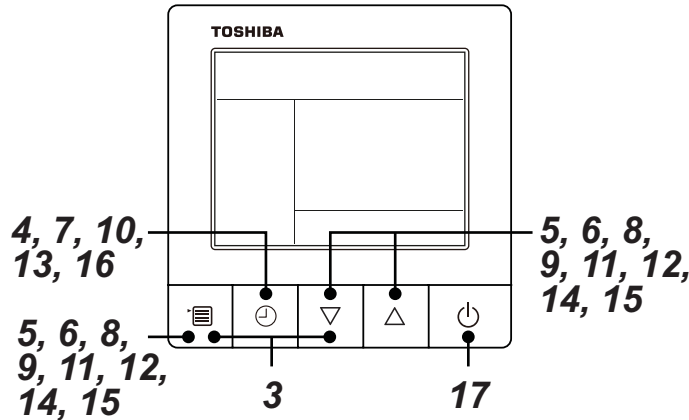

- 1** Pair the indoor unit to set and the remote controller one-to-one.
- 2** Turn on the power.
- 3** Push and hold menu button and [  $\nabla$  ] setting button simultaneously for 10 seconds or more.


After a while, the display flashes as shown in the figure.

“ALL” is displayed as indoor unit numbers during initial communication immediately after the power has been turned on.

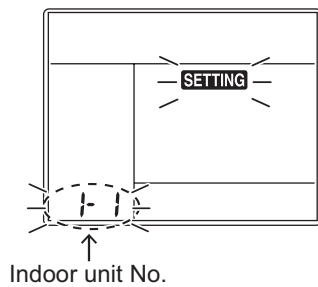

▼ (Refrigerant line address)

- 4** Push the Timer off button.

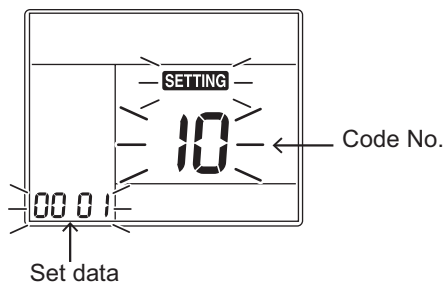

- 5** Push the menu button to make Code No. flash. Change Code No. to 12 with [  $\nabla$  ] [  $\Delta$  ] setting button.

- 6** Push the menu button to make Set data [\*\*\*\*] flash. Set the system address with [  $\nabla$  ] [  $\Delta$  ] setting button.

(Match the address with the address on the interface P.C. board of the header outdoor unit in the same refrigerant line.)

- 7** Push the Timer off button.

(When the display changes from [ - - ] to Set data [\*\*\*\*] flashing, the setup is completed.)

▼ (Indoor address)

**8** Push the menu button to make Code No. flash. Change Code No. to 13 with [▽][△] setting button.

**9** Push the menu button to make Set data [\*\*\*\*] flash. Set the indoor unit address with [▽][△] setting button.

(TU2C-LINK : 0001~0128

TCC-LINK : 0001~0064)

**10** Push the Timer off button.

(When the display changes from [– –] to Set data [\*\*\*\*] flashing, the setup is completed.)

▼ (Group address)

**11** Push the menu button to make Code No. flash. Change Code No. to 14 with [▽][△] setting button.

**12** Push the menu button to make Set data [\*\*\*\*] flash. Set the group address with [▽][△] setting button.

If the indoor unit is individual, set the address to ,0000 ; header unit, 0001 ; follower unit, 0002.

**13** Push the Timer off button.

(When the display changes from [– –] to Set data [\*\*\*\*] flashing, the setup is completed.)

▼ (Central control address)

**14** Push the menu button to make Code No. flash. Change Code No. to 03 with [▽][△] setting button.

**15** Push the menu button to make Set data [\*\*\*\*] flash. Set the indoor unit address with [▽][△] setting button.

(TU2C-LINK : 0001~0128

TCC-LINK : 0001~0064)

**16** Push the Timer off button.

(When the display changes from [– –] to Set data [\*\*\*\*] flashing, the setup is completed.)

**17** When all the settings have been completed, push ON/OFF button to determine the settings.

“SETTING” flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while “SETTING” is flashing.)

## NOTE

- (1) The Code No. [E04] (Indoor / outdoor communication trouble) will appear if line (system) addresses are mistakenly set.
- (2) When manual address setup has been done from a remote controller, and central control over refrigerant lines is to be done, setup the header unit of each line as follows:
  - Using SW101 and SW102 on the interface PC board of the header unit of each line, setup the line address for each line.
  - Turn ON DIP switch 1 of SW100 on the header outdoor unit interface P.C.board of the lowest system address number.
  - After that, set up the central control address. (For central control address setup, refer to the installation manual of the central control devices.)


## ■ Confirming the indoor unit addresses and the position of an indoor unit using the remote controller

### ◆ Confirming the numbers and positions of indoor units

To see the indoor unit address of an indoor unit which you know the position of

- ▼ When the unit is individual (the indoor unit is paired with a wired remote controller one-to-one), or it is a group-controlled one.

<RBC-AMT\*>

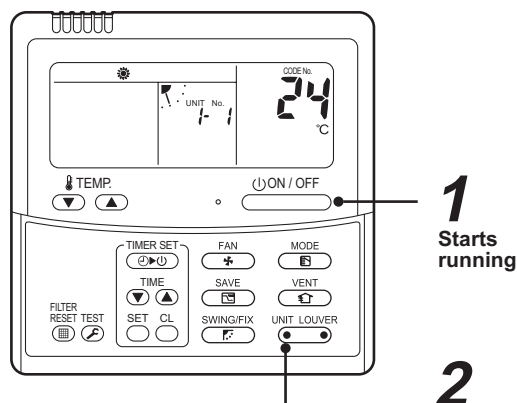


(Execute it while the units are running.)

**1** Push the  button if the units stop.


**2** Push the  button (left side of the button).

A unit numbers 1-1 is indicated on the LCD (it will disappear after a few seconds). The indicated number shows the system address and indoor unit address of the unit.

When 2 or more indoor units are connected to the remote controller (group-controlled units), a number of other connected units appears each time you push the  button (left side of the button).

## To find an indoor unit's position from its address

### ▼ When checking unit numbers controlled as a group

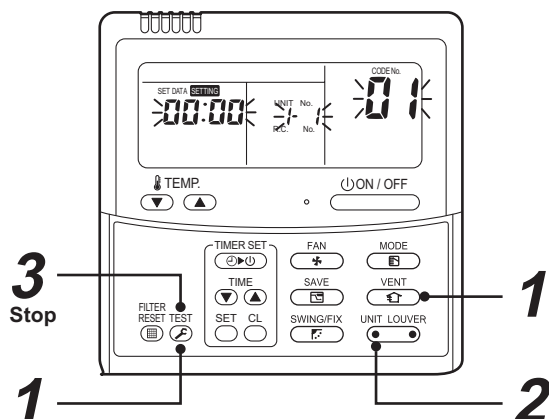

**(Execute it while the units are stopped.)**

The indoor unit numbers in a group are indicated one after another. The fan and louvers of the indicated units are activated.

**1 Push and hold the  and  buttons at the same time for more than 4 seconds.**

- ALL appears on UNIT No. on the LCD display.
- The fans and louvers of all the indoor units in the group are activated.

**2 Push the  button (left side of the button). Each time you push the button, the indoor unit numbers are indicated one after another.**

- The first-indicated unit number is the address of the header unit.
- Only the fan and louvers of the indicated indoor unit are activated.

**3 Push the  button to finish the procedure.**


All the indoor units in the group stop.

## ■ Changing the indoor unit address using a remote controller

To change an indoor unit address using a wired remote controller.

<RBC-AMT\*>

- ▼ The method to change the address of an individual indoor unit (the indoor unit is paired with a wired remote controller one-to-one), or an indoor unit in a group. (The method is available when the addresses have already been set automatically.)

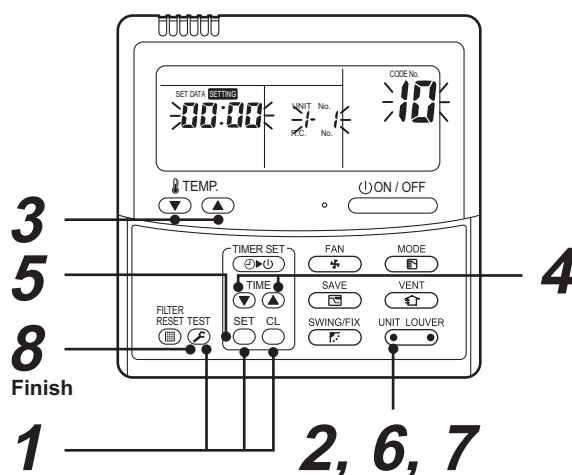

(Execute it while the units are stopped.)


- 1** Push and hold the , , and buttons at the same time for more than 4 seconds.  
(If 2 or more indoor units are controlled in a group, the first indicated UNIT No. is that of the head unit.)
- 2** Push the button (left side of the button) repeatedly to select an indoor unit number to change if 2 or more units are controlled in a group. (The fan and louvers of the selected indoor unit are activated.)  
(The fan of the selected indoor unit is turned on.)
- 3** Push the TEMP. / buttons repeatedly to select **13** for CODE No..
- 4** Push the TIME / buttons repeatedly to change the value indicated in the SET DATA section to that you want.
- 5** Push the button.
- 6** Push the button (left side of the button) repeatedly to select another indoor UNIT No. to change.  
Repeat steps **4** to **6** to change the indoor unit addresses so as to make each of them unique.
- 7** Push the button (left side of the button) to check the changed addresses.
- 8** If the addresses have been changed correctly, push the button to finish the procedure.

To change an indoor unit address using a wired remote controller.

<RBC-ASCU11\*>

The method to change the address of an individual indoor unit (the indoor unit is paired with a wired remote controller one-to-one), or an indoor unit in a group.

(The method is available when the addresses have already been set automatically.)

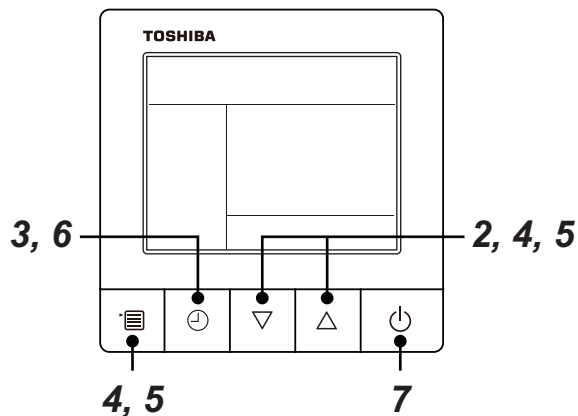

(Execute it while the units are stopped.)

- 1** Push and hold menu button and [ ∇ ] setting button simultaneously for 10 seconds or more.  
(If 2 or more indoor units are controlled in a group, the first indicated UNIT No. is that of the head unit.)
- 2** Each time [ ∇ ] [ △ ] setting button is pushed, indoor unit numbers in the group control change cyclically.  
Select the indoor unit to change settings for.  
(The fan and louvers of the selected indoor unit are activated.)  
(The fan of the selected indoor unit is turned on.)
- 3** Push the Timer off button.
- 4** Push the menu button to make Code No. flash. Change Code No. to 13 with [ ∇ ] [ △ ] setting button.
- 5** Push the menu button to make Set data [\*\*\*\*] flash.  
Push the [ ∇ ] [ △ ] buttons repeatedly to change the value indicated in the SET DATA section to that you want.
- 6** Push the Timer off button.  
(When the display changes from [ - - ] to Set data [\*\*\*\*] flashing, the setup is completed.)
- 7** When all the settings have been completed, push ON/OFF button to determine the settings.  
“ **SETTING** ” flashes and then the display content disappears and the air conditioner enters the normal stop mode. (The remote controller is unavailable while “ **SETTING** ” is flashing.)
- 8** To change settings of another indoor unit, repeat from Procedure 1.

## ■ Resetting the address (Resetting to the factory default (address undecided))

### Method 1

Clearing each address separately using a wired remote controller.

Set the system address, indoor unit address and group address to "00Un" using a wired remote controller. (For the setting procedure, refer to the address setting procedures using the wired remote controller on the previous pages.)

\* Address not set will be either "00Un" or "0099", depending on the type of the remote controller.

Central control address (I.DN [03]) • Indoor unit address (I.DN [13])

Remote controller	Communication Type	Unfixed	Display order
U series	TU2C-LINK	00Un	••• ↔ 0128 ↔ 00Un ↔ 0001 ↔ •••
	TCC-LINK	00Un	••• ↔ 0064 ↔ 00Un ↔ 0001 ↔ •••
Other than U series	TCC-LINK	0099	••• ↔ 0064 ↔ 0099 ↔ 0001 ↔ •••

Line address (I.DN [12])

Remote controller	Communication Type	Unfixed	Display order
U series	TU2C-LINK	00Un	••• ↔ 0128 ↔ 00Un ↔ 0001 ↔ •••
	TCC-LINK	00Un	••• ↔ 0030 ↔ 00Un ↔ 0001 ↔ •••
Other than U series	TCC-LINK	0099	••• ↔ 0030 ↔ 0099 ↔ 0001 ↔ •••

Group address (I.DN [14])

Remote controller	Communication Type	Unfixed	Display order
U series	TU2C-LINK	00Un	••• ↔ 0002 ↔ 00Un ↔ 0000 ↔ •••
	TCC-LINK		
Other than U series	TCC-LINK	0099	••• ↔ 0002 ↔ 0099 ↔ 0000 ↔ •••

### Method 2

Clearing all the indoor unit addresses on a refrigerate line at once from the outdoor unit.

- 1 Turn off the refrigerant line to reset to the factory default.**
- 2 Turn on the indoor and outdoor units of the refrigerant line for which you want to initialize the addresses. About one minute after turning on the power, confirm that the 7-segment display on the header outdoor unit indicates "U.1. - -" and operate the interface P.C. board on the header outdoor unit of the refrigerant line as follows.**

SW01	SW02	SW03	SW04	Clearable addresses
2	1	2	Confirm that the 7-segment display indicates "A.d.buS" and turn SW04 ON for more than five seconds.	System/indoor unit/group address
2	2	2	Confirm that the 7-segment display indicates "A.d.nEt" and turn SW04 ON for more than five seconds.	Central control address

- 3 Confirm that the 7-segment display indicates "A.d. c.L." and set SW01, SW02 and SW03 to 1, 1, 1 respectively.**
- 4 After finished clearing the address successfully, "U.1.Err" and "L08" appear alternatively at 1 second intervals on the 7-segment display.**
- 5 Set the addresses again after finishing the clearance.**

## Communication setting

This product needs setting either TU2C-Link or TCC-Link communication after the address setting. Follow the procedure below for the communication setting .TCC-Link communication has been set as the factory default.

### CAUTION

- Be sure to complete the address setting before communication setting.
- It may takes about 1 to 3 minutes to address one refrigerant line.
- Settings on the outdoor unit are required for communication setting.  
(Communication setting is not started simply by turning on the power.)
- If a unit that has already been set for communication is connected, it cannot be set correctly.  
In this case, clear the communication settings and set again.
- The indoor unit DN code (FC) and outdoor unit DN code (82) are automatically set for the set communication.  
In the case of the TU2C-LINK system, the terminating resistance (indoor unit DN code (1FC)) of the indoor unit that maximizes the wiring length from the outdoor unit is automatically set.

### ■ Communication setting

1. Turn on indoor units first, and then turn on outdoor units.
2. Set the rotary switches on the interface P.C. board of the header outdoor unit SW01 to [2], SW02 to [16] and SW03 to [2].
3. The 7-segment display switches between “c.c. b P S” and “c.c. 0 “ at 1-second intervals.
4. Push and hold SW04 for more than 5 seconds.
5. The 7-segment display flashes “c.c.i n”.
6. The 7-segment display switches between “c.c. i n” and “c.c. \* \* \* “ at 1-second intervals.  
Check the number of connected indoor units [\* \* \*].  
If the number of indoor units is right, move on to 7.


(When the number of the connected indoor units differs from the number of indoor units displayed on the 7-segment display, clear the communication type setting to eliminate the cause.  
To clear the communication type setting, push and hold the SW05 for 5 seconds or more.  
The 7-segment display flashes “c.c.r S t” .  
After a while, the 7-segment display switches between “c. c. b p s” and “c.c. 0”  
Set the rotary switch back to SW01 to [1], SW02 to [1], SW03 to [1].

7. Push and hold SW06 for more than 5 seconds.
8. The 7-segment display flashes “c.c.b p s”.  
After that, the setting is complete when the 7-segment display changes to “c.c F i n”.  
(If the 7-segment display changes to “c.c. E r r”, try again.)
9. After a while, the 7-segment display switches between “c.c. b p s” and “c.c. 1 “ (or “ c.c. o “) at 1-second intervals.
10. Set the rotary switch on the interface P.C. board of the header outdoor unit back to SW01=[1], SW02=[1], SW03=[1].

Communication Type	7-segment display		Outdoor unit DN code No. (O.DN)	Indoor unit DN code No. (I.DN)		
			[082] (Communication setting)	[FC] (Communication setting)	[1FC] (Indoor termination resistance setup)	
TU2C-Link (U series and future models)	[A] [c.c.]	[B] [b P S] [ 1 ]	0003	0003	The farthest indoor unit (*1) 0001	Indoor units other than the left column 0000
TCC-Link (Other than U series)	[A] [c.c.] [c.c.]	[B] [b P S] [ 1 ]	0000	0000	0000	

\*1 : Only the indoor unit that has the longest wiring length from the outdoor unit.  
The indoor address of the indoor unit with the terminator turned on is confirm the items in "7-7-11. Monitor Function of Remote Controller Switch".


#### Interface P.C. board on the header outdoor unit

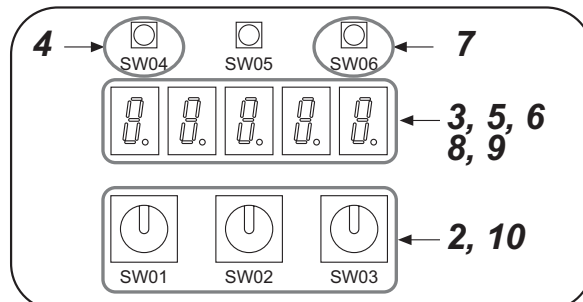



## ■ Resetting the communication (Resetting to the factory default)

1. Turn off indoor units first, and then turn off outdoor units.  
(It turns on in order of Outdoor unit → Indoor unit)
2. Turn on DIP switch 2 of SW106 on the header outdoor unit interface P.C.boards.
3. Turn on the outdoor unit first, then turn on the indoor unit after about 20 seconds.  
(Turn on the header unit, and then 20 seconds or more later, turn on the follower units and indoor units. If the follower units cannot be turned on after the header unit has been turned on, turn on both of them simultaneously. )
4. The 7-segment display indication “ - r S t. - ”. Check all the units have turned on more than approx. 1 minute. Turn off all the indoor and outdoor units.
5. Turn off DIP switch 2 of SW106 on the header outdoor unit interface P.C.boards.



## ■ In the case of an increase in address-undefined indoor units (extension, etc.)

To set up the indoor address of a unit with an address that is undefined due to the extension of indoor units or replacement of PC board, etc., follow the methods below.

### 1. Clear the communication setting

#### Setup procedure

- (1) Turn off indoor unit first, and then turn off outdoor units.
- (2) Turn on DIP switch 2 of SW106 on the header outdoor unit interface P.C. board.
- (3) Turn on the outdoor unit first, then turn on the indoor unit after about 20 second.  
(Turn on the header unit, and then 20 seconds or more later, turn on the follower units and indoor units. If the follower units cannot be turned on after the header unit has been turned on, turn on both of them simultaneously. )
- (4) The 7-segment display indication “ - r S t. - ”. Check all the units have turned on more than approx. 1 minute. Turn off all the indoor and outdoor units.
- (5) Turn off DIP switch 2 of SW106 on the header outdoor unit interface P.C. board.

### 2. Address setting

#### Method 1

Set up an address individually from a wired remote controller.

(Line address, Indoor address, Group address, Central address)

For the setup method, refer to “Manual address setup from the remote controller.” above.

#### Method 2

Set up an address from the outdoor unit.

\* Leave the addresses of the units for which addresses have already been set up as they are. Set up an address only for the unit where the address is undefined.

Addresses are allocated from lower numbers.

#### Setup procedure

- (1) Turn on the indoor/outdoor power for the refrigerant line for which an address is to be set up.  
After approximately 1 minute, check that “U.1. - - -” is displayed on the 7-segment display.
- (2) Execute the following operation on the interface PC board of the header unit.

SW01	SW02	SW03	SW04
2	14	2	After checking that “In.At” is displayed on the 7-segment display, push SW04 for 5 seconds or more.


“AUTO1” → “AUTO2” → “AUTO3” → ... → “AUTO9” ... is counted and displayed on the 7-segment display.

- (3) When “U.1. - - -” is displayed on the 7-segment display, the setup operation finished.  
Turn off the indoor/outdoor power.

### 3. Communication method setting


#### Setup procedure

- (1) Turn on indoor units first, and then turn on outdoor units.
- (2) Set the rotary switch of the interface P.C. board on the header outdoor unit to SW01=[2], SW02=[16] and SW03=[2].
- (3) The 7-segment display switches between “c.c. b p s” and “c.c. 0 “ at 1-second intervals.
- (4) Push and hold SW04 for more than 5 seconds.
- (5) The 7-segment display flashes “c.c.i n”.
- (6) The 7-segment display switches between “c.c. i n” and “c.c. \*\*\* “ at 1-second intervals.  
Check the number of connected indoor units [\*\*\*].  
(When the number of the connected indoor units differs from the number of indoor units displayed on the 7-segment display, clear the communication type setting to eliminate the cause.  
To clear the communication type setting, push and hold the SW05 for 5 seconds or more.  
The 7-segment display flashes “c.c.r S t”.  
After a while, the 7-segment display switches between “c.c. b p s “ and “c.c. 0 “.  
Set the rotary switch back to SW01 to [1], SW02 to [1], SW03 to [1].)
- (7) Push and hold SW06 for more than 5 seconds.
- (8) The 7-segment display flashes “c.c.b p s”.  
After that, the setting is complete when the 7-segment display changes to “c.c F i n”.  
(If the 7-segment display changes to “c.c. E r r “, try again.)
- (9) After a while, the 7-segment display switches between “c.c. b p s “ and “c.c. 1 “ (or “c.c. o “) at 1-second intervals.
- (10) Set the rotary switch on the interface P.C. board of the header outdoor unit back to SW01=[1], SW02=[1], SW03=[1].

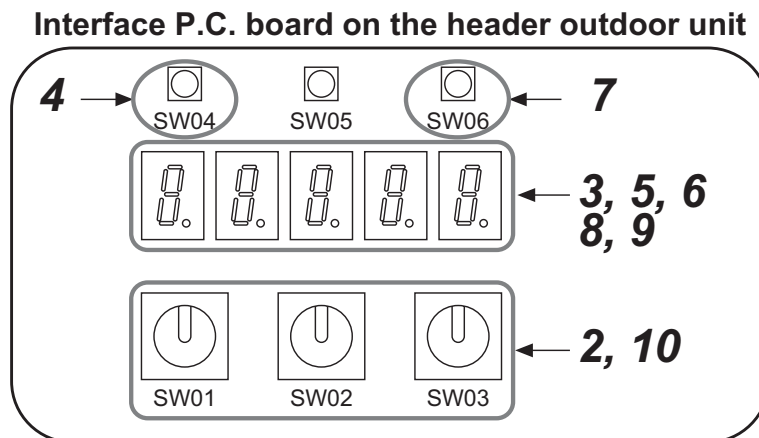

### 7-4-4. Check after Address Setup when Central Control System Is Connected

When the central control system is connected, check that the following setup has finished after address setup.

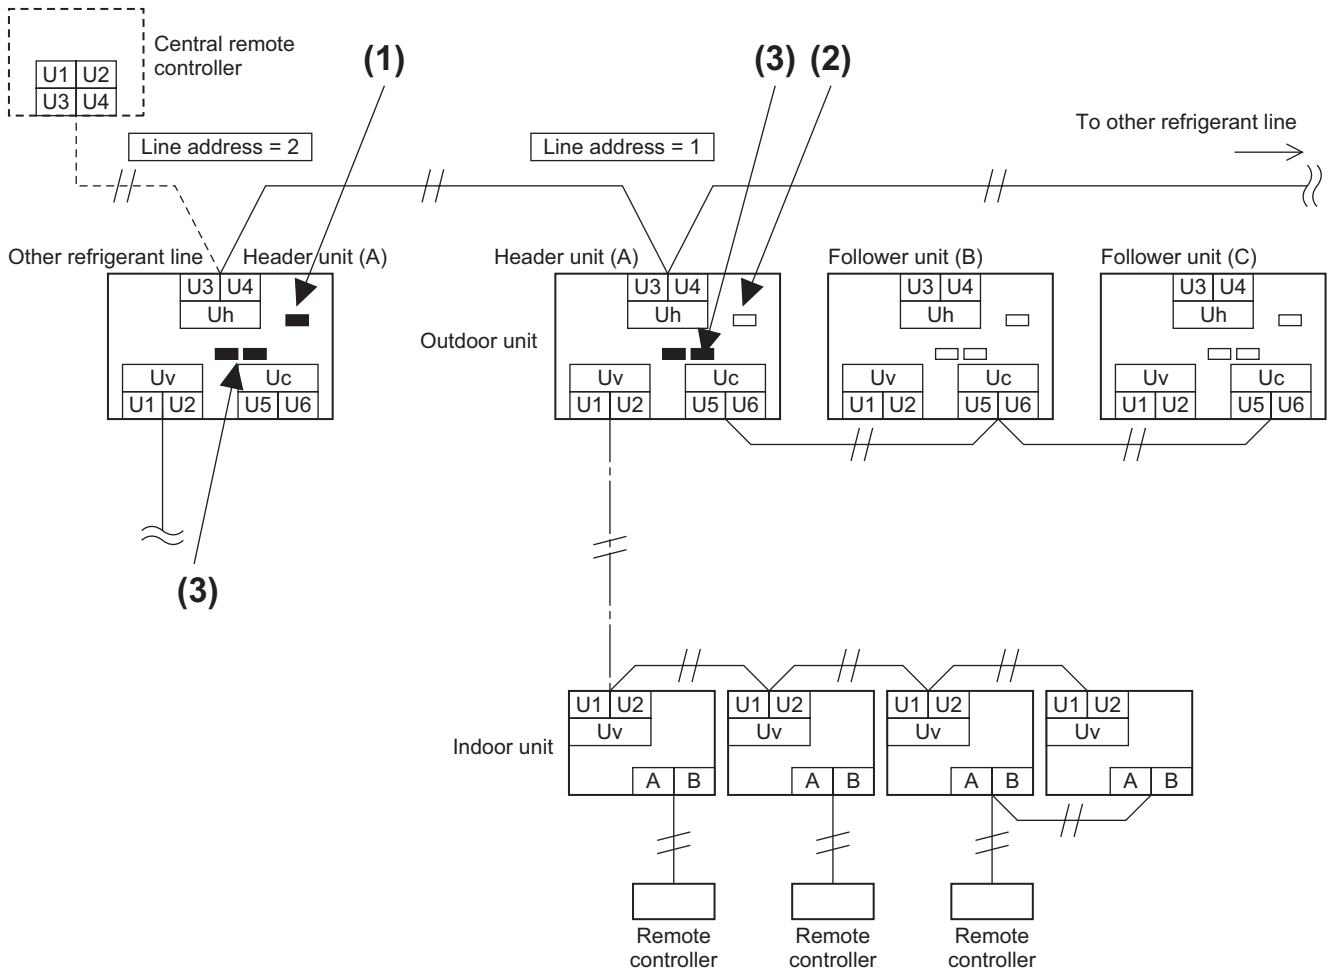

	Main check items	Check
Terminator resistor	(1) Is the terminator resistor (SW100-bit1) of the header unit with the smallest line address number in the central control turned on? (Setup is unnecessary for follower units. (Factory default : OFF))	
	(2) Is the terminator resistor (SW100-bit1) of the header units, except for the line with the smallest central control line address, turned off? (Setup is unnecessary for follower units. (Factory default : OFF))	
Line address	(3) Are addresses in the line address (SW101,SW102) not duplicated in each refrigerant line?	


#### NOTE

The figure above does not show all the electric wires.  
For details, refer to the installation manuals for the outdoor unit, indoor unit, remote controller, or optional devices.

## 7-5. Troubleshooting in Test Operation

If there are phenomena such as the output of a check code or the remote controller is not accepted when powered on after wiring work or during address setup operation, the following causes are considered.

### 7-5-1. A Check Code is Displayed on the Remote Controller


Check the code displayed on the indoor remote controller	Header unit 7-segment display	Cause	Countermeasures
E04		When outdoor power is off	Check that the header outdoor unit power is on
	L08	Address setup trouble <ul style="list-style-type: none"> <li>Only line addresses of the connected indoor units are undefined.</li> <li>The outdoor line address and the line addresses of all the indoor units do not match.</li> <li>The indoor addresses are duplicated. (Units except those displaying E04 are duplicated.)</li> <li>A header unit is not set up in group control (except groups displaying E04).</li> </ul>	Set up the address again.
	E08 ↔ -XX Alternate blinking	Duplication of indoor addresses (address number in the subcode of the check code are duplicated).	Set up the address again.
	E07	When the terminator resistor (SW100 bit2) in the communication line between indoor and outdoor units (Uv) on the outdoor unit has not been turned on or two or more terminator resistors have been turned on (After address setup, when terminator resistor setup is changed after powering-on) <div style="display: inline-block; vertical-align: middle; text-align: center;">  <p>SW100</p> </div>	Check SW100 bit 1 or bit 2 of the header unit. No connection between multiple refrigerant lines: Turn off SW100 bit 1 and turn on bit 2. Connection between multiple refrigerant lines: Turn on SW100 bit 1 of only the connected header unit for one line. Turn on SW100 bit2 of all the header units. *Factory default : SW100 bit 1 is off, bit 2 is off.
		Transmission circuit trouble at the interface side (P.C. board failure)	Replace the interface PC board.
	E06	After address setup, communication from all the indoor units is interrupted under the condition that a normal operation can be performed.	Check and correct disconnection of the indoor/outdoor communication line (the communication line between the header unit and the leading indoor unit). Check for the influence of communication noise. In TU2C-LINK communication system, if the termination resistance is not set in any of the indoor units.
E16	E16 ↔ -XX Alternate blinking	Exceeded the number or capacity of connected indoor units	Adjust the number or capacity of connected indoor units.
E23	E23	Communication between outdoor units has stopped.	Check the number of connected outdoor units. Check that outdoor unit power is on.
E25	E25	Duplication of outdoor addresses (only when an outdoor address was manually set up)	Do not use manual setup for outdoor addresses.
E26	E26 ↔ -XX Alternate blinking	Number of connected outdoor units has decreased. <ul style="list-style-type: none"> <li>When installing an outdoor backup</li> <li>The power of a follower unit is not turned on.</li> </ul>	Correction of the cause of trouble occurrence <ul style="list-style-type: none"> <li>If it occurs when installing a backup, clear the trouble after setup finishes.</li> <li>If the power of a follower unit is not turned on, turn on the power.</li> </ul>
L04	L04	Duplication of outdoor line addresses <ul style="list-style-type: none"> <li>Line address setup trouble (occurred after connection between U1/U2 and U3/U4 connectors)</li> </ul>	Modify the line address setup of the header unit between lines. (Set up SW13 and SW14 on the interface PC board.)
L05(*)	L06	Duplication of indoor units with priority	Set up priority only for one indoor unit.
L06(*)	None	There are two or more indoor units set up with priority.	Among indoor units indicating "L05," set one unit with priority.
L08	L08	Address setup trouble <ul style="list-style-type: none"> <li>Only indoor addresses of all the connected indoor units are undefined.</li> </ul>	Set up the addresses again. Modify the setup.

\* "L05": Displayed on the indoor unit set up with priority

"L06": Displayed on the indoor units except the one set up with priority

### 7-5-2. No Remote Controller Response with Check Code

(Operation from the indoor remote controller is not accepted, and a check code is displayed on the 7-segment display of the interface PC board of the header unit)

Indoor remote controller status	Header unit 7-segment display	Cause	Countermeasures
No response	L08	Line addresses and indoor addresses of all the connected indoor units are not set.	Set up addresses.
		There is no header unit of group control.	Set up a group address.
	E19 ⇔ -00 Alternate blinking	Indoor unit power is not turned on.	Turn on the power again. (In the order: indoor → outdoor)
		Indoor/outdoor communication line is not correctly connected to the U1/U2 terminal of the header unit ( Fig. 1). (Indoor/outdoor cannot communicate before address setup.)	Correct wiring
		When the terminator resistor (SW100 bit2) in the communication line between indoor and outdoor units (Uv) on the outdoor unit has not been turned on or two or more terminator resistors have been turned on (After address setup, when terminator resistor setup is changed after powering-on)	 Check SW100 bit 1 or bit 2 of the header unit. No connection between multiple refrigerant lines: Turn off SW100 bit 1 and turn on bit 2. Connection between multiple refrigerant lines: Turn on SW100 bit 1 of only the connected header unit for one line. Turn on SW100 bit2 of all the header units. * Factory default : SW100 bit 1 is off, bit 2 is off.
	E19 ⇔ -02 Alternate blinking	When connecting an indoor/outdoor communication line between outdoor units under the condition of a connected communication line between outdoor units ( Fig. 2).	Correct wiring
		SW08 setup trouble	Turn all SW08 switches to "off."
	E20 ⇔ -01 Alternate blinking	Address setup is performed with connecting an indoor/outdoor communication line between outdoor units ( Fig. 3).	Correct wiring
Address setup is performed under the condition of connecting multiple refrigerant lines ( Fig. 3).		Correct wiring	

### 7-5-3. No Remote Controller Response without Check Code

(There is no display of a check code on the 7-segment display on the interface PC board of the header unit, although there is indoor unit that is not accepting operation from the indoor remote controller)

Indoor remote controller status	Header unit 7-segment display	Cause	Countermeasures
No response	None	The communication line is not connected between indoor and outdoor (the unit that does not respond to the indoor remote controller).	Improve the wiring.
		Line address and indoor address are not set (the unit that does not respond to the indoor remote controller).	Set up the address.
		The power of the header unit of the group is not turned on in indoor group control (the unit that does not respond to the indoor remote controller).	Turn on the power.
		Group address is set to the follower unit for individual control (the unit that does not respond to the indoor remote controller).	Set the group address to "0" in the case of individual control.
No display on the indoor remote controller (no line is output.)	None	The power is not turned on (the unit that is not displayed on the indoor remote controller).	Turn on the power.
		The indoor remote controller is not connected with a wire (the unit that is not displayed on the indoor remote controller).	Improve the wiring.
		Miswiring of the indoor remote controller (the unit that is not displayed on the indoor remote controller)	Improve the wiring.
		Indoor remote controller communication circuit trouble (the unit that is not displayed on the indoor remote controller) If 220 V is incorrectly applied to the indoor remote controller terminal, the remote controller communication circuit fails.	Remove the quick connect terminal connected to indoor remote controller terminals A/B, and check the voltage. If voltage is not applied (normally 15 to 18 V), replace the PC board.

#### 7-5-4. Connected Indoor/Outdoor Unit Quantity Check

(In checking the number of connected outdoor units and connected indoor units after address setup, a lower number of connected units is displayed (There are outdoor/ indoor units that do not operate in a test operation))

Status	Cause	Counter measures
The number of connected outdoor units is few.	Miswiring of communication lines between outdoor units or an unconnected wire ( Fig. 4). (Address setup operation finished without recognizing a miswired follower unit.)	After improvement of wiring, set up the addresses again and check the number of connected outdoor units.
The number of connected indoor units is few.	Miswiring of communication lines between indoor units or an unconnected wire ( Fig. 5). (Address setup operation finished without recognizing a miswired indoor unit.)	After modification of wiring, set up the addresses again and check the number of connected indoor units.
The number of indoor units connected to a group is few in group operation from an indoor remote controller.	The indoor remote controller is not connected with wire. Miswiring of the indoor remote controller	Using the main indoor remote controller connected to a group, start a test operation, specify the unit that is not operating (the unit not connected to the group), and then check the wiring.
	Indoor remote controller communication circuit trouble If 220 V is incorrectly applied to the remote controller terminal, the remote controller communication circuit fails.	Using the main indoor remote controller connected to a group, start a test operation and then specify the unit that is not operating (the unit not connected to the group). Remove the quick connect terminal connected to remote controller terminals A/B, and check the voltage. If voltage is not applied (normally 15 to 18 V), replace the PC board.


### Miswiring example

Figure	Remote controller status	Header unit 7-segment display	Miswiring example
Fig 1	No response	E19, 02	<ul style="list-style-type: none"> <li>• Follower unit is incorrectly set to header unit.</li> </ul> <ul style="list-style-type: none"> <li>• Indoor/outdoor communication line is miswired to header unit of other system.</li> </ul>
Fig 2	E11	L08	<ul style="list-style-type: none"> <li>• Indoor/outdoor communication line is miswired to Uh (U3/U4).</li> </ul> <ul style="list-style-type: none"> <li>• Indoor/outdoor communication line is not connected.</li> </ul>

Figure	Status	Miswiring example
Fig 3	The number of connected outdoor units is few.	<ul style="list-style-type: none"> <li>• Outdoor communication line is miswired to Uh (U3/U4).</li> </ul>
Fig 4	The number of connected indoor units is few.	<ul style="list-style-type: none"> <li>• Indoor/outdoor communication line is miswired to remote controller terminal (A/B).</li> </ul> <ul style="list-style-type: none"> <li>• There is an indoor unit not connected to the indoor/outdoor communication line.</li> </ul>

## 7-6. Test Operation Check

### 7-6-1. Fan Check

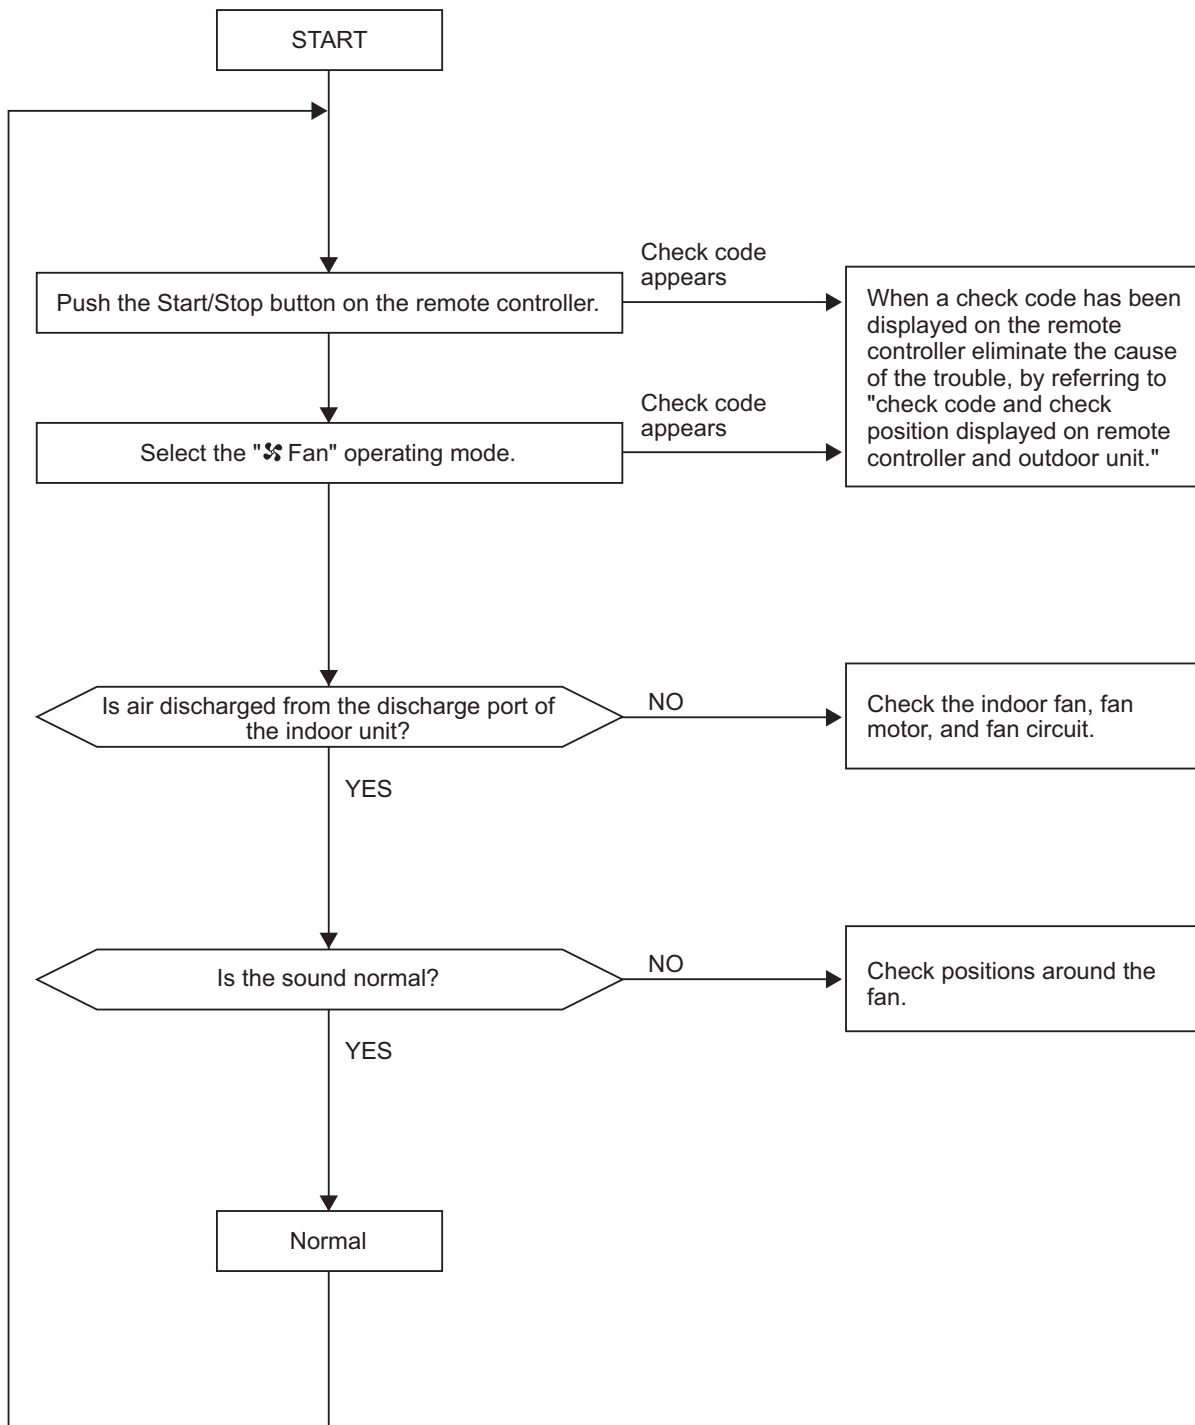

Check every indoor unit in turn.



## 7-6-2. Cooling/Heating Test Operation Check

The cooling/heating test operation check can be performed on both the indoor remote controller and the outdoor header unit interface PC board.





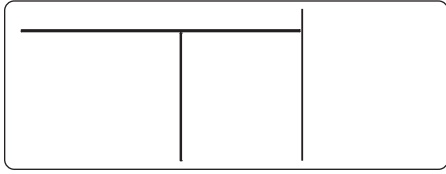
### (1) Test operation start/stop operation


Test operation from the indoor remote controller

- Wired remote controller: Refer to the items below in “Test operation” of the wired remote controller.
- Wireless remote controller: Refer to the items below in “Test operation” of the wireless remote controller.

#### ▼ Wired remote controller

##### <RBC-AMT\*>

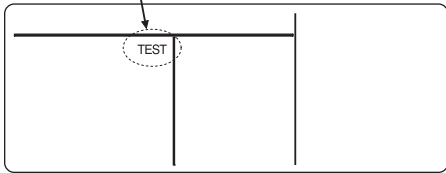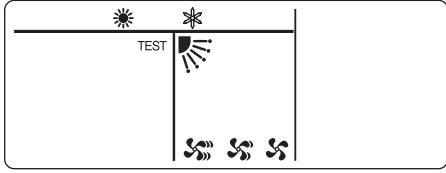
Procedure	Operation content
1	When the Test button is pushed for 4 seconds or more, “TEST” is displayed in the display section, and the unit enters test operating mode. 
2	Push the  button.
3	Using the Select Mode button, select the “* COOL” or “* HEAT” operating mode. • Do not use an operating mode other than “* COOL” or “* HEAT”. • Temperature adjustment is unavailable during test operation. • Trouble is detected as usual. 
4	When the test operation has finished, push the  button to stop the operation. (The same display as in procedure 1 appears in the display section.)
5	Push the Test button to clear the test operating mode. (“TEST” disappears from the display section, and the status returns to the normal stopped status.) 

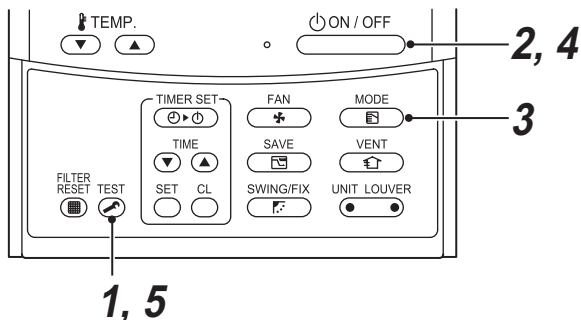


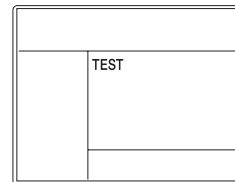
##### <RBC-ASCU11\*>


**Be sure to stop the air conditioner before making settings.**

(Change the setup while the air conditioner is not working.)

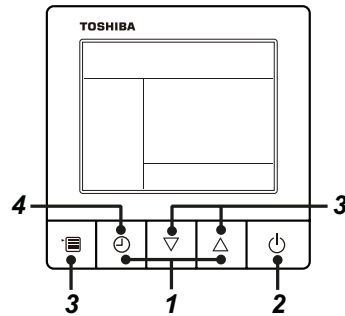

- 1 Push and hold OFF timer button and [  ] setting button simultaneously for 10 seconds or more. [TEST] is displayed on the display part and the test run is permitted.




- 2 Push ON/OFF button.
- 3 Push menu button to select the operation mode. Select [  Cool ] or [  Heat ] with [  ] [  ] setting button.

- Do not run the air conditioner in a mode other than [Cool] or [Heat].
- The temperature setting function does not work during test run.
- The check code is displayed as usual.

- 4 After the test run, push OFF timer button to stop a test run.

([TEST] disappears on the display and the air conditioner enters the normal stop mode.)

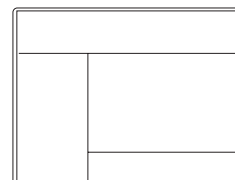

▼ **Wireless remote controller**

**1** Turn on the power of the air conditioner. When power is turned on for the first time after installation, it takes approx. 5 minutes until the remote controller becomes available. In the case of subsequent power on, it takes approx. 1 minute until the remote controller becomes available. Execute a test run after the predetermined time has passed.

**2** Push “ON/OFF” button on the remote controller, select [  Cool ] or [  Heat ] with “MODE” button, and then select [  HIGH ] with “FAN” button.

**3**

Cooling test run	Heating test run
Set the temperature to 17°C with the temp. setup buttons.	Set the temperature to 30°C with the temp. setup buttons.

**4**

Cooling test run	Heating test run
After confirming a signal receiving sound “beep” immediately set the temperature to 18°C with the temp. setup buttons.	After confirming a signal receiving sound “beep” immediately set the temperature to 29°C with the temp. setup buttons.

**5**

Cooling test run	Heating test run
After confirming a signal receiving sound “beep” immediately set the temperature to 17°C with the temp. setup buttons.	After confirming a signal receiving sound “beep” immediately set the temperature to 30°C with the temp. setup buttons.

**6** Repeat procedures 4 → 5 → 4 → 5. Indicators “Operation” (green), “Timer” (green), and “Ready” (orange) in the wireless receiver section flash in approx. 10 seconds, and the air conditioner starts operation. If any of these indicators does not flash, repeat procedures 2 to 5.

**7** Upon completion of the test run, push “ON/OFF” button to stop operation.

<Overview of test run operations using the wireless remote controller>

**Cooling test run:**

ON/OFF → 17°C → 18°C → 17°C → 18°C → 17°C → 18°C → 17°C → (test run) → ON/OFF

**Heating test run:**


ON/OFF → 30°C → 29°C → 30°C → 29°C → 30°C → 29°C → 30°C → (test run) → ON/OFF

Test operation from the outdoor unit

- Refer to “7-7-2. Function to Start/Stop (ON/OFF) Indoor Unit from Outdoor Unit” in “7-7. Service Support Function.”

**Note:** The test operation returns to normal operating mode after 60 minutes.

**(2) Test operation**

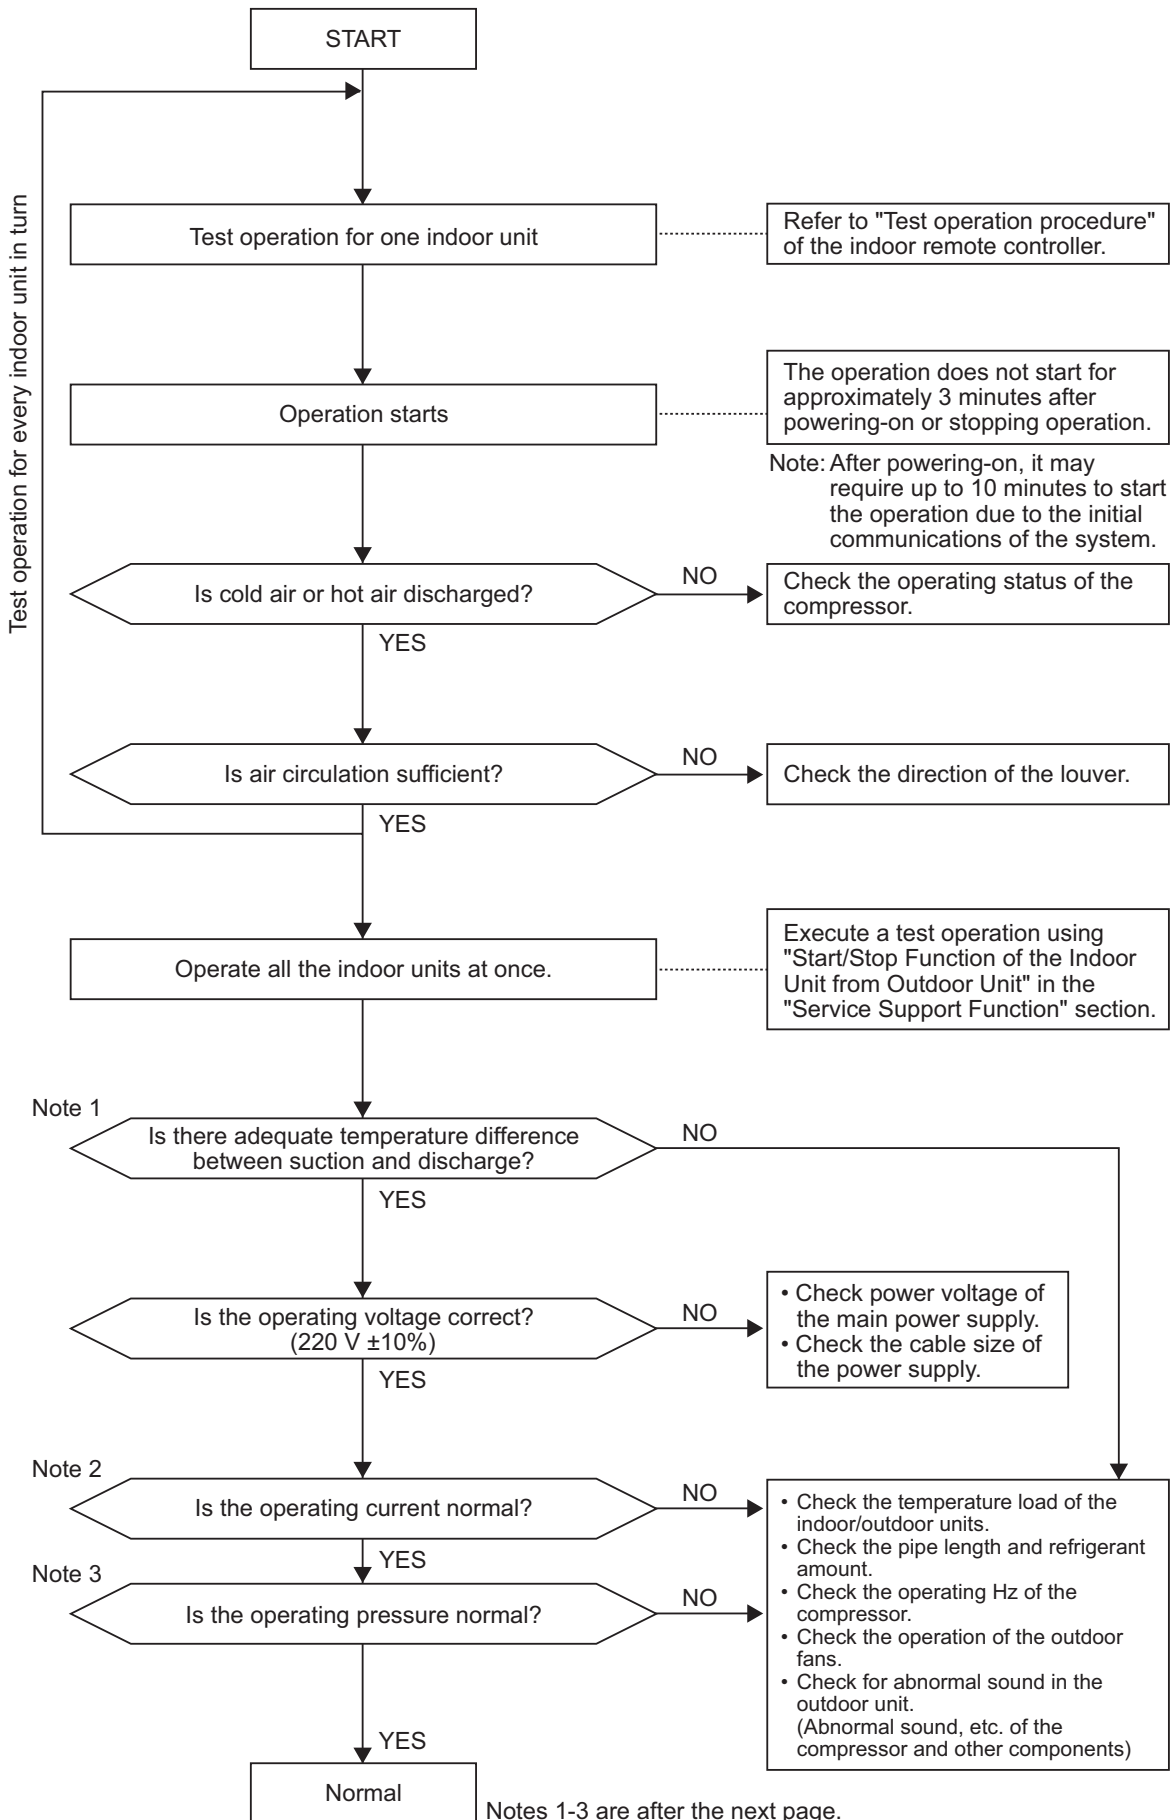

**Note 1: Criteria for the difference between suction and discharge temperatures**

**(1) Cooling operation**

After operating for a minimum of 30 minutes in “COOL” mode, if the T dry bulb temperature difference between suction and discharge air of the indoor unit is 8°C or more, it is normal.

**(2) Heating operation**

After operating for a minimum of 30 minutes in “HEAT” mode, if the T dry bulb temperature difference between suction and discharge air of the indoor unit is 15°C or more, it is normal.

\* If demand from the indoor unit on the outdoor unit is low because the difference between the temperature set by the remote controller and the temperature of the room is small, then the T temperature difference is small.

\* Consider that T temperature difference may diminish in cases of a system in which the connected indoor unit capacity exceeds the outdoor unit capacity, the pipe length is long, or a large difference exists among outdoor units.

**Note 2: Criteria for operating power current**

The table below shows the maximum current for each outdoor unit. Under standard conditions, operating current is about 80% of the value shown in the table below.

Model	MMY-MUP	<b>0801*</b>	<b>1001*</b>	<b>1201*</b>	<b>1401*</b>	<b>1601*</b>
Current value	(A)	15.4	20.5	24.5	27.5	30.5
Model	MMY-MUP	<b>1801*</b>	<b>2001*</b>	<b>2201*</b>	<b>2401*</b>	
Current value	(A)	34	36	51	54	

**Note 3: Criteria for cycle status**

**(1) These data are based on operating a 4-way Air Discharge Cassette type air conditioner of 100% connection with standard piping length.**

Data may vary depending on temperature conditions, installed pipe length, and room shape combinations, or indoor unit connection capacity.

For pressure criteria in different temperature conditions, refer to (2).

Outdoor Unit MMY-MUP	Operating Mode	Pressure (MPa)		Pipe Surface Temperature (°C)					Compressor Rotation (rps)		Indoor Fan	Air Temperature (DB/WB)(°C)	
				Discharge	Suction	Indoor Heat Exchanger	Outdoor Heat Exchanger	Liquid Temperature	Compressor 1	Compressor 2		Outdoor	Indoor
0801*	Cooling	3.0	1.0	79	21	15	39	26	50	—	High	35	27
	Heating	2.4	0.7	67	2	25	1	21	57	—	High	7	20
1001*	Cooling	3.1	1.0	82	21	15	40	26	56	—	High	35	27
	Heating	2.8	0.7	79	2	23	0	17	63	—	High	7	20
1201*	Cooling	3.4	1.1	86	21	15	40	29	65	—	High	35	27
	Heating	2.5	0.7	75	1	25	0	16	75	—	High	7	20
1401*	Cooling	3.7	1.1	91	20	16	41	33	77	—	High	35	28
	Heating	2.4	0.7	73	1	26	-1	22	83	—	High	7	20
1601*	Cooling	3.2	1.0	85	19	15	43	28	65	—	High	35	27
	Heating	2.5	0.6	71	-1	27	1	17	68	—	High	7	20
1801*	Cooling	3.4	1.0	90	19	14	42	28	70	—	High	35	27
	Heating	2.5	0.6	72	-2	27	2	22	77	—	High	7	20
2001*	Cooling	3.3	0.9	92	20	14	43	31	77	—	High	35	27
	Heating	2.5	0.6	79	0	25	0	1	82	—	High	7	20
2201*	Cooling	3.5	1.0	94	27	15	42	29	71	70	High	35	27
	Heating	2.7	0.6	82	-1	25	0	-4	79	77	High	7	20
2401*	Cooling	3.7	1.0	98	21	15	43	30	78	77	High	35	27
	Heating	2.6	0.6	81	-1	24	0	20	79	77	High	7	20

\* This compressor is driven with a 6-pole motor. The value of the compressor frequency (rps) measured with a clamp meter at the compressor lead line is three times the rotation count (rps) of the compressor.

\* Each compressor may have a different frequency as a measure against resonance.

\* The temperature of the indoor heat exchanger (TC) indicates TCJ sensor temperature when cooling, and TC2 sensor temperature when heating, respectively.



**(2) Criteria for operating pressure**

Operating Mode	Pressure (MPa)		Temperature (°C)	
	Pd	PS	Indoor	Outdoor
Cooling	2.0 ~ 3.3	0.5 ~ 0.9	18 ~ 32	25 ~ 35
Heating	2.5 ~ 3.3	0.5 ~ 0.7	15 ~ 32	5 ~ 35

\* Criteria after 14 minutes or more has passed since operating started

### (3) On rotations of outdoor fans

Outdoor fans may rotate slowly to control pressure when cooling with low outer air temperature or heating with excessive load. For control content, also refer to items in Section 5, "Control Outline: Outdoor Unit, Outdoor Fan Control."

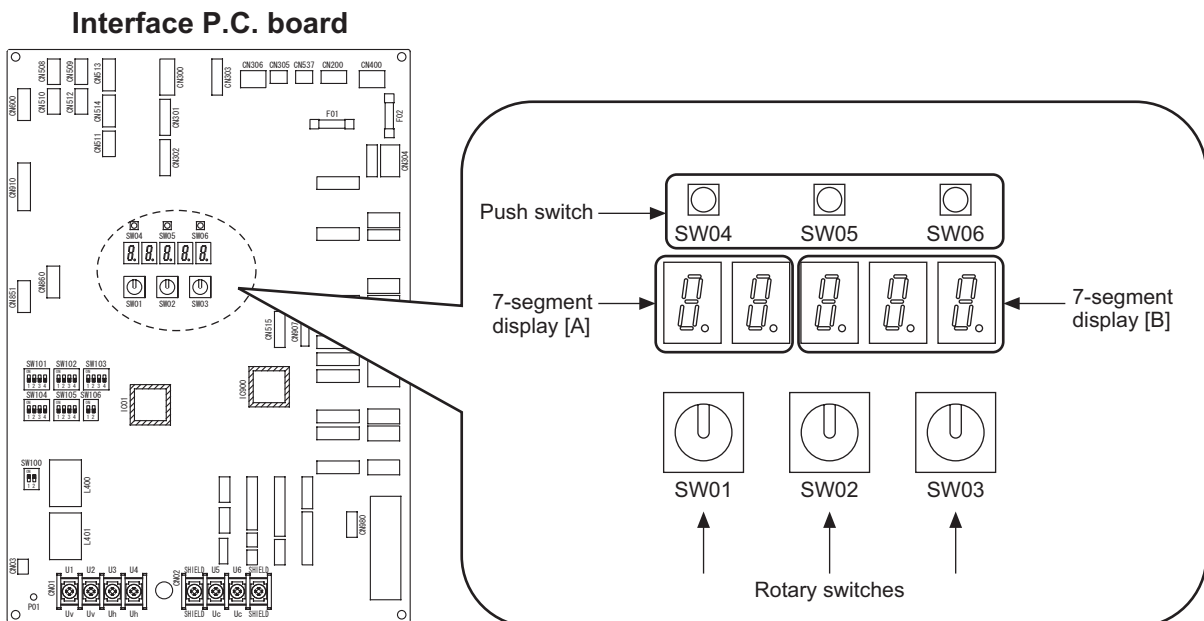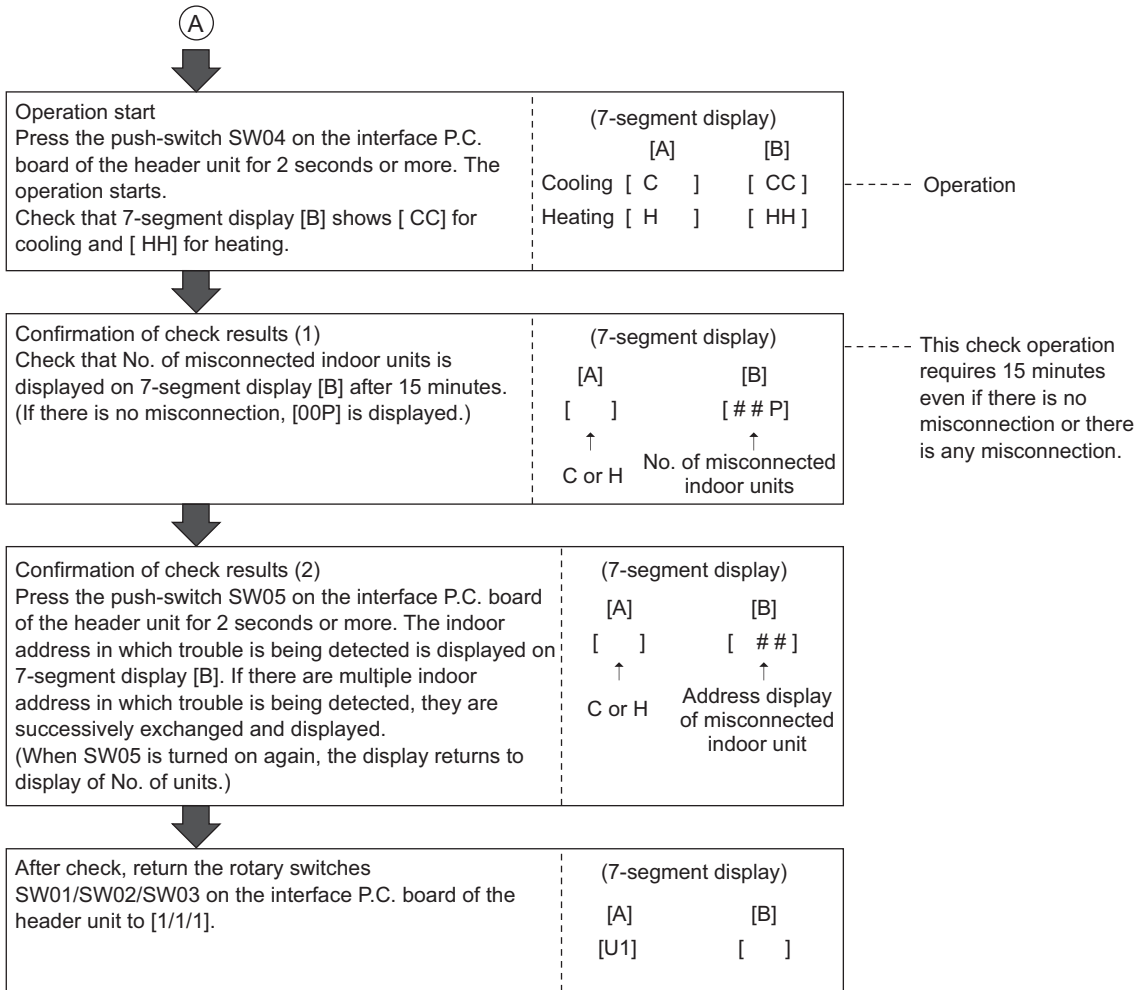

## 7-7. Service Support Function



### 7-7-1. Check Function for Connecting of Refrigerant and Control Lines

This function is provided to check misconnection of the refrigerant pipes and the control transmission line (Wiring over lines) between indoor unit and outdoor unit by using the switch on the interface P.C. board of the header unit.

However, be sure to check the following items prior to executing this check function.

- 1 This check function does not work when a group operation by remote controller is performed and it is used over outdoor units.**
- 2 When using this check system, be sure to check for each 1 line in the unit of outdoor unit. If checking the multiple lines at the same time, misjudgment may be caused.**

(Check procedure)

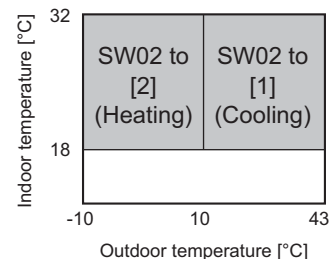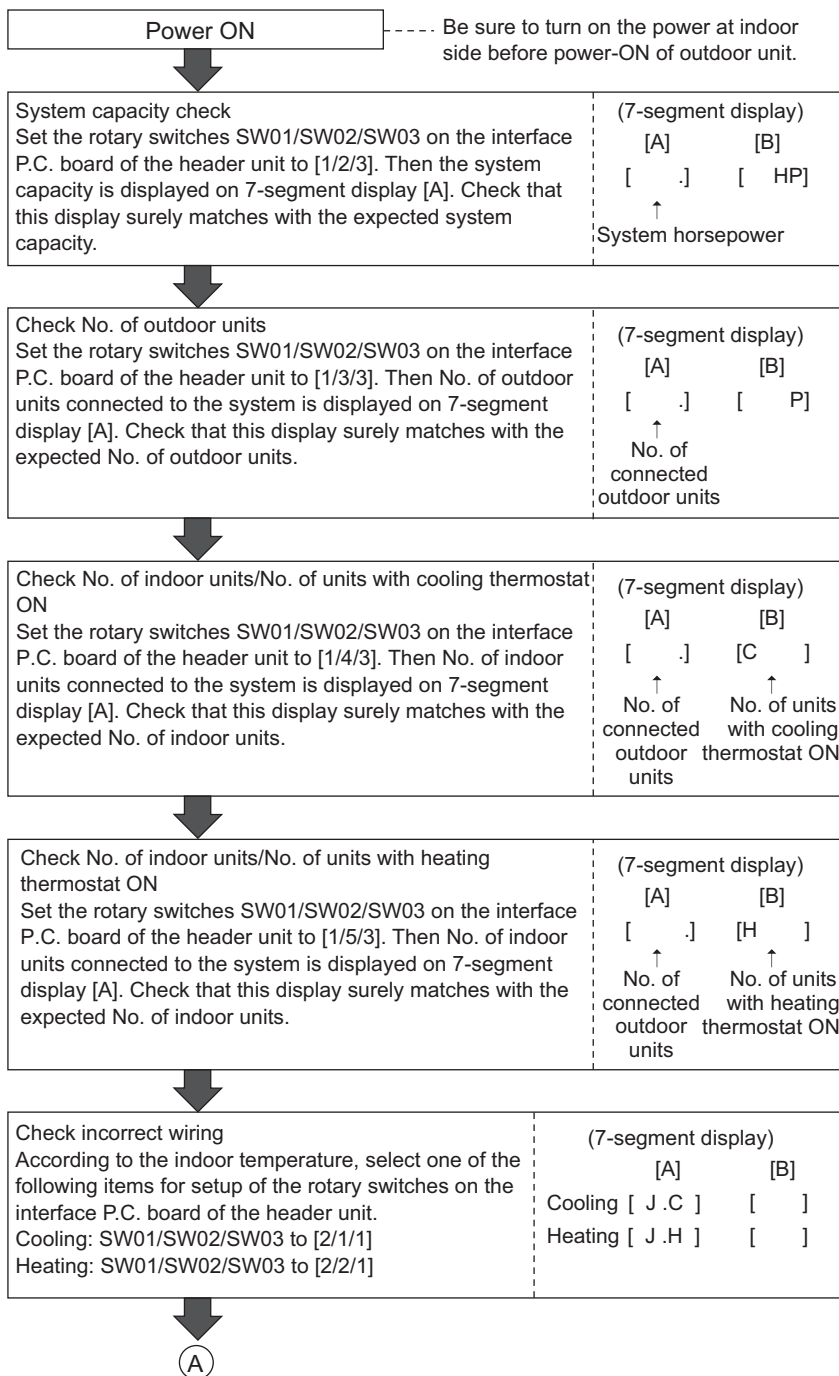

## 7-7-2. Function to Start/Stop (ON/OFF) Indoor Unit from Outdoor Unit

The following functions of the indoor unit can start or stop by the switches on the interface P.C. board of the header unit.


No	Function	Outline	Setup/Release	7-segment display	
1	Cooling test operation	Changes the mode of all the connected indoor units collectively to cooling test operation. Note) Control operation same as usual test operation from remote control is performed.	[Setup] Set SW01/SW02/SW03 to [2/5/1], and press SW04 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [C. ]	Section B [ - C]
2	Heating test operation	Changes the mode of all the connected indoor units collectively to heating test operation. Note) Control operation same as usual test operation from remote control is performed.	[Setup] Set SW01/SW02/SW03 to [2/6/1], and press SW04 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [H. ]	Section B [ - H]
3	Fan test operation	Changes operation mode of all the connected indoor units collectively to test operation mode. Note) Control operation same as usual test operation from remote control is performed.	[Setup] Set SW01/SW02/SW03 to [2/9/1], and push SW04 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [F. ]	Section B [ - F]
4	Batch start	Starts all the connected indoor units collectively. Note) The contents follow to the setup of remote controller.	[Setup] Set SW01/SW02/SW03 to [2/7/1], and press SW04 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1].	Section A [C.H]	Section B [ 11] [ 00] is displayed on Section B for 5 seconds.
	Batch stop	Stops all the connected indoor units collectively.	[Setup] Set SW01/SW02/SW03 to [2/7/1], and press SW05 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1].	Section A [C.H]	Section B [ 00] [ 00] is displayed on Section B for 5 seconds.
5	Individual start	Starts the specified indoor unit. Notes) • The contents follow to the setup of remote controller. • The other indoor units keep the status as they are.	[Setup] Set SW01 to [16], set SW02 and SW03 to address No. (1 to 128) to be started, and press SW04 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [ ]	Section B [ ] Section A: Displays the corresponding indoor address. Section B: Displays [ 11] for 5 seconds from operation-ON.
	Individual stop	Stops the specified indoor unit. Note) The other indoor units keep the status as they are.	[Setup] Set SW01 to [16], set SW02 and SW03 to address No. (1 to 128) to be stopped, and press SW05 for 2 seconds or more. [Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [ ]	Section B [ ] Section A: Displays the corresponding indoor address. Section B: Displays [ 00] for 5 seconds from operation-OFF.
	Individual test operation	Operates the specified indoor unit. Note) The other indoor units keep the status as they are.	[Setup] Set SW01 to [16], set SW02 and SW03 to address No. to be operated, and press SW04 for 10 seconds or more. [Release] Return SW01/SW02/SW03 to [1/1/1].	Section A [ ]	Section B [ ] Section A: Displays the corresponding indoor address. Section B: Displays [ FF] for 5 seconds from test operation-ON.

**NOTE 1)** This start/stop function only sends the signals from the outdoor unit to the indoor unit, such as start, stop, operation mode, etc. It does not resend the signals even if the indoor unit does not follow the sent signals.

**NOTE 2)** The above controls are not used during abnormal stop.

**NOTE 3)** If the signal receiving unit of the Compact 4-way Cassette type has never received a signal from the wireless remote controller, the indoor unit cannot be started or stopped (ON/OFF) from the outdoor unit. In the case above, follow the steps below.

- 1) Point the wireless remote controller at the receiving unit on the indoor unit and press the START/STOP button on the wireless remote controller.
- 2) Confirm that the receiving unit sounds “Pi” and the operation lamp (green) on the receiving unit lights up, and then start/stop (ON/OFF) the indoor unit from the outdoor unit.

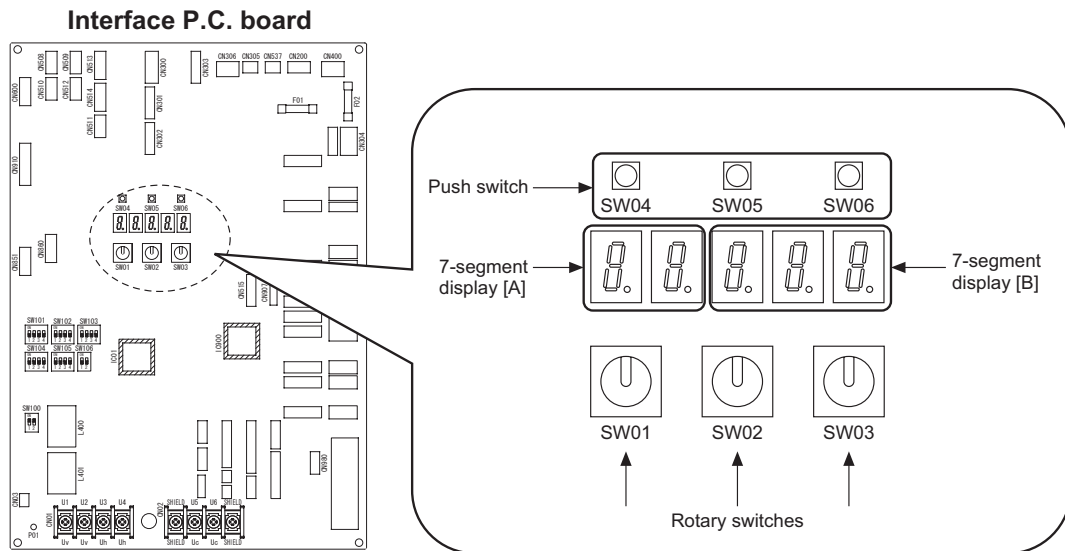





**(1) Cooling test operation function**

This function is provided to change collectively the mode of all the indoor units connected to the same system for the cooling test operation mode, by using switches on the interface board of the header unit.

<Operation procedure>

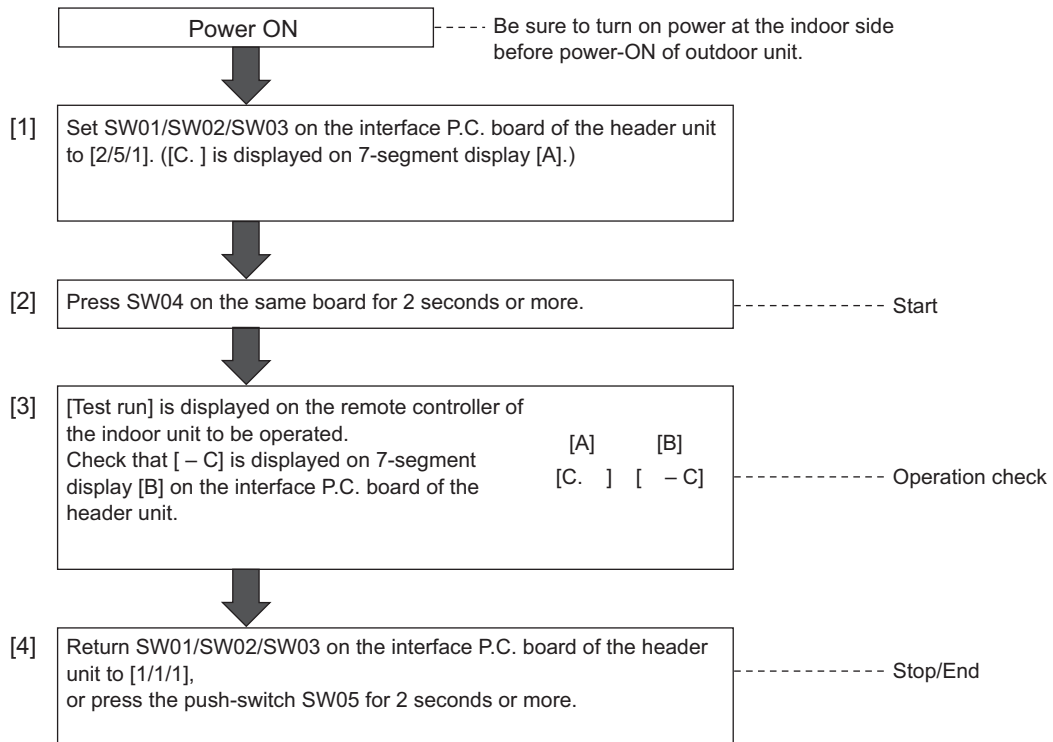

**Interface P.C. board**


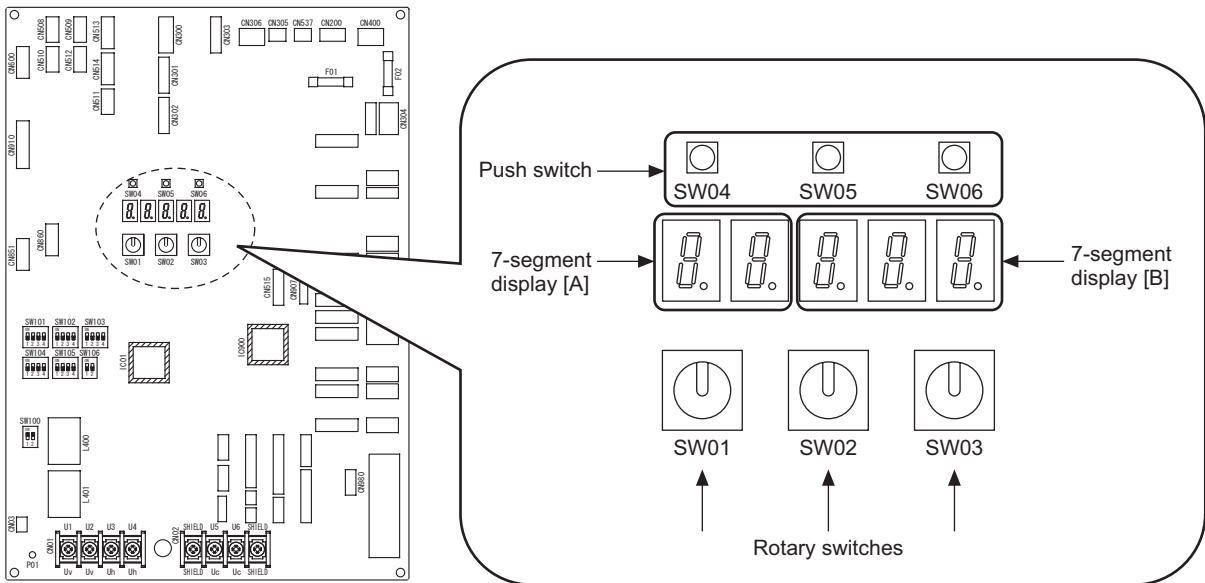


**NOTE)** The test operation returns to the normal operation after 60 minutes.

## (2) Heating test operation function

This function is provided to change collectively the mode of all the indoor units connected to the same system for the heating test operation mode, by using switches on the interface board of the header unit.

<Operation procedure>

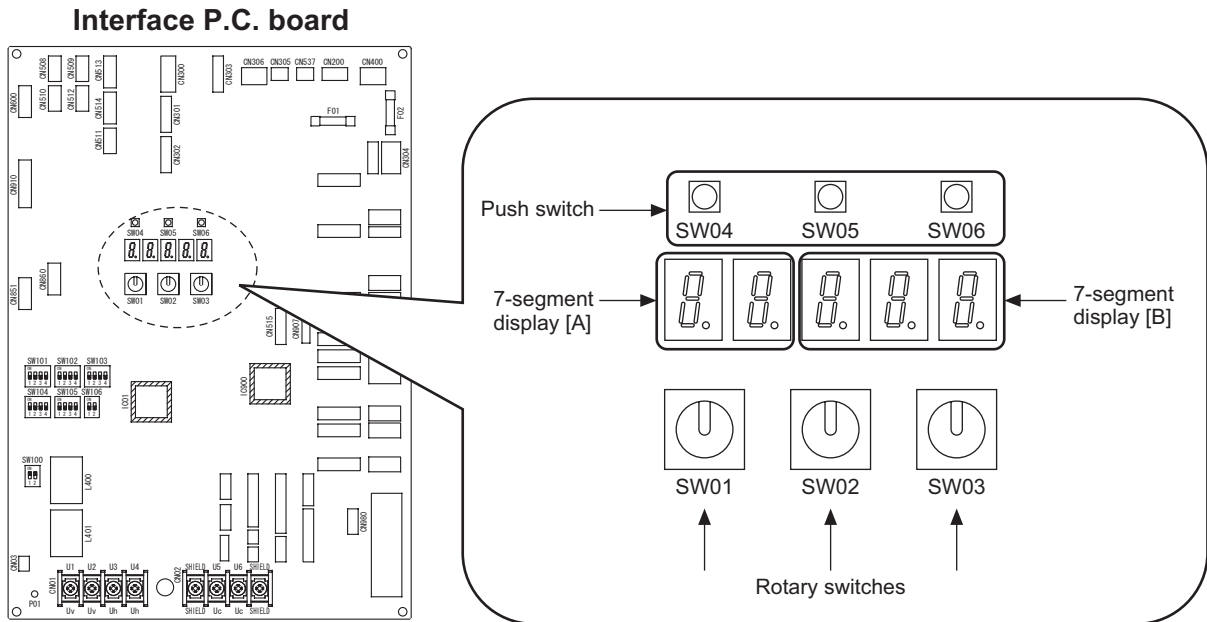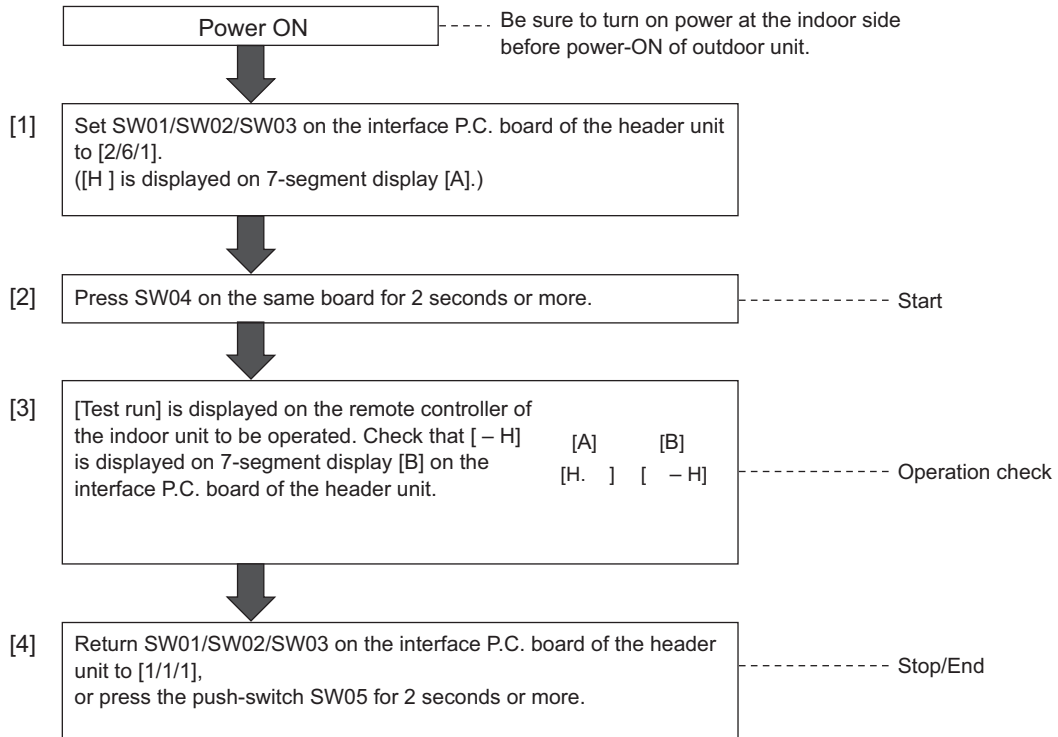


**NOTE)** The test operation returns to the normal operation after 60 minutes.




#### (4) Batch start/stop (ON/OFF) function

This function is provided to start/stop collectively all the indoor units connected to the same system by using switches on the interface board of the header unit.

<Operation procedure>

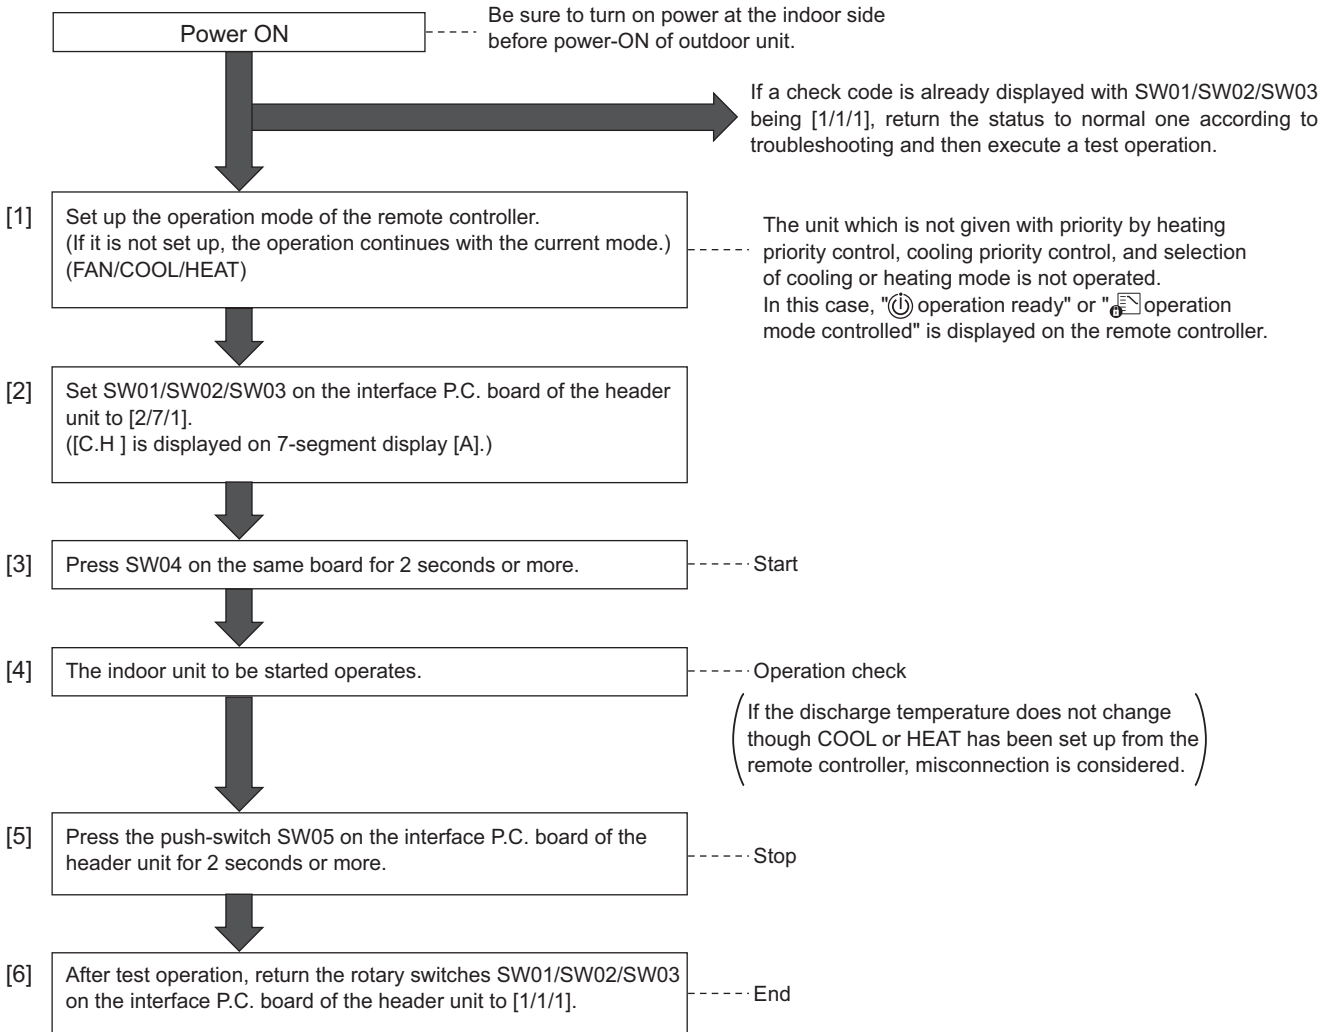

#### Interface P.C. board

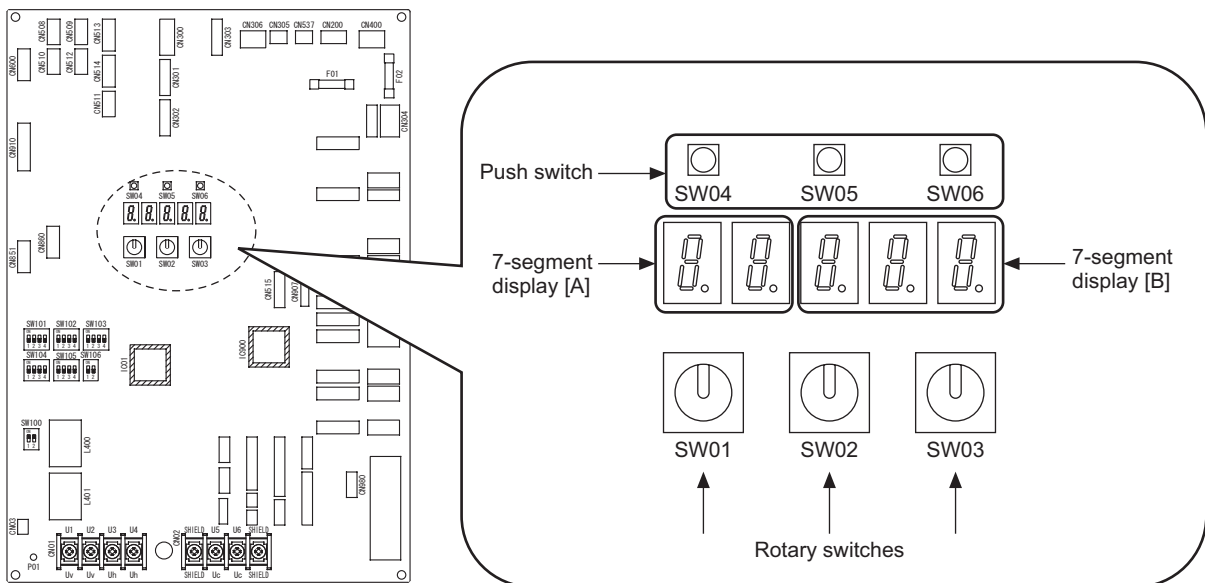


### (5) Individual start/stop (ON/OFF) individual test operation function

This function is provided to start/stop (ON/OFF) individually each indoor unit connected to the same system by using switches on the interface board of the header unit.

Set SW01 [16] and set SW02, SW03 to indoor address No. (1 to 128) to be started (Refer to the following table\*) - only the setup indoor unit starts operation.

(In the rotary switches of the indoor unit which operates in a group by the remote controller, the follower unit cannot be individually started or stopped. In this case, [ - - ] is displayed on 7-segment display [B] on the interface P.C. board of the header unit.)

<Operation procedure>

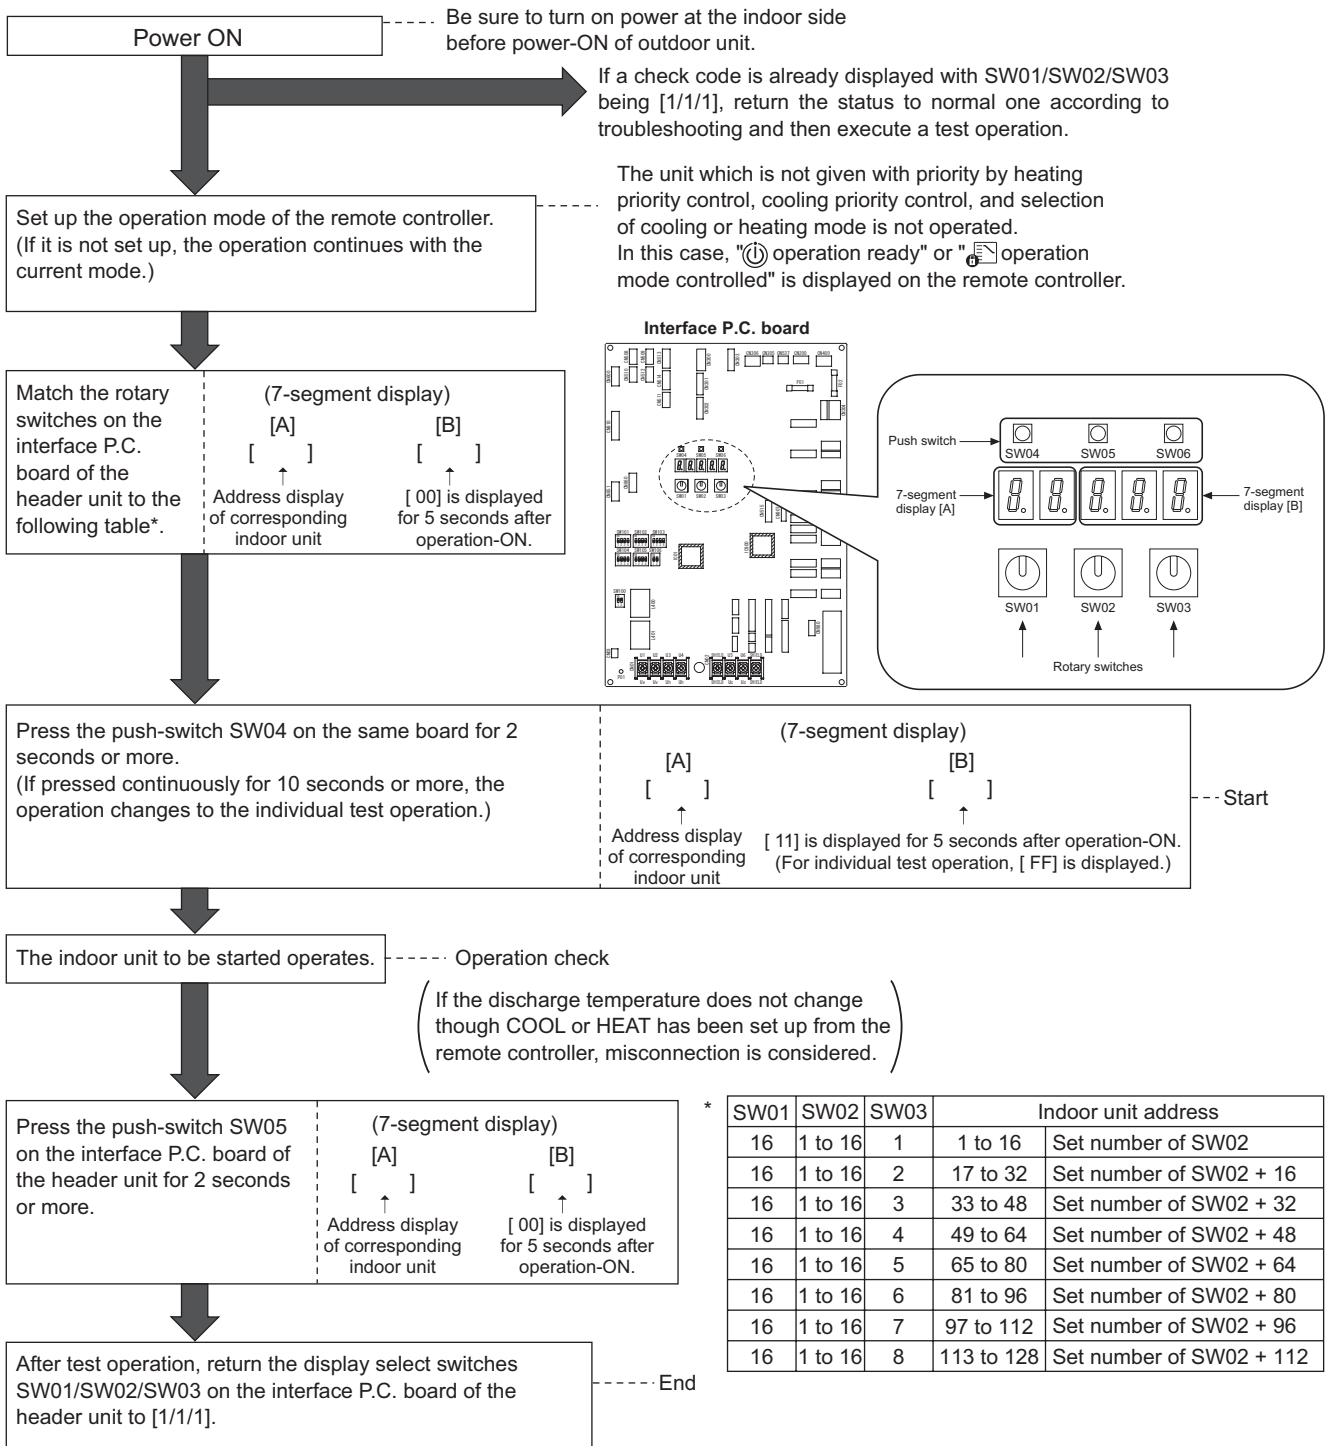

**NOTE)** The individual test operation returns to the normal operation after 60 minutes.

### 7-7-3. Check Code Clearing Function

#### (1) Clearing from the main remote controller

##### <RBC-AMT\*>


##### ▼ Check code clearing in outdoor unit

Check code of the outdoor unit currently detected is cleared by the unit of one refrigerant circuit system to which the indoor units operated by the remote controller is connected. (Check code of the indoor unit is not cleared.)

For clearing check codes, the service monitor function of the remote controller is used.

##### <Method>

- 1** Change the mode to service monitor mode by pushing **CL** + **TEST** buttons simultaneously for 4 seconds or more.
- 2** Using **TEMP.** buttons, set CODE No. to "FF".
- 3** The display in Section A in the following figure is counted with interval of 5 seconds as "0005" → "0004" → "0003" → "0002" → "0001" → "0000".  
When the count arrives "0000", the check code is cleared.  
\* However, counting from "0005" is repeated on the display.
- 4** When **TEST** button is pushed, the status returns to the normal status.

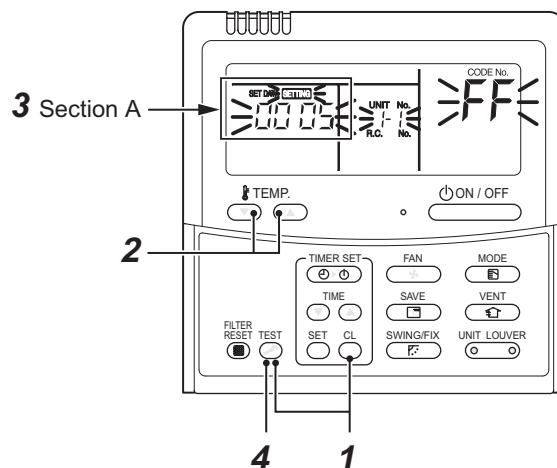


##### ▼ Check code clearing in indoor unit

Check code in the indoor unit is cleared by **ON/OFF** button on the remote controller.

(Only check code of the indoor unit connected with operating remote controller is cleared.)

<RBC-ASCU11\*>

- ▼ Clearing a check code of the outdoor unit  
There is no such function in the remote controller.

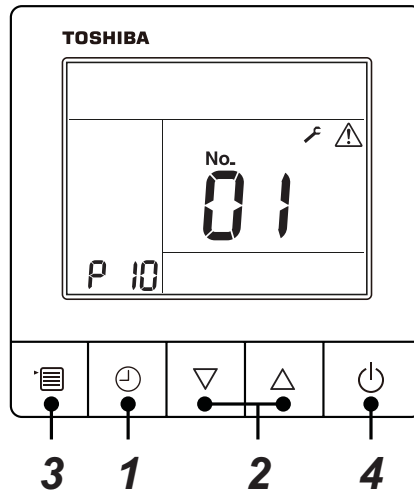


- 1** Push the [OFF timer] button for over 10 seconds.
- 2** Each time the [▽ or △] button is pushed, the recorded troubleshooting history is displayed in sequence.
- 3** Push the [menu] button for over 10 seconds, doing so deletes the entire troubleshooting history of the indoor unit.
- 4** After you have finished checking, push the [ON/OFF] button to return to normal mode.

## (2) Clearing check code by using switches on the interface board of the header unit

Using the switches on the interface P.C. board of the header unit, this function is to clear the currently detected check code for each refrigerant circuit system without resetting the power supply.

Check codes in both outdoor and indoor units are once cleared, and check code detection is performed again.

- |  |   |
|--|---|
| <p>[1] Set the rotary switches on the interface P.C. board of the header unit as follows.<br/>Set SW01/SW02/SW03 to [2/16/1]</p> | <p>7-segment display<br/>[A] [B]<br/>[ E r ][ ]</p>     |
| <p>↓</p>   |   |
| <p>[2] Press the push-switch SW04 on the same board for 5 seconds or more.</p>   |   |
| <p>↓</p>   |   |
| <p>[3] [ C L ] is displayed in 7-segment display [B] on the board (for 5 seconds), and check code is completely cleared.</p>     | <p>7-segment display<br/>[A] [B]<br/>[ E r ][ C L ]</p> |

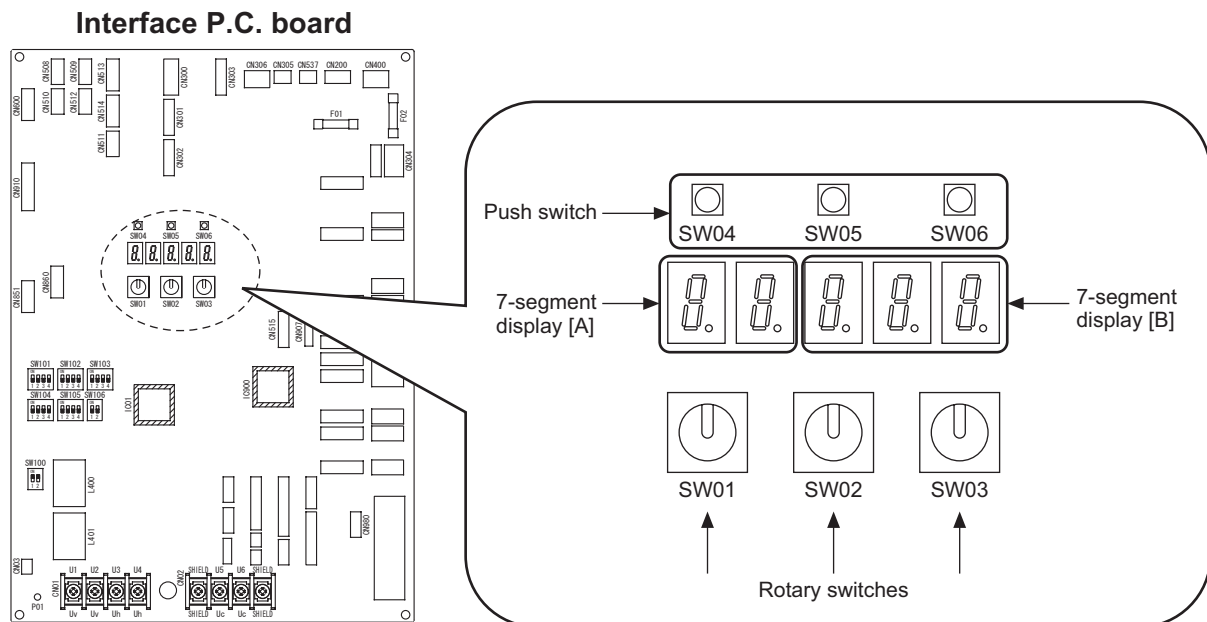

## (3) Clearing check code by resetting power

This function is provided to clear check code in a system by resetting the power of all the outdoor and the indoor units. As same as the clearing method by the interface P.C. board, check codes of both the outdoor and the indoor units are once cleared, and check code detection is performed again.

### <Method>

- (1) Be sure to reset power of both the outdoor and the indoor units.
- (2) Turn on the power of the indoor unit prior to the power of the outdoor unit.  
(If the power is turned on in reverse order, a check code [E19] (No. of header unit trouble) is output.)


**NOTE)** After power reset, it requires usually 3 minutes to power-on due to the initial communication of the system. In some cases, it requires max. 10 minutes.



### 7-7-4. Remote Controller Distinction Function


This function is provided to distinguish the remote controller connected to the indoor unit from the outdoor unit for a refrigerant circuit system by using switches on the interface P.C. board of the header unit.

<Distinction procedure>

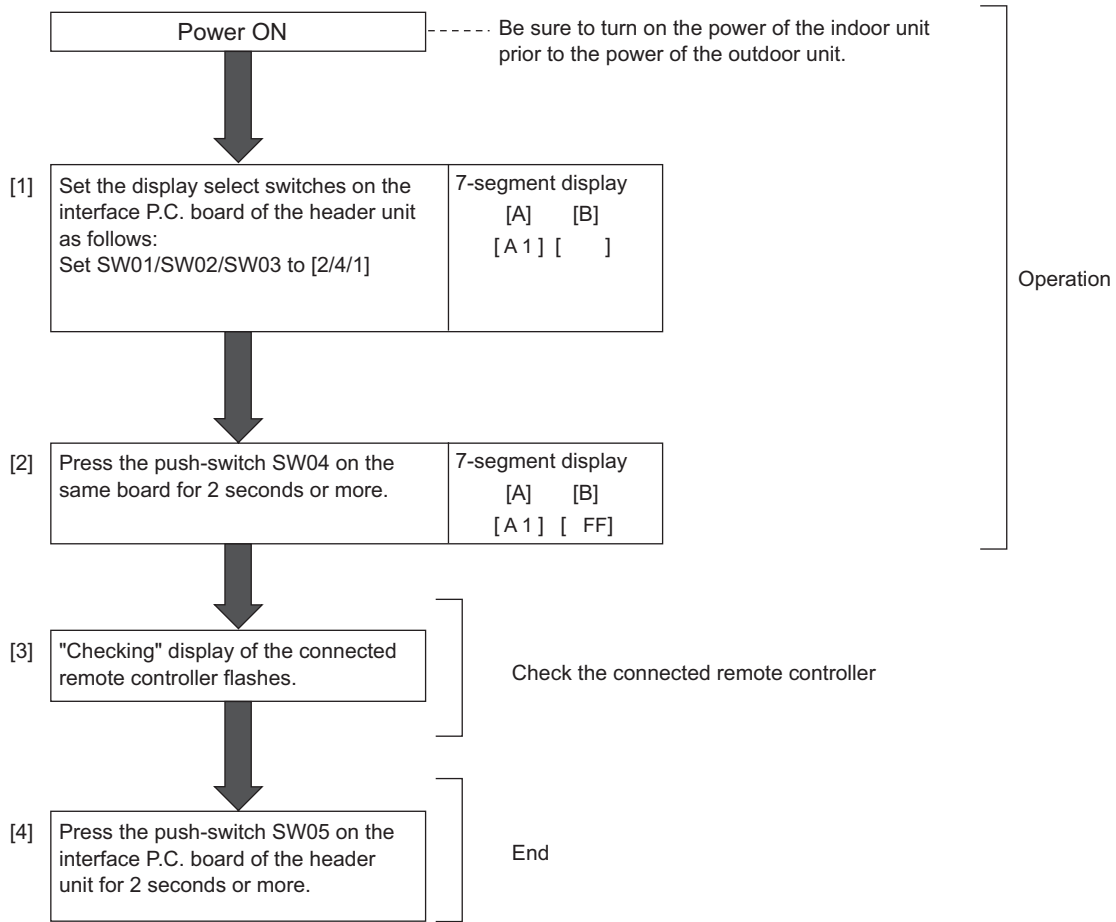

- Other end conditions:
1. 10 minutes has passed
  2. SW01, SW02, or SW03 changed to other position.

Interface P.C. board

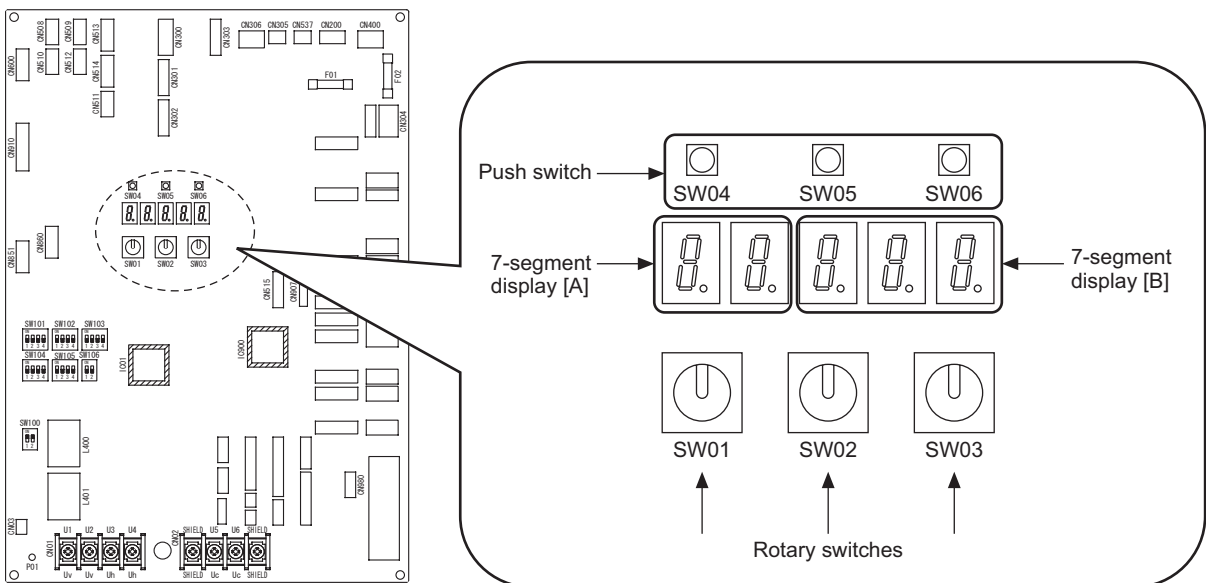

### **7-7-5. Pulse Motor Valve (PMV) Forced Open/Close Function in Indoor Unit**

This function is provided to open or close forcedly PMV for 2 minutes in all the indoor units by the switch operation on the interface P.C. board of the header unit.

This function is also used to open PMV fully when turning off the power and executing an operation.

#### **<Operation>**

##### **[Open fully]**

Set the switches SW01/SW02/SW03 on the interface P.C. board of the header unit to [2/3/1], and press SW04 for 2 seconds or more.

(Display appears on 7-segment display for 2 minutes as follows.) [P ] [ FF]

##### **[Close fully]**

Set the switches SW01/SW02/SW03 on the interface P.C. board of the header unit to [2/3/1], and press SW05 for 2 seconds or more.

(Display appears on 7-segment display for one minute as follows.) [P ] [ 00]

##### **[Clear]**

After 2 minutes (1 minutes for "Close fully") after setting up, the opening automatically returns to the normal opening.



**[Method of operating pulse motor valve (PMV) (forced open/close)]**

- (1) Use the rotary switch [SW03] to select the PMV to operate.  
When [P#. ] is displayed in the PMV display, PMV# is operating according to normal control.  
(#: selected PMV No.)
- (2) Pressing the push switch [SW04] for one second sets the selected PMV# to full-open.  
The PMV display will be [P# . F o ].  
Each time the push switch [SW04] is pressed again for one second, the opening changes in the order full-open [P# . F o ] → half-open [P# . C o ] → full-closed [P# . F c ] → normal control [P# . ] → full-open [P# . F o ] → ... , and so on.
- (3) The PMV opening returns to normal control after two minutes elapses from changing the opening.

(Operation method example) Operation of PMV 1

Rotary switch			Push switch	7-segment display (pulse motor valve (PMV) display)	Opening
SW01	SW02	SW03	SW04 (Change PMV opening)		
2	* Used in solenoid valve selection	3	Long-press 1 second	[P1. ]	PMV1 Normal control
			Long-press 1 second	[P1.F o ]	PMV1 Full-open
			Long-press 1 second	[P1.C o ]	PMV1 Half-open
			Long-press 1 second	[P1.F c ]	PMV1 Full-closed

- (4) To operate a different PMV, select with the rotary switch [SW03], and operate the opening with the push switch [SW04].  
Even when [SW03] is switched, the PMV opening operated immediately before remains effective, so up to four PMV openings can be operated in parallel.

Rotary switch			Push switch	7-segment display (pulse motor valve (PMV) display)	Opening
SW01	SW02	SW03	SW04		
2	* Used in solenoid valve selection	3	Long-press 1 second to change opening	[P1. ]	PMV1 Normal control
				[P1.F o ]	PMV1 Full-open
				[P1.C o ]	PMV1 Half-open
				[P1.F c ]	PMV1 Full-closed
		4	Long-press 1 second to change opening	[P2. ]	PMV2 Normal control
				[P2.F o ]	PMV2 Full-open
				[P2.C o ]	PMV2 Half-open
				[P2.F c ]	PMV2 Full-closed
		5	Long-press 1 second to change opening	[P3. ]	PMV3 Normal control
				[P3.F o ]	PMV3 Full-open
				[P3.C o ]	PMV3 Half-open
				[P3.F c ]	PMV3 Full-closed
6	Long-press 1 second to change opening	[P4. ]	PMV4 Normal control		
		[P4.F o ]	PMV4 Full-open		
		[P4.C o ]	PMV4 Half-open		
		[P4.F c ]	PMV4 Full-closed		

**[Cancelation method]**

To cancel (end) control of this function, perform one of the following methods. The solenoid valve and pulse motor valve (PMV) will return to normal control.

- Press the push switch [SW05] for one second or longer.
- Set the rotary switch [SW01] to other than [2].

### 7-7-7. Fan Operation Check in Outdoor Unit

This function is provided to check the fan operation of the outdoor unit by using switches on the interface P.C. board in the outdoor unit. The fan speed can be controlled by setting of the switches. Use this function to check the operation or abnormal sound in the fan system. And, use this function while the system is stopped.

**NOTE)** Do not use this function during operation of the compressor. It may damage the compressor.

Two fans move synchronously in two fan model (MMY-MUP1601\* to MUP2401\*).

#### [Operation]

- (1) Set the switches SW01/SW02/SW03 on the interface P.C. board of the outdoor unit to [2/1/4].
- (2) When [F. d] is displayed in 7-segment display [A], keep pressing the switch SW04 for 2 seconds or more.
- (3) When [ 63 ] is displayed in 7-segment display [B], the fan starts operation. (Max. mode operation)
- (4) After that, by changing the setup number of the switches SW02 and SW03, 7-segment display [B] and the fan mode are changed.  
(Mode output pattern of the fan is as follows.)

SW02	SW03	7-segment display [B]	Fan mode
1	4	[ 63 ]	63
2		[ 62 ]	62
3		[ 61 ]	61
4		[ 60 ]	60
5		[ 59 ]	59
6		[ 58 ]	58
7		[ 57 ]	57
8		[ 56 ]	56
9		[ 55 ]	55
10		[ 54 ]	54
11		[ 53 ]	53
12		[ 52 ]	52
13		[ 51 ]	51
14		[ 50 ]	50
15		[ 49 ]	49
16		[ 48 ]	48
1	5	[ 47 ]	47
2		[ 46 ]	46
3		[ 45 ]	45
4		[ 44 ]	44
5		[ 43 ]	43
6		[ 42 ]	42
7		[ 41 ]	41
8		[ 40 ]	40
9		[ 39 ]	39
10		[ 38 ]	38
11		[ 37 ]	37
12		[ 36 ]	36
13		[ 35 ]	35
14		[ 34 ]	34
15		[ 33 ]	33
16		[ 32 ]	32

SW02	SW03	7-segment display [B]	Fan mode
1	6	[ 31 ]	31
2		[ 30 ]	30
3		[ 29 ]	29
4		[ 28 ]	28
5		[ 27 ]	27
6		[ 26 ]	26
7		[ 25 ]	25
8		[ 24 ]	24
9		[ 23 ]	23
10		[ 22 ]	22
11		[ 21 ]	21
12		[ 20 ]	20
13		[ 19 ]	19
14		[ 18 ]	18
15		[ 17 ]	17
16		[ 16 ]	16
1	7	[ 15 ]	15
2		[ 14 ]	14
3		[ 13 ]	13
4		[ 12 ]	12
5		[ 11 ]	11
6		[ 10 ]	10
7		[ 9 ]	9
8		[ 8 ]	8
9		[ 7 ]	7
10		[ 6 ]	6
11		[ 5 ]	5
12		[ 4 ]	4
13		[ 3 ]	3
14		[ 2 ]	2
15		[ 1 ]	1
16		[ 0 ]	0

#### [Clear]

This function is cleared by one of the following operations.

- (1) When SW01 setting number was changed to other number.
- (2) Press-switch SW05 was pressed for 2 seconds or more.

## 7-7-8. Abnormal Outdoor Unit Discrimination Method By Fan Operating Function


This function is provided to forcedly operate the fan of the outdoor unit in which a check code occurred or the fan of the normal outdoor unit by the switch operation on the interface P.C. board in the header unit.  
To specify which one of the follower units connected to the system had problem, use this function for the system stop due to a follower unit problem (Check code [E28]).

### [Operation]

#### <In case to operate the fan in the failed outdoor unit only>

(1) Check that the switches SW01/SW02/SW03 on the interface P.C. board in the header unit are set to [1/1/1].

#### 7-segment display

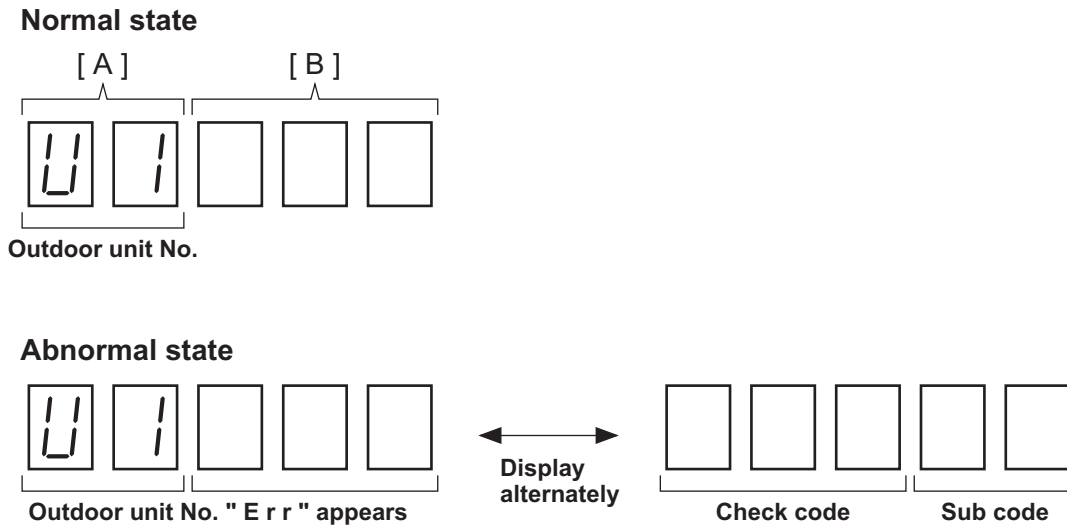

- (2) Press the push-switch SW04 for 2 seconds or more.
- (3) [E 1] is displayed on 7-segment display [A].
- (4) The fan of the outdoor unit in which problem occurred starts operation within approx. 10 seconds after [E 1] was displayed.

#### <In case to operate the fans in all the normal outdoor units>

- (1) Check that the switches SW01/SW02/SW03 on the interface P.C. board in the header unit are set to [1/1/1].
- (2) Press the push-switches SW04 and SW05 at the same time for 2 seconds or more.
- (3) [E 0] is displayed on 7-segment display [A].
- (4) The fans of all the normal outdoor units start operation with the Max. fan speed within approx. 10 seconds after [E 0] was displayed.

### [Release]

Press the push-switch SW05 on the interface P.C. board in the header unit for 2 seconds or more.  
The outdoor fan which was operated stops.

\* Check that [U. 1] is displayed on 7-segment display [A], and then finish the work.

## 7-7-9. Manual Adjustment Function of Outside Temperature (TO) Sensor

This function is provided to fix TO sensor value manually by the switch operation on the interface P.C. board in the outdoor unit. When the unit stops abnormally due to TO sensor failure, etc, an emergent operation is available by setting up the value manually to position near the current outside temperature.

### [Operation]

- (1) Set the rotary switches on the interface P.C. board to numbers as follows:
  - SW01/SW02/SW03 to [2/1/15]
  - 7-segment display: [ t o ]
- (2) Keep pressing the push-switch SW04 on the interface P.C. board for 1 second or more. The mode changes to the TO sensor value fix manual mode.
- (3) Pressing the push-switch SW04 increases the setting temperature and pressing the SW05 decreases the setting temperature. Set the temperature to any values.

### [Clear]

Return SW01/SW02/SW03 on the interface P.C. board in the outdoor unit to [1/1/1].

**NOTE)** If operated with TO sensor fixed by this function, the system control operation of the air conditioner may not be based on the specification of the product. Therefore an emergent operation should be restricted to a day or so.

When the outside temperature is 45°C or more, set to 45°C (SW02="9")

### <Service support function list>

SW01	SW02	SW03	7-segment display [A]	Function contents
2	1	1	[J . C]	Refrigerant circuit and control communication line check function (Cooling operation)
	2		[J . H]	Refrigerant circuit and control communication line check function (Heating operation)
	3		[P . ]	Indoor PMV forced full open function
	4		[A . 1]	Indoor remote controller discriminating function
	5		[C . ]	Cooling test operation function
	6		[H . ]	Heating test operation function
	7		[C . H]	Indoor collective start/stop (ON/OFF) function
	9		[F . ]	Fan test operation function
	11		[r . d]	Outdoor refrigerant recovery operation function (Reclaim function)
	16		[E . r]	Check code clear function

2	1~16	3	[H . r]	Solenoid valve forced open/close function
2	1~16	4~7	[F . d]	Fan forced operation function
2	1~16	15	[t . o]	Outside temperature sensor manual adjustment function

16	1 to 16	1	[01] to [16]	Indoor No. 1 to 16	Set number of SW02
		2	[17] to [32]	Indoor No. 17 to 32	Set number of SW02 + 16
		3	[33] to [48]	Indoor No. 33 to 48	Set number of SW02 + 32
		4	[49] to [64]	Indoor No. 49 to 64	Set number of SW02 + 48
		5	[65] to [80]	Indoor No. 65 to 80	Set number of SW02 + 64
		6	[81] to [96]	Indoor No. 81 to 96	Set number of SW02 + 80
		7	[97] to [112]	Indoor No. 97 to 112	Set number of SW02 + 96
		8	[113] to [128]	Indoor No. 113 to 128	Set number of SW02 + 112

SW01	SW02	SW03	7-segment display [A/B]	Function contents
1	1	1	[U 1] [E28]	Follower unit check code / Corresponding unit fan operation function

### 7-7-10. Refrigerant leakage detection

The refrigerant leakage can be confirmed by using the switches on Interface P.C.board of the outdoor unit. If there is a leak, the location must be found in order to recover the refrigerant.

After that, implement appropriate countermeasure and refill the refrigerant to its standard volume.

Refrigerant leaks can be detected by comparing the Actual opening of PMV with the Calculated opening of PMV\* during the operation.

\* Calculated opening of PMV: calculated from the initial value(C.i/H.i), the pressure sensor value (C.i/H.i), the compressor's , and the opening of PMV. The initial values are automatically saved when the specified conditions are met.  
(A leak can be detected only when C.i/H.i = 1)

#### [Operation]

##### (1) Confirming the refrigerant leakage

Set SW01 to 03 as shown in the following table to confirm whether the leaks are being detected.

(It also can be confirmed by remote control monitor function. Refer to 7-7-11. Monitor function of remote controller switch.)

##### (2) Clearing the initial value

If the system is changed (e.g. indoor units are increased/replaced, outdoor units are moved, or refrigerant is refilled/increased) it is necessary to clear the initial value that had been saved.

Make sure that the compressor has stopped, and then press and hold SW04 for at least 5 seconds.

SW01	SW02	SW03	Display detail	
2	13	14	Refrigerant leakage detection	A [ L. d ]
				B Normal: [... .. 0] Possibility of leakage: [... .. 1] Clear the data: [...C.L] (Only Display for 5 seconds)

##### (3) Checking the record of the initial value

Set SW01 to 03 as shown in the following table to confirm the record of the initial value.

SW01	SW02	SW03	Display detail	
2	14	14	Cooling initial value	A [ C. i ]
				B Incomplete: [... .. 0] Completed: [... .. 1]
2	15	14	Heating initial value	A [ H. i ]
				B Incomplete: [... .. 0] Completed: [... .. 1]

#### [Clear]

Return SW01/SW02/SW03 on the Interface P.C.board in the outdoor unit to [1/1/1] .

#### NOTE)

(a) During the operation, the slow leaks can be detected.

However, if the air-conditioner cannot cooling down / cannot warming up / make an unusual stop, the slow leaks might not be detectable. The fast leaks always cannot be detected.

(b) Poor refrigerant circulation may be detected as a refrigerant leaks.

(e.g. plugged strainers / capillaries, malfunction / clogging of the PMV / 2-way valve / 4-way valve)

(c) Due to the outside temperature, the initial value may not be recorded, or it may be impossible to determine the leakage.

(d) The initial value cannot be saved until the accumulated operating time has reached at least 20 hours.

(e) The initial value cannot be saved if the indoor unit's operating ratio is low.

(f) If the following indoor units are connected, leakage determination is not possible.

- Air to air heat exchanger with DX coil unit



## 7-7-11. Monitor Function of Remote Controller Switch

### Switching to the service monitor mode

#### <Content>

The sensor temperature or operation status of the remote controller, indoor unit, or the outdoor unit can be known by switching to the service monitor mode from the remote controller.

#### [Procedure]

##### <RBC-AMT\*>

- 1 Push **TEST** + **CL** buttons simultaneously for 4 seconds or more to call up the service monitor mode.

The service monitor goes on, and temperature of the CODE No. 00 is firstly displayed.


- 2 Push the temperature setup **TEMP.** buttons to select the CODE No. to be monitored.

For displayed codes, refer to the table next page.

- 3 Push **SET** button to determine the item to be monitored.



Then monitor the sensor temperature or operation status of indoor unit and the outdoor unit in the corresponding refrigerant line.

- 4 Pushing **TEST** button returns the display to the normal display.

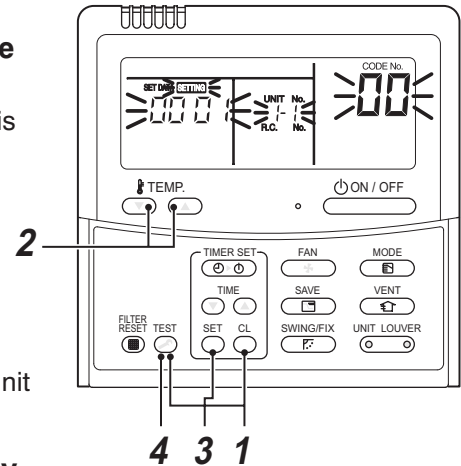

##### <RBC-ASCU11\*>

- 1 Push the [menu] button for over 10 seconds.
- 2 Every pushing [▽] [△] buttons, the indoor unit numbers in group control are displayed successively.
- 3 Push the [OFF timer] button to confirm the selected indoor unit.
- 4 Every pushing [▽] [△] buttons, CODE No. of the item is changed successively.
- 5 After you have finished checking, push the [ON/OFF] button to return to normal mode.

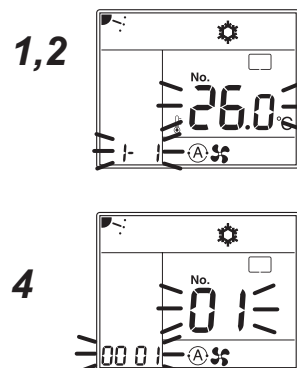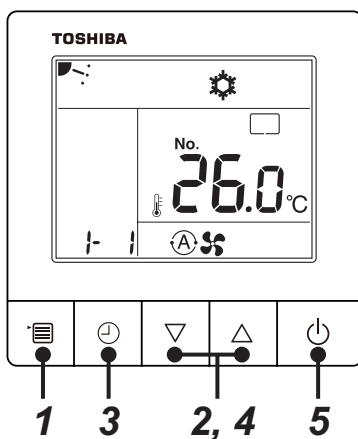

	Code No.	Data name	Display format	Unit	Remote controller display example
Indoor unit data *2	00	Room temperature (Use to control)	X1	°C	[0024]=24°C
	01	Room temperature (Remote controller)	X1	°C	
	02	Indoor suction air temperature (TA)	X1	°C	
	03	Indoor coil temperature (TCJ)	X1	°C	
	04	Indoor coil temperature (TC2)	X1	°C	
	05	Indoor coil temperature (TC1)	X1	°C	
	06	Indoor discharge air temperature (TF) *1	X1	°C	[0100]=1000rpm
	07	Indoor fan motor number of revolutions	X10	rpm	
	08	Indoor PMV opening	X1/10	pls	
	F3	Filter sign time	X1	h	
F9	Suction exchanger (TSA) *1 temperature of air to air heat	X1	°C	[0024]=24°C	
FA	Outside air temperature (TOA) *1	X1	°C		
System data	0A	No. of connected indoor units	X1	units	[0048]=48 units
	0B	Total horsepower of connected indoor units	X10	HP	[0415]=41.5HP
	0C	No. of connected outdoor units	X1	units	[0003]=3 units
	0D	Total horsepower of outdoor units	X10	HP	[0420]=42HP

	Code No.					Data name	Display format	Unit	Remote controller display example
	U1	U2	U3	U4	U5				
Outdoor unit individual data 1 *3	10	20	30	40	50	High-pressure sensor detection pressure(Pd)	X100	Mpa	[0123]=1.23MPa
	11	21	31	41	51	Low-pressure sensor detection pressure (Ps)	X100	Mpa	
	12	22	32	42	52	Compressor 1 discharge temperature (TD1)	X1	°C	[0024]=24°C
	13	23	33	43	53	Compressor 2 discharge temperature (TD2)	X1	°C	
	14	24	34	44	54	Suction temperature (TS1)	X1	°C	
	15	25	35	45	55	Suction temperature (TS3)	X1	°C	
	16	26	36	46	56	Outdoor heat exchanger temperature (TE1)	X1	°C	
	17	27	37	47	57	Outdoor sub-heat exchanger temperature (TE2)	X1	°C	
	18	28	38	48	58	Outdoor sub-heat exchanger temperature (TE3)	X1	°C	
	19	29	39	49	59	Outside ambient temperature (TO)	X1	°C	
	1A	2A	3A	4A	5A	Temperature at liquid side (TL1)	X1	°C	
	1B	2B	3B	4B	5B	Suction temperature (TS2)	X1	°C	
	1C	2C	3C	4C	5C	Suction temperature (TS3)	X1	°C	
	1D	2D	3D	4D	5D	Outdoor coil temperature (TG1)	X1	°C	
	1E	2E	3E	4E	5E	Outdoor coil temperature (TG2)	X1	°C	
	1F	2F	3F	4F	5F	Outdoor coil temperature (TG3)	X1	°C	

	Code No.					Data name	Display format	Unit	Remote controller display example
	U1	U2	U3	U4	U5				
Outdoor unit individual data 2 *4	60	70	80	90	A0	Compressor oil temperature 1 (TK1)	X1	°C	[0024]=24°C
	61	71	81	91	A1	Compressor oil temperature 2 (TK2)	X1	°C	
	62	72	82	92	A2	PMV 1 opening	X1	pls	[0500]=500pls
	63	73	83	93	A3	PMV 2 opening	X1	pls	
	64	74	84	94	A4	PMV 3 opening	X1	pls	
	65	75	85	95	A5	PMV 4 opening	X1	pls	
	66	76	86	96	A6	Compressor 1 current (I1)	X10	A	[0135]=13.5A
	67	77	87	97	A7	Compressor 2 current (I2)	X10	A	
	68	78	88	98	A8	Compressor 1 revolutions	X10	rps	[0642]=64.2rps
	69	79	89	99	A9	Compressor 2 revolutions	X10	rps	
	6A	7A	8A	9A	AA	Outdoor fan mode	X1	mode	[0058]=58 mode
	6B	7B	8B	9B	AB	Inverter of Compressor 1 heat sink temperature (TH1)	X1	°C	[0024]=24°C
	6C	7C	8C	9C	AC	Inverter of Compressor 2 heat sink temperature (TH2)	X1	°C	
	6D	7D	8D	9D	AD	Inverter of outdoor fan 1 heat sink temperature (TH Fan1)	X1	°C	
	6E	7E	8E	9E	AE	Inverter of outdoor fan 2 heat sink temperature (TH Fan2)	X1	°C	
	6F	7F	8F	9F	AF	Outdoor unit horsepower	X1	HP	[0016]=16HP

	Code No.	Data name	Display format	Unit	Remote controller display example
Outdoor unit individual data 3 *5	B0	Heating/cooling recovery control	0 : Normal 1 : Recovery controlled		[0010]=Heating recovery control [0001]=Cooling recovery control
	B5	Instantaneous electric power	X1/10	W	[0090]=900W
	B6	Integrated electric power consumption	X1/100	Wh	[0090]=9000Wh
	B8	Termination resistance setting indoor unit address display	0 : No setting 1~ : Setting address		[9999]=Case where no terminating resistance is set to any of the indoor units [0048]=Termination resistance setting Indoor unit address 48
	B9	Communications protocol	0 : TCC-LINK 1 : TU2C-LINK		[0000]=TCC-LINK [0001]=TU2C-LINK
	BA	Uv line communication speed	0 : 9600 bps 1 : 19200 bps		[0000]=9600bps [0001]=19200bps
	BB	Demand control	0 : Normally 1 : Demand control		[0000]=Normally [0001]=Demand control

\*1 Only a part of indoor unit types is installed with the discharge air temperature sensor. This temperature is not displayed for other types.

\*2 When the units are connected to a group, data of the header indoor unit only can be displayed.

\*3 The first digit of code No. indicates the outdoor unit number.

\*4 The upper digit of code No. -5 indicates the outdoor unit number.

- 1 \* , 6 \* ... U1 outdoor unit (Header unit)
- 2 \* , 7 \* ... U2 outdoor unit (Follower unit 1)
- 3 \* , 8 \* ... U3 outdoor unit (Follower unit 2)
- 4 \* , 9 \* ... U4 outdoor unit (Follower unit 3)
- 5 \* , A \* ... U5 outdoor unit (Follower unit 4)

\*5 Only the Code No. "B\*" of U1 outdoor unit (Header unit) is displayed.

## 7-8. Wave Tool Advance for SMMS-u Series

### 7-8-1. Before the Use of Wave Tool Advance

Wave Tool Advance (WTA) uses an application software for the Android OS smartphone.

If you install Wave Tool Advance application (WTA App.), you can use system capacity, test operation, test operation result and simple report.

Please check the information about compatible air conditioning equipment and smartphone from the following URL titled in blue as “Objective product list” and “Smartphone model & OS Version”.

If you use Wave Tool Advance Application (WTA App.), please move to following URL.

Please read and understand license agreement, if you agree to license agreement, please click “Agree”.

And download the smartphone application software and USER GUIDE.

Be sure to read the USER GUIDE before the use of this application.




[https://www.toshiba-carrier.co.jp/global/appli/smms\\_wave\\_tool\\_advance/index.htm](https://www.toshiba-carrier.co.jp/global/appli/smms_wave_tool_advance/index.htm)

### 7-8-2. About Wave Tool Advance


- This application uses the NFC(Near Field Communication) function of smartphone.
- If it is used, make sure that the NFC antenna on the smartphone is aligned with the “TOUCH” mark on the NFC tag.
- Refer to the USER GUIDE of the Wave Tool Advance for the details.

Wave Tool Advance s

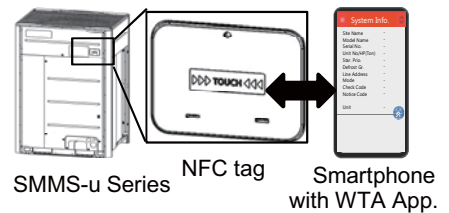

### 7-8-3. Valid/Prohibition/Permission setting for Test operation from WTA App.

- WTA App Test operation function enables setting within 48 hours elapsed from the last boot of an outdoor unit. If the elapsed time is over 48 hours, we cannot use WTA App test operation. (Other WTA App function can be used.)
- You should decide whether to make use of this test operation function at its own responsibility and also be sure to confirm notices in the Operating Manual before performing the test operation.
- If you want to prohibit the test operation from WTA App., perform the following steps.
  - \* High voltage parts exist in the electrical control box. If you set switch setting, set it from the access door cover of the electrical control box cover to avoid electric shock.
  - After finishing steps, slide the access cover to the position before and fix it with the screw.
- Refer to following table for setting change of the test operation function to be effective after 48hours.

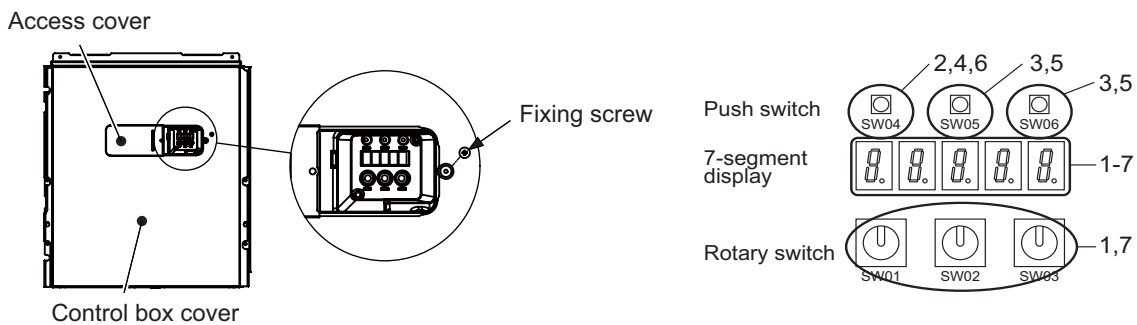

### Relationship with Power ON time and Test operation function.

	Status	7-segment display at O.DN Code No.05
Validness	Until 48 hours elapsed from the last boot of an outdoor unit, WTA App can start a test operation. After 48 hours, it cannot.	d.□□□0
Prohibition	Regardless of the elapsed time, WTA App cannot start a test operation.	d.□□□1
Permission	Regardless of the elapsed time, WTA App can start a test operation.	d.□□□2

**■ For example; How to prohibit Test operation from WTA (If you need)**

Steps	Items	Rotary switch			Push SW			7-segment display
		SW01	SW02	SW03	SW04	SW05	SW06	
1	Change rotary switch position for Outdoor DN code setting	9	1	1	-	-	-	dn.SET
2	Push SW04 for activate DN code	9	1	1	Push	-	-	dn.001
3	Change DN code Number to "dn.005" with SW05 or SW06	9	1	1	-	Push	Push	dn.005
4	Change data value display with SW04 **"d.0000" shows validness of TEST operation by NFC App in case of the last boot within 48h.	9	1	1	Push	-	-	d.0000
5	Change value to "d.0001" with SW05 or SW06 **"d.0001" shows prohibition of TEST operation by NFC App.	9	1	1	-	Push	Push	d.0001
6	Push SW04 more than 2sec. 7-seg display will change from flashing to lighting.	9	1	1	Push more than 2 sec	-	-	Flashing--> d.0001 Lighting
7	Return to default Rotary switch position.	1	1	1	-	-	-	U * ---
8	Turn ON/OFF outdoor unit main power supplies. Keep turn off time 60 seconds or more.							

\* Do it again if the 7-segment display is different from the above.

\* The functions other than the test operation of this Application can work normally even if the test operation function are prohibited.

**7-8-4. Confirmation for NFC tag Communication**

When you cannot read out the information of the NFC tag with your smartphone, preform the following step.

Step	Rotary switch			Push switch			7-segment display	Check result
	SW01	SW02	SW03	SW04	SW05	SW06		
1	2	16	14	—	—	—	nFc.	Normal
							nFc.Er	NFC tag wiring trouble Check NFC tag wiring
2	1	1	1				U * ---	(Return to Rotary switch)

If above check is no problem, refer to User Guide of Wave Tool Advance.

Trademark

QR code is a trademark or registered trademark of DENSO WAVE INCORPORATED.

Android is a trademark or registered of Google LLC.

# 8. TROUBLESHOOTING

## 8-1. Overview

(1) Before engaging in troubleshooting

(a) Applicable models

Super Modular Multi System (SMMS-u) models.

(Indoor units: MM\*-U(A)P\*\*\*, Outdoor units: MMY-MUP\*\*\*\*HT\*\*)

(b) Tools and measuring devices required

- Screwdrivers (Philips, flat head), spanners, long-nose pliers, nipper, pin to push reset switch, etc.
- Multimeter, thermometer, pressure gauge, etc.

(c) Things to check prior to troubleshooting (behaviors listed below are normal)


NO.	Behavior	Possible cause
1	A compressor would not start	<ul style="list-style-type: none"> <li>• The air conditioner is being controlled by the 3-minute protective function.</li> <li>• It is in standby status though the room temperature has reached the setup temperature.</li> <li>• It is being operated in timer mode or fan mode.</li> <li>• It is being in initial communication.</li> </ul>
2	An indoor fan would not start	<ul style="list-style-type: none"> <li>• The air conditioner is being controlled by the cool air discharge preventive function in "heating"?</li> </ul>
3	An outdoor fan would not start or would change speed for no reason	<ul style="list-style-type: none"> <li>• The air conditioner is being operated in "cooling" under the low outside air temperature.</li> <li>• It is being operated in defrost operation.</li> </ul>
4	An indoor fan would not stop	<ul style="list-style-type: none"> <li>• The air conditioner is being controlled by function of residual heat elimination being performed as part of the air conditioner shutdown process after heating operation.</li> </ul>
5	The air conditioner would not respond to a start/stop command from a remote controller	<ul style="list-style-type: none"> <li>• The air conditioner is being operated under external or remote control.</li> </ul>

### CAUTION

The cooling performance may be declining considerably when total operating capacity of cooling indoor units is less than 4 HP WHILE AMBIENT TEMPERATURE IS BELOW 0°C.

(2) Troubleshooting procedure

When a problem occurs, proceed with troubleshooting in accordance with the procedure shown below.

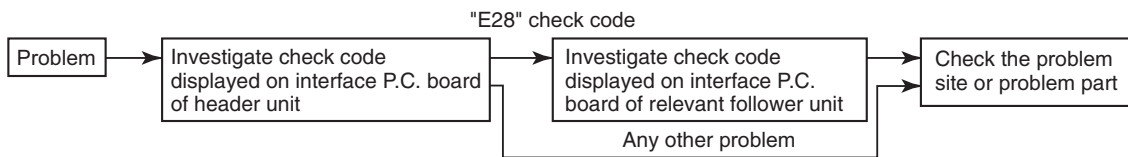

### NOTE

Rather than a product trouble (see the List of Check Codes below), the problem could have been caused by a microprocessor malfunction attributable to a poor quality of the power source or an external noise. Check for possible noise sources, and shield the remote controller wiring and signal wires as necessary.

## 8-2. Troubleshooting method

The remote controllers (main remote controller and central remote controller) and the interface P.C. board of an outdoor unit have an LCD display (remote controller) or a 7-segment display (outdoor interface P.C. board) to display operational status. Using this self-diagnosis feature, the trouble site / trouble part may be identified in the event of a trouble by following the method described below.

The list below summarizes check codes detected by various devices. Analyze the check code according to where it is displayed and work out the nature of the problem in consultation with the list.

- When investigating a problem on the basis of a display provided on the indoor remote controller or central remote controller See the “Remote control or main remote controller display” section of the list.
- When investigating a problem on the basis of a display provided on an outdoor unit - See the “Outdoor 7-segment display” section of the list.
- When investigating a problem on the basis of a wireless remote controller-controlled indoor unit - See the “Light sensor indicator light block” section of the list.

### List of Check Codes (Indoor Unit)

(Check code detected by indoor unit)

○ : Lighting, ⊙ : Flashing, ● : Goes off

ALT.: Flashing is alternately when there are two flashing LED

SIM: Simultaneous flashing when there are two flashing LED

Central control or main remote controller display	Check code		Display of receiving unit				Typical problem site	Description of Check code
	Outdoor 7-segment display	Sub-code	Indicator light block					
			Operation	Timer	Flash	Flash		
E03	—	—	⊙	●	●		Indoor-remote controller periodic communication trouble	Communication from remote controller or network adaptor has been lost (so has central control communication).
E04	—	—	●	●	⊙		Indoor-outdoor periodic communication trouble	Signals are not being received from outdoor unit.
E08	E08	Duplicated indoor address	⊙	●	●		Duplicated indoor address	Indoor unit detects address identical to its own.
E10	—	—	⊙	●	●		Indoor inter-MCU communication trouble	MCU communication between main controller and motor microcontroller is failure.
E11	—	—	⊙	●	●		Communication check code between Application control kit and indoor unit	Communication check code between Application control kit and indoor unit P.C. board.
E18	—	—	⊙	●	●		Trouble in periodic communication between indoor header and follower unit	Periodic communication between indoor header and follower units cannot be maintained.
F01	—	—	⊙	⊙	●	ALT	Indoor heat exchanger temperature sensor (TCJ) trouble	Heat exchanger temperature sensor (TCJ) has been open/short-circuited.
F02	—	—	⊙	⊙	●	ALT	Indoor heat exchanger temperature sensor (TC2) trouble	Heat exchanger temperature sensor (TC2) has been open/short-circuited.
F03	—	—	⊙	⊙	●	ALT	Indoor heat exchanger temperature sensor (TC1) trouble	Heat exchanger temperature sensor (TC1) has been open/short-circuited.
F10	—	—	⊙	⊙	●	ALT	Room air temperature sensor (TA/TSA) trouble	Room air temperature sensor (TA) has been open/short-circuited.
F11	—	—	⊙	⊙	●	ALT	Discharge air temperature sensor (TF/TFA) trouble	Discharge air temperature sensor (TF) has been open/short-circuited.
F29	—	—	⊙	⊙	●	SIM	P.C. board or other indoor trouble	Open/Short-circuit of indoor air suction temperature sensor (TRA) was detected.
L03	—	—	⊙	●	⊙	SIM	Duplicated indoor group header unit	There is more than one header unit in group.
L07	—	—	⊙	●	⊙	SIM	Connection of group control cable to stand-alone indoor unit	There is at least one stand-alone indoor unit to which group control cable is connected.
L08	L08	—	⊙	●	⊙	SIM	Indoor group address not set	Address setting has not been performed for one or more indoor units (also detected at outdoor unit end).
L09	—	—	⊙	●	⊙	SIM	Indoor capacity not set	Capacity setting has not been performed for indoor unit.
L20	—	—	⊙	○	⊙	SIM	Duplicated central control address	There is duplication in central control address setting.
L30	L30	Detected indoor unit No.	⊙	○	⊙	SIM	Indoor external trouble input (interlock)	Unit shutdown has been caused by external trouble input (CN80).
P01	—	—	●	⊙	⊙	ALT	Indoor AC fan trouble	Indoor AC fan trouble is detected (activation of fan motor thermal relay).
P10	P10	Detected indoor unit No.	●	⊙	⊙	ALT	Indoor overflow trouble	Float switch has been activated.
P12	—	—	●	⊙	⊙	ALT	Indoor DC fan trouble	Indoor DC fan trouble (e.g. overcurrent or lock-up) is detected.
P31	—	—	⊙	●	⊙	ALT	Other indoor unit trouble	Follower unit cannot be operated due to header unit alarm (E03/L03/L07/L08).

(Check code detected by remote controller)

Check code			Display of receiving unit				Typical fault site	Description of trouble
Remote control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation ⏻	Timer ⌚	Ready ⊕	Flash		
E01	-	-	⊙	●	●		No master remote control, failure remote control communication (reception)	Signals cannot be received from indoor unit; master remote controller has not been set (including two remote controller control).
E02	-	-	⊙	●	●		Failure remote control communication (transmission)	Signals cannot be transmitted to indoor unit.
E09	-	-	⊙	●	●		Duplicated master remote control	Both remote controllers have been set as master remote controller in two remote controller control (alarm and shutdown for header unit and continued operation for follower unit)

(Check code detected by central control device)

Check code			Display of receiving unit				Typical fault site	Description of trouble
Central control	Outdoor 7-segment display		Indicator light block					
		Sub-code	Operation ⏻	Timer ⌚	Ready ⊕	Flash		
C05	-	-	No indication (when main remote control also in use)				Failure central control communication (transmission)	Central control device is unable to transmit signal due to duplication of central control device
C06	-	-					Failure central control communication (reception)	Central control device is unable to receive signal.
C12	-	-	-				Bracket alarm for general-purpose device control interface	Device connected to general-purpose device control interface is failure.
P30	-	-	As per alarm unit (see above)				Group control follower unit trouble	Group follower unit is troubled (unit No. and above detail [ *** ] displayed on main remote controller)

**Note:** The same trouble, e.g. a communication trouble, may result in the display of different check codes depending on the device that detects it.  
Moreover, check codes detected by the main remote controller/central control device do not necessarily have a direct impact on air conditioner operation.



## List of Check Codes (Outdoor Unit)

(Check code detected by outdoor interface - typical examples)

If "HELLO" is displayed on the outdoor 7-segment for 1 minute or more, turn off the power supply once and then turn on the power supply again after passage of 30 seconds or more. When the same symptom appears, it is considered there is a possibility of I/F board trouble.

○ : Lighting, ⊙ : Flashing, ● : Goes off  
 ALT.: Flashing is alternately when there are two flashing LED  
 SIM: Simultaneous flashing when there are two flashing LED

Check code		Central control or main remote controller display	Display of receiving unit				Typical problem site	Description of problem																																																																																								
Outdoor 7-segment display			Indicator light block																																																																																													
Sub-code			Operation	Timer	Ready	Flash																																																																																										
			⏻	⌚	⊙																																																																																											
E06	Number of indoor units from which signal is received normally	E06	●	●	⊙		Signal lack of indoor unit	<ul style="list-style-type: none"> <li>Indoor unit initially communicating normally fails to return signal (reduction in number of indoor units connected).</li> <li>In TU2C-LINK communication system, if the termination resistance is not set in any of the indoor units</li> </ul>																																																																																								
E07	–	(E04)	●	●	⊙		Indoor-outdoor communication circuit trouble	Signal cannot be transmitted to indoor units (→ indoor units left without communication from outdoor unit).																																																																																								
E08	Duplicated indoor address	(E08)	⊙	●	●		Duplicated indoor address	More than one indoor unit are assigned same address (also detected at indoor unit end).																																																																																								
E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	E12	⊙	●	●		Automatic address starting trouble	<ul style="list-style-type: none"> <li>Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress.</li> <li>Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.</li> </ul>																																																																																								
E15	–	E15	●	●	⊙		Indoor unit not found during automatic address setting	Indoor unit fails to communicate while automatic address setting for indoor units is in progress.																																																																																								
E16	00: Capacity over 01: Number of units connected	E16	●	●	⊙		Too many indoor units connected/capacity over	Combined capacity of indoor units is too large. The maximum combined of indoor units shown in the specification table.																																																																																								
E19	00: No header unit 02: Two or more header units	E19	●	●	⊙		Trouble in number of outdoor header units	There is no or more than one outdoor header unit in one refrigerant line.																																																																																								
E20	01: Connection of outdoor unit from other refrigerant line 02: Connection of indoor unit from other refrigerant line	E20	●	●	⊙		Connection to other refrigerant line found during automatic address setting	Indoor unit from other refrigerant line is detected while indoor automatic address setting is in progress.																																																																																								
E23	–	E23	●	●	⊙		Outdoor-outdoor communication transmission trouble	Signal cannot be transmitted to other outdoor units.																																																																																								
E25	–	E25	●	●	⊙		Duplicated follower outdoor address	There is duplication in outdoor addresses set manually.																																																																																								
E26	Address of outdoor unit from which signal is not received normally	E26	●	●	⊙		Signal lack of outdoor unit	Follower outdoor unit initially communicating normally fails to do so (reduction in number of follower outdoor units connected).																																																																																								
E28	Detected outdoor unit No.	E28	●	●	⊙		Outdoor follower unit trouble	Outdoor header unit detects trouble relating to follower outdoor unit (detail displayed on follower outdoor unit).																																																																																								
E31	<table border="1"> <thead> <tr> <th colspan="4">P.C. board</th> <th colspan="4">P.C. board</th> </tr> <tr> <th colspan="2">Compressor</th> <th colspan="2">Fan Motor</th> <th colspan="2">Compressor</th> <th colspan="2">Fan Motor</th> </tr> <tr> <th>1</th><th>2</th><th>1</th><th>2</th><th>1</th><th>2</th><th>1</th><th>2</th> </tr> </thead> <tbody> <tr><td>01</td><td>○</td><td></td><td></td><td>11</td><td>○</td><td></td><td></td></tr> <tr><td>02</td><td></td><td>○</td><td></td><td>12</td><td></td><td>○</td><td></td></tr> <tr><td>03</td><td>○</td><td>○</td><td></td><td>13</td><td>○</td><td>○</td><td></td></tr> <tr><td>08</td><td></td><td></td><td>○</td><td>18</td><td></td><td></td><td>○</td></tr> <tr><td>09</td><td>○</td><td></td><td>○</td><td>19</td><td>○</td><td></td><td>○</td></tr> <tr><td>0A</td><td></td><td>○</td><td>○</td><td>1A</td><td></td><td>○</td><td>○</td></tr> <tr><td>0B</td><td>○</td><td>○</td><td>○</td><td>1B</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>10</td><td></td><td></td><td>○</td><td></td><td></td><td></td><td></td></tr> </tbody> </table> <p>Circle (○): Trouble P.C. board              80 : Communication trouble between MCU and Sub MCU</p>	P.C. board				P.C. board				Compressor		Fan Motor		Compressor		Fan Motor		1	2	1	2	1	2	1	2	01	○			11	○			02		○		12		○		03	○	○		13	○	○		08			○	18			○	09	○		○	19	○		○	0A		○	○	1A		○	○	0B	○	○	○	1B	○	○	○	10			○					E31	●	●	⊙		P.C. board communication trouble Sub MCU communication trouble	There is no communication between P.C. boards in inverter box.
P.C. board				P.C. board																																																																																												
Compressor		Fan Motor		Compressor		Fan Motor																																																																																										
1	2	1	2	1	2	1	2																																																																																									
01	○			11	○																																																																																											
02		○		12		○																																																																																										
03	○	○		13	○	○																																																																																										
08			○	18			○																																																																																									
09	○		○	19	○		○																																																																																									
0A		○	○	1A		○	○																																																																																									
0B	○	○	○	1B	○	○	○																																																																																									
10			○																																																																																													
F04	–	F04	⊙	⊙	○	ALT	Outdoor discharge temperature sensor (TD1) trouble	Outdoor discharge temperature sensor (TD1) has been open/short-circuited.																																																																																								
F05	–	F05	⊙	⊙	○	ALT	Outdoor discharge temperature sensor (TD2) trouble	Outdoor discharge temperature sensor (TD2) has been open/short-circuited.																																																																																								
F06	01: TE1 sensor 02: TE2 sensor 03: TE3 sensor	F06	⊙	⊙	○	ALT	Outdoor heat exchanger liquid side temperature sensor (TE1, TE2, TE3) trouble	Outdoor heat exchanger liquid side temperature sensors (TE1, TE2, TE3) have been open/short-circuited.																																																																																								
F07	01: TL1 sensor 02: TL2 sensor 03: TL3 sensor	F07	⊙	⊙	○	ALT	Outdoor liquid temperature sensor (TL1, TL2, TL3) trouble	Outdoor liquid temperature sensor (TL1, TL2, TL3) has been open/short-circuited.																																																																																								
F08	–	F08	⊙	⊙	○	ALT	Outdoor outside air temperature sensor (TO) trouble	Outdoor air temperature sensor (TO) has been open/short-circuited.																																																																																								
F09	01: TG1 sensor 02: TG2 sensor 03: TG3 sensor	F09	⊙	⊙	○	ALT	Outdoor heat exchanger gas side temperature sensor (TG1, TG2, TG3) trouble	Outdoor heat exchanger gas side temperature sensors (TG1, TG2, TG3) have been open/short-circuited.																																																																																								



Check code		Display of receiving unit				Typical problem site	Description of problem	
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block					
Sub-code			Operation	Timer	Ready	Flash		
F12	01: TS1 sensor 03: TS3 sensor 04: TS3 sensor disconnect	F12	⊙	⊙	○	ALT	<ul style="list-style-type: none"> <li>Outdoor suction temperature sensor (TS1,TS3) trouble</li> <li>When TS3 detects an unusual temperature during compressor operation and PMV4 operation in cooling mode</li> </ul>	<ul style="list-style-type: none"> <li>Outdoor suction temperature sensor (TS1,TS3) has been open/short-circuited.</li> <li>When the disconnect of outdoor temperature sensor (TS3) is detected.</li> </ul>
F15	–	F15	⊙	⊙	○	ALT	Outdoor temperature sensor (TE1,TL1) wiring trouble	Wiring trouble in outdoor temperature sensors (TE1,TL1) has been detected.
F16	–	F16	⊙	⊙	○	ALT	Outdoor pressure sensor (Pd, Ps) wiring trouble	Wiring trouble in outdoor pressure sensors (Pd, Ps) has been detected.
F23	–	F23	⊙	⊙	○	ALT	Low pressure sensor (Ps) trouble	Output voltage of low pressure sensor (Ps) is zero.
F24	–	F24	⊙	⊙	○	ALT	High pressure sensor (Pd) trouble	Output voltage of high pressure sensor (Pd) is zero or provides abnormal readings when compressors have been turned off.
F31	–	F31	⊙	⊙	○	SIM	Outdoor EEPROM trouble	Outdoor EEPROM is failure (alarm and shutdown for header unit and continued operation for follower unit)
H05	–	H05	●	⊙	●		Outdoor discharge temperature sensor (TD1) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD1) has been detected.
H06	–	H06	●	⊙	●		Activation of low-pressure protection	Low pressure (Ps) sensor detects abnormally low operating pressure.
H07	–	H07	●	⊙	●		Low oil level protection	Temperature sensor for oil level detection (TK1,TK2) detects abnormally low oil level.
H08	01: TK1 sensor trouble 02: TK2 sensor trouble	H08	●	⊙	●		Trouble in temperature sensor for oil level detection (TK1,TK2)	Temperature sensor for oil level detection (TK1,TK2) has been open/short-circuited.
H15	–	H15	●	⊙	●		Outdoor discharge temperature sensor (TD2) wiring trouble	Wiring/installation trouble or detachment of outdoor discharge temperature sensor (TD2) has been detected.
H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	H16	●	⊙	●		Oil level detection circuit trouble	No temperature change is detected by temperature sensor for oil level detection (TK1,TK2) despite compressor having been started.
L04	–	L04	⊙	○	⊙	SIM	Duplicated outdoor refrigerant line address	Identical refrigerant line address has been assigned to outdoor units belonging to different refrigerant piping systems.
L06	Number of priority indoor units (check code L05 or L06 depending on individual unit)	L05	⊙	●	⊙	SIM	Duplicated priority indoor unit (as displayed on priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
		L06	⊙	●	⊙	SIM	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	More than one indoor unit have been set up as priority indoor unit.
L08	–	(L08)	⊙	●	⊙	SIM	Indoor group address not set	Address setting have not been performed for one or more indoor units (also detected at indoor end).
L10	–	L10	⊙	○	⊙	SIM	Outdoor capacity not set	Outdoor unit capacity has not been set (after P.C. board replacement).
L17	–	L17	⊙	○	⊙	SIM	Outdoor model incompatibility trouble	Old model outdoor unit has been connected.
L23	02: Switch setting trouble of outdoor unit	L23	⊙	○	⊙	SIM	SW setting trouble	Switch setting trouble of outdoor units when HWM (Hot water module) is connected.
L28	–	L28	⊙	○	⊙	SIM	Too many outdoor units connected	More than six outdoor units have been connected.

Check code				Display of receiving unit				Typical problem site	Description of problem																																																																																						
Outdoor 7-segment display				Indicator light block																																																																																											
Sub-code				Central control or main remote controller display	Operation	Timer	Ready			Flash																																																																																					
L29	<table border="1"> <thead> <tr> <th colspan="4">P.C.board</th> </tr> <tr> <th colspan="2">Compressor</th> <th colspan="2">Fan Motor</th> </tr> <tr> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr><td>01</td><td>○</td><td></td><td></td></tr> <tr><td>02</td><td></td><td>○</td><td></td></tr> <tr><td>03</td><td>○</td><td>○</td><td></td></tr> <tr><td>08</td><td></td><td></td><td>○</td></tr> <tr><td>09</td><td>○</td><td></td><td>○</td></tr> <tr><td>0A</td><td></td><td>○</td><td>○</td></tr> <tr><td>0B</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>10</td><td></td><td></td><td>○</td></tr> </tbody> </table>		P.C.board				Compressor		Fan Motor		1	2	1	2	01	○			02		○		03	○	○		08			○	09	○		○	0A		○	○	0B	○	○	○	10			○	<table border="1"> <thead> <tr> <th colspan="4">P.C.board</th> </tr> <tr> <th colspan="2">Compressor</th> <th colspan="2">Fan Motor</th> </tr> <tr> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr><td>11</td><td>○</td><td></td><td>○</td></tr> <tr><td>12</td><td></td><td>○</td><td>○</td></tr> <tr><td>13</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>18</td><td></td><td></td><td>○</td></tr> <tr><td>19</td><td>○</td><td></td><td>○</td></tr> <tr><td>1A</td><td></td><td>○</td><td>○</td></tr> <tr><td>1B</td><td>○</td><td>○</td><td>○</td></tr> </tbody> </table>		P.C.board				Compressor		Fan Motor		1	2	1	2	11	○		○	12		○	○	13	○	○	○	18			○	19	○		○	1A		○	○	1B	○	○	○	L29	◎	○	◎	SIM	Trouble in number of P.C. boards	There are insufficient number of P.C. board in inverter box.
	P.C.board																																																																																														
Compressor		Fan Motor																																																																																													
1	2	1	2																																																																																												
01	○																																																																																														
02		○																																																																																													
03	○	○																																																																																													
08			○																																																																																												
09	○		○																																																																																												
0A		○	○																																																																																												
0B	○	○	○																																																																																												
10			○																																																																																												
P.C.board																																																																																															
Compressor		Fan Motor																																																																																													
1	2	1	2																																																																																												
11	○		○																																																																																												
12		○	○																																																																																												
13	○	○	○																																																																																												
18			○																																																																																												
19	○		○																																																																																												
1A		○	○																																																																																												
1B	○	○	○																																																																																												
	00				L29	◎	○	◎	SIM	The number of P.C.board trouble	When there is much number of an inverter P.C.board to model setting of an interface P.C.board.																																																																																				
L30	Detected indoor unit No.				(L30)	◎	○	◎	SIM	Indoor external trouble input (interlock)	Indoor unit has been shut down for external trouble input in one refrigerant line (detected by indoor unit).																																																																																				
P03	-				P03	◎	●	◎	ALT	Outdoor discharge (TD1) temperature trouble	Outdoor discharge temperature sensor (TD1) has detected abnormally high temperature.																																																																																				
P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring				P05	◎	●	◎	ALT	Power detection trouble /Open phase detection /Power supply miswiring detection	Open phase is detected when power is turned on. Inverter DC voltage is too high (overvoltage) or too low (undervoltage).																																																																																				
P07	01 : Compressor 1 heat sink trouble 02 : Compressor 2 heat sink trouble				P07	◎	●	◎	ALT	Heat sink overheating trouble	Temperature sensor built into IPM (TH) detects overheating.																																																																																				
	04: Heat sink dewing									Heat sink dewing trouble	Outdoor liquid temperature sensor (TL2) has detected abnormally low temperature.																																																																																				
P10	Indoor unit No. detected				(P10)	●	◎	◎	ALT	Indoor unit overflow	Indoor unit has been shutdown in one refrigerant line due to detection of overflow (detected by indoor unit).																																																																																				
P11	-				P11	●	◎	◎	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.																																																																																				
P13	-				P13	●	◎	◎	ALT	Outdoor liquid backflow detection trouble	State of refrigerant cycle circuit indicates liquid backflow operation.																																																																																				
P15	01: TS condition 02: TD condition				P15	◎	●	◎	ALT	Gas leak detection	Outdoor suction temperature sensor (TS1) detects sustained and repeated high temperatures that exceed standard value.																																																																																				
P17	-				P17	◎	●	◎	ALT	Outdoor discharge (TD2) temperature trouble	Outdoor discharge temperature sensor (TD2) detects abnormally high temperature.																																																																																				
P19	Outdoor unit No. detected				P19	◎	●	◎	ALT	4-way valve reversing trouble	Abnormality in refrigerating cycle is detected during heating operation.																																																																																				
P20	-				P20	◎	●	◎	ALT	Activation of high-pressure protection	High pressure (Pd) sensor detects high pressure that exceeds standard value.																																																																																				

MG-CTT: Magnet contactor

(Check code detected by Inverter of Compressor featuring in outdoor unit - typical examples)

Check code		Display of receiving unit				Typical problem site	Description of proplem	
Outdoor 7-segment display		Central control or main remote controller display	Indicator light block					
Sub-code			Operation ⏻	Timer ⌚	Ready ⊙	Flash		
F13	1*: Compressor 1 2*: Compressor 2	F13	⊙	⊙	○	ALT	Trouble in temperature sensor built into indoor IPM (TH)	Temperature sensor built into indoor IPM (TH) has been open/short-circuited.
H01	1*: Compressor 1 2*: Compressor 2	H01	●	⊙	●		Compressor breakdown	Inverter current (Idc) detection circuit detects overcurrent.
H02	1*: Compressor 1 2*: Compressor 2	H02	●	⊙	●		Compressor trouble (lockup)	Compressor lockup is detected
H03	1*: Compressor 1 2*: Compressor 2	H03	●	⊙	●		Current detection circuit trouble	Abnormal current is detected while inverter compressor is turned off.
H17	1*: Compressor 1 2*: Compressor 2	H17	●	⊙	●		Compressor trouble (Stop-out)	Judged that the synchronization could not be taken.
P04	1*: Compressor 1 2*: Compressor 2	P04	⊙	●	⊙	ALT	Activation of high-pressure SW	High-pressure SW is activated.
P05	1*: Compressor 1 side 2*: Compressor 2 side	P05	⊙	●	⊙	ALT	Compressor Vdc trouble	Inverter DC voltage is too high (overvoltage) or too low (undervoltage).
P07	1*: Compressor 1 side 2*: Compressor 2 side	P07	⊙	●	⊙	ALT	Heat sink overheat trouble	Temperature sensor built into IPM (TH) detects overheating.
P11	–	P11	●	⊙	⊙	ALT	Outdoor heat exchanger freeze trouble	Remaining frost on outdoor heat exchanger has been detected repeatedly.
P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	P22	⊙	●	⊙	ALT	Outdoor fan P.C. board trouble	Outdoor fan P.C. board detects trouble.
P26	1*: Compressor 1 2*: Compressor 2	P26	⊙	●	⊙	ALT	Activation of IPM, compressor short-circuit protection	Short-circuit protection for compressor motor driver circuit components is activated (momentary overcurrent).
P29	1*: Compressor 1 2*: Compressor 2	P29	⊙	●	⊙	ALT	Compressor position detection circuit trouble	Compressor motor position detection trouble is detected.

Note: The above check codes are examples only, and different check codes may be displayed depending on the outdoor unit configuration


### 8-3. Troubleshooting based on information displayed on remote controller

#### Using main remote controller (RBC-ASCU11\*)

##### <RBC-ASCU11\*>

##### (1) Confirmation and check

If a problem occurs with the air conditioner, the OFF timer indicator alternately shows the check code and the indoor Unit No. in which the problem occurred.

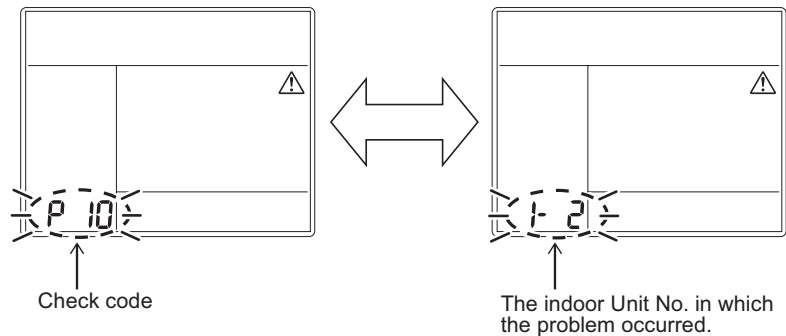

##### (2) Troubleshooting history and confirmation

You can check the troubleshooting history with the following procedure if a problem occurs with the air conditioner.

(The troubleshooting history records up to 4 incidents.)

You can check it during operation or when operation is stopped.

- If you check the troubleshooting history during OFF timer operation, the OFF timer will be canceled.

Procedure	Description of operation
1	<p>Push the OFF timer button for over 10 seconds and the indicators appear as an image indicating the troubleshooting history mode has been entered. If [Service check] is displayed, the mode enters in the troubleshooting history mode.</p> <ul style="list-style-type: none"> <li>• [01: Order of troubleshooting history] appears in the temperature indicator.</li> <li>• The OFF timer indicator alternately shows the [check code] and the [indoor Unit No. ] in which the problem occurred.</li> </ul>
2	<p>Each time the setting button is pushed, the recorded troubleshooting history is displayed in sequence. The troubleshooting history appears in order from [01] (newest) to [04] (oldest).</p> <p><b>CAUTION</b></p> <p>In the troubleshooting history mode, DO NOT push the Menu button for over 10 seconds, doing so deletes the entire troubleshooting history of the indoor unit.</p>
3	<p>After you have finished checking, push the ON/OFF button to return to the regular mode.</p> <ul style="list-style-type: none"> <li>• If the air conditioner is operating, it remains operated even after the ON/OFF button has been pushed. To stop its operation, push the ON/OFF button again.</li> </ul>

#### REQUIREMENT

Do not push the button as it would erase the whole trouble history of the indoor unit.

#### How to read displayed information

<7-segment display symbols>



<Corresponding alphanumerical letters>

0 1 2 3 4 5 6 7 8 9 A b C d E F H J L P







## Using indoor unit indicators (receiving unit light block) (wireless type)


To identify the check code, check the 7-segment display on the header unit. To check for check codes not displayed on the 7-segment display, consult the “List of Check Codes (Indoor Unit)” in “8-2. Troubleshooting method”.

● : Goes off ○ : Lighting ☀ : Blinking (0.5 seconds)



Light block	Check code	Cause of trouble			
Operation ● Timer ● Ready ● All lights out	–	Power turned off or trouble in wiring between receiving and indoor units			
Operation ☀ Timer ● Ready ● Blinking	E01	Trouble reception	Receiving unit	Trouble or poor contact in wiring between receiving unit and indoor units	
	E02	Trouble transmission			
	E03	Loss of communication			
		E08	Duplicated indoor unit No. (address)		Setting trouble
		E09	Duplicated master remote controller		
		E10	Communication trouble between indoor unit MCU		
		E11	Communication trouble between Application control kit and indoor unit P.C. board		
		E12	Automatic address starting trouble		
		E18	Trouble or poor contact in wiring between indoor units, indoor power turned off		
Operation ● Timer ● Ready ☀ Blinking		E04	Trouble or poor contact in wiring between indoor and outdoor units (loss of indoor-outdoor communication)		
	E06	Trouble reception in indoor-outdoor communication (dropping out of indoor unit)			
	E07	Trouble transmission in indoor-outdoor communication			
	E15	Indoor unit not found during automatic address setting			
	E16	Too many indoor units connected / overloading			
	E19	Trouble in number of outdoor header units			
	E20	Detection of refrigerant piping communication trouble during automatic address setting			
	E23	Trouble transmission in outdoor-outdoor communication			
	E25	Duplicated follower outdoor address			
	E26	Trouble reception in outdoor-outdoor communication, dropping out of outdoor unit			
	E28	Outdoor follower unit trouble			
	E31	P.C. board communication trouble			
Operation ● Timer ☀ Ready ☀ Alternate blinking	P01	Indoor AC fan trouble			
	P10	Indoor overflow trouble			
	P11	Outdoor heat exchanger freezing trouble			
	P12	Indoor DC fan trouble			
	P13	Outdoor liquid backflow detection trouble			
Operation ☀ Timer ● Ready ☀ Alternate blinking	P03	Outdoor discharge (TD1) temperature trouble			
	P04	Activation of outdoor high-pressure SW			
	P05	Open phase / power failure			
		Inverter DC voltage (Vdc) trouble MG-CTT trouble			
	P07	Outdoor heat sink overheating trouble - Poor cooling of electrical component (IGBT) of outdoor unit			
	P15	Gas leak detection - insufficient refrigerant charging			
	P17	Outdoor discharge (TD2) temperature trouble			
	P18	Outdoor discharge (TD3) temperature trouble			
	P19	Outdoor 4-way valve reversing trouble			
	P20	Activation of high-pressure protection			
	P22	Outdoor fan P.C. board trouble			
	P26	Outdoor IPM, Compressor short-circuit trouble			
	P29	Compressor position detection circuit trouble			
	P31	Shutdown of other indoor unit in group due to trouble (group follower unit trouble)			

MG-CTT: Magnet contactor

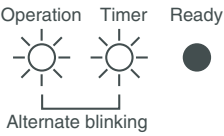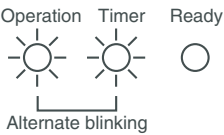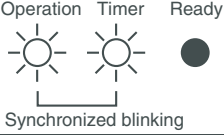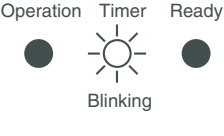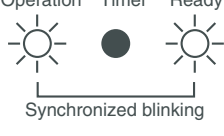Light block	Check code	Cause of trouble	
Operation    Timer    Ready  Alternate blinking	F01	Heat exchanger temperature sensor (TCJ) trouble	Indoor unit temperature sensor trouble
	F02	Heat exchanger temperature sensor (TC2) trouble	
	F03	Heat exchanger temperature sensor (TC1) trouble	
	F10	Ambient temperature sensor (TA/TSA) trouble	
	F11	Discharge temperature sensor (TF) trouble	
Operation    Timer    Ready  Alternate blinking	F04	Discharge temperature sensor (TD1) trouble	Outdoor unit temperature sensor trouble
	F05	Discharge temperature sensor (TD2) trouble	
	F06	Heat exchanger temperature sensor (TE1, TE2, TE3) trouble	
	F07	Liquid temperature sensor (TL1, TL2, TL3) trouble	
	F08	Outside air temperature sensor (TO) trouble	
	F12	Suction temperature sensor (TS1, TS3) trouble	
	F13	Heat sink sensor (TH) trouble	
	F15	Wiring trouble in heat exchanger sensor (TE1) and liquid temperature sensor (TL) Outdoor unit temperature sensor wiring / installation trouble	Outdoor unit pressure sensor trouble
	F16	Wiring trouble in outdoor high pressure sensor (Pd) and low pressure sensor (Ps) Outdoor pressure sensor wiring trouble	
	F23	Low pressure sensor (Ps) trouble	
F24	High pressure sensor (Pd) trouble		
Operation    Timer    Ready  Synchronized blinking	F29	Trouble in indoor EEPROM	
Operation    Timer    Ready  Blinking	H01	Compressor breakdown	Outdoor unit compressor related trouble
	H02	Compressor lockup	
	H03	Current detection circuit trouble	
	H05	Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD1)	
	H06	Abnormal drop in low-pressure sensor (Ps) reading	Protective shutdown of outdoor unit
	H07	Abnormal drop in oil level	
	H08	Trouble in temperature sensor for oil level detection circuit (TK1, TK2)	
	H15	Wiring / installation trouble or detachment of outdoor discharge temperature sensor (TD2)	
	H16	Oil level detection circuit trouble - Trouble in outdoor unit TK1, TK2 circuit	
	H17	Compressor trouble (Step-out)	
Operation    Timer    Ready  Synchronized blinking	L02	Outdoor unit model mismatched trouble	
	L03	Duplicated indoor group header unit	
	L05	Duplicated priority indoor unit (as displayed on priority indoor unit)	
	L06	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	
	L07	Connection of group control cable to stand-alone indoor unit	
	L08	Indoor group address not set	
	L09	Indoor capacity not set	
Operation    Timer    Ready  Synchronized blinking	L04	Duplicated outdoor refrigerant line address	
	L10	Outdoor capacity not set	
	L17	Outdoor model incompatibility trouble	
	L20	Duplicated central control address	
	L23	SW setting trouble	
	L28	Too many outdoor units connected	
	L29	Trouble in number of P.C. boards	
	L30	Indoor external interlock trouble	

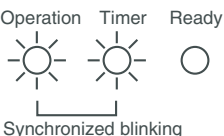Light block	Check code	Cause of trouble
Operation    Timer    Ready 	F30	Occupancy sensor trouble
	F31	Outdoor EEPROM trouble

**Other (indications not involving check code)**

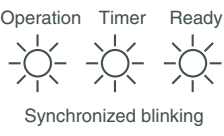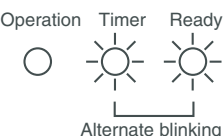Light block	Check code	Cause of trouble
Operation    Timer    Ready 	–	Test run in progress
Operation    Timer    Ready 	–	Setting incompatibility (automatic cooling / heating setting for model incapable of it and heating setting for cooling-only model)

## 8-4. Check Codes Displayed on Remote Controller and SMMS-u Outdoor Unit (7-Segment Display on I/F Board) and Locations to Be Checked

For other types of outdoor units, refer to their own service manuals.

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display	Sub-code					
	Check code						
E01	—	—	Remote controller	Indoor-remote controller communication trouble (detected at remote controller end)	Stop of corresponding unit	Communication between indoor P.C. board and remote controller is disrupted.	<ul style="list-style-type: none"> <li>• Check remote controller inter-unit tie cable (A/B).</li> <li>• Check for broken wire or connector bad contact.</li> <li>• Check indoor power supply.</li> <li>• Check for failure in indoor P.C. board.</li> <li>• Check remote controller address settings (when two remote controllers are in use).</li> <li>• Check remote controller P.C. board.</li> </ul>
E02	—	—	Remote controller	Remote controller transmission trouble	Stop of corresponding unit	Signal cannot be transmitted from remote controller to indoor unit.	<ul style="list-style-type: none"> <li>• Check internal transmission circuit of remote controller.</li> <li>--- Replace remote controller as necessary.</li> </ul>
E03	—	—	Indoor unit	Indoor-remote controller communication trouble (detected at indoor end)	Stop of corresponding unit	There is no communication from remote controller (including wireless) or network adaptor.	<ul style="list-style-type: none"> <li>• Check remote controller and network adaptor wiring.</li> </ul>
E04	—	—	Indoor unit	Indoor-outdoor communication circuit trouble (detected at indoor end)	Stop of corresponding unit	Indoor unit is not receiving signal from outdoor unit.	<ul style="list-style-type: none"> <li>• Check order in which power was turned on for indoor and outdoor units.</li> <li>• Check indoor address setting.</li> <li>• Check indoor-outdoor tie cable.</li> <li>• Check outdoor terminator resistor setting (SW100, Bit 2).</li> </ul>
E04	E06	No. of indoor units from which signal is received normally	I/F	Dropping out of indoor unit	All stop	<p><b>Condition 1</b> All indoor unit initially communicating normally fails to return signal for specified length of time.</p> <p><b>Condition 2</b> Outdoor I / F board SW103, Bit4 : OFF (Factory default)</p>	<ul style="list-style-type: none"> <li>• Check power supply to indoor unit. (Is power turned on?)</li> <li>• Check connection of indoor-outdoor communication cable.</li> <li>• Check connection of communication connectors on indoor P.C. board.</li> <li>• Check connection of communication connectors on outdoor P.C. board.</li> <li>• Check for failure in indoor P.C. board.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
	—	—	Indoor unit	Indoor-outdoor communication circuit trouble	Only specified indoor units stop	<p><b>Condition 1</b> Indoor unit initially communicating normally fails to return signal for specified length of time.</p>	<ul style="list-style-type: none"> <li>• Check power supply to indoor unit. (Is power turned on?)</li> <li>• Check indoor-outdoor power-on sequence.</li> <li>• Check indoor address setting</li> <li>• Check wiring of Indoor-outdoor communication wires</li> <li>• Check outdoor terminator resistor setting (SW100, Bit 2).</li> </ul>



Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
E04/E06	E06	No. of indoor units from which signal is received normally	Indoor unit	Indoor-outdoor communication circuit trouble (E04)	All stop	<p><b>Condition 1</b> One indoor unit or more initially communicating normally fails to return signal for specified length of time.</p> <p><b>Condition 2</b> Outdoor I / F board SW103, Bit4 : ON (To switch the check code detection condition.)</p> 	<ul style="list-style-type: none"> <li>• Check power supply to indoor unit. (Is power turned on?)</li> <li>• Check indoor-outdoor power-on sequence.</li> <li>• Check indoor address setting</li> <li>• Check wiring of Indoor-outdoor communication wires</li> <li>• Check outdoor terminator resistor setting (SW100, Bit 2).</li> </ul>
		I/F	Dropping out of indoor unit (E06)	<p>Display on main remote controller. Indoor units unavailable for indoor / outdoor communication. :E04 Indoor units available for indoor / outdoor communication. : E06</p> <p>In TU2C-LINK communication system, if the termination resistance is not set in any of the indoor units</p>			
—	E07	—	I/F	Indoor-outdoor communication circuit trouble (detected at outdoor end)	All stop	Signal cannot be transmitted from outdoor to indoor units for 30 seconds continuously.	<ul style="list-style-type: none"> <li>• Check outdoor terminator resistor setting (SW100, Bit 2).</li> <li>• Check connection of indoor-outdoor communication circuit.</li> </ul>
E08	E08	Duplicated indoor address	Indoor unit I/F	Duplicated indoor address	All stop	More than one indoor unit are assigned same address.	<ul style="list-style-type: none"> <li>• Check indoor addresses.</li> <li>• Check for any change made to remote controller connection (group/ individual) since indoor address setting.</li> </ul>
E09	—	—	Remote controller	Duplicated master remote controller	Stop of corresponding unit	In two remote controller configuration (including wireless), both controllers are set up as master. (Header indoor unit is shut down with alarm, while follower indoor units continue operating.)	<ul style="list-style-type: none"> <li>• Check remote controller settings.</li> <li>• Check remote controller P.C. boards.</li> </ul>
E10	—	—	Indoor unit	Indoor inter-MCU communication trouble	Stop of corresponding unit	Communication cannot be established/maintained upon turning on of power or during communication.	<ul style="list-style-type: none"> <li>• Check for failure in indoor P.C. board</li> </ul>
E12	E12	01: Indoor-outdoor communication 02: Outdoor-outdoor communication	I/F	Automatic address starting trouble	All stop	<ul style="list-style-type: none"> <li>• Indoor automatic address setting is started while automatic address setting for equipment in other refrigerant line is in progress.</li> <li>• Outdoor automatic address setting is started while automatic address setting for indoor units is in progress.</li> </ul>	<ul style="list-style-type: none"> <li>• Check whether the outdoor unit of other systems or the indoor unit is connected to Uv (U1/U2) line of Uc (U5/U6) line.</li> <li>• Perform automatic address setting again after disconnecting communication cable to that refrigerant line.</li> </ul>
E15	E15	—	I/F	Indoor unit not found during automatic address setting	All stop	Indoor unit cannot be detected after indoor automatic address setting is started.	<ul style="list-style-type: none"> <li>• Check connection of indoor-outdoor communication line.</li> <li>• Check for trouble in indoor power supply system.</li> <li>• Check for noise from other devices.</li> <li>• Check for power failure.</li> <li>• Check for failure in indoor P.C. board.</li> </ul>

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
E16	E16	00: Capacity over 01-: No. of units connected	I/F	Too many indoor units connected	All stop	<ul style="list-style-type: none"> <li>Combined capacity of indoor units is too large.</li> </ul> <p><b>Note:</b> If this code comes up after backup setting for outdoor unit failure is performed, perform "No capacity over detected" setting.</p> <p>&lt;"No capacity over detected" setting method&gt; Turn on SW103 / Bit 3 on I/F P.C. board of outdoor header unit.</p> <p>For Cooling Only model, this check code is not displayed even if it exceeds the combined capacity of indoor units.</p> <ul style="list-style-type: none"> <li>More than 128 indoor units are connected.</li> </ul>	<ul style="list-style-type: none"> <li>Check capacities of indoor units connected.</li> <li>Check combined HP capacities of indoor units.</li> <li>Check HP capacity settings of outdoor units.</li> <li>Check No. of indoor units connected.</li> <li>Check for failure in outdoor P.C. board (I/F).</li> </ul>
E18	—	—	Indoor unit	Trouble in communication between indoor header and follower units	Stop of corresponding unit	<p>Periodic communication between indoor header and follower units cannot be maintained.</p>	<ul style="list-style-type: none"> <li>Check remote controller wiring.</li> <li>Check indoor power supply wiring.</li> <li>Check P.C. boards of indoor units.</li> </ul>
E19	E19	00: No header unit 02: Two or more header units	I/F	Trouble in number of outdoor header units	All stop	<ul style="list-style-type: none"> <li>There are more than one outdoor header units in one line.</li> <li>There is no outdoor header unit in one line.</li> </ul>	<p>The outdoor unit which turned on SW101 and the bit 1 of the interface P.C. board is set to Header unit.</p> <ul style="list-style-type: none"> <li>Check SW101 bit 1 of follower outdoor unit.</li> <li>Check connection of indoor-outdoor communication line.</li> <li>Check for failure in outdoor P.C. board (I/F).</li> </ul>
E20	E20	01: Connection of outdoor unit from other line 02: Connection of indoor unit from other line	I/F	Connection to other line found during automatic address setting	All stop	<p>Equipment from other line is found to have been connected when indoor automatic address setting is in progress.</p>	<p>Check whether the outdoor unit of other systems or the indoor unit is connected to Uv (U1/U2) line or Uc (U5/U6) line.</p>
E23	E23	—	I/F	Outdoor/outdoor communication transmission trouble	All stop	<p>Signal cannot be transmitted to other outdoor units for at least 30 seconds continuously.</p>	<ul style="list-style-type: none"> <li>Check power supply to outdoor units. (Is power turned on?)</li> <li>Check connection of tie cables between outdoor units for bad contact or broken wire.</li> <li>Check communication connectors on outdoor P.C. boards.</li> <li>Check for failure in outdoor P.C. board (I/F).</li> <li>Check termination resistance setting for communication between outdoor units.</li> </ul>
E25	E25	—	I/F	Duplicated follower outdoor address	All stop	<p>There is duplication in outdoor addresses set manually.</p>	<p><b>Note:</b> Do not set outdoor addresses manually.</p>
E26	E26	Address of outdoor unit from which signal is not received normally	I/F	Signal lack of outdoor unit	All stop	<p>Outdoor unit initially communicating normally fails to return signal for specified length of time.</p>	<ul style="list-style-type: none"> <li>Backup setting is being used for outdoor units.</li> <li>Check power supply to outdoor unit. (Is power turned on?)</li> <li>Check connection of tie cables between outdoor units for bad contact or broken wire.</li> <li>Check communication connectors on outdoor P.C. boards.</li> <li>Check for failure in outdoor P.C. board (I/F).</li> </ul>

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																								
	Outdoor 7-segment display																																																																														
	Check code	Sub-code																																																																													
The check code which occurred follower outdoor unit is displayed	E28	Detected outdoor unit No.	I/F	Outdoor follower unit trouble	All stop	Outdoor header unit receives trouble code from outdoor follower unit.	<ul style="list-style-type: none"> <li>Check check code displayed on outdoor follower unit.</li> </ul> <Convenient functions> If SW04 is pressed and held for at least 1 second while [E28] is displayed on the 7-segment display of outdoor header unit, the fan of the outdoor unit that has been shut down due to a trouble comes on. If SW04 and SW05 are pressed simultaneously, the fans of normal outdoor units come on. To stop the fan or fans, press SW05 on its own.																																																																								
E31	E31	<table border="1"> <thead> <tr> <th colspan="4">P.C.board</th> </tr> <tr> <th colspan="2">Compressor</th> <th colspan="2">Fan Motor</th> </tr> <tr> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr><td>01</td><td>○</td><td></td><td></td></tr> <tr><td>02</td><td></td><td>○</td><td></td></tr> <tr><td>03</td><td>○</td><td>○</td><td></td></tr> <tr><td>08</td><td></td><td></td><td>○</td></tr> <tr><td>09</td><td>○</td><td></td><td>○</td></tr> <tr><td>0A</td><td></td><td>○</td><td>○</td></tr> <tr><td>0B</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>10</td><td></td><td></td><td>○</td></tr> <tr><td>11</td><td>○</td><td></td><td>○</td></tr> <tr><td>12</td><td></td><td>○</td><td>○</td></tr> <tr><td>13</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>18</td><td></td><td></td><td>○</td></tr> <tr><td>19</td><td>○</td><td></td><td>○</td></tr> <tr><td>1A</td><td></td><td>○</td><td>○</td></tr> <tr><td>1B</td><td>○</td><td>○</td><td>○</td></tr> </tbody> </table> Circle (O): Trouble P.C. board	P.C.board				Compressor		Fan Motor		1	2	1	2	01	○			02		○		03	○	○		08			○	09	○		○	0A		○	○	0B	○	○	○	10			○	11	○		○	12		○	○	13	○	○	○	18			○	19	○		○	1A		○	○	1B	○	○	○	I/F	P.C. board communication trouble	All stop	Communication is disrupted between P.C. board in inverter box.	<ul style="list-style-type: none"> <li>Check wiring and connectors involved in communication between P.C. board I/F P.C. board for bad contact or broken wire.</li> <li>Check for failure in outdoor P.C. board (I/F, comp. P.C. board or Fan P.C. board).</li> <li>Check for external noise.</li> </ul>
		P.C.board																																																																													
Compressor		Fan Motor																																																																													
1	2	1	2																																																																												
01	○																																																																														
02		○																																																																													
03	○	○																																																																													
08			○																																																																												
09	○		○																																																																												
0A		○	○																																																																												
0B	○	○	○																																																																												
10			○																																																																												
11	○		○																																																																												
12		○	○																																																																												
13	○	○	○																																																																												
18			○																																																																												
19	○		○																																																																												
1A		○	○																																																																												
1B	○	○	○																																																																												
		80		Communication trouble between MCU and Sub MCU	All stop	Communication between MCU and Sub MCU stopped.	<ul style="list-style-type: none"> <li>Operation of power supply reset (OFF for 60 seconds or more)</li> <li>Outdoor I/F PC board trouble check</li> </ul>																																																																								
F01	—	—	Indoor unit	Indoor TCJ sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>Check connection of TCJ sensor connector and wiring.</li> <li>Check resistance characteristics of TCJ sensor.</li> <li>Check for failure in indoor P.C. board.</li> </ul>																																																																								
F02	—	—	Indoor unit	Indoor TC2 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>Check connection of TC2 sensor connector and wiring.</li> <li>Check resistance characteristics of TC2 sensor.</li> <li>Check for failure in indoor P.C. board.</li> </ul>																																																																								
F03	—	—	Indoor unit	Indoor TC1 sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>Check connection of TC1 sensor connector and wiring.</li> <li>Check resistance characteristics of TC1 sensor.</li> <li>Check for failure in indoor P.C. board.</li> </ul>																																																																								
F04	F04	—	I/F	TD1 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>Check connection of TD1 sensor connector.</li> <li>Check resistance characteristics of TD1 sensor.</li> <li>Check for failure in outdoor P.C. board (I/F).</li> </ul>																																																																								

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Main remote controller	Outdoor 7-segment display						
	Check code	Sub-code					
F05	F05	—	I/F	TD2 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TD2 sensor connector.</li> <li>• Check resistance characteristics of TD2 sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
F06	F06	01: TE1 sensor trouble 02: TE2 sensor trouble 03: TE3 sensor trouble	I/F	TE1/TE2/TE3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TE1/TE2/TE3 sensor connectors.</li> <li>• Check resistance characteristics of TE1/TE2/TE3 sensors.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
F07	F07	01: TL1 sensor trouble 02: TL2 sensor trouble 03: TL3 sensor trouble	I/F	TL1/TL2/TL3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TL1/TL2/TL3 sensor connector.</li> <li>• Check resistance characteristics of TL1/TL2/TL3 sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
F08	F08	—	I/F	TO sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TO sensor connector.</li> <li>• Check resistance characteristics of TO sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
F09	F09	01: TG1 sensor trouble 02: TG2 sensor trouble 03: TG3 sensor trouble	I/F	TG1/TG2/TG3 sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TG1/TG2/TG3 sensor connectors.</li> <li>• Check resistance characteristics of TG1/TG2/TG3 sensors.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
F10	—	—	Indoor unit	Indoor TA sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TA sensor connector and wiring.</li> <li>• Check resistance characteristics of TA sensor.</li> <li>• Check for failure in indoor P.C. board.</li> </ul>
F11	—	—	Indoor unit	Indoor TF sensor trouble	Stop of corresponding unit	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TF sensor connector and wiring.</li> <li>• Check resistance characteristics of TF sensor.</li> <li>• Check for failure in indoor P.C. board.</li> </ul>
F12	F12	01: TS1 sensor trouble 03: TS3 sensor trouble 04: TS3 sensor disconnect	I/F	TS1/TS3 sensor trouble	All stop	<ul style="list-style-type: none"> <li>• Sensor resistance is infinity or zero (open/short circuit).</li> <li>• When TS3 detects an unusual temperature during compressor operation and PMV4 operation in cooling mode</li> </ul>	<ul style="list-style-type: none"> <li>• Check connection of TS1/TS3 sensor connector</li> <li>• Check resistance characteristics of TS1/TS3 sensor.</li> <li>• The attachment check of TS3 sensor.</li> <li>• Check for failure in indoor P.C. board.</li> </ul>
F13	F13	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	TH sensor trouble	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Failure in IPM built-in temperature sensor → Replace Compressor P.C. board.</li> </ul>
F15	F15	—	I/F	Outdoor temperature sensor wiring trouble (TE1, TL1)	All stop	During compressor operation in HEAT mode, TL1 continuously provides temperature reading higher than indicated by TL1 by at least specified margin for 3 minutes or more.	<ul style="list-style-type: none"> <li>• Check installation of TE1 and TL1 sensors.</li> <li>• Check resistance characteristics of TE1 and TL1 sensors.</li> <li>• Check for outdoor P.C. board (I/F) trouble</li> </ul>

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
F16	F16	—	I/F	Outdoor pressure sensor wiring trouble (Pd, Ps)	All stop	Readings of high-pressure Pd sensor and low-pressure Ps sensor are switched. Output voltages of both sensors are zero.	<ul style="list-style-type: none"> <li>• Check connection of high-pressure Pd sensor connector.</li> <li>• Check connection of low-pressure Ps sensor connector.</li> <li>• Check for failure in pressure sensors Pd and Ps.</li> <li>• Check for trouble in outdoor P.C. board (I/F).</li> <li>• Check for compressor poor compression.</li> </ul>
F23	F23	—	I/F	Ps sensor trouble	All stop	Output voltage of Ps sensor is zero.	<ul style="list-style-type: none"> <li>• Check for connection trouble involving Ps sensor and Pd sensor connectors.</li> <li>• Check connection of Ps sensor connector.</li> <li>• Check for failure in Ps sensor.</li> <li>• Check for compressor poor compression.</li> <li>• Check for failure in 4-way valve.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> <li>• Check for failure in SV4 circuit.</li> </ul>
F24	F24	—	I/F	Pd sensor trouble	All stop	Output voltage of Pd sensor is zero (sensor open-circuited). Pd > 4.15MPa despite compressor having been turned off.	<ul style="list-style-type: none"> <li>• Check connection of Pd sensor connector.</li> <li>• Check for failure in Pd sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
F29	—	—	Indoor unit	Other indoor trouble	Stop of corresponding unit	Indoor P.C. board does not operate normally.	<ul style="list-style-type: none"> <li>• Check for failure in indoor P.C. board (failure EEPROM)</li> </ul>
F31	F31	—	I/F	Outdoor EEPROM trouble	All stop *1	Outdoor P.C. board (I/F) does not operate normally.	<ul style="list-style-type: none"> <li>• Check power supply voltage.</li> <li>• Check power supply noise.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
H01	H01	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor breakdown	All stop	Inverter current detection circuit detects overcurrent and shuts system down.	<ul style="list-style-type: none"> <li>• Check power supply voltage. (AC380-415V ± 10%).</li> <li>• Check for failure in compressor.</li> <li>• Check for possible cause of abnormal overloading.</li> <li>• Check for failure in outdoor P.C. board (Compressor).</li> </ul>
H02	H02	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (lockup) MG-CTT trouble	All stop	Overcurrent is detected several seconds after startup of inverter compressor.	<ul style="list-style-type: none"> <li>• Check for failure in compressor.</li> <li>• Check power supply voltage. (AC380-415V ± 10%).</li> <li>• Check compressor system wiring, particularly for open phase.</li> <li>• Check connection of connectors/terminals on compressor P.C. board.</li> <li>• Check conductivity of case heater. (Check for refrigerant problem inside compressor.)</li> <li>• Check for failure in outdoor P.C. board (Compressor).</li> <li>• Check outdoor MG-CTT.</li> </ul>
H03	H03	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Current detection circuit trouble	All stop	Current flow of at least specified magnitude is detected despite inverter compressor having been shut turned off.	<ul style="list-style-type: none"> <li>• Check current detection circuit wiring.</li> <li>• Check failure in outdoor P.C. board (Compressor).</li> </ul>

\*1 Total shutdown in case of header unit  
Continued operation in case of follower unit

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
H05	H05	—	I/F	TD1 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of compressor 1 (TD1) does not increase despite compressor being in operation.	<ul style="list-style-type: none"> <li>• Check installation of TD1 sensor.</li> <li>• Check connection of TD1 sensor connector and wiring.</li> <li>• Check resistance characteristics of TD1 sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
H06	H06	—	I/F	Activation of low-pressure protection	All stop	Low-pressure Ps sensor detects operating pressure lower than 0.02MPa.	<ul style="list-style-type: none"> <li>• Check service valves to confirm full opening (both gas and liquid sides).</li> <li>• Check outdoor PMVs for clogging (PMV1, 2, 3).</li> <li>• Check for failure in SV4 circuits.</li> <li>• Check for failure in low-pressure Ps sensor.</li> <li>• Check indoor filter for clogging.</li> <li>• Check valve opening status of indoor PMV.</li> <li>• Check refrigerant piping for clogging.</li> <li>• Check operation of outdoor fan (during heating).</li> <li>• Check for insufficiency in refrigerant quantity.</li> </ul>
H07	H07	—	I/F	Low oil level protection	All stop	Operating compressor detects continuous state of low oil level for about 2 hours.	<p>&lt;All outdoor units in corresponding line to be checked&gt;</p> <ul style="list-style-type: none"> <li>• Check connection and installation of TK1 and TK2 sensors.</li> <li>• Check resistance characteristics of TK1 and TK2 sensors.</li> <li>• Check for gas or oil leak in same line.</li> <li>• Check for refrigerant problem inside compressor casing.</li> <li>• Check SV3D, SV3F valves for failure.</li> <li>• Check oil return circuit of oil separator for clogging.</li> <li>• Check oil equalizing circuit for clogging.</li> </ul>
H08	H08	01: TK1 sensor trouble 02: TK2 sensor trouble	I/F	Trouble in temperature sensor for oil level detection	All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TK1 sensor connector.</li> <li>• Check resistance characteristics of TK1 sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
					All stop	Sensor resistance is infinity or zero (open/short circuit).	<ul style="list-style-type: none"> <li>• Check connection of TK2 sensor connector.</li> <li>• Check resistance characteristics of TK2 sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>
H15	H15	—	I/F	TD2 sensor miswiring (incomplete insertion)	All stop	Discharge temperature of (TD2) does not increase despite compressor 2 being in operation.	<ul style="list-style-type: none"> <li>• Check installation of TD2 sensor.</li> <li>• Check connection of TD2 sensor connector and wiring.</li> <li>• Check resistance characteristics of TD2 sensor.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> </ul>

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
H16	H16	01: TK1 oil circuit trouble 02: TK2 oil circuit trouble	I/F	Oil level detection circuit trouble	All stop	No temperature change is detected by TK1 despite compressor 1 having been started.	<ul style="list-style-type: none"> <li>• Check for disconnection of TK1 sensor.</li> <li>• Check resistance characteristics of TK1 sensor.</li> <li>• Check for connection trouble involving TK1 and TK2 sensors</li> <li>• Check for clogging in oil equalizing circuit capillary.</li> <li>• Check for refrigerant entrapment inside compressor.</li> </ul>
		No temperature change is detected by TK2 despite compressor 2 having been started.				<ul style="list-style-type: none"> <li>• Check for disconnection of TK2 sensor.</li> <li>• Check resistance characteristics of TK2 sensor.</li> <li>• Check for connection trouble involving TK1 and TK2 sensors</li> <li>• Check SV3F valve malfunction.</li> <li>• Check for clogging in oil equalizing circuit capillary.</li> <li>• Check for refrigerant entrapment inside compressor.</li> </ul>	
H17	H17	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor trouble (Step-out)	All stop	Judged that the synchronization could not be taken.	<ul style="list-style-type: none"> <li>• Check power supply voltage. (AC380-415V ± 10%).</li> <li>• Check for failure in compressor.</li> <li>• Check for possible cause of abnormal overloading.</li> <li>• Check for failure in outdoor P.C. board (compressor).</li> </ul>
L02	L02	—	Indoor unit	Outdoor units model disagreement trouble	Stop of corresponding unit	In case of different outdoor unit (Not corresponded to Air to Air Heat Exchanger type)	<ul style="list-style-type: none"> <li>• Check outdoor unit model. (Check whether the outdoor unit corresponds to Air to Air Heat Exchanger type or not.)</li> </ul>
L03	—	—	Indoor unit	Duplicated indoor header unit	Stop of corresponding unit	There are more than one header units in group.	<ul style="list-style-type: none"> <li>• Check indoor addresses.</li> <li>• Check for any change made to remote controller connection (group/individual) since indoor address setting.</li> </ul>
L04	L04	—	I/F	Duplicated outdoor line address	All stop	There is duplication in line address setting for outdoor units belonging to different refrigerant piping systems.	<ul style="list-style-type: none"> <li>• Check line addresses.</li> </ul>
L05	—	—	I/F	Duplicated priority indoor unit (as displayed on priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	<ul style="list-style-type: none"> <li>• Check display on priority indoor unit.</li> </ul>
L06	L06	No. of priority indoor units	I/F	Duplicated priority indoor unit (as displayed on indoor unit other than priority indoor unit)	All stop	More than one indoor units have been set up as priority indoor unit.	<ul style="list-style-type: none"> <li>• Check displays on priority indoor unit and outdoor unit.</li> </ul>
L07	—	—	Indoor unit	Connection of group control cable to standalone indoor unit	Stop of corresponding unit	There is at least one standalone indoor unit to which group control cable is connected.	<ul style="list-style-type: none"> <li>• Check indoor addresses.</li> </ul>
L08	L08	—	Indoor unit	Indoor group / addresses not set	Stop of corresponding unit	Address setting has not been performed for indoor units.	<ul style="list-style-type: none"> <li>• Check indoor addresses.</li> </ul> <p><b>Note:</b> <b>This code is displayed when power is turned on for the first time after installation.</b></p>
L09	—	—	Indoor unit	Indoor capacity not set	Stop of corresponding unit	Capacity setting has not been performed for indoor unit.	Set indoor capacity. (DN = 11)



Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)																																																																								
Main remote controller	Outdoor 7-segment display																																																																														
	Check code	Sub-code																																																																													
L10	L10	—	I/F	Outdoor capacity not set	All stop	Initial setting of I/F P.C. board has not been implemented.	• Check model setting of P.C. board for servicing outdoor I/F P.C. board.																																																																								
L20	—	—	Network adaptor Indoor unit	Duplicated central control address	All stop	There is duplication in central control address setting.	• Check central control addresses.																																																																								
L23	—	—	I/F	SW setting trouble	All stop	Outdoor P.C. board (I/F) does not operate normally.	• Check switch setting of outdoor P.C. board (I/F).																																																																								
L28	L28	—	I/F	Too many outdoor units connected	All stop	There are more than 5 outdoor units.	• Check No. of outdoor units connected (Only up to 5 units per system allowed). • Check communication lines between outdoor units. • Check for failure in outdoor P.C. board (I/F).																																																																								
L29	L29	<table border="1"> <thead> <tr> <th colspan="4">P.C. board</th> </tr> <tr> <th colspan="2">Compressor</th> <th colspan="2">Fan Motor</th> </tr> <tr> <th>1</th> <th>2</th> <th>1</th> <th>2</th> </tr> </thead> <tbody> <tr><td>01</td><td>○</td><td></td><td></td></tr> <tr><td>02</td><td></td><td>○</td><td></td></tr> <tr><td>03</td><td>○</td><td>○</td><td></td></tr> <tr><td>08</td><td></td><td></td><td>○</td></tr> <tr><td>09</td><td>○</td><td></td><td>○</td></tr> <tr><td>0A</td><td></td><td>○</td><td>○</td></tr> <tr><td>0B</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>10</td><td></td><td></td><td>○</td></tr> <tr><td>11</td><td>○</td><td></td><td>○</td></tr> <tr><td>12</td><td></td><td>○</td><td>○</td></tr> <tr><td>13</td><td>○</td><td>○</td><td>○</td></tr> <tr><td>18</td><td></td><td></td><td>○</td></tr> <tr><td>19</td><td>○</td><td></td><td>○</td></tr> <tr><td>1A</td><td></td><td>○</td><td>○</td></tr> <tr><td>1B</td><td>○</td><td>○</td><td>○</td></tr> </tbody> </table> <p>Circle (O): Trouble P.C. board</p>	P.C. board				Compressor		Fan Motor		1	2	1	2	01	○			02		○		03	○	○		08			○	09	○		○	0A		○	○	0B	○	○	○	10			○	11	○		○	12		○	○	13	○	○	○	18			○	19	○		○	1A		○	○	1B	○	○	○	I/F	Trouble in No. of P.C. board	All stop	Insufficient number of P.C. board are detected when power is turned on.	• Check model setting of P.C. board for servicing outdoor I/F P.C. board. • Check connection of UART communication connector. • Check compressor P.C. board, fan P.C. board, and I/F P.C. board for failure.
		P.C. board																																																																													
Compressor		Fan Motor																																																																													
1	2	1	2																																																																												
01	○																																																																														
02		○																																																																													
03	○	○																																																																													
08			○																																																																												
09	○		○																																																																												
0A		○	○																																																																												
0B	○	○	○																																																																												
10			○																																																																												
11	○		○																																																																												
12		○	○																																																																												
13	○	○	○																																																																												
18			○																																																																												
19	○		○																																																																												
1A		○	○																																																																												
1B	○	○	○																																																																												
		00	I/F	The number of inverter P.C. boards is abnormal.	All stop	When there is much number of an inverter P.C. board to model setting of an interface P.C. board	• Check I/F P.C. board exchange has been correctly performed as a procedure. • Check for failure in I/F P.C. board. • Check for inverter P.C. board for compressor and inverter P.C. board for fan																																																																								
L30	L30	Detected indoor address	Indoor unit	Indoor external interlock (External abnormal input)	Stop of corresponding unit	• Indoor unit has been shut down due to external abnormal input signal.	When external device is connected: 1) Check for trouble in external device. 2) Check for trouble in indoor P.C. board. When external device is not connected: 1) Check for trouble in indoor P.C. board.																																																																								
—	L31	—	I/F	Extended IC trouble	Continued operation	There is part failure in P.C. board (I/F).	Check outdoor P.C. board (I/F).																																																																								
P01	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit		• Check the lock of fan motor (AC fan). • Check wiring.																																																																								
P03	P03	—	I/F	Discharge temperature TD1 trouble	All stop	Discharge temperature (TD1) exceeds 115 °C.	• Check outdoor service valves (gas side, liquid side) to confirm full opening. • Check outdoor PMVs (PMV1, 2, 3, 4) for clogging. • Check resistance characteristics of TD1 sensor. • Check for insufficiency in refrigerant quantity. • Check for failure in 4-way valve. • Check for leakage of SV4 circuit. • Check SV4 circuit (wiring or installation trouble in SV41 or SV42).																																																																								



Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
P04	P04	1*: Compressor 1 side 2*: Compressor 2 side	I/F	Activation of high-pressure SW	All stop	High-pressure SW is activated.	<ul style="list-style-type: none"> <li>• Check connection of high-pressure SW connector.</li> <li>• Check for failure in Pd pressure sensor.</li> <li>• Check outdoor service valves (gas side, liquid side) to confirm full opening.</li> <li>• Check for failure in outdoor fan.</li> <li>• Check for failure in outdoor fan motor.</li> <li>• Check outdoor PMVs (PMV1, 2, 3) for clogging.</li> <li>• Check indoor/outdoor heat exchangers for clogging.</li> <li>• Check for short-circuiting of outdoor suction/discharge air flows.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> <li>• Check for trouble in indoor fan system (possible cause of air flow reduction).</li> <li>• Check opening status of indoor PMV.</li> <li>• Check indoor-outdoor communication line for wiring trouble.</li> <li>• Check for failure operation of check valve in discharge pipe convergent section.</li> <li>• Check gas balancing SV4 valve circuit.</li> <li>• Check for refrigerant overcharging.</li> </ul>
P05	P05	00: Power detection trouble 01: Open phase 02: Power supply miswiring	I/F	Power detection trouble / Open phase detection / Power supply miswiring	All stop	<ul style="list-style-type: none"> <li>• Open phase is detected when power is turned on.</li> <li>• Inverter DC voltage is too high (overvoltage) or too low (undervoltage).</li> </ul>	<ul style="list-style-type: none"> <li>• Check for failure in outdoor P.C. board (I/F).</li> <li>• Check wiring of outdoor power supply.</li> <li>• Check power supply voltage.</li> </ul>
		1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor Vdc trouble			
P07	P07	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Heat sink overheating trouble	All stop	Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none"> <li>• Check outdoor fan system trouble.</li> <li>• Check IPM and heat sink for thermal performance for failure installation. (e.g. mounting screws and thermal conductivity)</li> <li>• Check for failure in Compressor P.C. board. (failure IPM built-in temperature sensor (TH))</li> </ul>
		01: Compressor 1 heat sink trouble 02: Compressor 2 heat sink trouble 04: Heat sink dewing	I/F	Heat sink overheating trouble Heat sink dewing trouble	All stop	Condensation detection on heat sink has occurred four times or more in operation. Temperature sensor built into IPM (TH) is overheated.	<ul style="list-style-type: none"> <li>• Check outdoor fan system trouble.</li> <li>• Check IPM and heat sink for thermal performance for troubled installation. (e. g. mounting screws and thermal conductivity)</li> <li>• Check for failure in compressor P.C. board. (failure IPM built-in temperature sensor (TH))</li> <li>• Check shortage of refrigerant.</li> <li>• Check outdoor service valves.</li> <li>• Check connection of TL2 sensor.</li> <li>• Check resistance characteristics of TL2 sensor.</li> <li>• Check resistance characteristics of TO sensor.</li> <li>• Check malfunctions of Pd and Ps sensors.</li> <li>• Check outdoor I/F P.C. board malfunction.</li> <li>• Check PMV2 and PMV3</li> </ul>

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
P10	P10	Detected indoor address	Indoor unit	Indoor overflow trouble	All stop	<ul style="list-style-type: none"> <li>• Float switch operates.</li> <li>• Float switch circuit is open-circuited or disconnected at connector.</li> </ul>	<ul style="list-style-type: none"> <li>• Check float switch connector.</li> <li>• Check operation of drain pump.</li> <li>• Check drain pump circuit.</li> <li>• Check drain pipe for clogging.</li> <li>• Check for failure in indoor P.C. board.</li> </ul>
P11	—	—	I/F	Outdoor heat exchanger freeze trouble	All stop	<ul style="list-style-type: none"> <li>• Outdoor heat exchanger remaining frost detection has occurred eight times or more due to abnormal frost formation in heating operation.</li> </ul>	<ul style="list-style-type: none"> <li>• Check shortage of refrigerant.</li> <li>• Check connection of TE1, TE2 and TE3 sensors.</li> <li>• Check resistance characteristics of TE1, TE2, and TE3 sensors.</li> <li>• Check disconnection of TS1 sensor.</li> <li>• Check resistance characteristics of TS1 sensor.</li> <li>• Check outdoor I/F P.C. board malfunction.</li> <li>• Check operation of 4 way valve.</li> <li>• Check operation of outdoor PMV (1, 2, 3).</li> <li>• Check short circuit from outlet air to inlet air.</li> </ul>
P12	—	—	Indoor unit	Indoor fan motor trouble	Stop of corresponding unit	<ul style="list-style-type: none"> <li>• Motor speed measurements continuously deviate from target value.</li> <li>• Overcurrent protection is activated.</li> </ul>	<ul style="list-style-type: none"> <li>• Check connection of fan connector and wiring.</li> <li>• Check for failure in fan motor.</li> <li>• Check for failure in indoor P.C. board.</li> <li>• Check impact of outside air treatment (OA).</li> </ul>
P13	P13	—	I/F	Outdoor liquid backflow detection trouble	All stop	<p>&lt;During cooling operation&gt; When system is in cooling operation, high pressure is detected in the unit that has been turned off.</p> <p>&lt;During heating operation&gt; When system is in heating operation, low pressure is detected to be high in unit that has been turned off.</p>	<ul style="list-style-type: none"> <li>• Check full-close operation of outdoor PMV (1, 2, 3, 4).</li> <li>• Check for failure in Pd or Ps sensor.</li> <li>• Check failure in outdoor P.C. board (I/F).</li> <li>• Check capillary of oil separator oil return circuit for clogging.</li> <li>• Check for leakage of check valve in discharge pipe</li> </ul>
P15	P15	01: TS condition	I/F	Gas leak detection (TS1 condition)	All stop	Protective shutdown due to sustained suction temperature at or above judgment criterion for at least 10 minutes is repeated four times or more. <TS trouble judgment criterion> In cooling operation: 60 °C In heating operation: 40 °C	<ul style="list-style-type: none"> <li>• Check for insufficiency in refrigerant quantity.</li> <li>• Check outdoor service valves (gas side, liquid side) to confirm full opening.</li> <li>• Check PMVs (PMV1, 2, 3, 4) for clogging.</li> <li>• Check resistance characteristics of TS1 sensor.</li> <li>• Check for failure in 4-way valve.</li> <li>• Check SV4 circuit for leakage</li> </ul>
		02: TD condition	I/F	Gas leak detection (TD condition)	All stop	Protective shutdown due to sustained discharge temperature (TD1 or TD2) at or above 108 °C for at least 10 minutes is repeated four times or more.	<ul style="list-style-type: none"> <li>• Check for insufficiency in refrigerant quantity.</li> <li>• Check PMVs (PMV 1, 2, 3, 4) for clogging.</li> <li>• Check resistance characteristics of TD1 and TD2 sensors.</li> <li>• Check indoor filter for clogging.</li> <li>• Check piping for clogging.</li> <li>• Check SV4 circuit (for leakage or coil installation trouble).</li> </ul>

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
P17	P17	—	I/F	Discharge temperature TD2 trouble	All stop	Discharge temperature (TD2) exceeds 115 °C.	<ul style="list-style-type: none"> <li>• Check outdoor service valves (gas side, liquid side) to confirm full opening.</li> <li>• Check outdoor PMVs (PMV1, 2, 3, 4) for clogging.</li> <li>• Check resistance characteristics of TD2 sensor.</li> <li>• Check for failure in 4-way valve.</li> <li>• Check SV4 circuit for leakage.</li> <li>• Check SV4 circuit (for wiring or installation trouble involving SV41 and SV42).</li> </ul>
P19	P19	Detected outdoor unit No.	I/F	4-way valve reversing trouble	All stop	Abnormal refrigerating cycle data is collected during heating operation.	<ul style="list-style-type: none"> <li>• Check for failure in main body of 4-way valve.</li> <li>• Check for coil failure in 4-way valve and loose connection of its connector.</li> <li>• Check resistance characteristics of TS1 and TE1, TE2 sensors.</li> <li>• Check output voltage characteristics of Pd and Ps pressure sensors.</li> <li>• Check for wiring trouble involving TE1 and TL1 sensors.</li> </ul>
P20	P20	—	I/F	Activation of high-pressure protection	All stop	<p>&lt;During cooling operation&gt; Pd sensor detects pressure equal to or greater than 3.85 MPa.</p> <p>&lt;During heating operation&gt; Pd sensor detects pressure equal to or greater than 3.6 MPa.</p>	<ul style="list-style-type: none"> <li>• Check for failure in Pd pressure sensor.</li> <li>• Check service valves (gas side, liquid side) to confirm full opening.</li> <li>• Check for failure in outdoor fan.</li> <li>• Check for failure in outdoor fan motor.</li> <li>• Check outdoor PMV (PMV1, 2, 3, 4) for clogging.</li> <li>• Check indoor/outdoor heat exchangers for clogging.</li> <li>• Check for short-circuiting of outdoor suction/discharge air flows.</li> <li>• Check for failure in outdoor P.C. board (I/F).</li> <li>• Check for failure in indoor fan system (possible cause of air flow reduction).</li> <li>• Check opening status of indoor PMV.</li> <li>• Check indoor-outdoor communication line for wiring trouble.</li> <li>• Check for trouble operation of check valve in discharge pipe convergent section.</li> <li>• Check gas balancing SV4 valve circuit.</li> <li>• Check for refrigerant overcharging.</li> </ul>

Check code			Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
Main remote controller	Outdoor 7-segment display						
	Check code	Sub-code					
P22	P22	1*: Fan P.C. board 1 2*: Fan P.C. board 2	Fan INV. P.C. board	Outdoor fan P.C. board trouble	All stop	Protected operation of Fan inverter P.C. board	<ul style="list-style-type: none"> <li>• Check fan motor.</li> <li>• Check for failure in fan P.C. board.</li> <li>• Check connection of fan motor connector.</li> <li>• Check power voltage of the main power supply.</li> </ul>
P26	P26	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	IPM, Compressor shortcircuit protection trouble	All stop	Overcurrent is momentarily detected during startup of compressor.	<ul style="list-style-type: none"> <li>• Check connector connection and wiring on compressor P.C. board.</li> <li>• Check for failure in compressor (layer shortcircuit).</li> <li>• Check for failure in outdoor P.C. board ( Compressor).</li> </ul>
P29	P29	1*: Compressor 1 side 2*: Compressor 2 side	Compressor P.C. board	Compressor position detection circuit trouble	All stop	Position detection is not going on normally.	<ul style="list-style-type: none"> <li>• Check wiring and connector connection.</li> <li>• Check for compressor layer short-circuit.</li> <li>• Check for failure in compressor P.C. board.</li> </ul>
P31	—	—	Indoor unit	Other indoor trouble (group follower unit trouble)	Stop of corresponding unit	There is trouble in other indoor unit in group, resulting in detection of E07/L07/L03/L08.	<ul style="list-style-type: none"> <li>• Check indoor P.C. board.</li> </ul>

## Check codes Detected by Central Control Device

Main remote controller	Check code		Location of detection	Description	System status	Check code detection condition(s)	Check items (locations)
	Outdoor 7-segment display						
	Check code	Sub-code					
C05	—		Central control device	Central control device transmission trouble	Continued operation	Central control device is unable to transmit signal.	<ul style="list-style-type: none"> <li>• Check for failure in central control device.</li> <li>• Check for failure in central control communication line.</li> <li>• Check termination resistance setting.</li> </ul>
C06	—		Central control device	Central control device reception trouble	Continued operation	Central control device is unable to receive signal.	<ul style="list-style-type: none"> <li>• Check for failure in central control device.</li> <li>• Check for failure in central control communication line.</li> <li>• Check terminator resistor setting.</li> <li>• Check power supply for devices at other end of central control communication line.</li> <li>• Check failure in P.C. boards of devices at other end of central control communication line.</li> </ul>
C12	—		General-purpose device I/F	Batch alarm for general-purpose device control interface	Continued operation	Trouble signal is input to control interface for general-purpose devices.	<ul style="list-style-type: none"> <li>• Check trouble input.</li> </ul>
P30	Differs according to nature of alarm-causing trouble		Central control device	Group control follower unit trouble	Continued operation	Trouble occurs in follower unit under group control. ([P30] is displayed on central control remote controller.)	<ul style="list-style-type: none"> <li>• Check check code of unit that has generated alarm.</li> </ul>
	(L20 displayed.)			Duplicated central control address	Continued operation	There is duplication in central control addresses.	<ul style="list-style-type: none"> <li>• Check address settings.</li> </ul>

### ▼ Points to Note When Servicing Compressor

(1) When checking the outputs of inverters, remove the wiring from all the compressors.

### ▼ How to Check Inverter Output

- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board.  
(The model with two compressor should remove the wiring for two sets (6 leads).)
- (3) Turn on the power supply and start cooling or heating operation.
- (4) Check the output voltage across each pair of inverter-side. If the result is unsatisfactory according to the judgment criteria given in the table below, replace the compressor P.C. board.


No.	Measured leads	Criterion
1	CN201 - CN202	240-400V
2	CN202 - CN203	240-400V
3	CN203 - CN201	240-400V

### ▼ How to Check Resistance of Compressor Winding



- (1) Turn off the power supply.
- (2) Remove compressor leads from the compressor P.C. board. (Be sure to remove all the leads.)
- (3) With each compressor, check the phase-to-phase winding resistances and winding-to-outdoor cabinet resistance using a multimeter.
  - Earth trouble?  
→ It is normal if the winding-to-outdoor cabinet resistance is 10MΩ or more.
  - Inter-winding short circuit?  
→ It is normal if the phase-to-phase resistances are in the 9.3-11.5Ω range. (Use a digital multimeter.)



### ▼ How to Check Outdoor Fan Motor

- (1) Turn off the power supply.
- (2) Remove fan motor leads from the fan P.C. board for the outdoor fan.
- (3) Rotate the fan by hand. If the fan does not turn, the fan motor is troubled (locked up). Replace the fan motor. If the fan turns, measure the phase-to-phase winding resistances using a multimeter. It is normal if the measurements are in the 9.3-11.5Ω range. (Use a digital multimeter.)


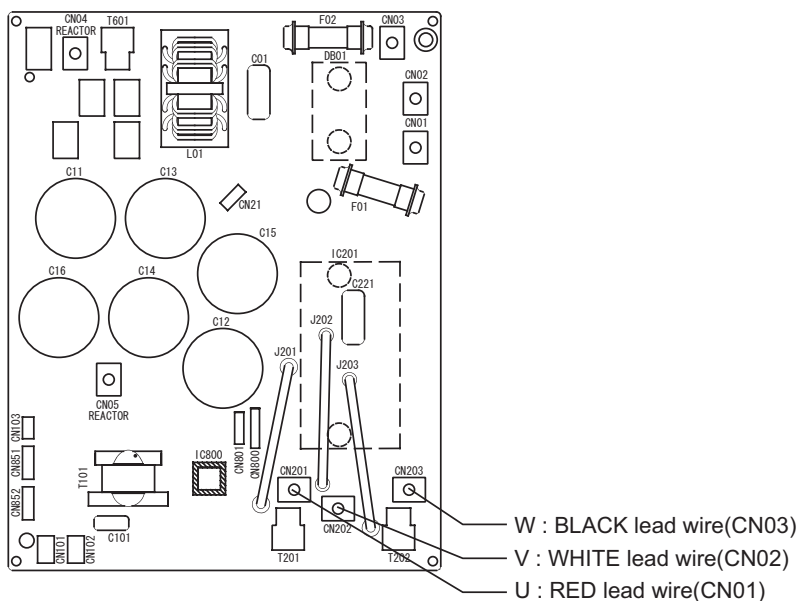




## 8-5. Diagnosis procedure for each check code

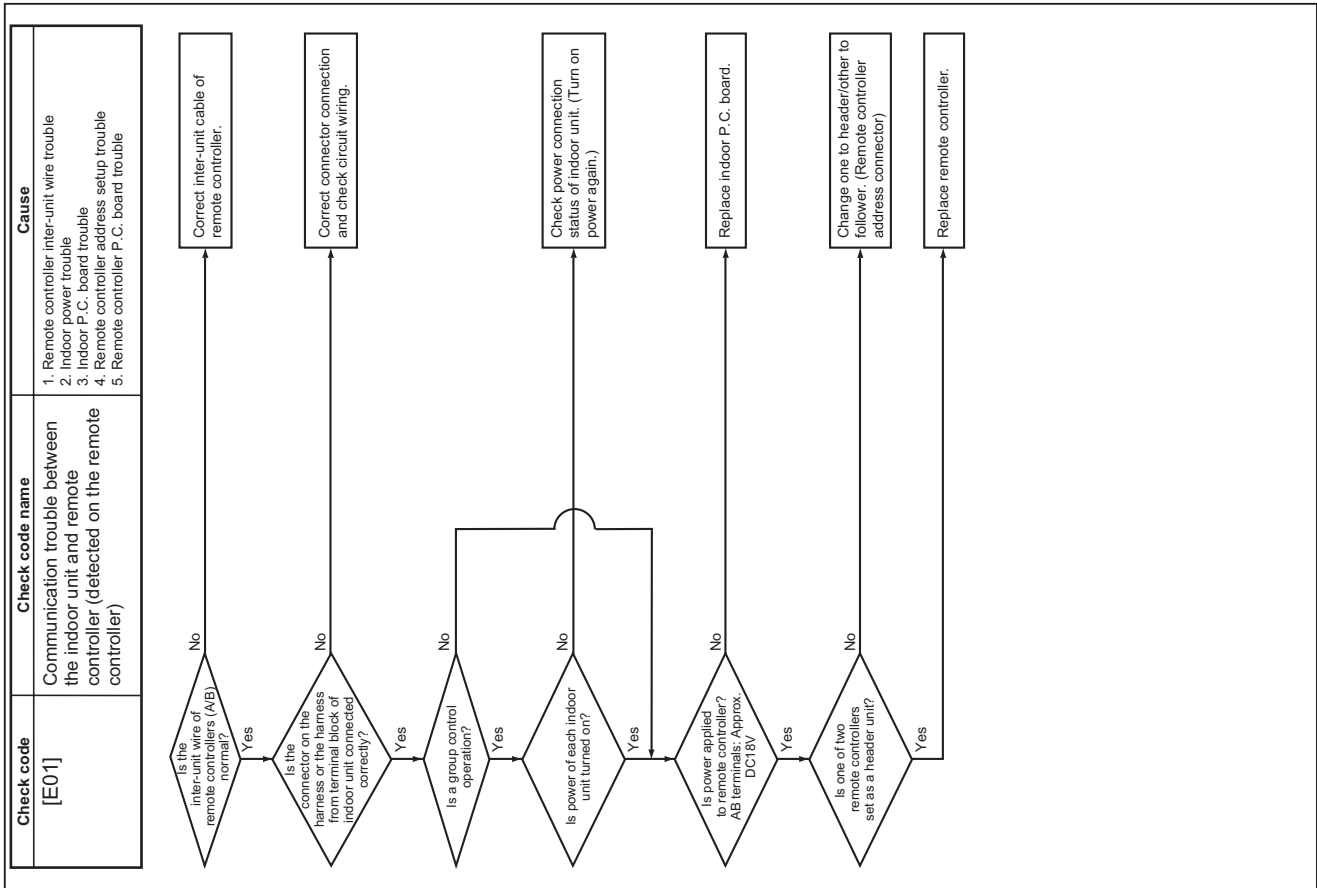
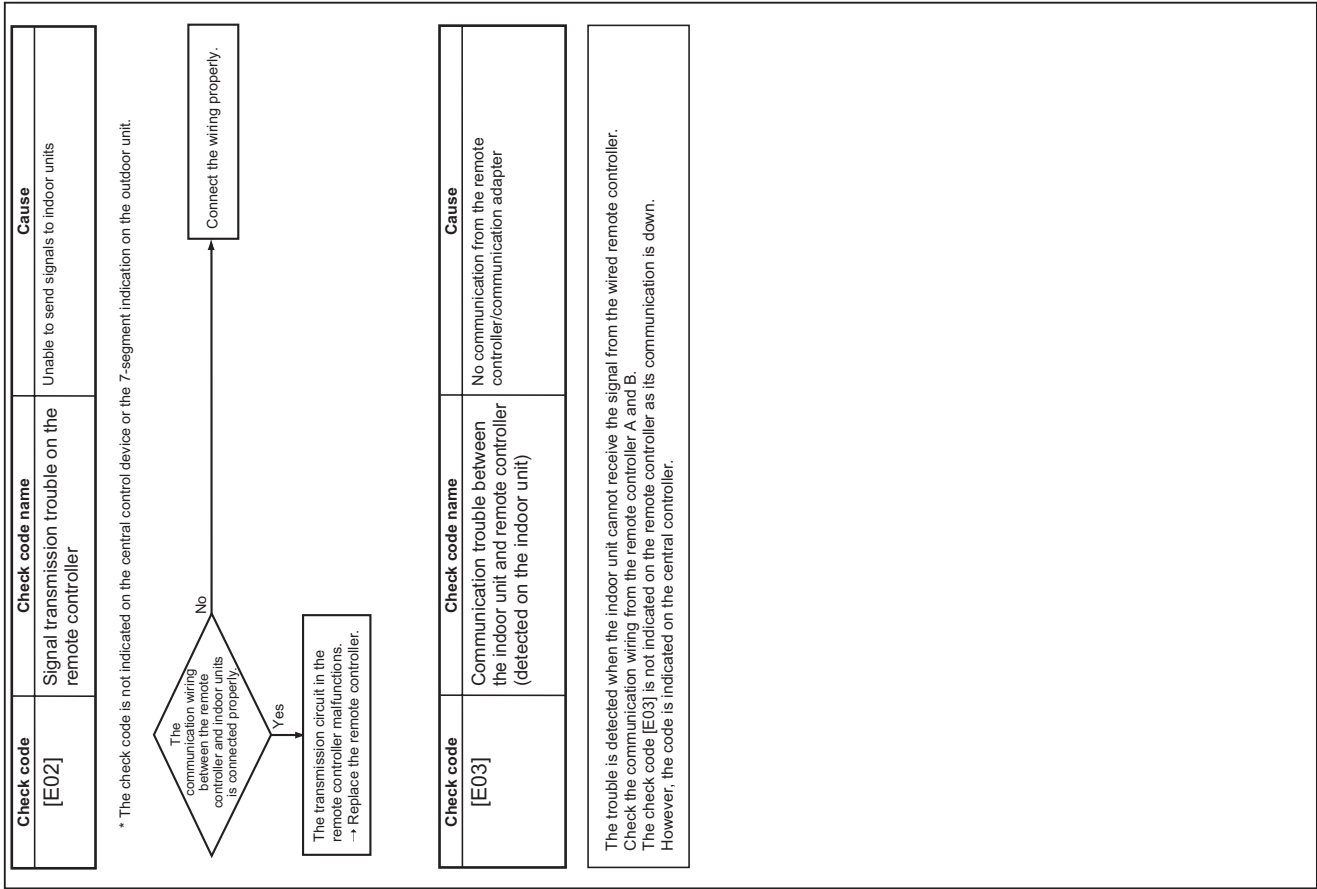


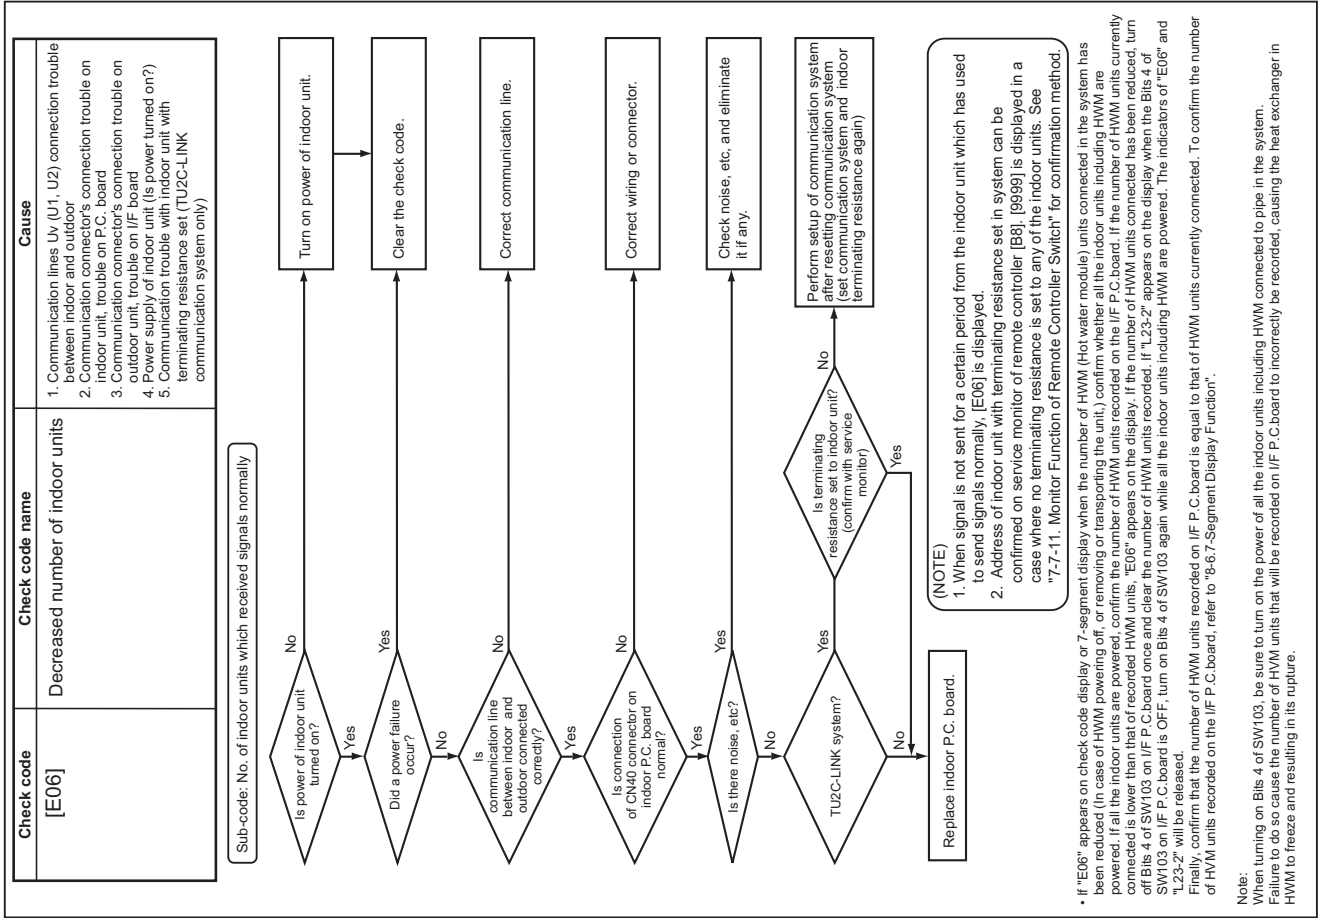
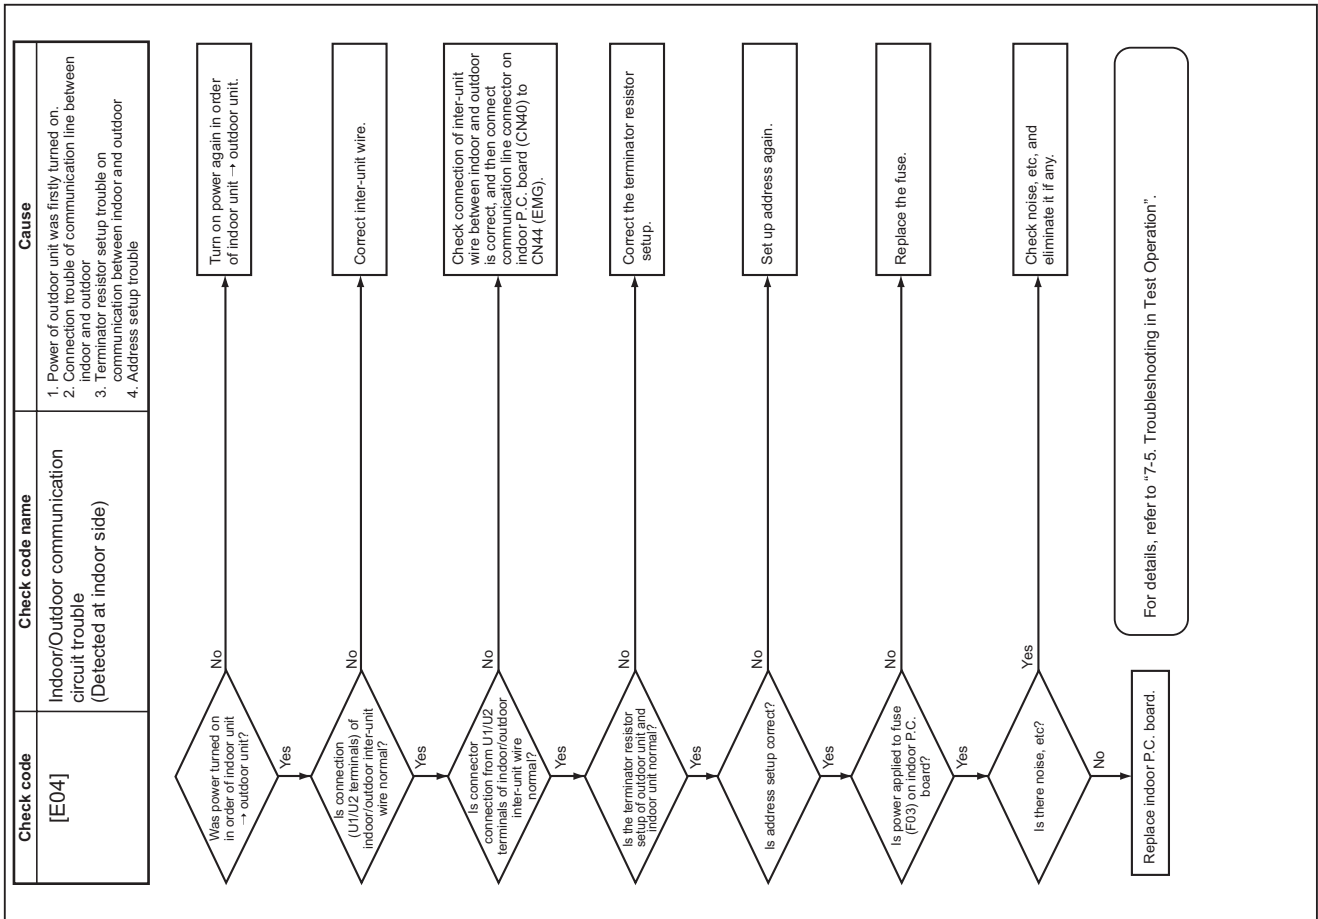






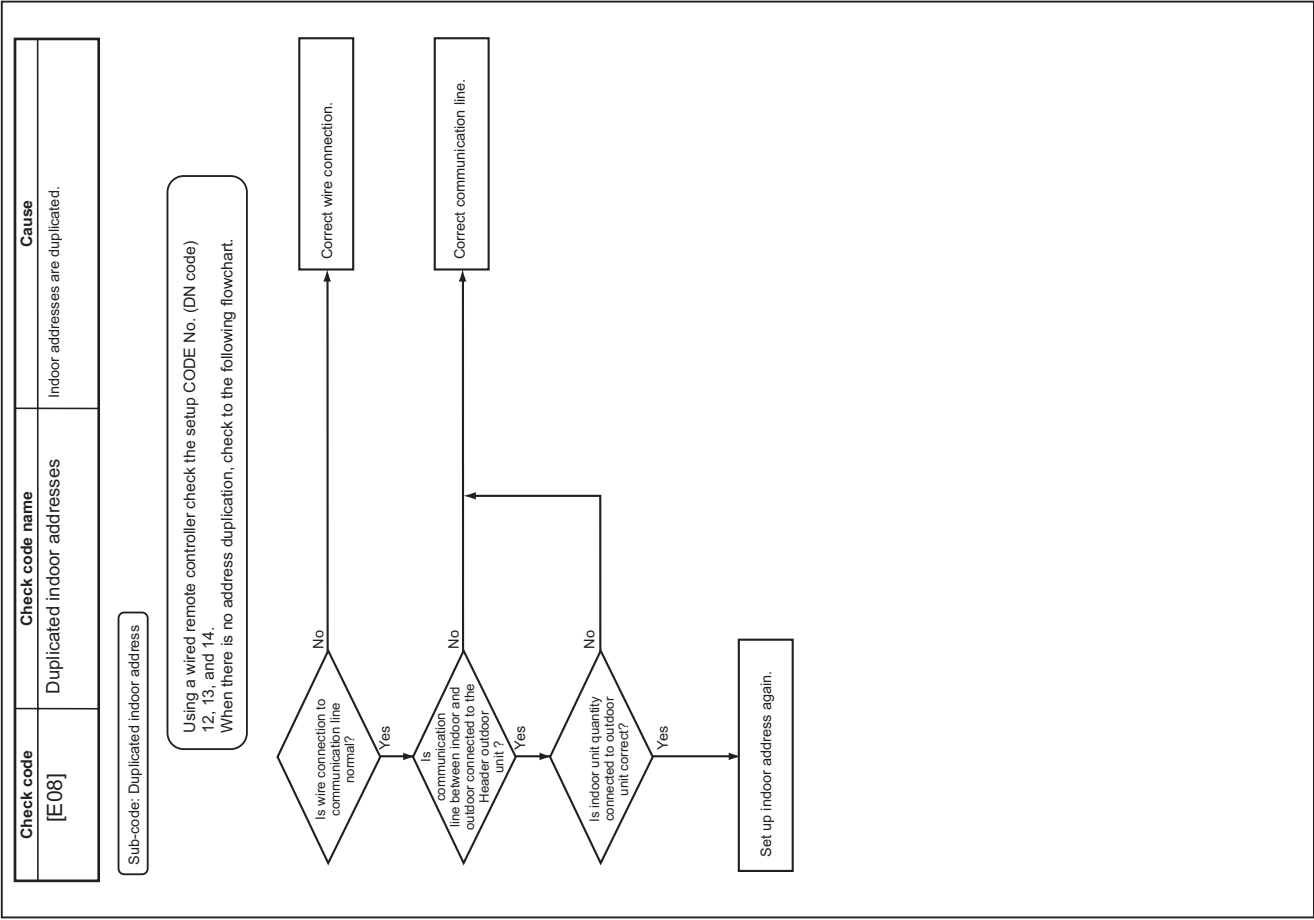
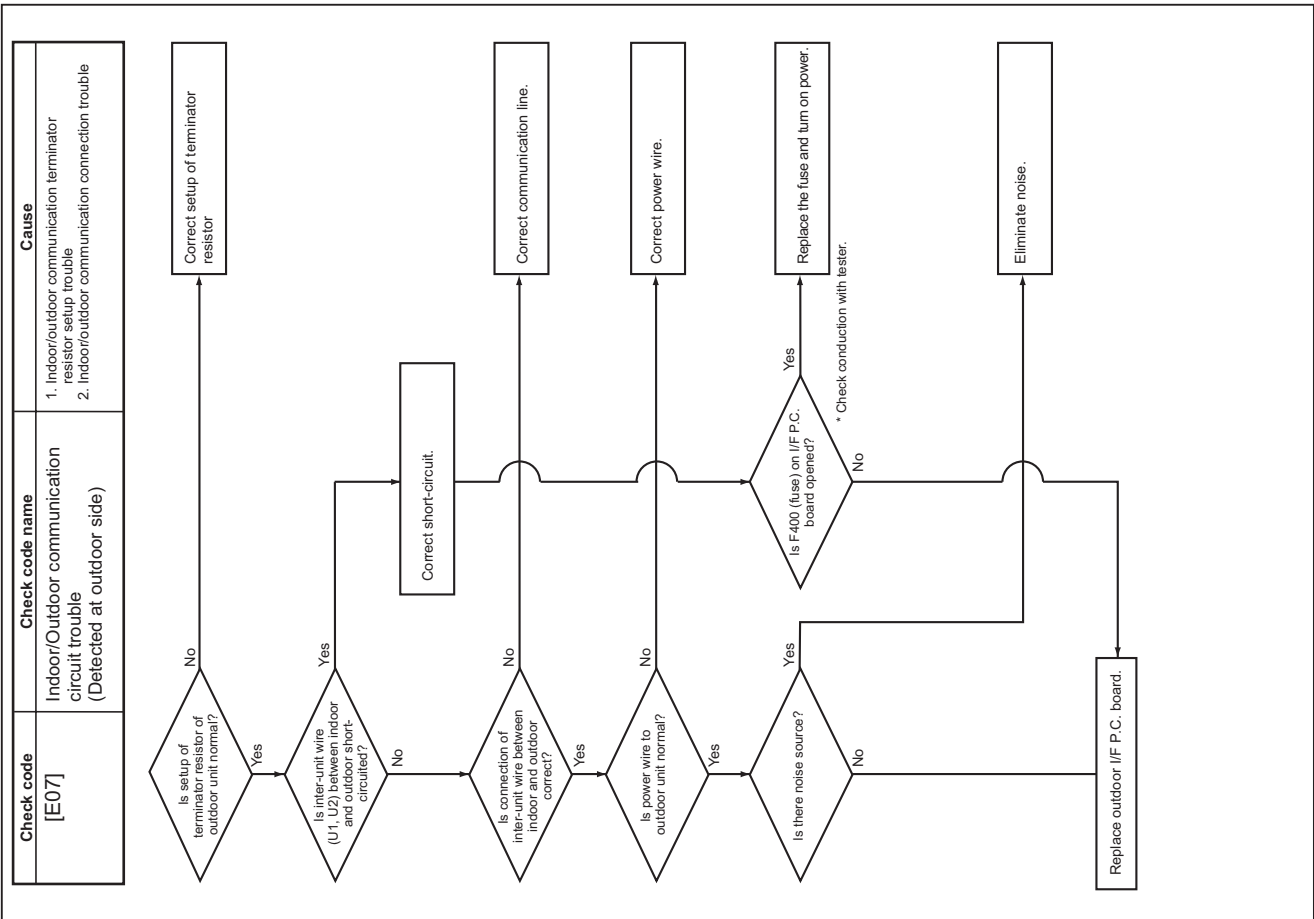


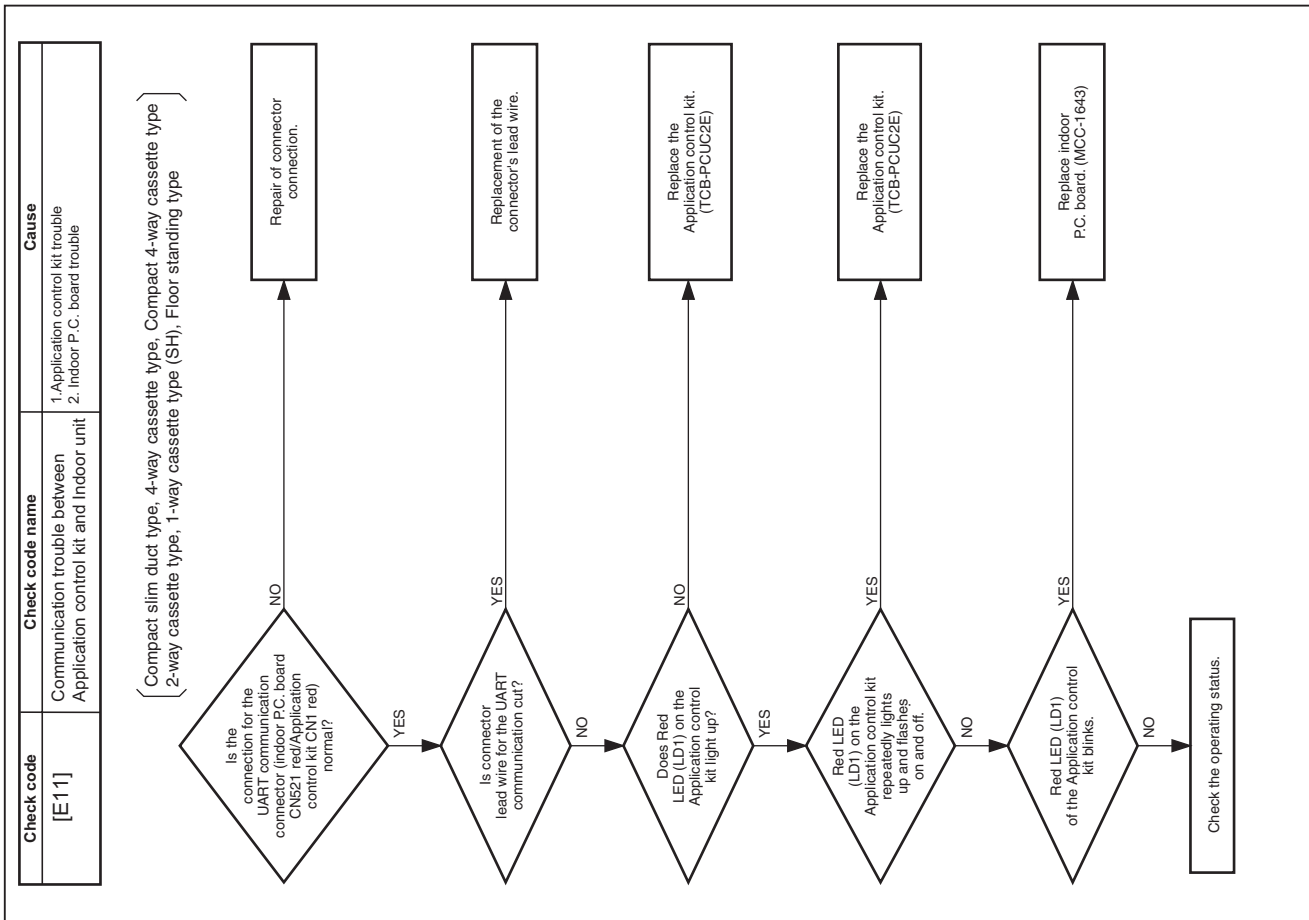
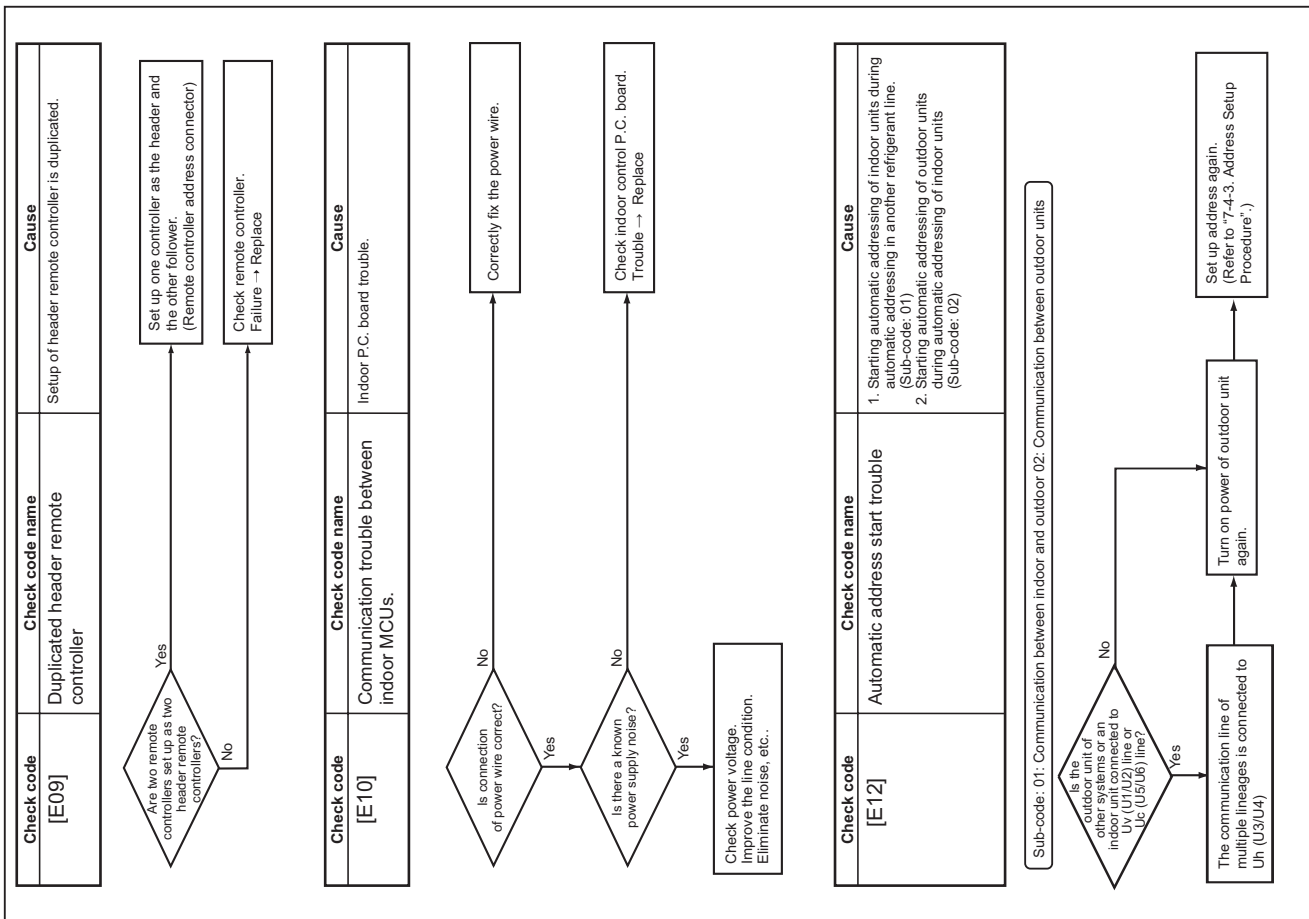


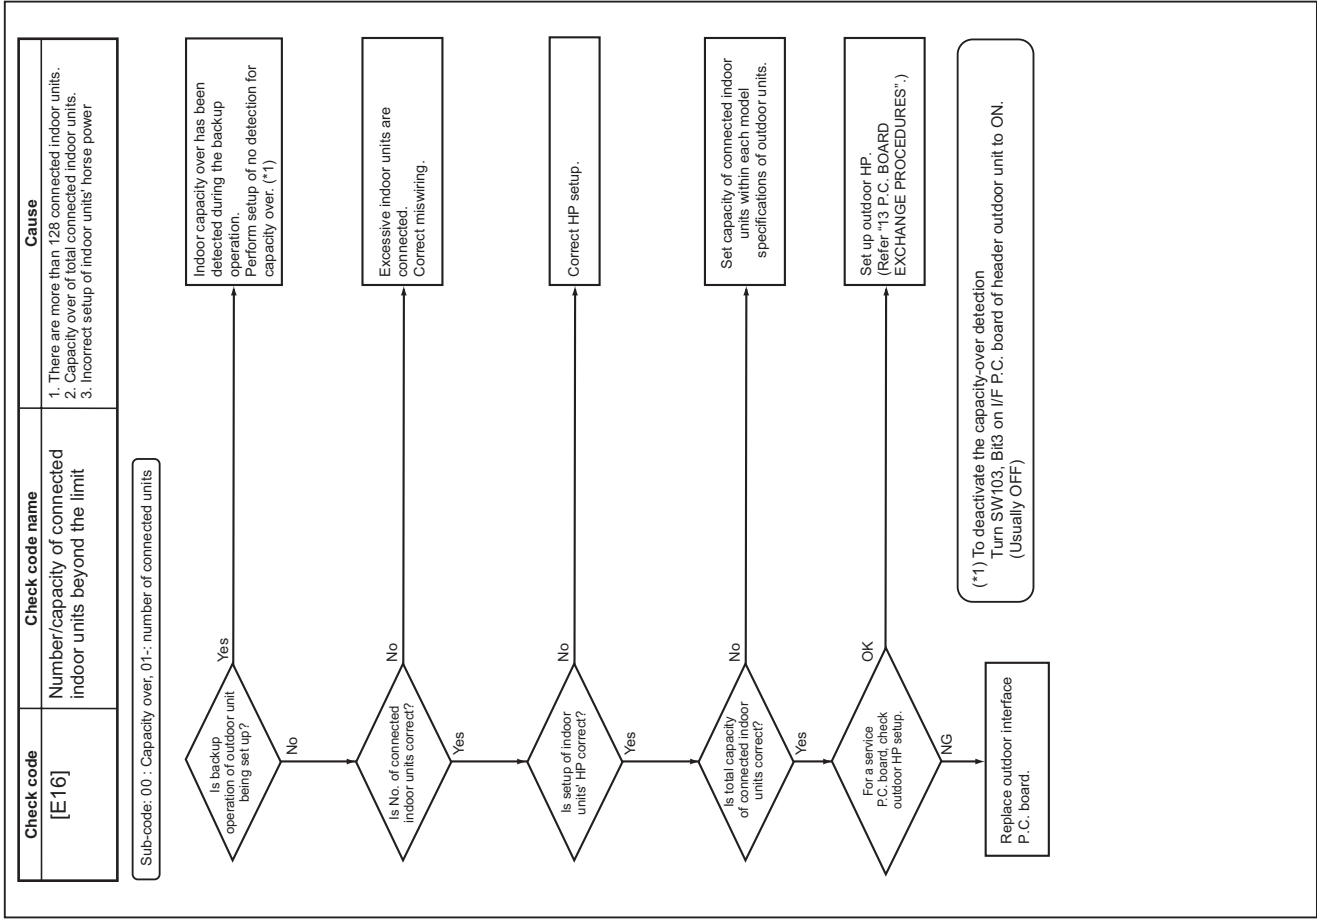
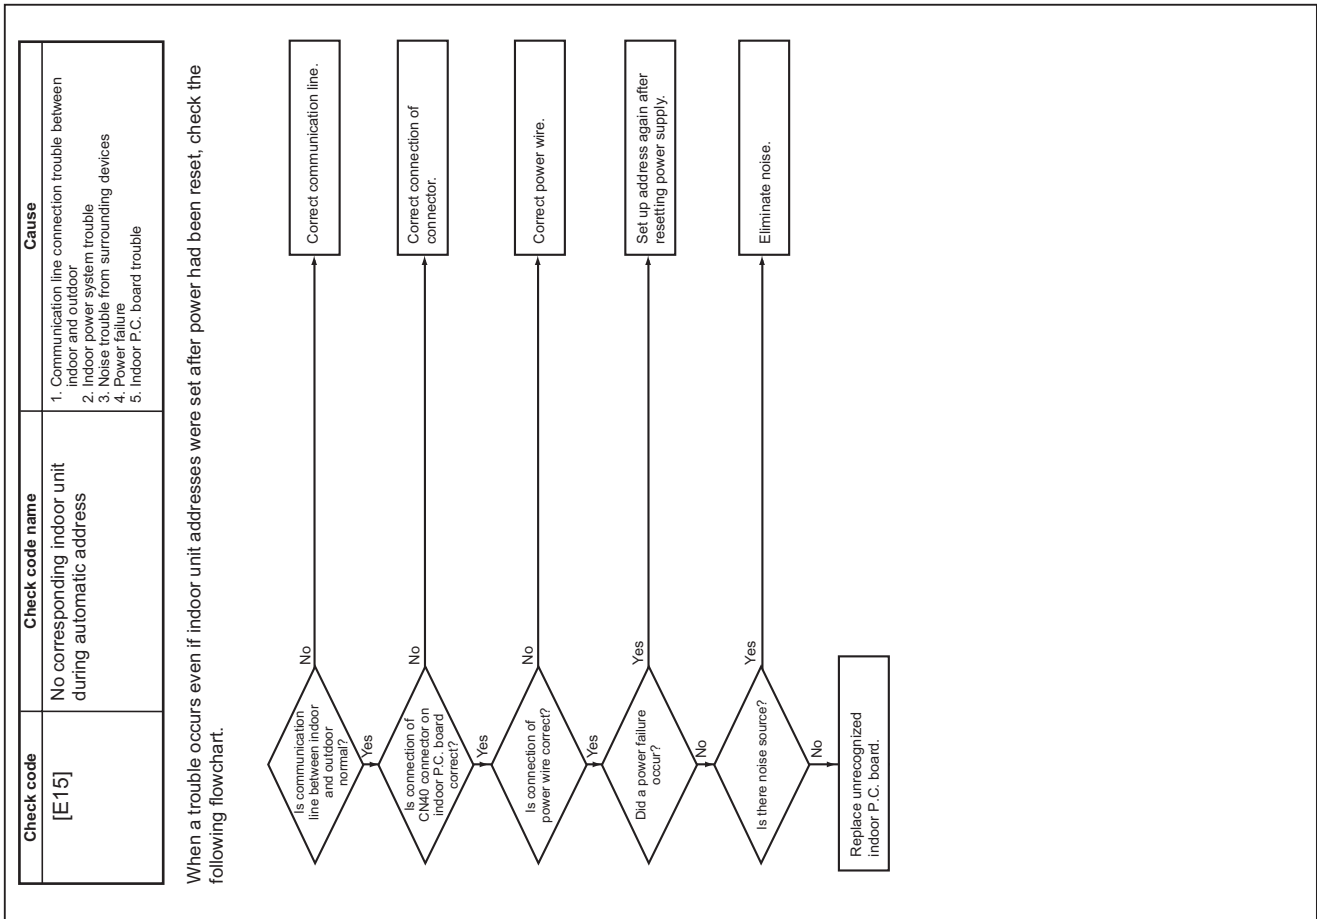


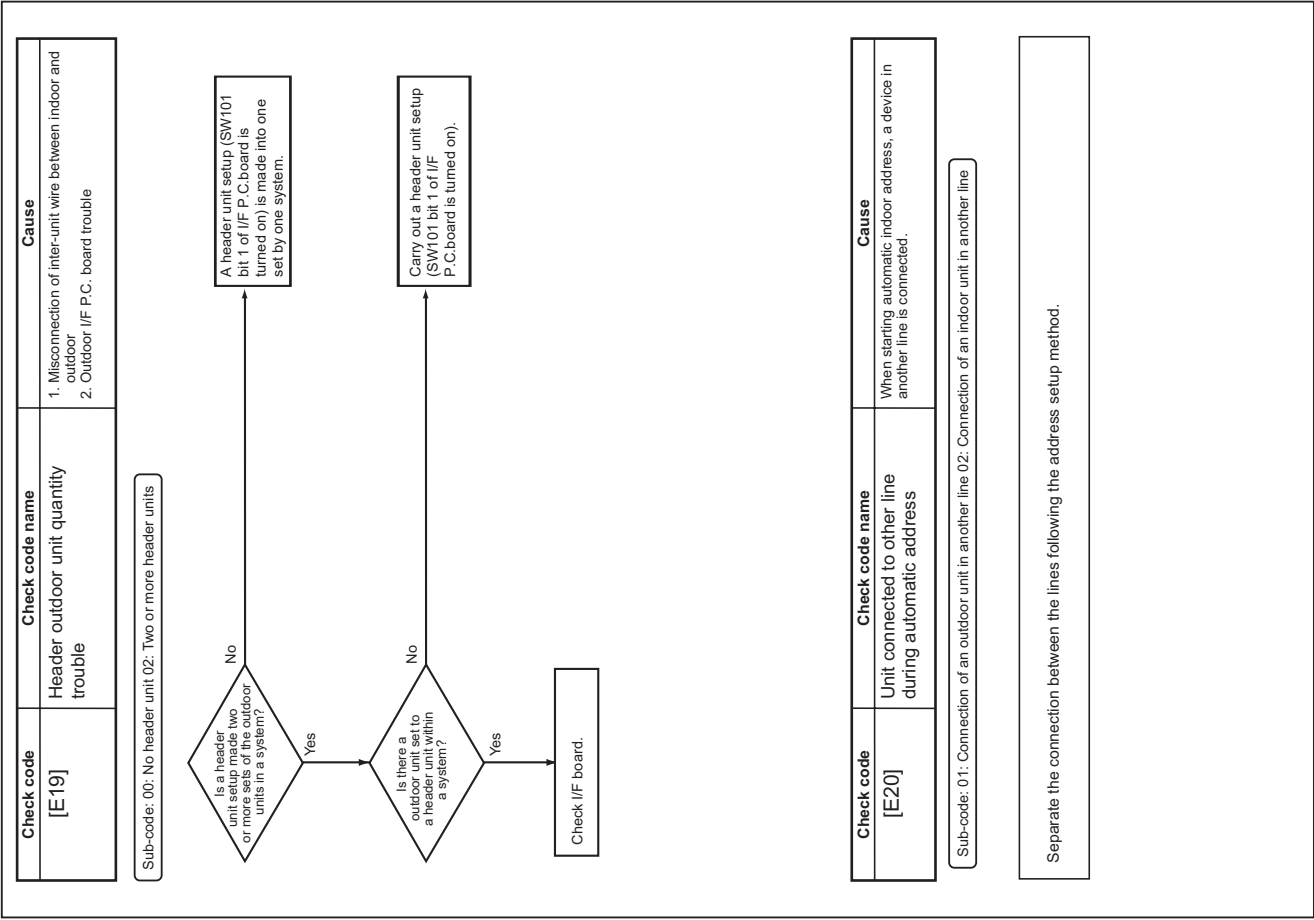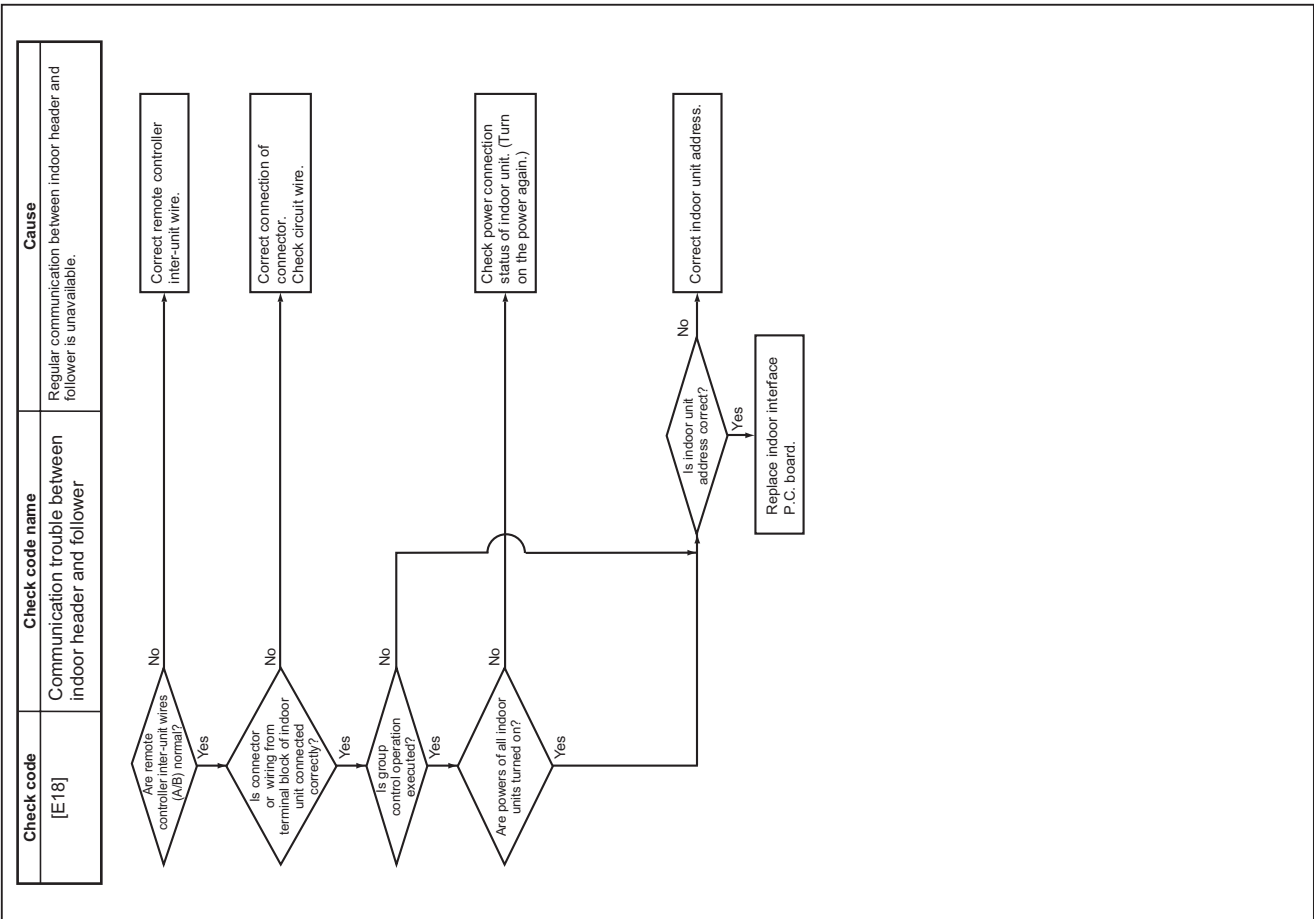

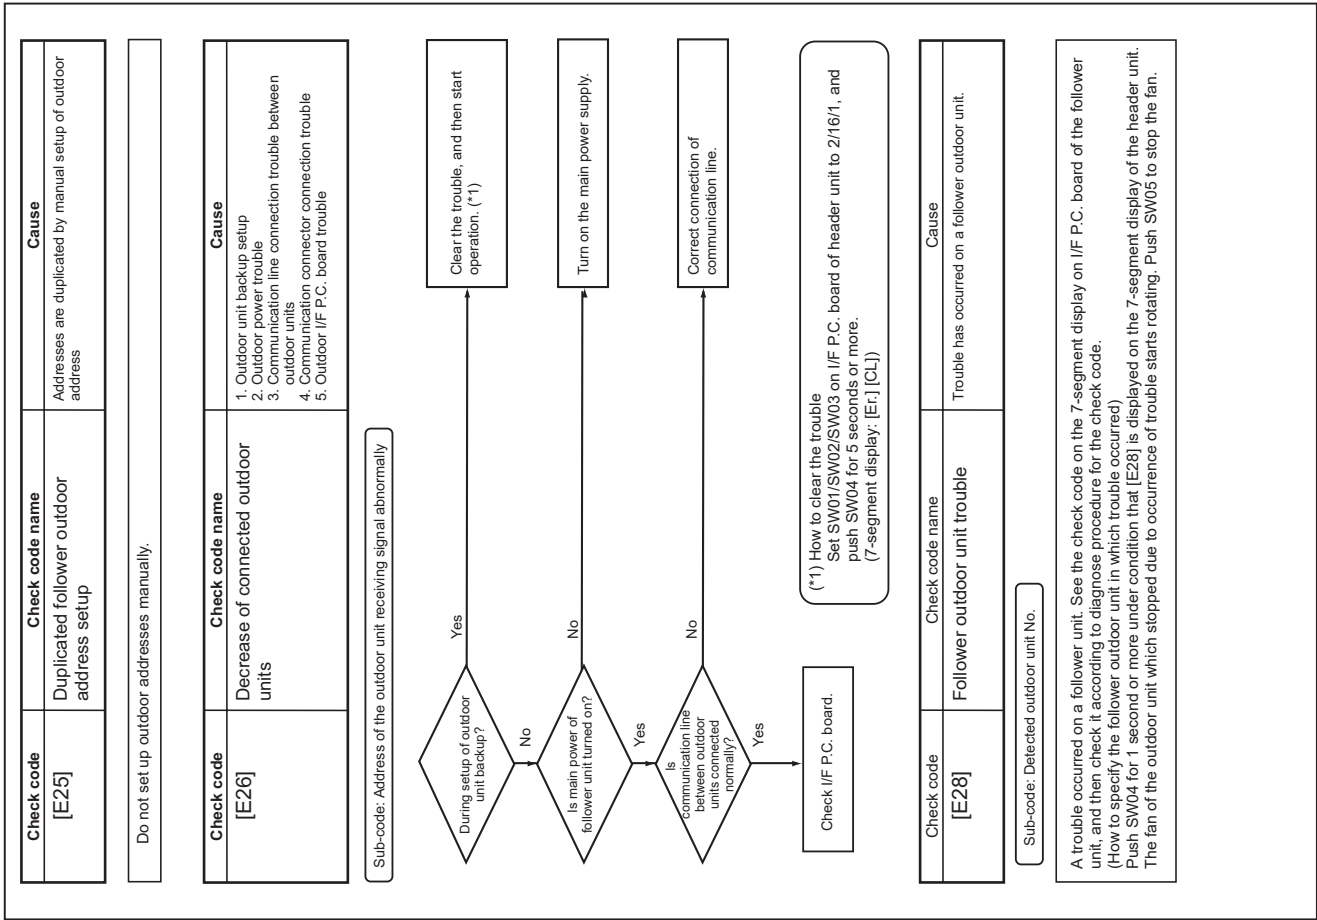
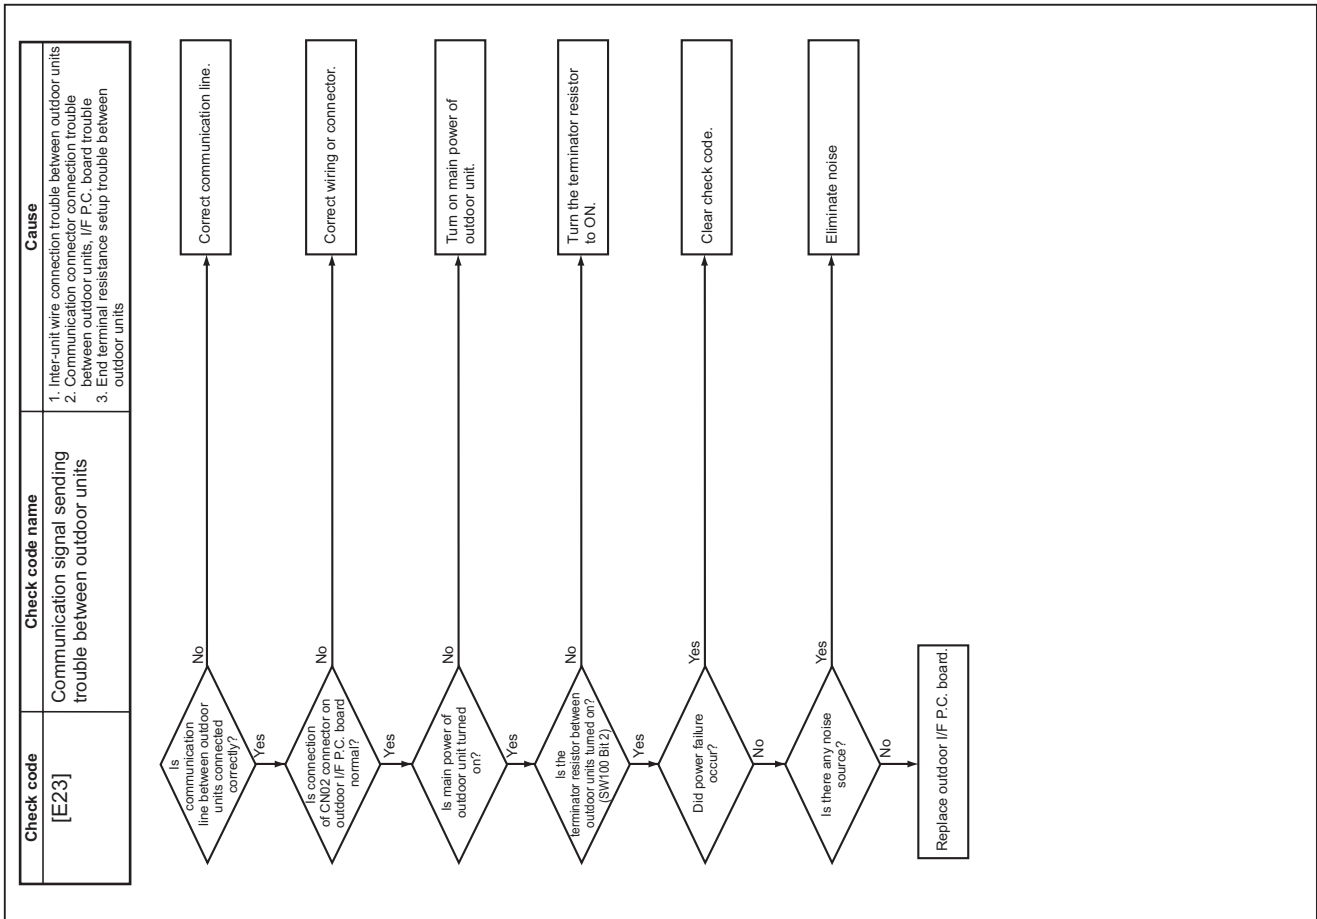


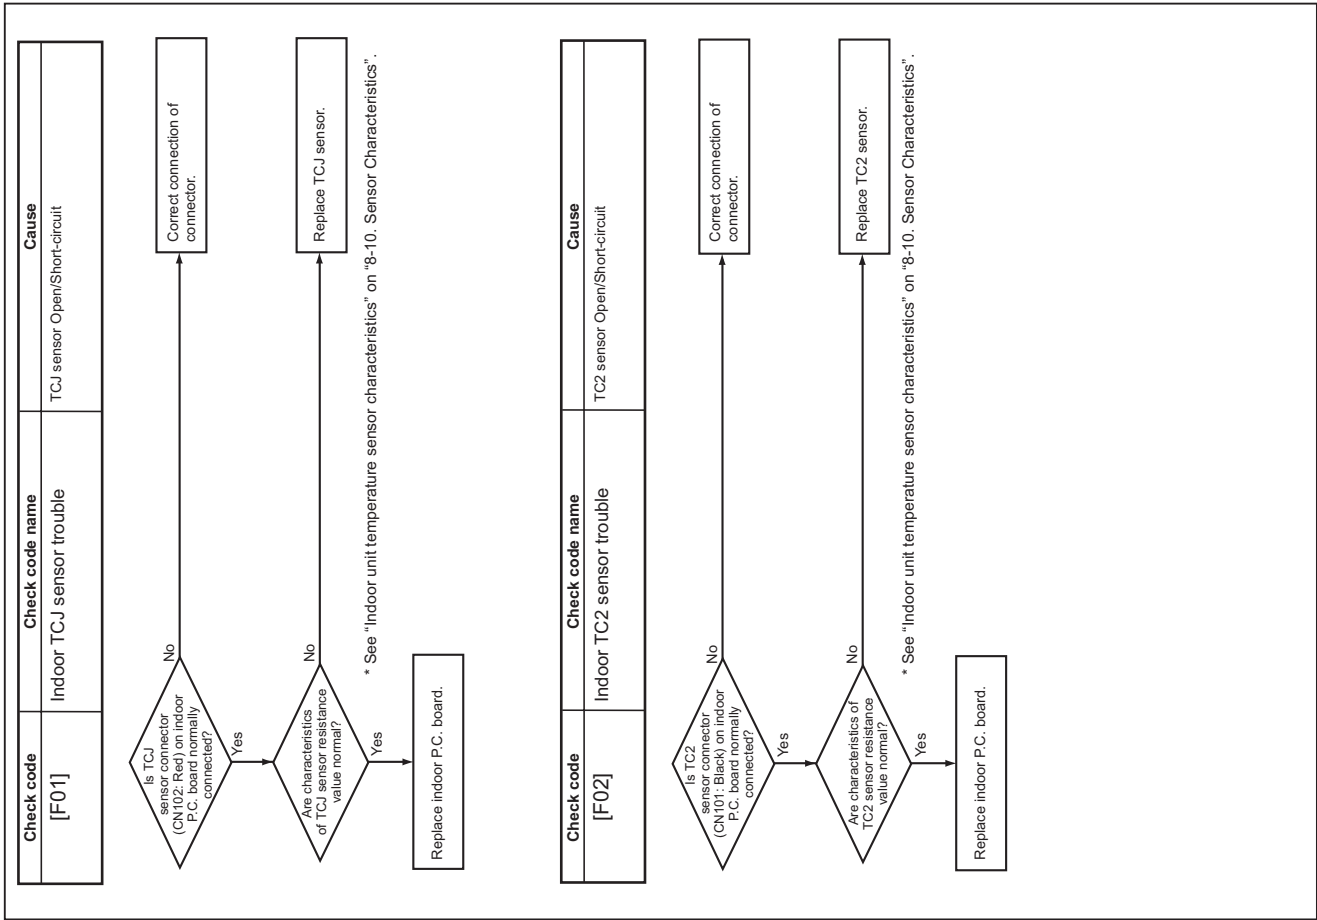
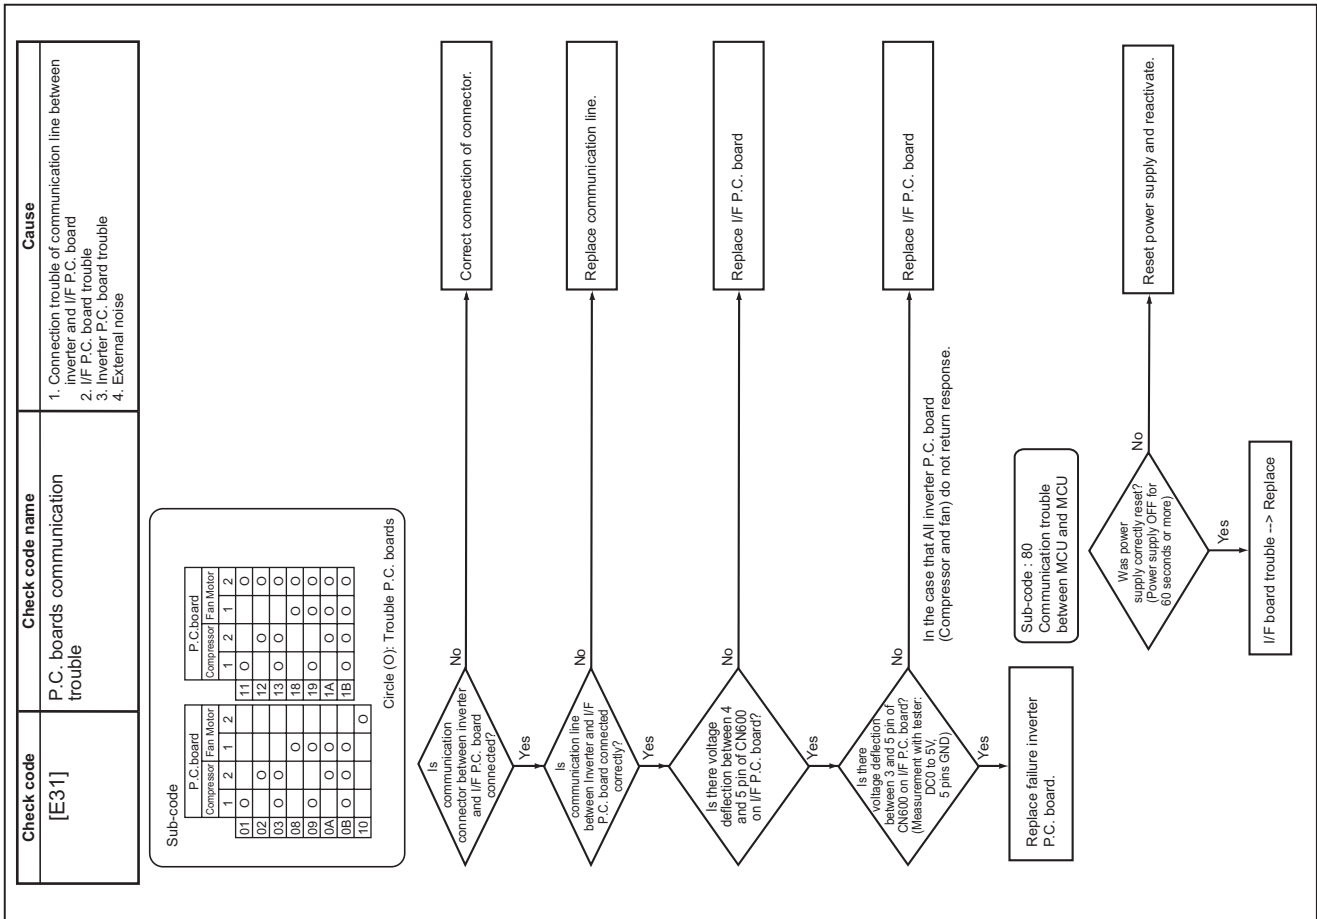


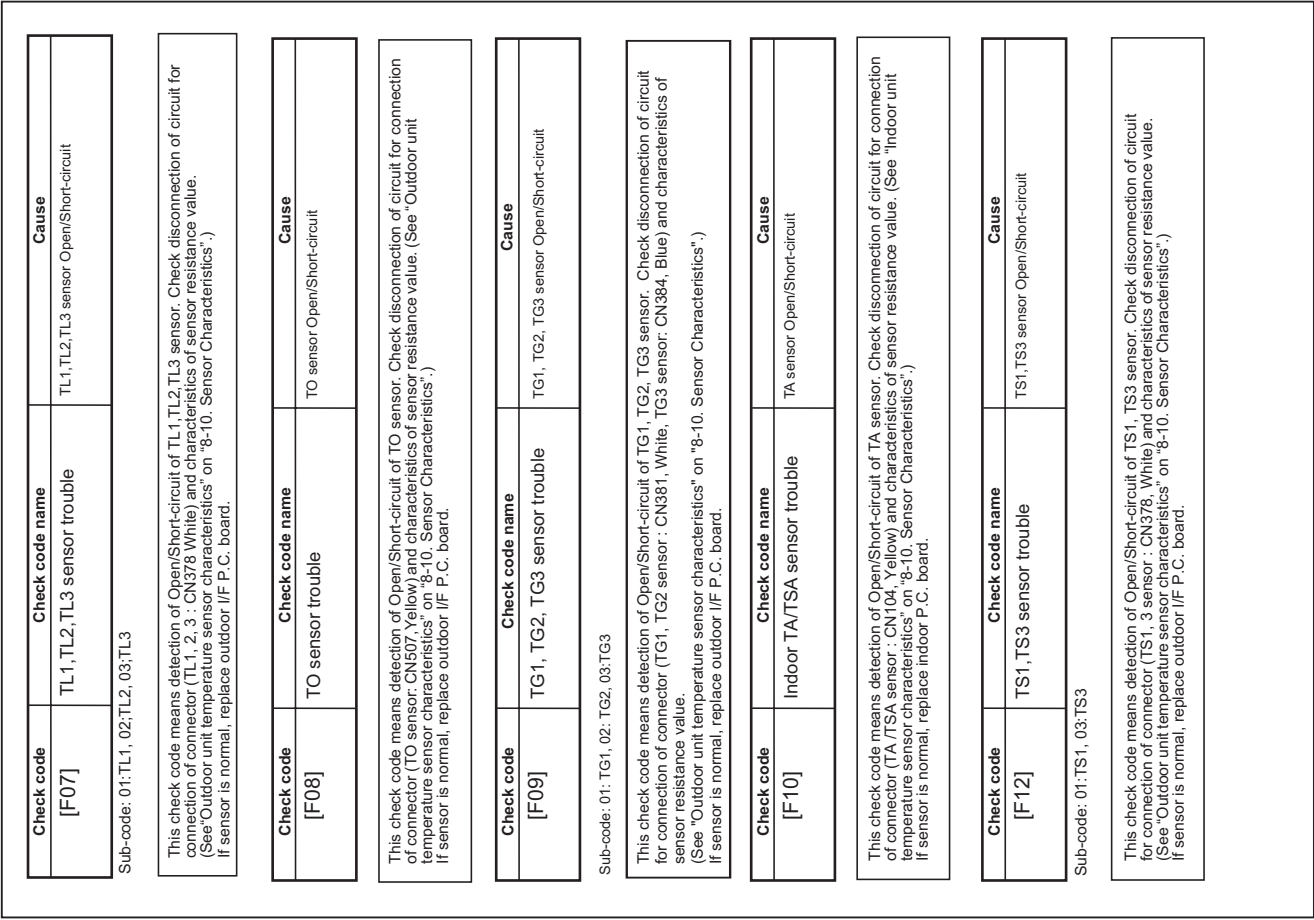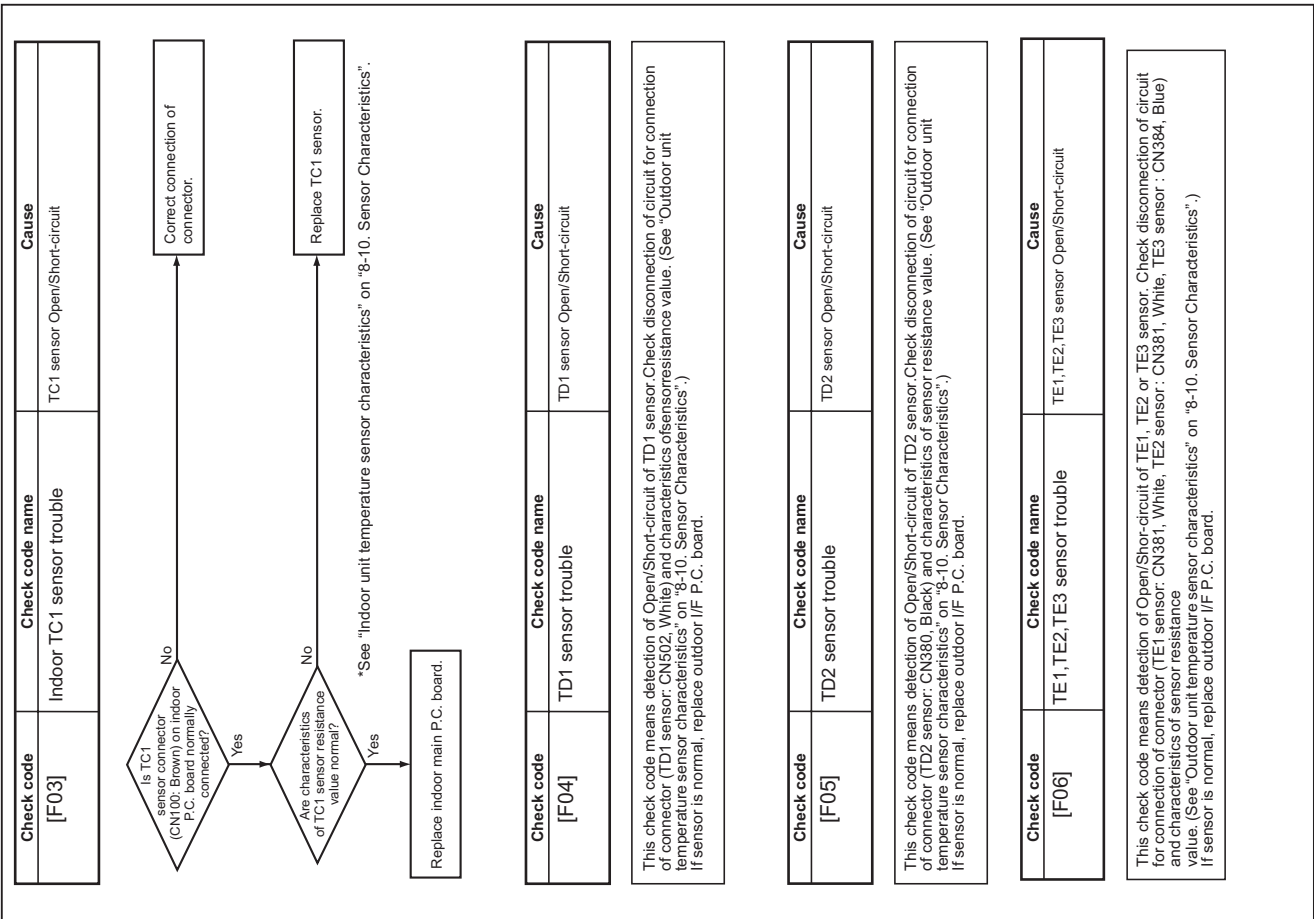

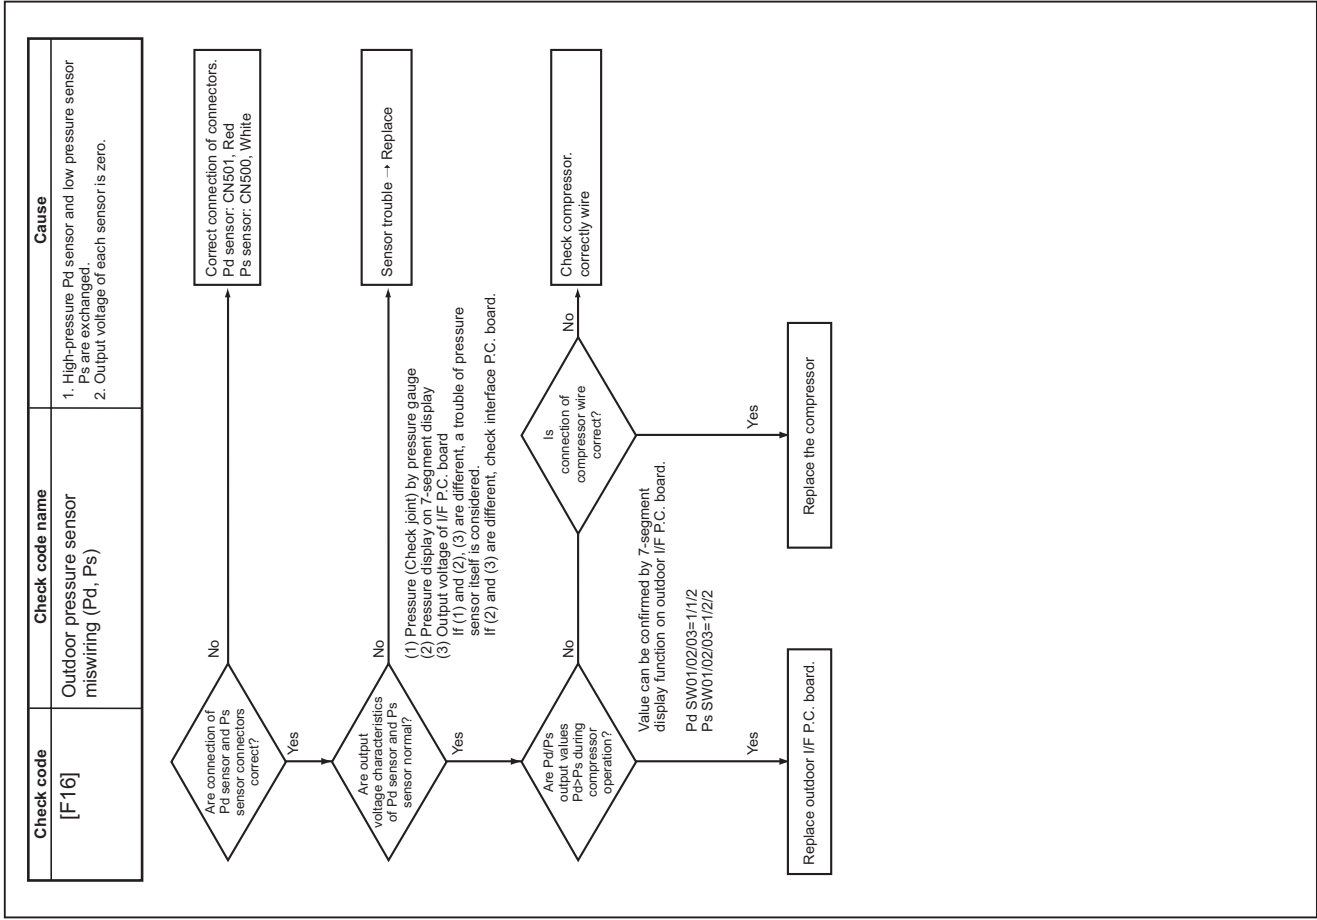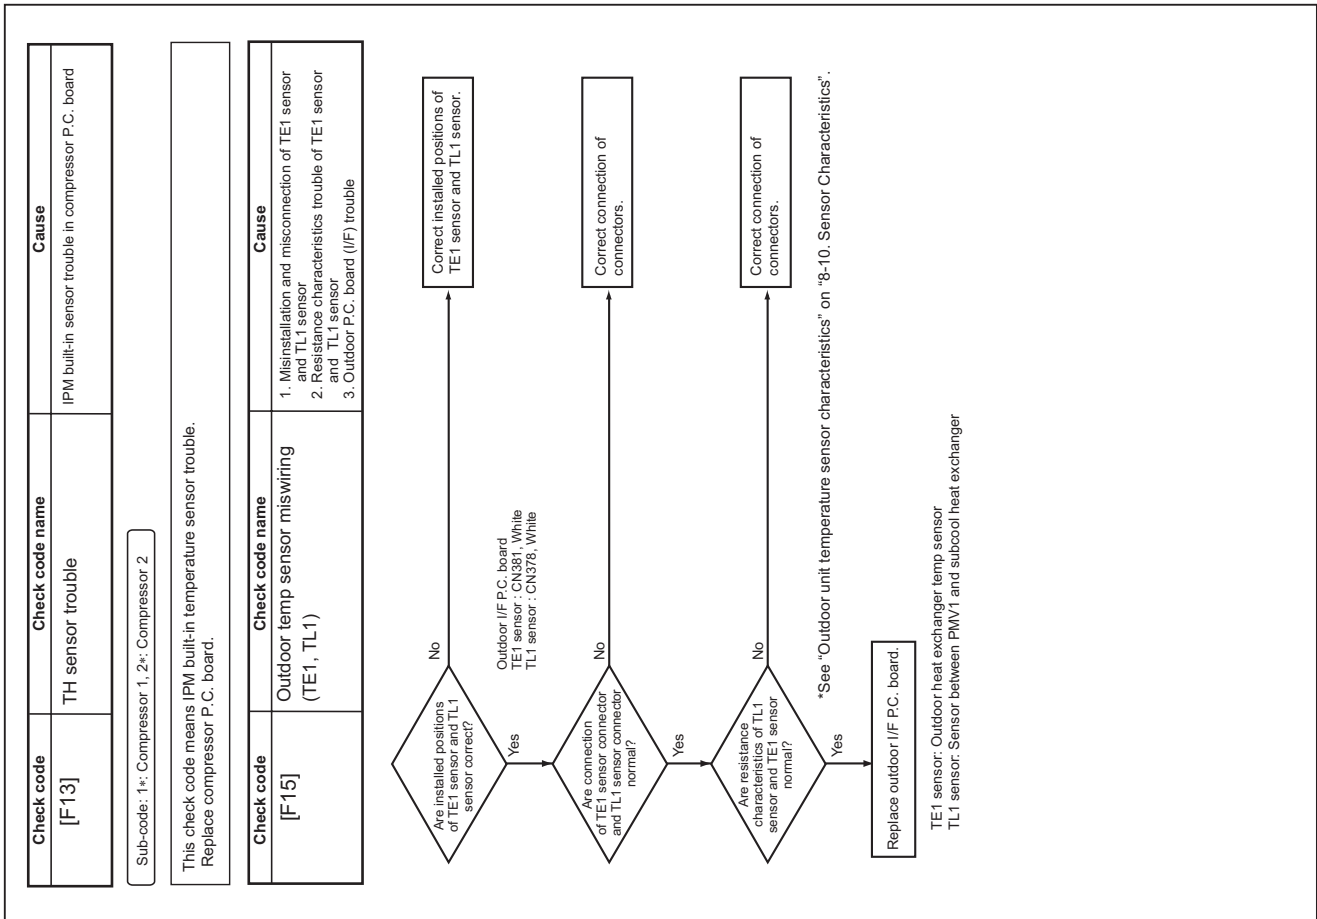




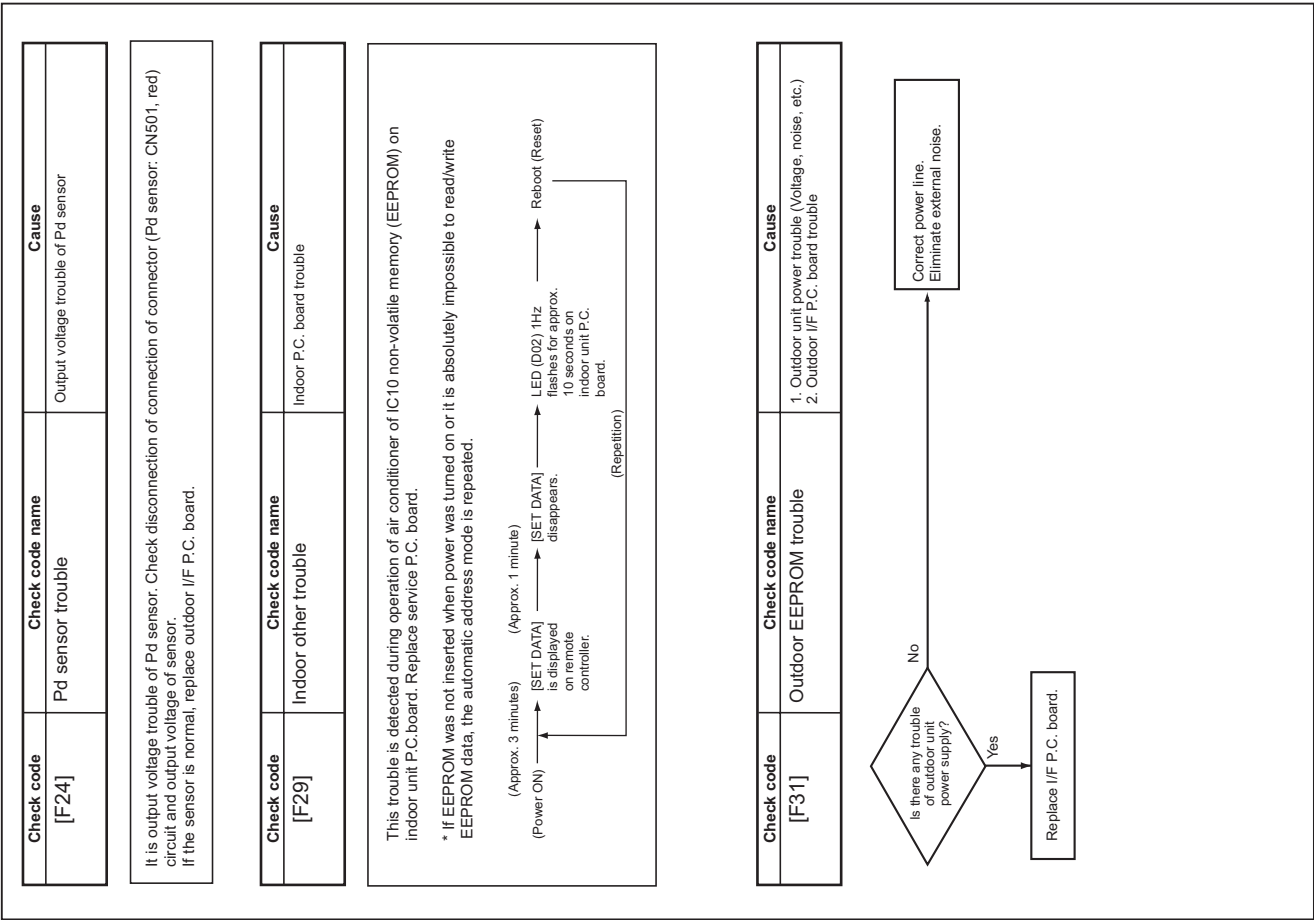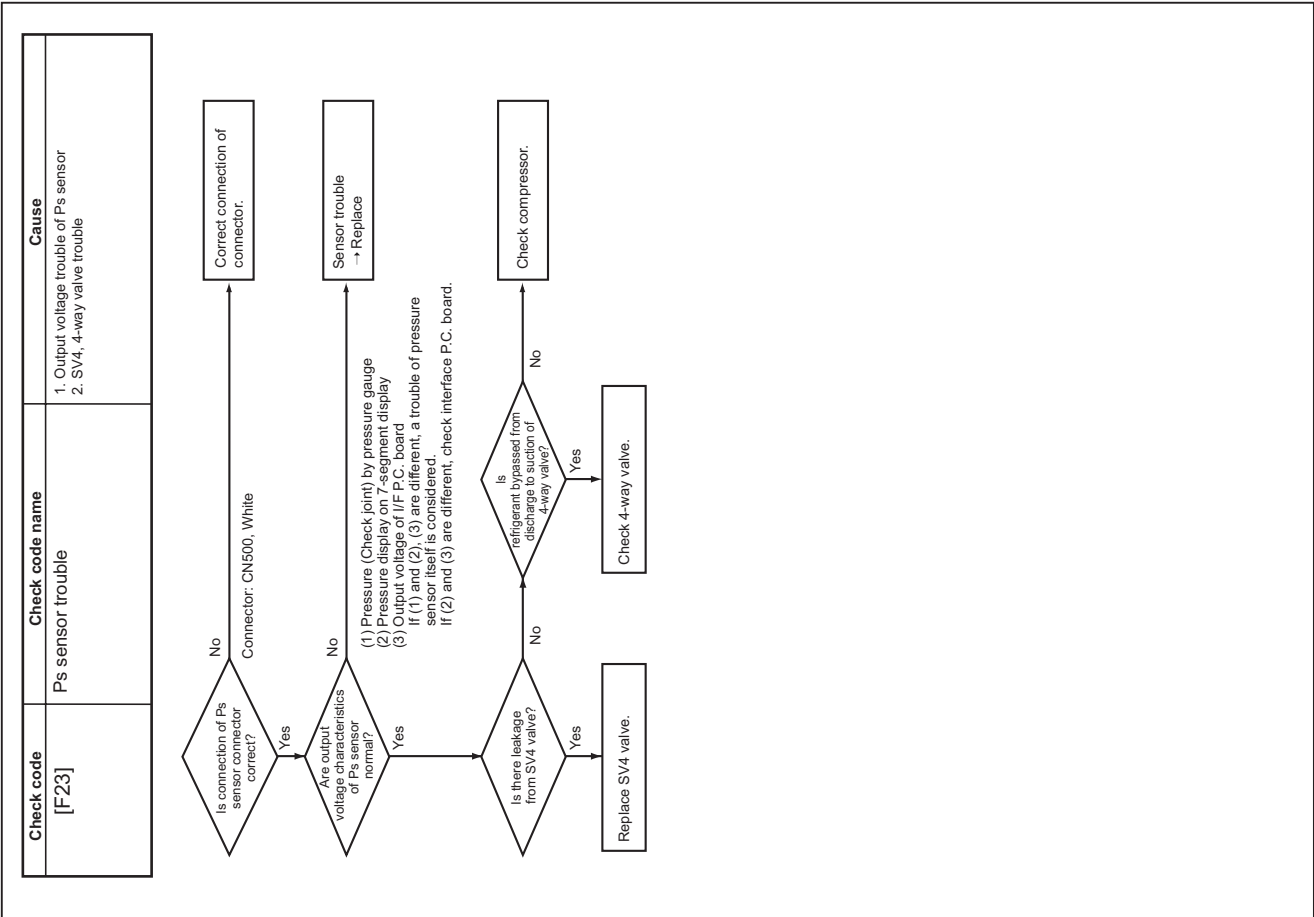

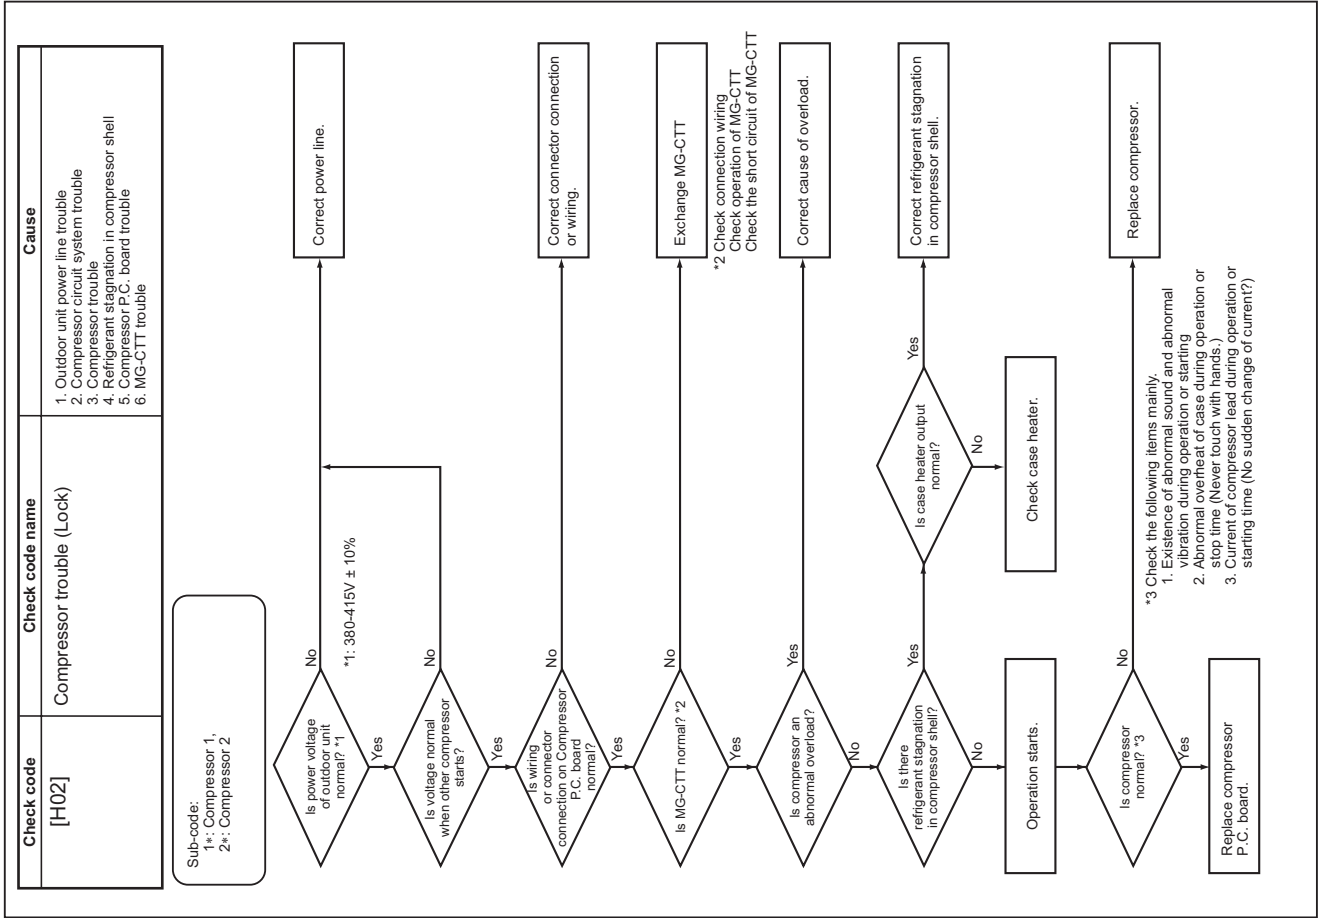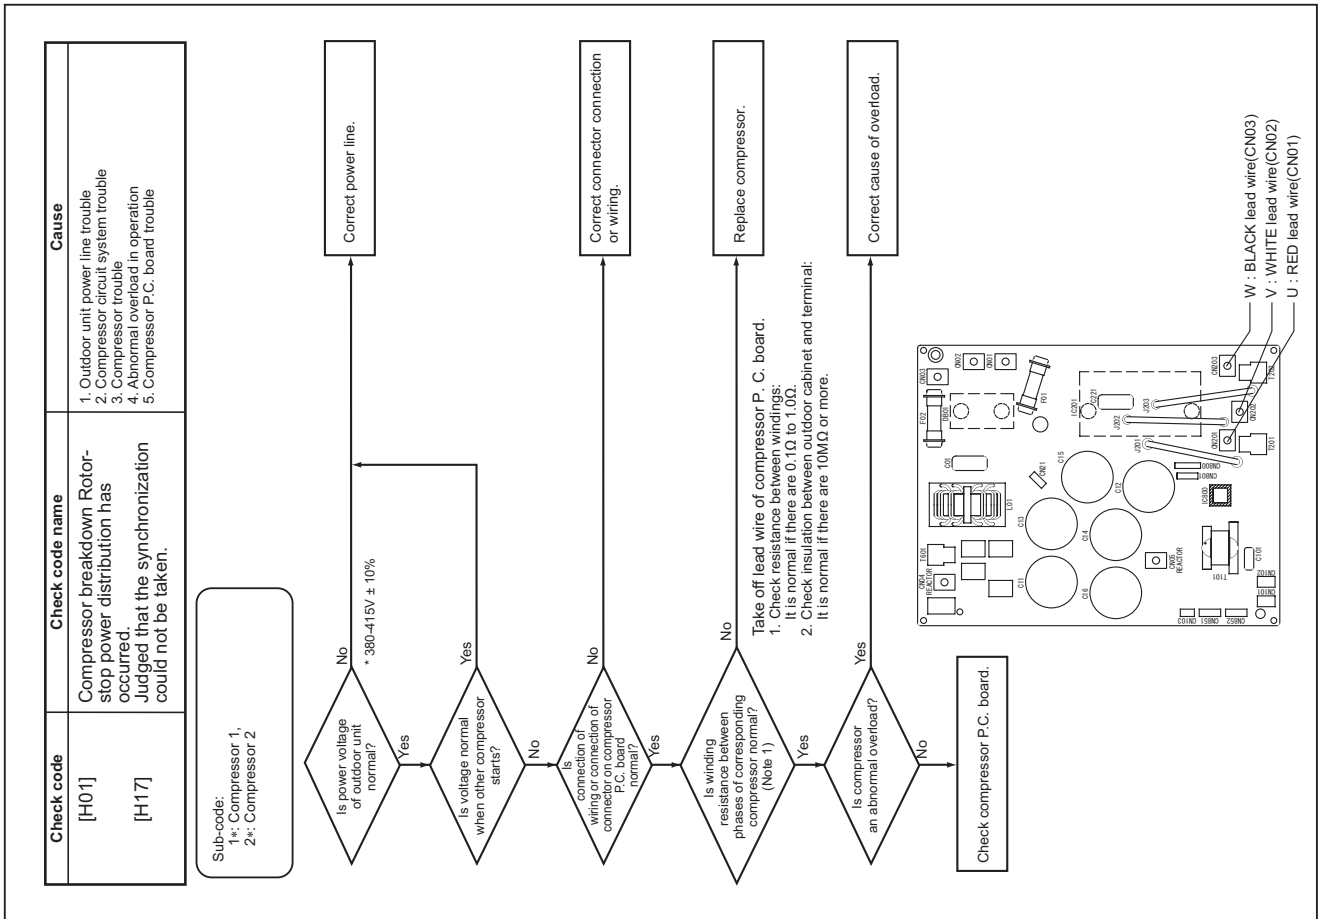



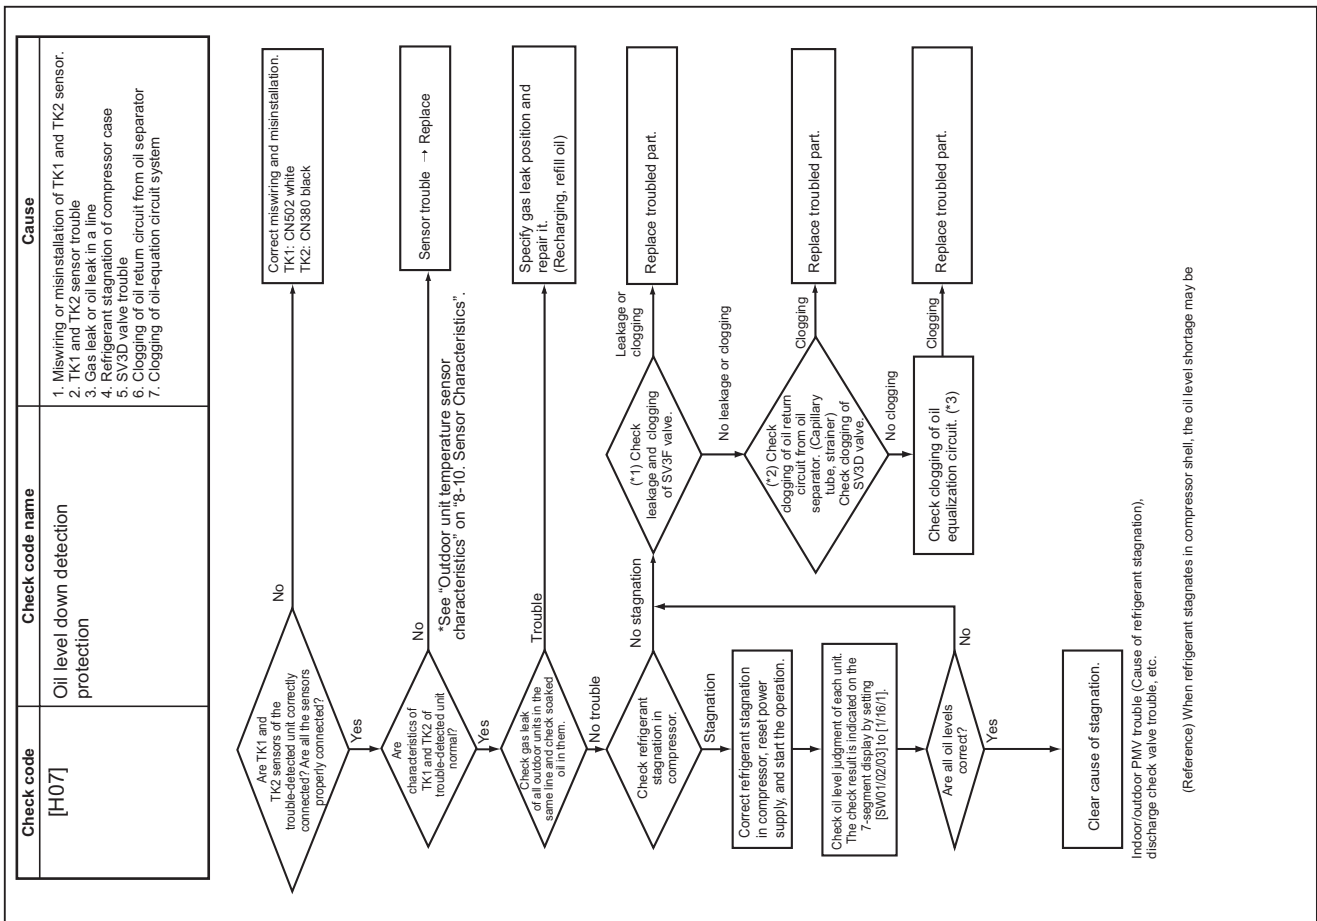

In some cases, it may be difficult to check the leakage of clogging in the following condition of refrigerant stagnation in low ambient temperature condition.  
 In this case, take a longer operating time prior to check.  
 (Criterion: Discharge temperature of TD1 and TD2 are 60°C or higher)

### (\*1) Checking leakage and clogging on SV3F valve

#### a) Leakage check

- Turn off the power supply, take off connector of SV3F valve, and then start a test operation after power ON.
- After operation for several minutes, check temperature at secondary side of SV3F valve. ((1) in the figure) → If temperature is low, leakage occurs in the SV3F valve. Replace SV3F valve.

#### b) Clogging check

- While outdoor unit is operating, set up SW01/02/03=[2][1][3] (7-segment display [Hr] [... ..]), and push SW04 for 2 seconds or more.
- Set up SW02=[8], and turn on SV3F valve. (7-segment display [Hr] [... 3C])
- While outdoor units are operating, check temperature change at secondary side of SV3F valve. ((1) in the figure.) → If temperature does not drop (equivalent to outside air temperature), it is a clogging of SV3F valve. Replace SV3F valve.

### (\*2) Checking the oil return circuit from oil separator and clogging in SV3D valve

#### a) Oil return circuit

- While outdoor unit is operating, check temperature (secondary side of capillary) on oil return circuit. ((6) in the figure.) → If temperature is low (equivalent to suction temperature), a clogging of strainer of oil return circuit or capillary is considered. Replace the clogged part.


#### b) Clogging check for SV3D valve

- While outdoor unit is operating, set up SW01/02/03 = [2][1][1][3] (7-segment display [Hr] [... ..]), and push SW04 for 1 seconds or more.
- Set up SW02 = [4], and turn on SV3D valve. (7-segment display [Hr] [... 3 d])
- If temperature is low at secondary side of the valve or it does not change, clogging of valve, capillary, or strainer is considered. ((2) in the figure.) Replace the clogged part.

### (\*3) Checking the oil equalization circuit

#### a) Clogging check for oil-equalization circuit

- Drive the outdoor unit. (Drive all compressors in the unit.)
- After driving for 10 minutes or more, check whether temperature of TK1, TK2 sensors and temperature of oil-equalization circuit capillary ((3) in the figure) has increased. (Criterion)  
 TK1, TK2=Td1, Td2 temperature - Approx. 10 to 30°C  
 Oil-equalization capillary tubes should be higher sufficiently than outside air temperature and suction temperature.
- If temperature is low, clogging of capillary or strainer is considered. Repair the failure parts.

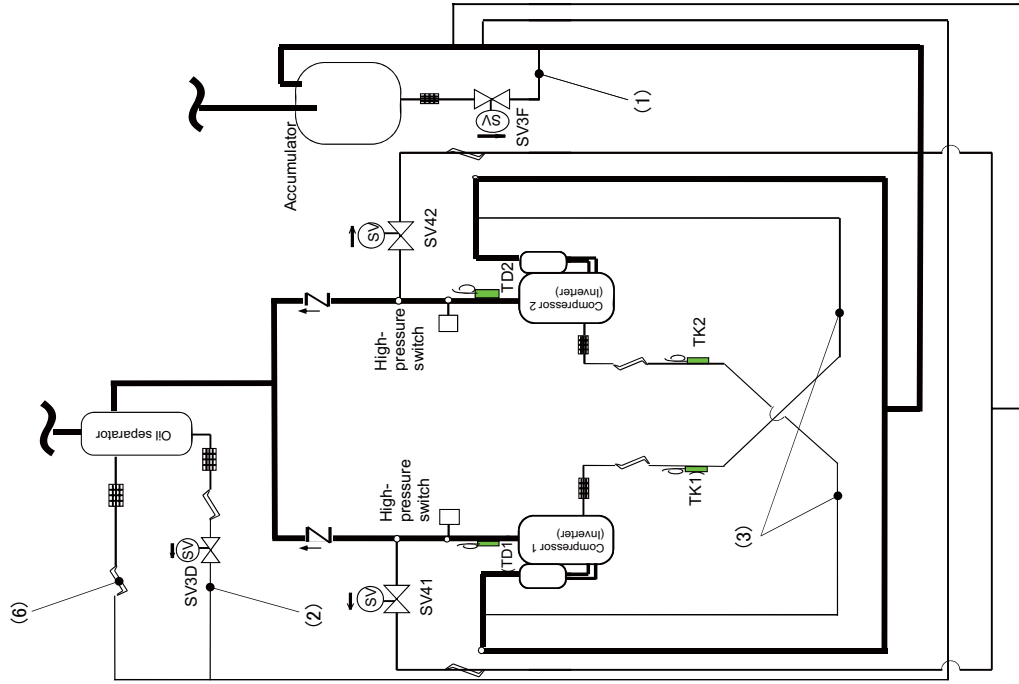


Check code	Check code name	Cause
[H08]	Oil level detective temperature sensor trouble	TK1 and TK2 sensor Open/Short-circuit

Sub-code:  
01: TK1 sensor trouble 02: TK2 sensor trouble


The detected trouble is an oil level detective temperature sensor trouble. Check disconnection of the wiring and resistance value of the sensor.  
If the sensors are normal, replace the outdoor I/F P.C. board.

Circuit	Connector
TK1	CN502 white
TK2	CN380 black


Check code	Check code name	Cause
[H15]	Outdoor discharge temperature sensor (TD2) misconnection	1. Coming-off of TD2 sensor. 2. Misinstallation of TD2 sensor, miswiring, characteristics trouble of resistance value

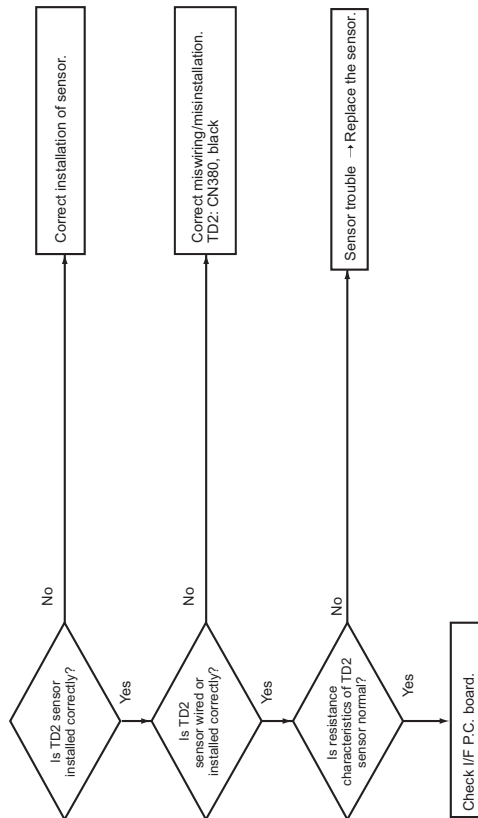

Check code	Check code name	Cause
[H16]	Oil level detection circuit trouble TK1 temperature detective circuit trouble (Sub-code: 01)	1. Coming-off of TK1 sensor, miswiring, characteristics trouble of resistance value 2. Oil-equalization circuit trouble (Check valve, capillary clogging, strainer clogging) 3. Refrigerant stagnation in the compressor shell

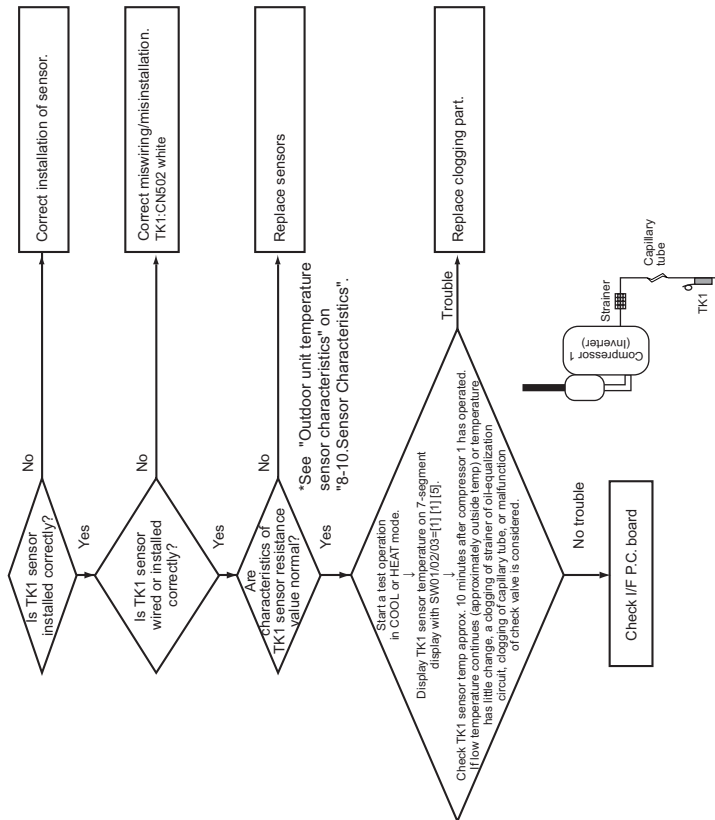

Check code	Check code name	Cause
[H16]	Oil level detection circuit trouble TK2 temperature detective circuit trouble (Sub-code: 02)	1. Coming-off of TK2 sensor, miswiring, characteristics trouble of resistance value 2. Oil-equalization circuit trouble (Check valve, capillary clogging, strainer clogging) 3. Refrigerant stagnation in the compressor shell

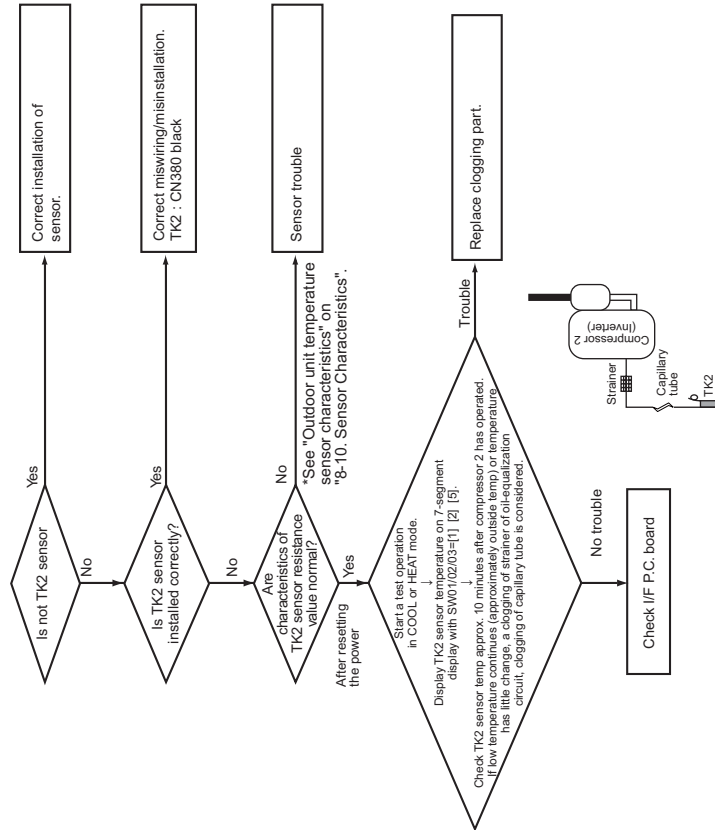

Check code	Check code name	Cause
[H17]	Compressor trouble (step-out etc.)	The clause of [H01] is referred to.

Refer to the cause of [H01] for a diagnostic procedure.

<b>Check code</b> [L02]	<b>Check code name</b> Indoor / outdoor model mismatch	<b>Cause</b> When the indoor unit that does not correspond is connected with the outdoor unit
----------------------------	---	--

<b>Check code</b> [L03]	<b>Check code name</b> Duplicated indoor header units	<b>Cause</b> There are two or more indoor header units in a group during group control.
----------------------------	--	--

1) Check whether the connection on remote controllers (group and/or individual) has been changed since the group configuration and address checking on the remote controllers finished.  
2) If the group configuration and address are normal when power has been turned on, the mode automatically shifts to address setup mode. For setting up addresses again, refer to "Address setup".

<b>Check code</b> [L04]	<b>Check code name</b> Duplicated setup of outdoor line address	<b>Cause</b> Outdoor line addresses are duplicated.
----------------------------	--	--

```

graph TD
    Q1{Is there duplicated line address setup?}
    Q2{Are communication wire connections of [U1, U2], [U3, U4], and [U5, U6] normal?}
    A1[Correct the line address setup.]
    A2[Replace outdoor I/F P.C. board.]
    A3[Correct the wire connection.]
    A4[Re-set up the address. (Refer to "Address setup".)]

    Q1 -- Yes --> A1
    Q1 -- No --> Q2
    Q2 -- Yes --> A2
    Q2 -- No --> A3
    A3 --> A4
  
```

<b>Check code</b> [L05]	<b>Check code name</b> Duplicated indoor units with priority (Displayed on indoor unit with priority)	<b>Cause</b> Two or more prior indoor units exist.
----------------------------	--	---

This check code is displayed on the indoor unit set as a prior one when two or more prior indoor units are detected.  
• Priority setup with two or more units is not available. As only one indoor unit with priority is valid, change the setup.

<b>Check code</b> [L06]	<b>Check code name</b> Duplicated indoor units with priority (Displayed on the indoor units other than ones with priority and on the outdoor unit)	<b>Cause</b> Two or more indoor units with priority are duplicated.
----------------------------	---	--

Sub-code: amount of indoor units with priority

When priority is given to two or more indoor units, this check code is displayed on indoor units other than the units set as prior ones and the outdoor unit.  
• As only one indoor unit with priority is valid, change the setup.  
Change the setup so that only one indoor unit has priority.



<b>Check code</b> [L07]	<b>Check code name</b> A group line exists in an individual indoor unit	<b>Cause</b> A group line is connected to an individual indoor unit.
----------------------------	--	---



```



graph TD
    Q1{Is there group cabling?}
    Q2{There is individual indoor unit.}
    A1[Correct indoor group address.]
    A2[Replace indoor I/F P.C. board.]

    Q1 -- Yes --> Q2
    Q1 -- No --> A2
    Q2 -- Yes --> A1
    Q2 -- No --> A2
  
```



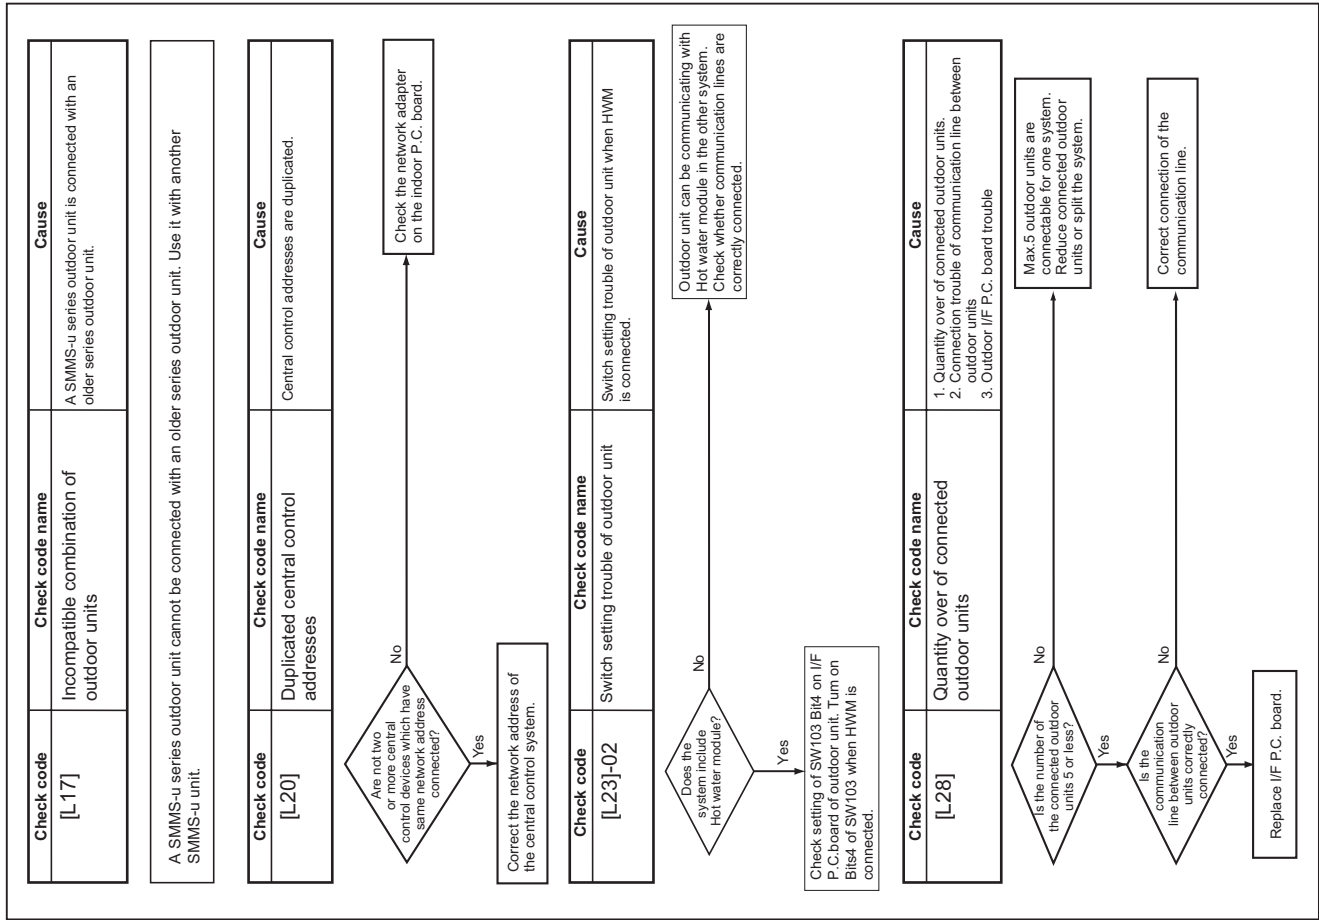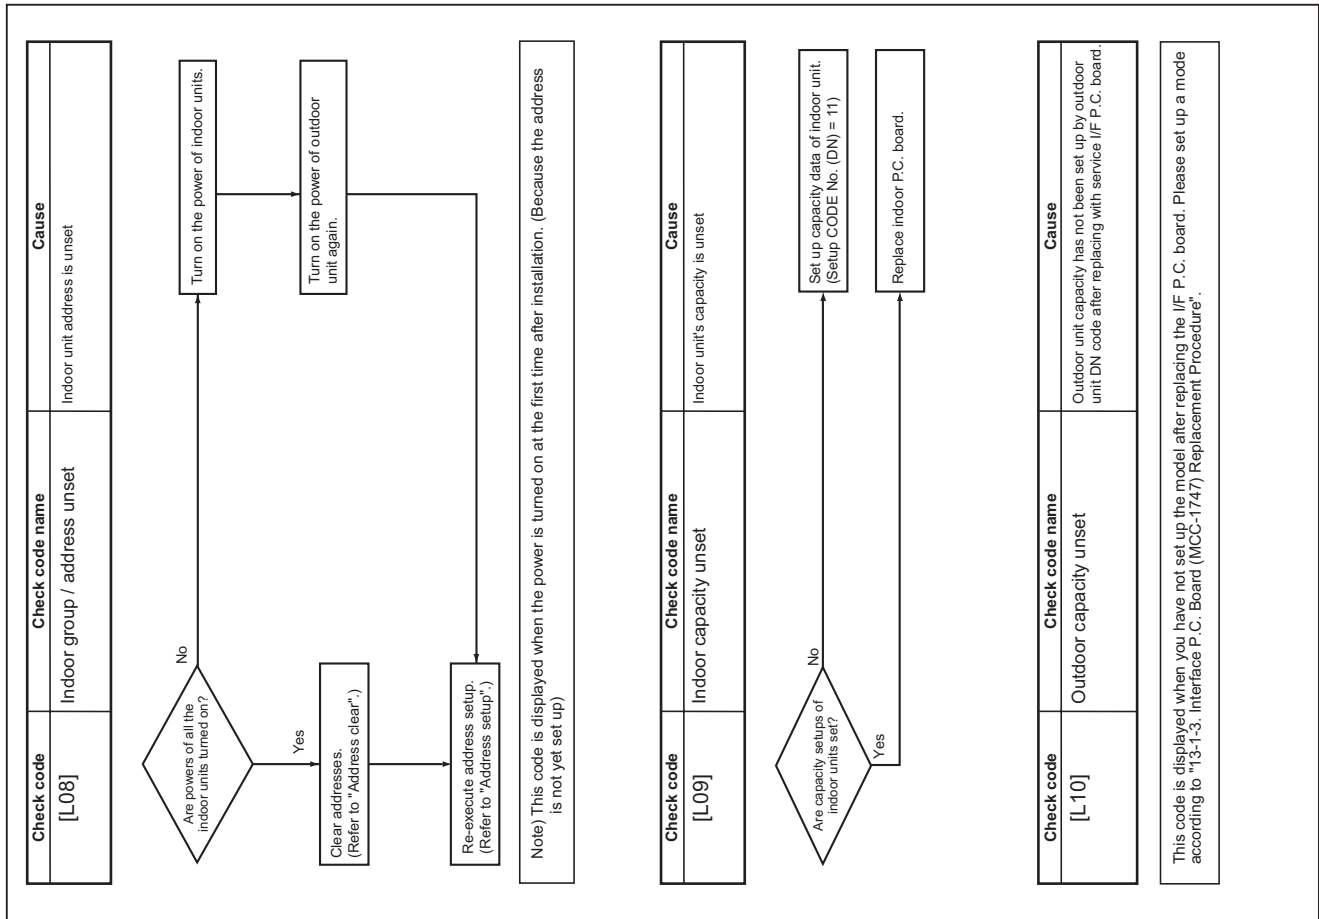

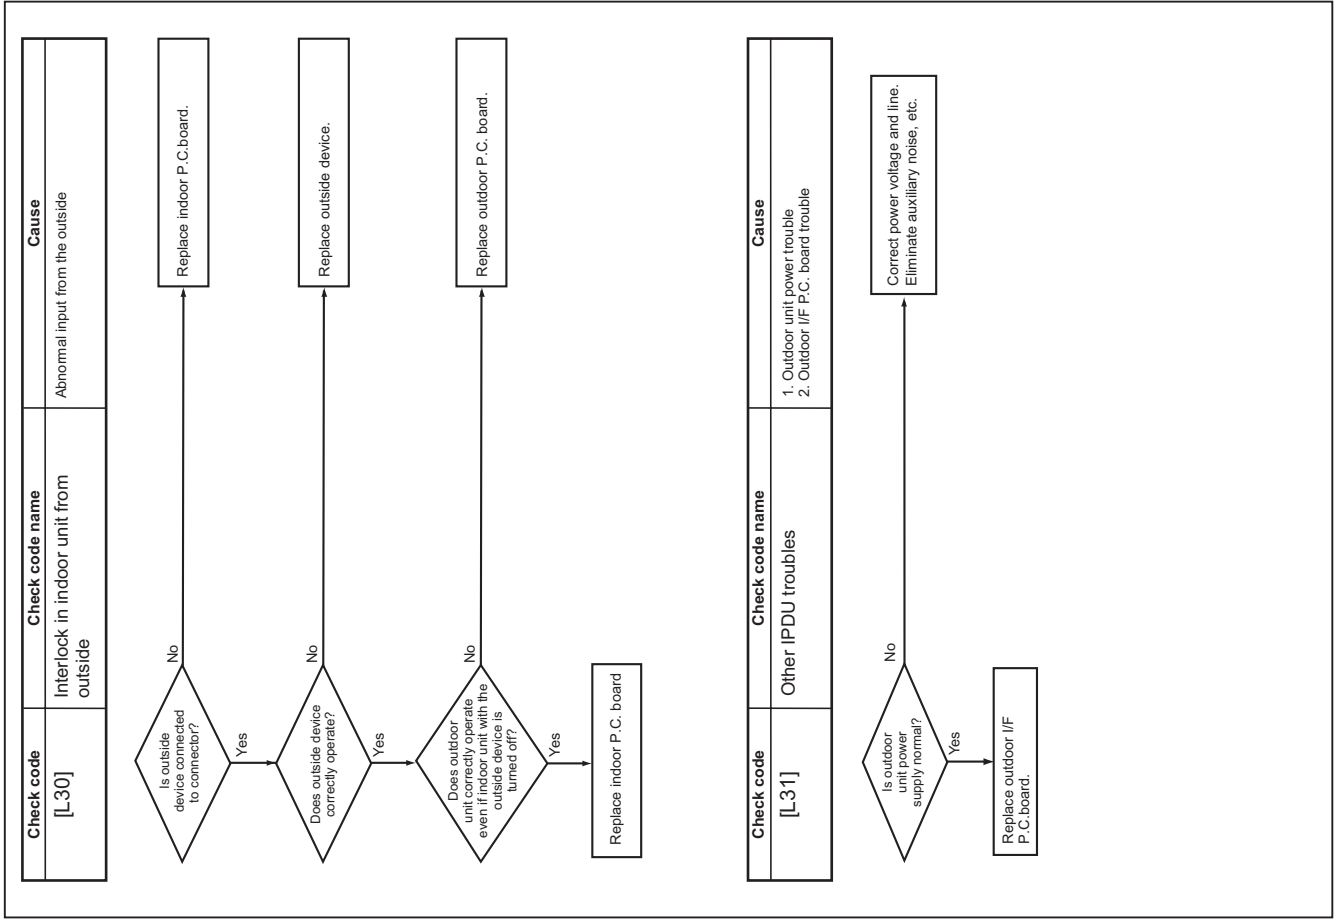
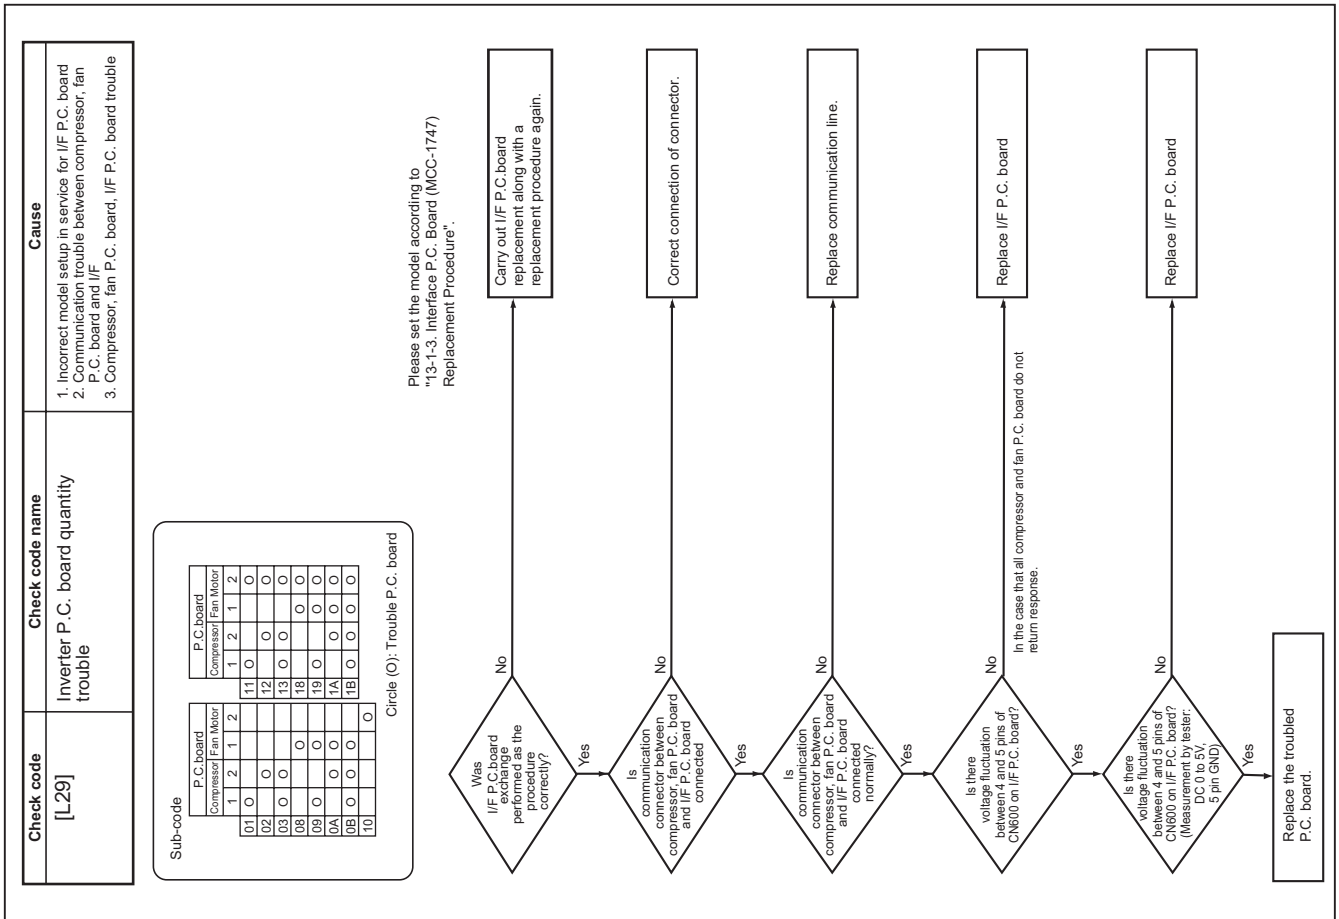


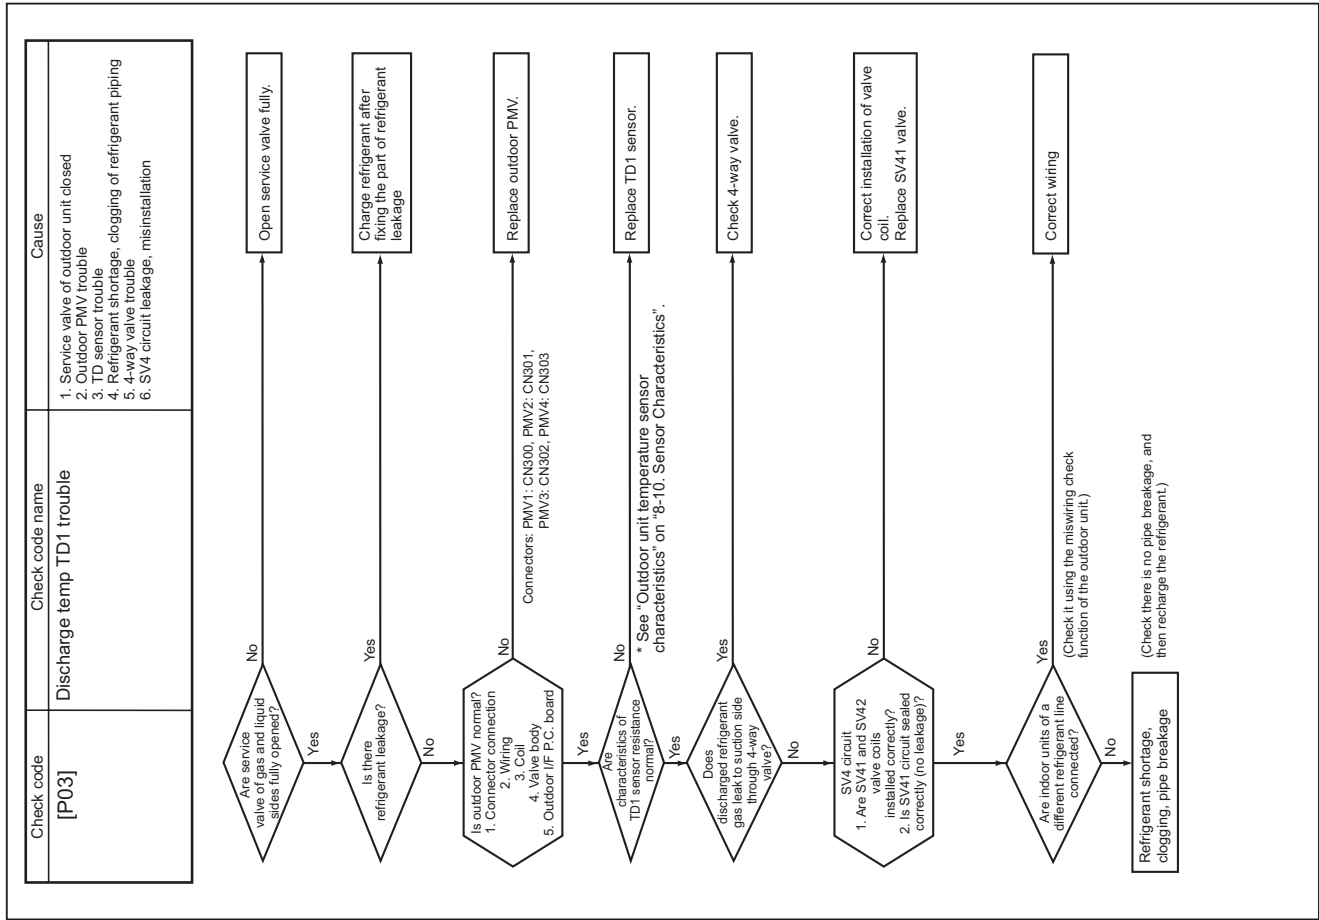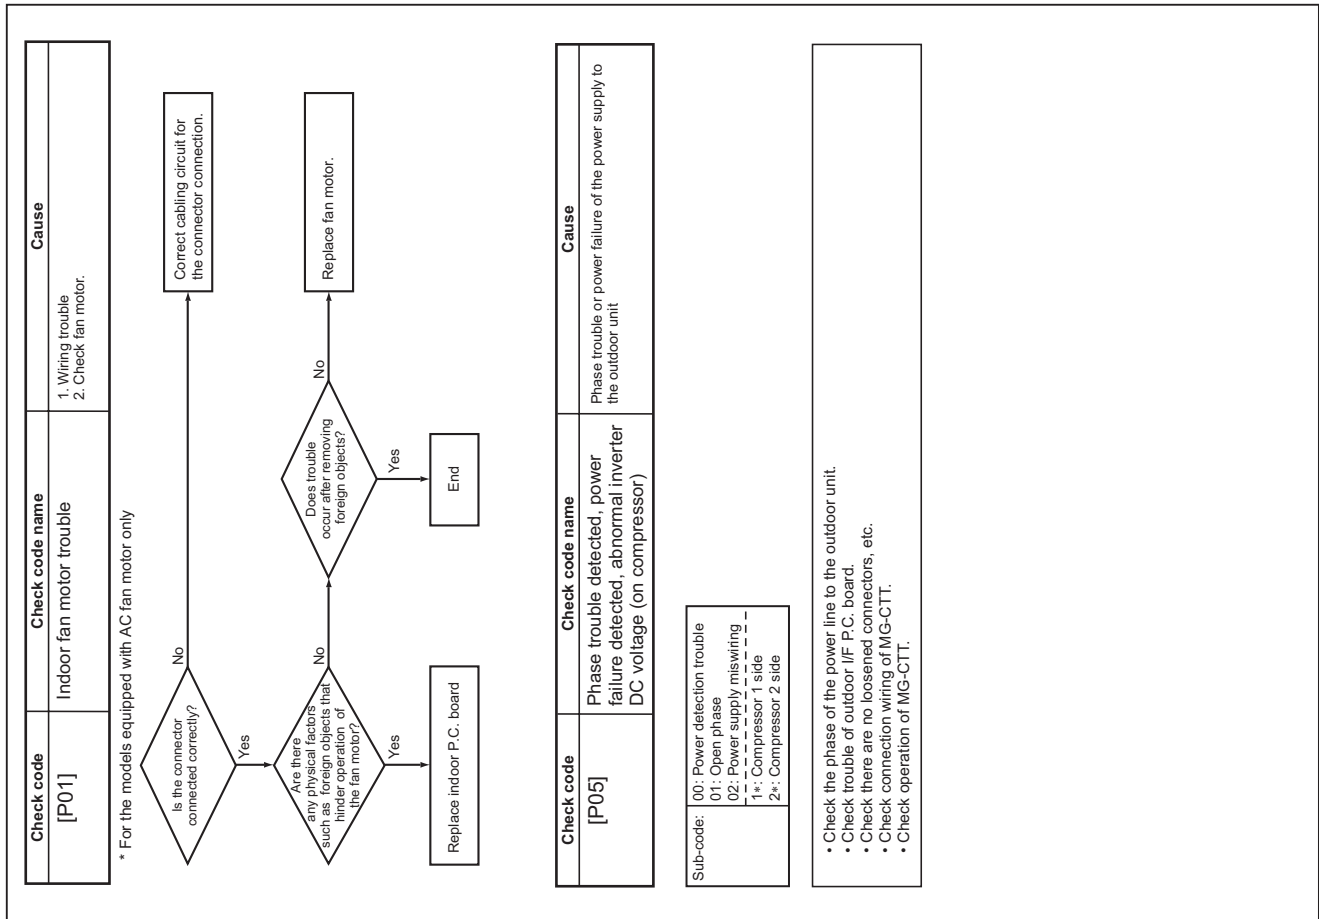







Check code	Check code name	Cause
[P07]	Heat sink overheat trouble Heat sink dewing trouble	<ol style="list-style-type: none"> <li>1. Power voltage trouble</li> <li>2. Outdoor fan system trouble</li> <li>3. Heat sink installation trouble</li> <li>4. Clogging of cooling tube for the heat sink</li> <li>5. Compressor P.C. board trouble</li> <li>6. Temperature sensor trouble with built-in IPM</li> <li>7. TL2 sensor trouble</li> <li>8. TO sensor trouble</li> <li>9. PMV2 trouble (950W)</li> <li>10. PMV3 trouble (1250W)</li> </ol>

Sub-code:  
01: Compressor 1 (Detected at I/F), 1\* : Compressor 1 (Detected at Compressor P.C. board),  
02: Compressor 2 (Detected at I/F), 2\* : Compressor 1 (Detected at Compressor P.C. board)  
04: Heat sink

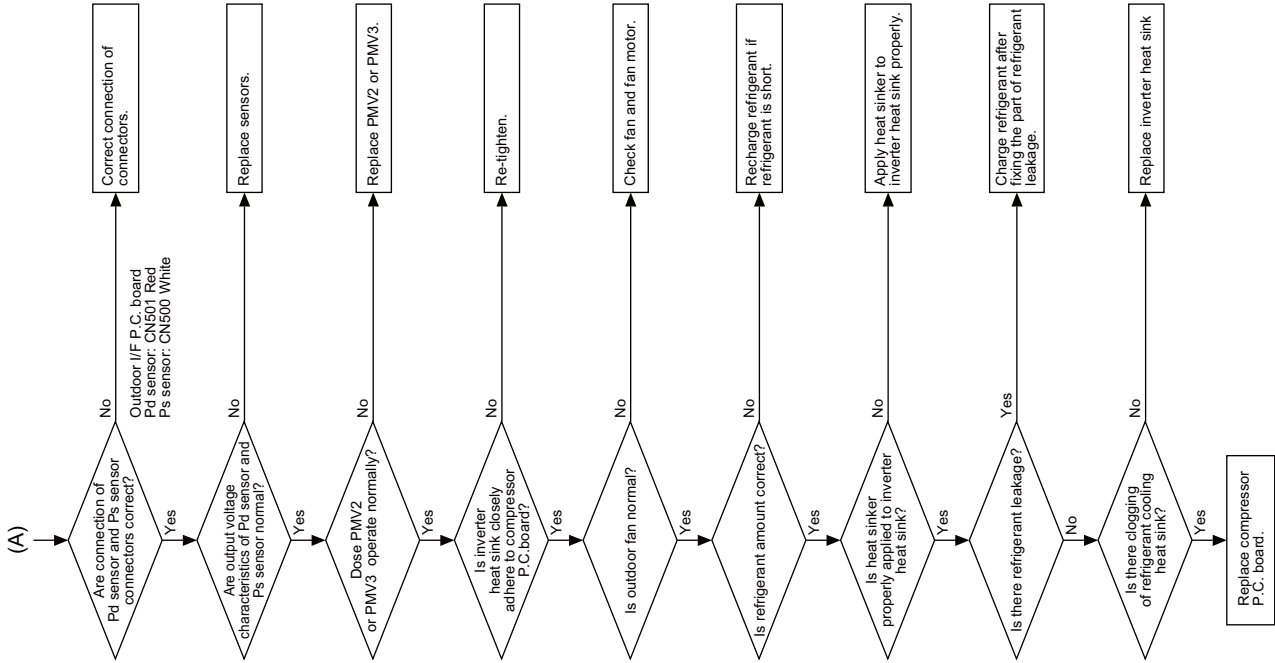
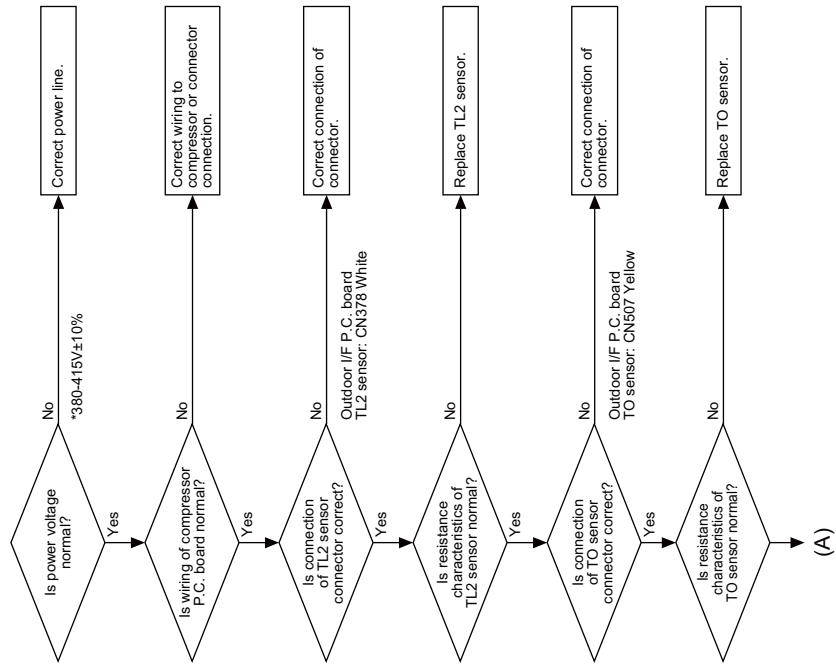



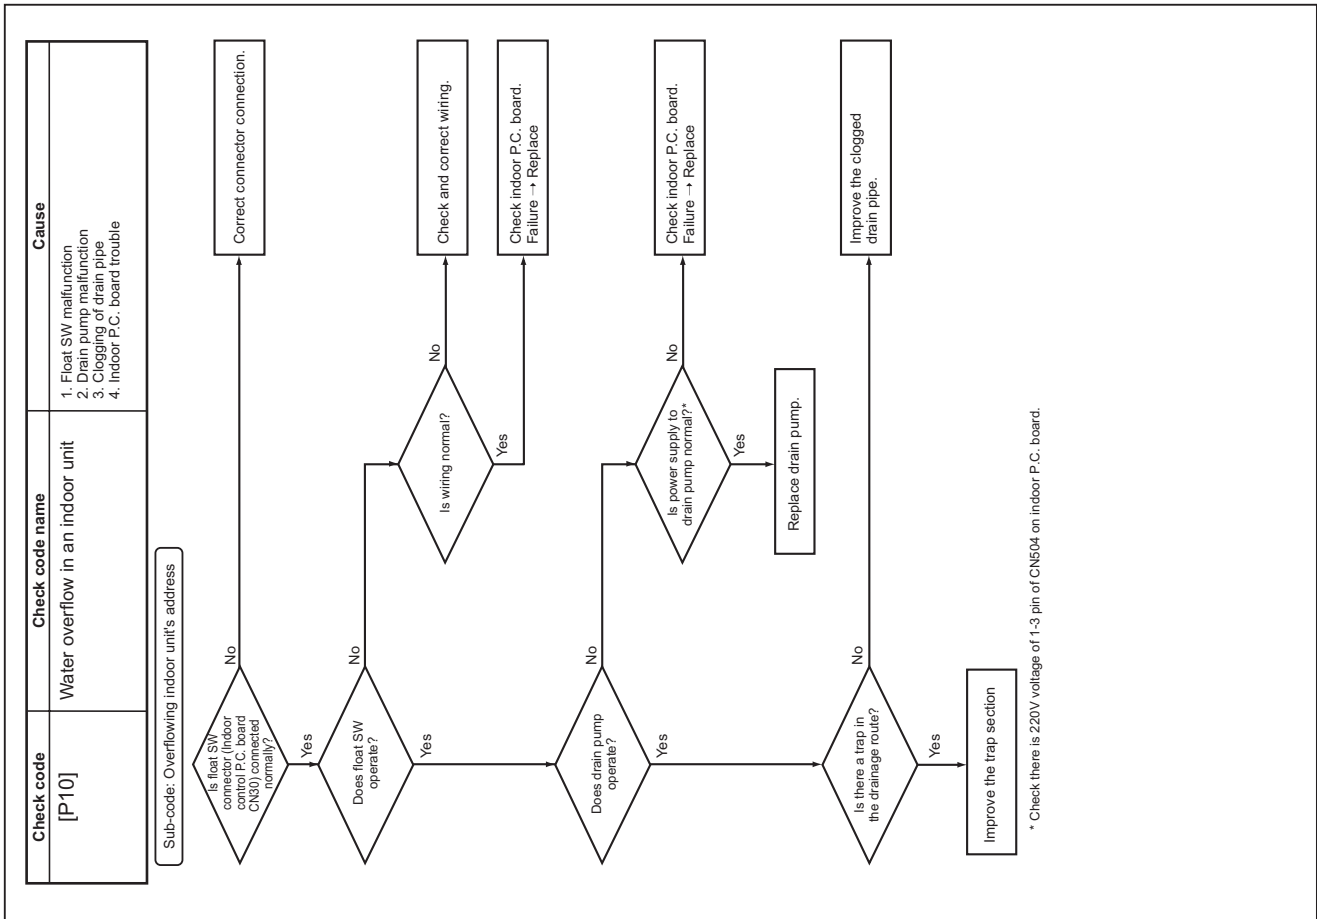


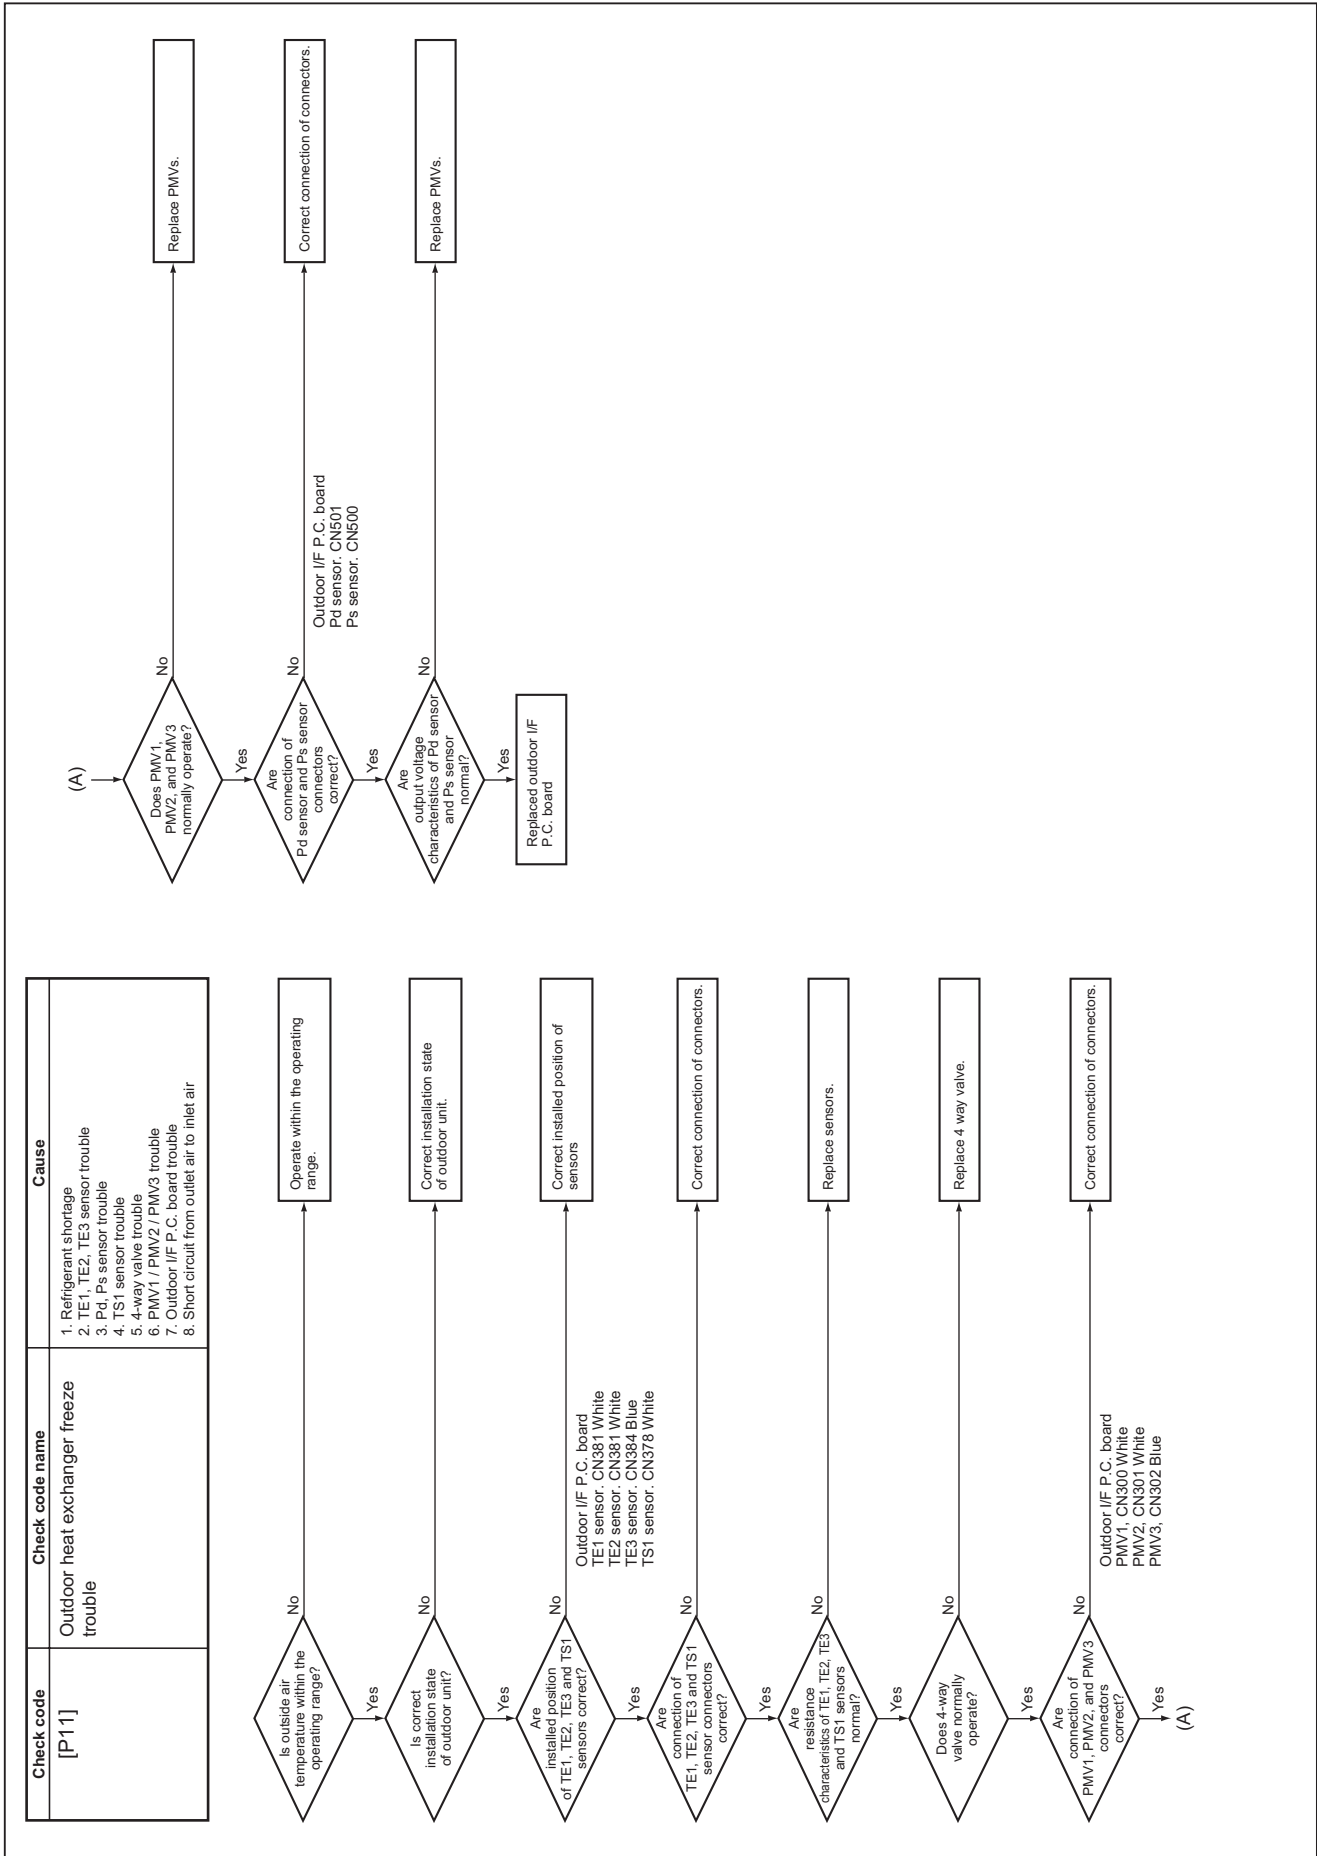

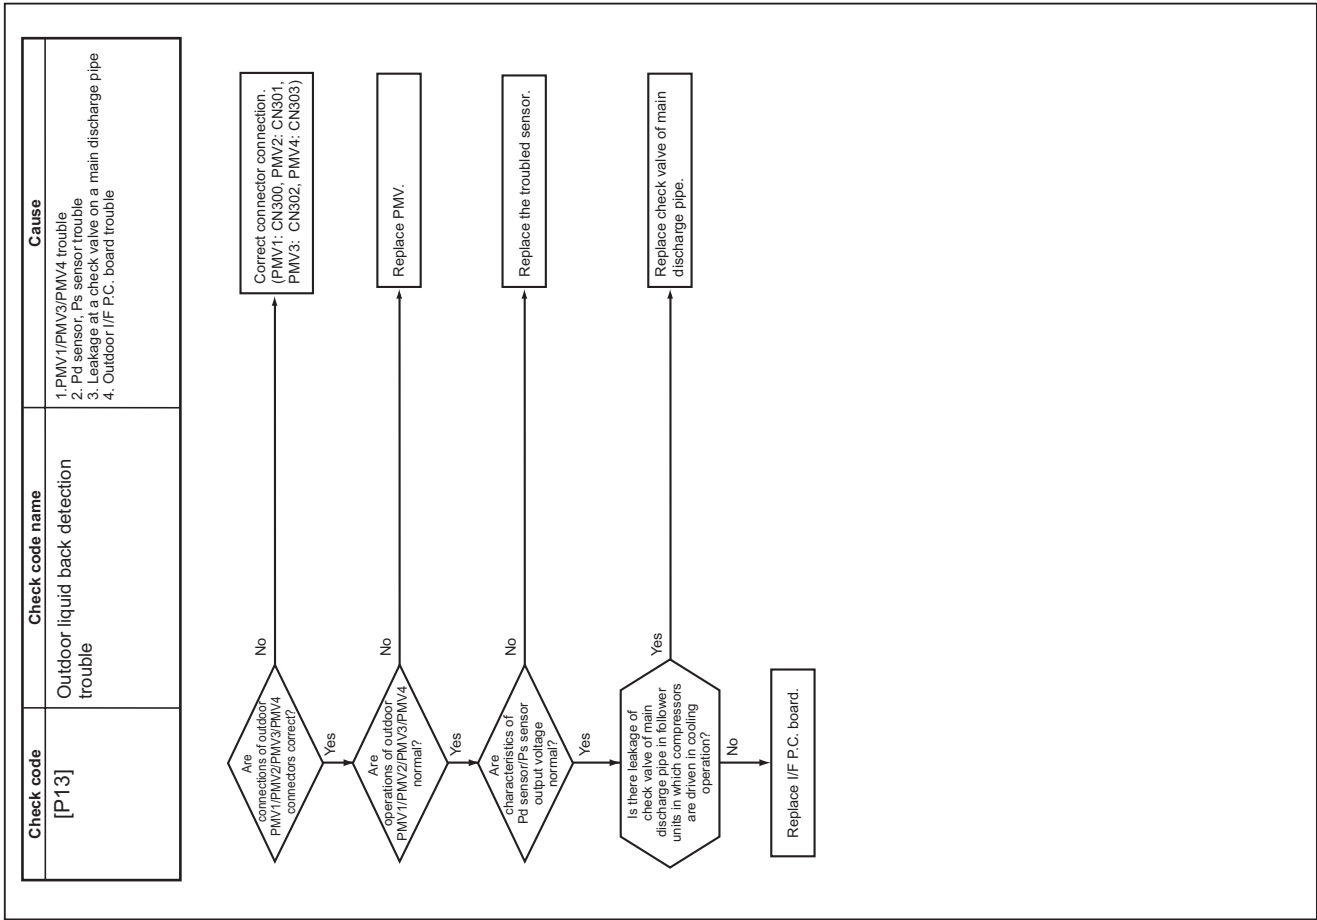
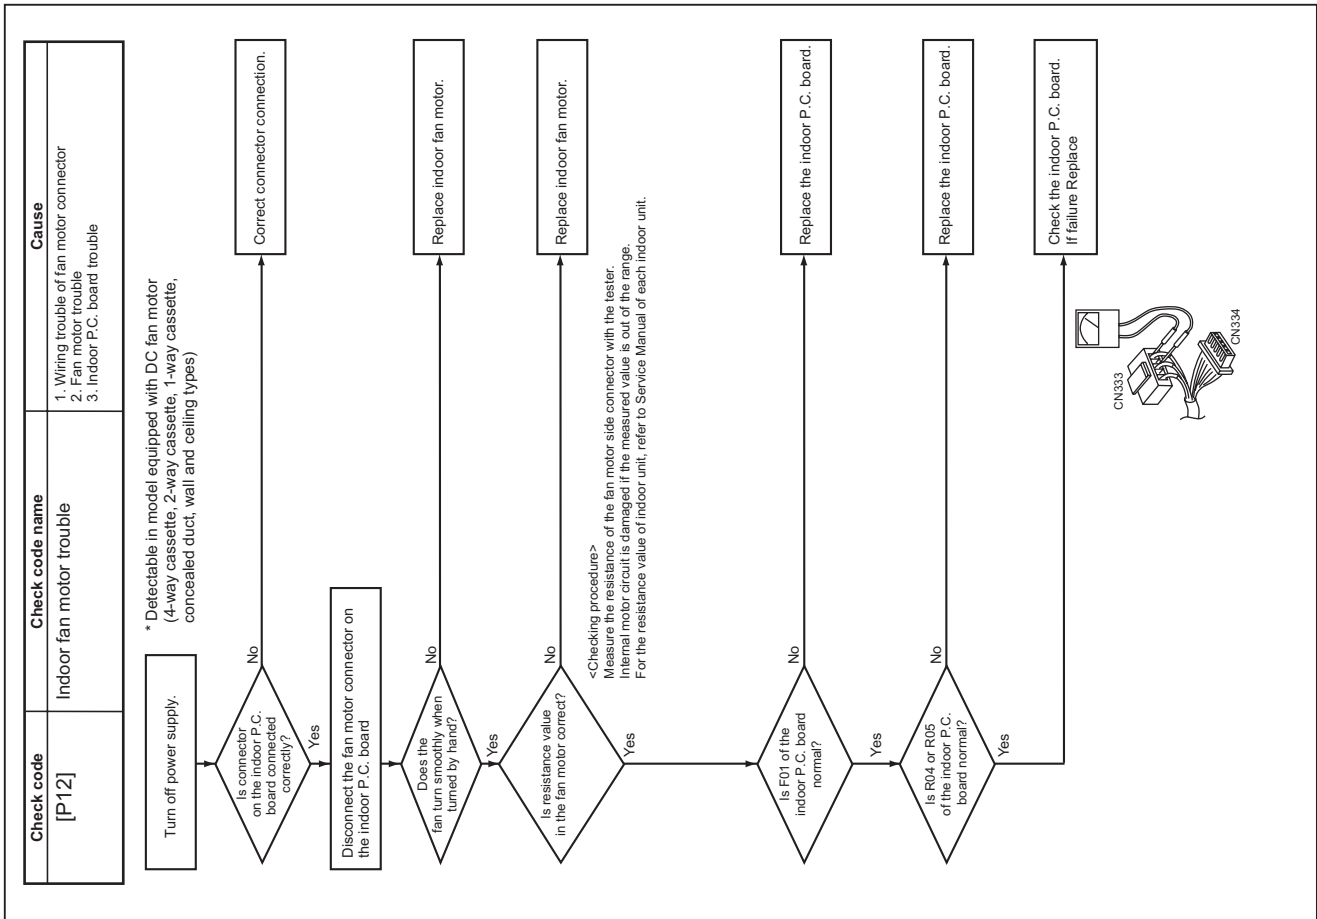






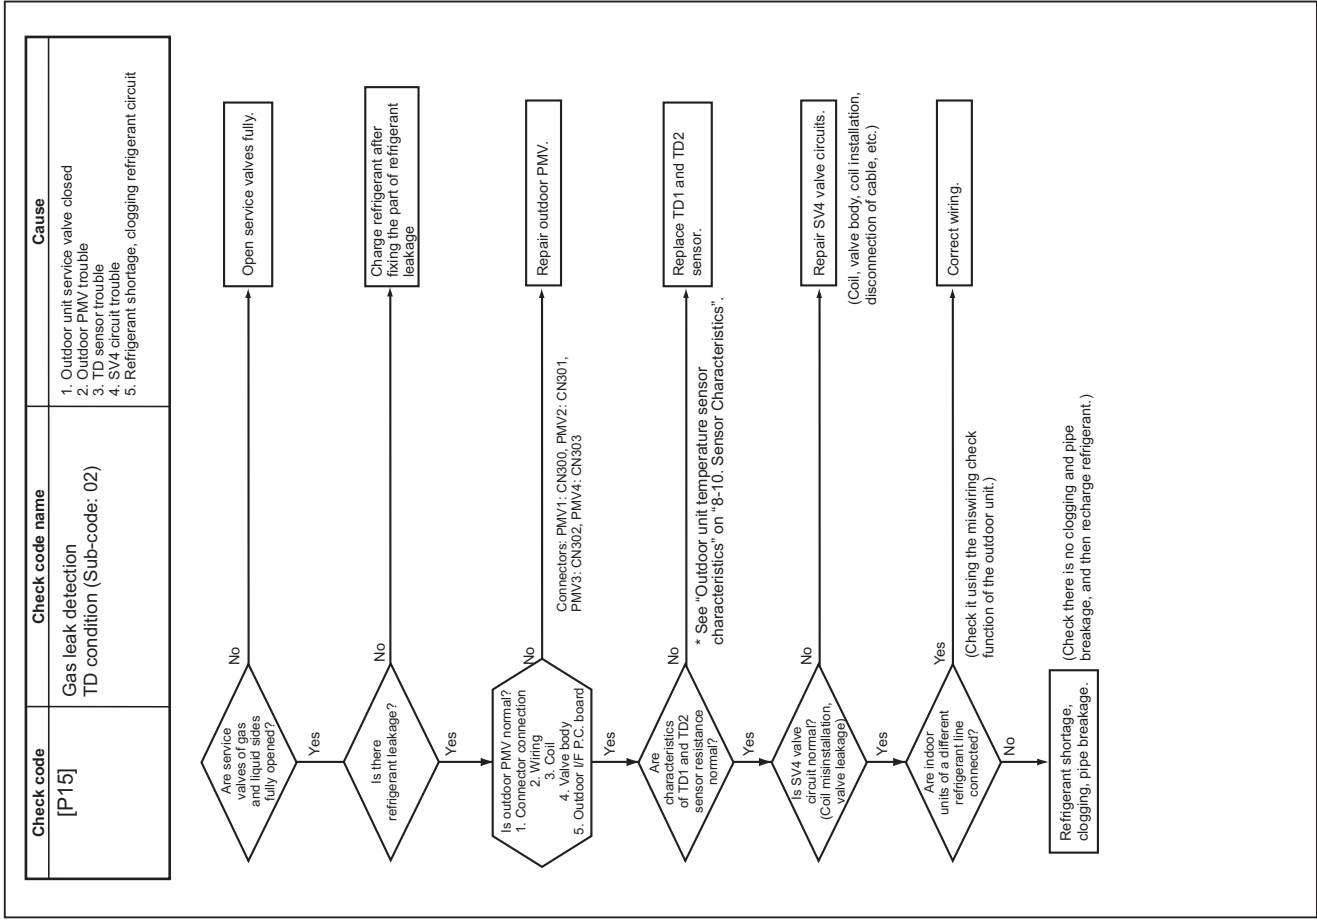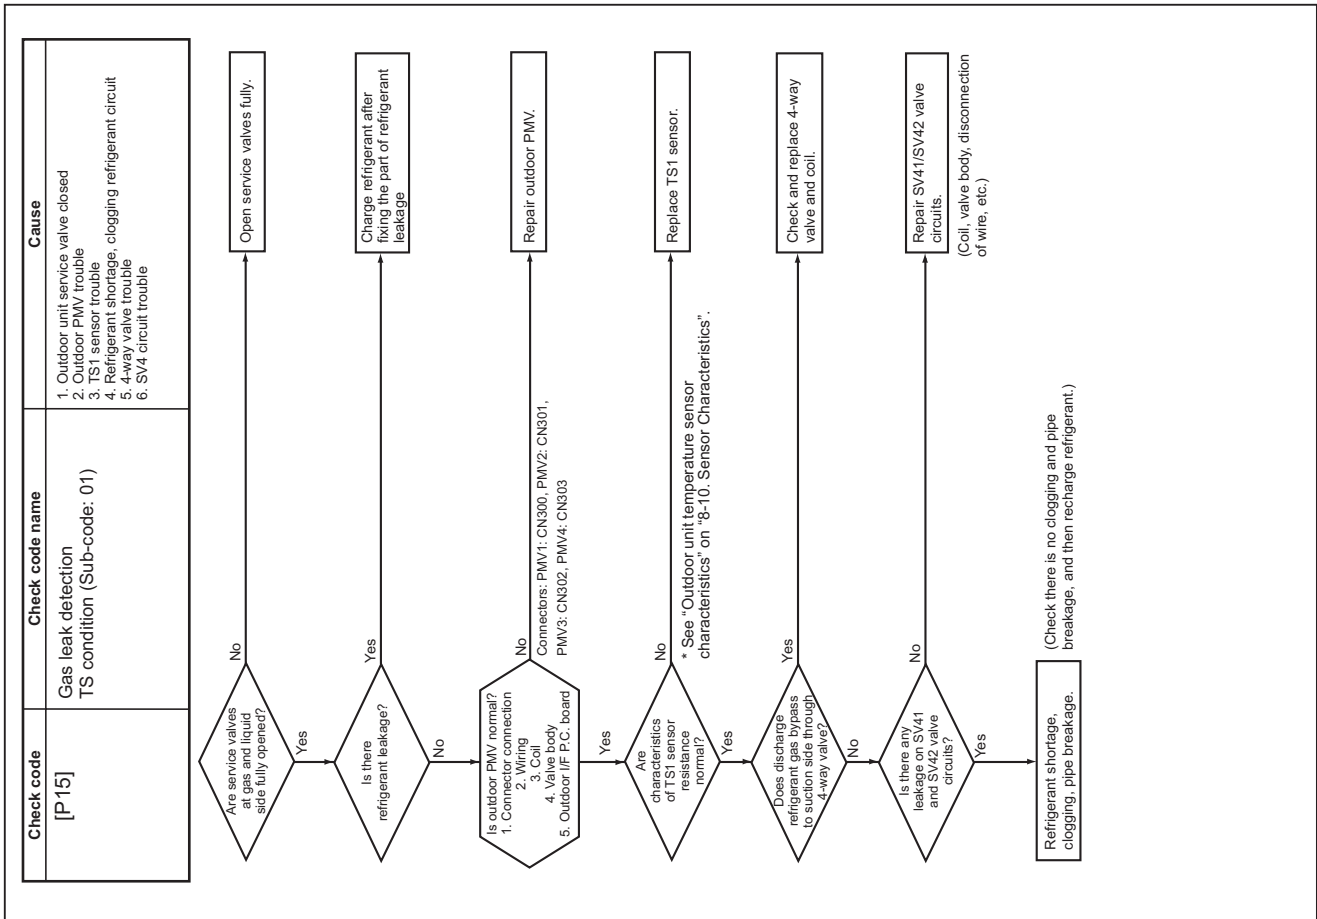

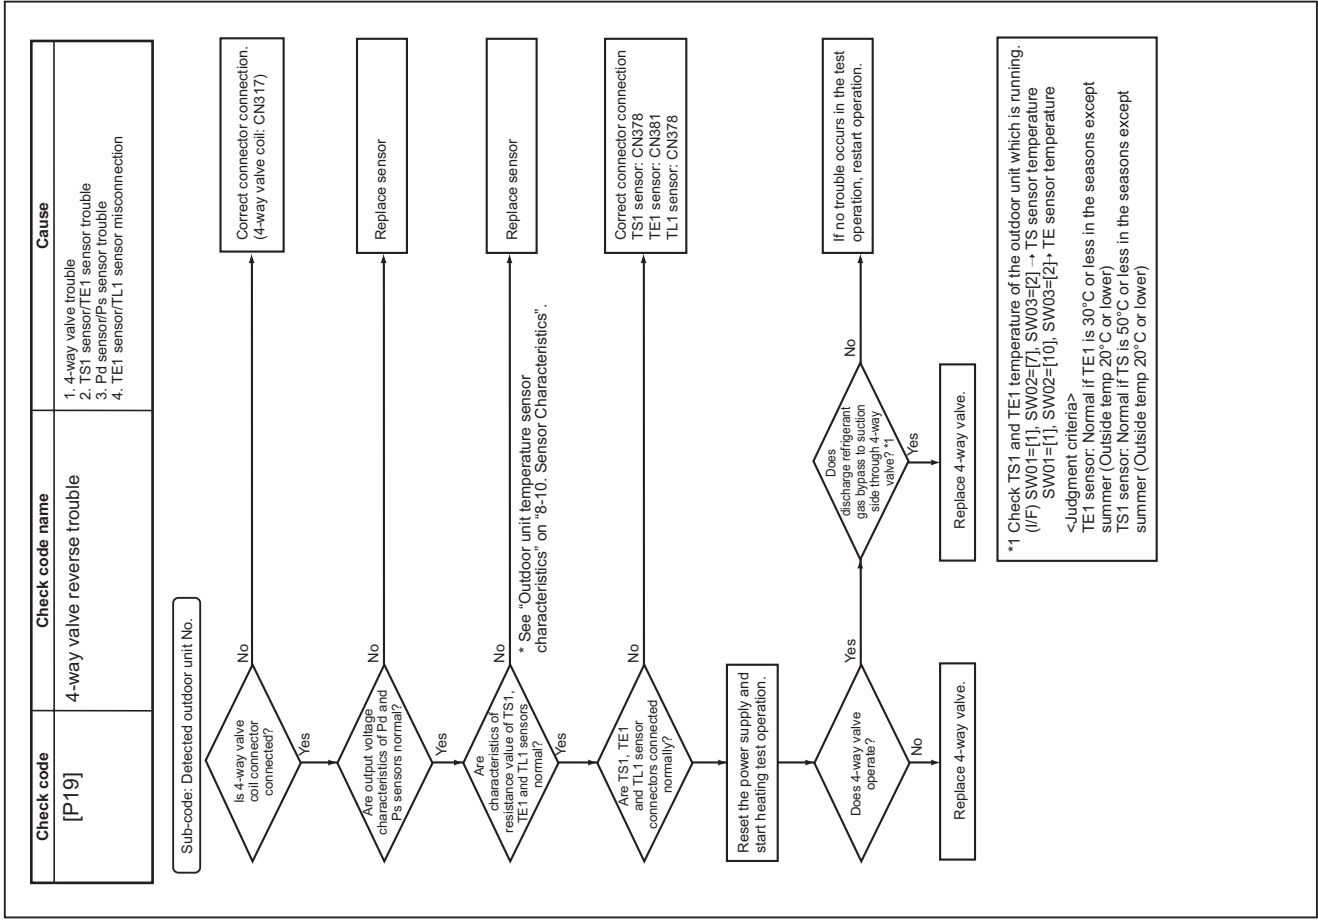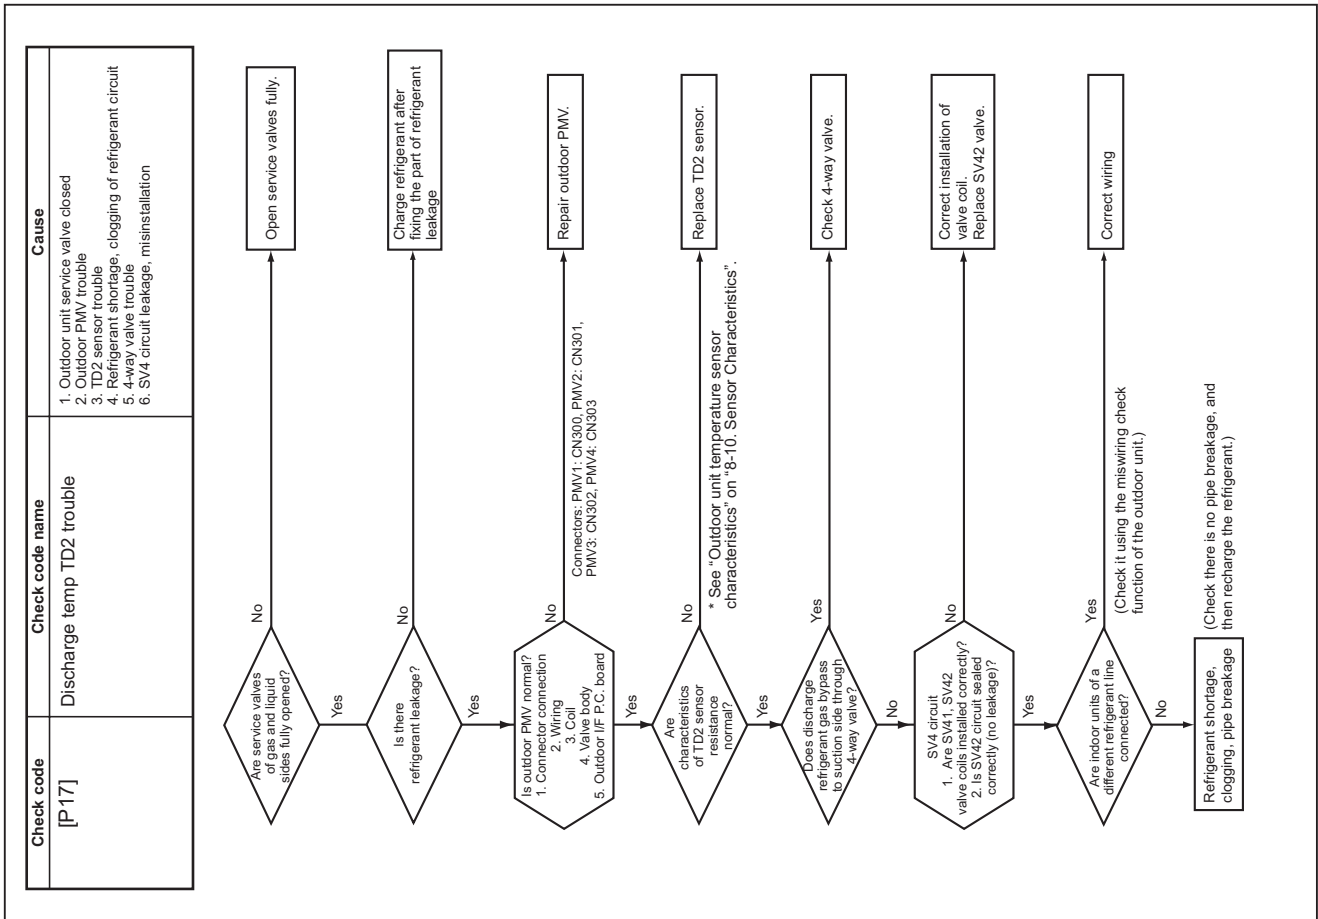


Check code	Check code name	Cause
[P20]	High-pressure protective operation	<ul style="list-style-type: none"> <li>1. Pd sensor trouble</li> <li>2. Service valve closed.</li> <li>3. Indoor/outdoor fan trouble</li> <li>4. Indoor/outdoor PMV clogging</li> <li>5. Indoor/outdoor heat exchanger clogging</li> <li>6. SV4 circuit trouble</li> <li>7. Outdoor I/F P.C. board trouble</li> <li>8. Operation trouble of check valve of main discharge pipe</li> <li>9. Refrigerant overcharge</li> </ul>

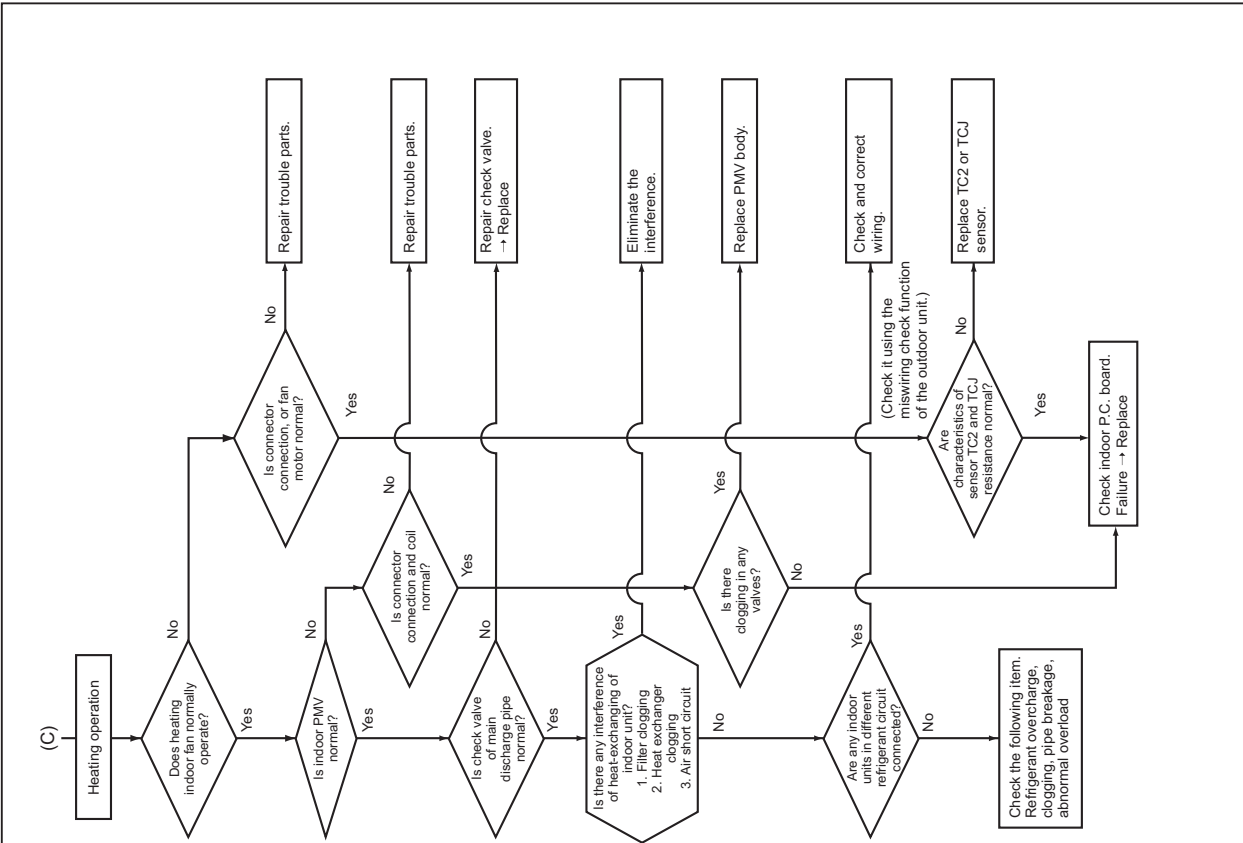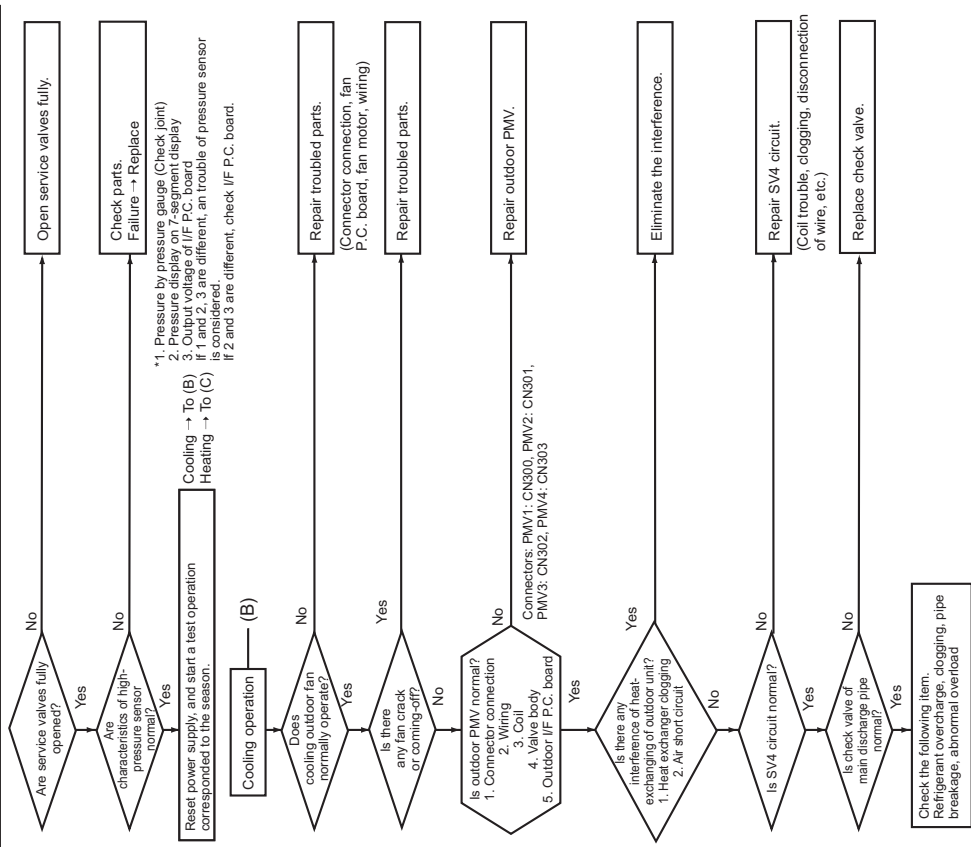

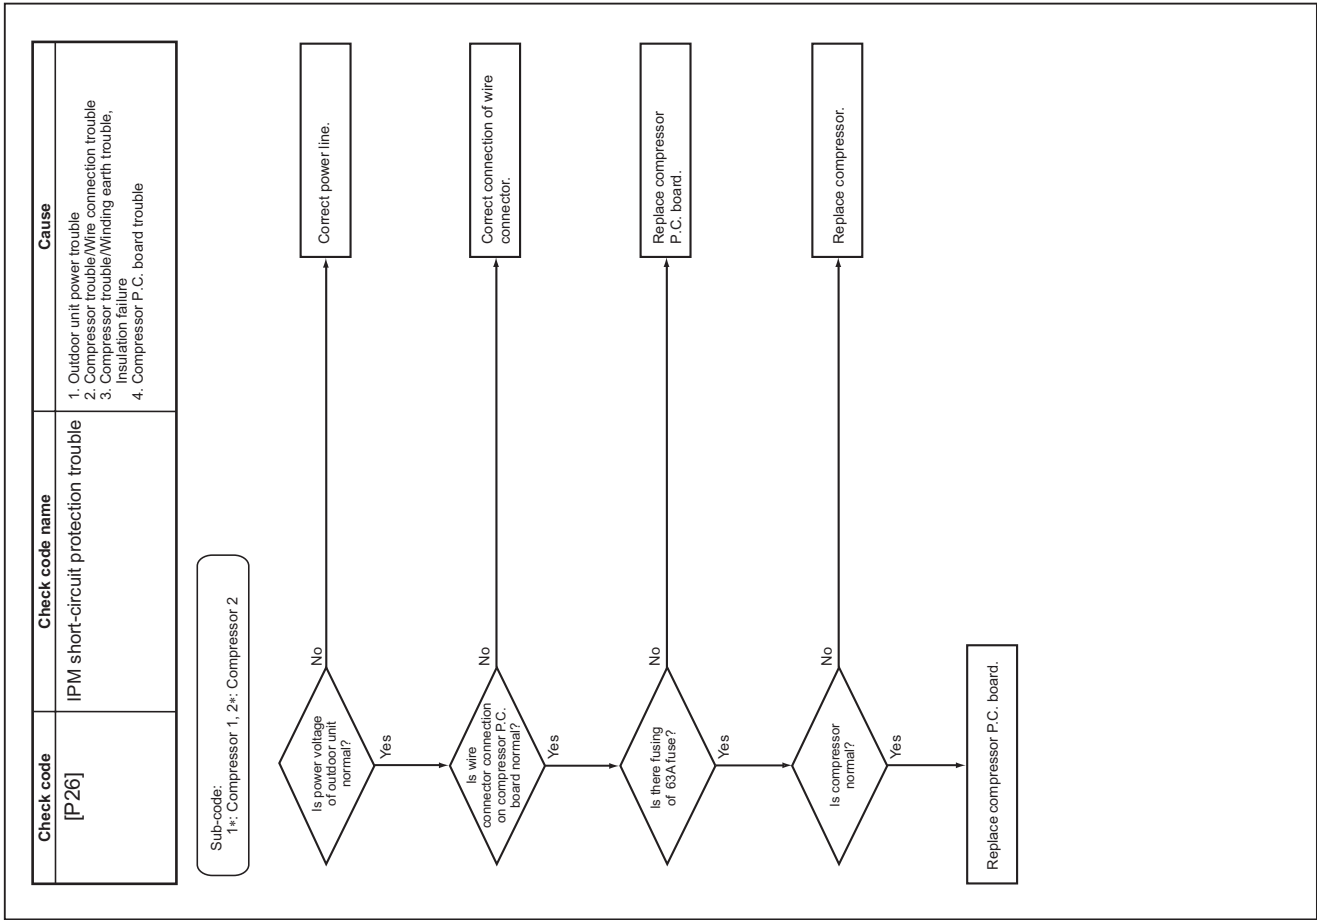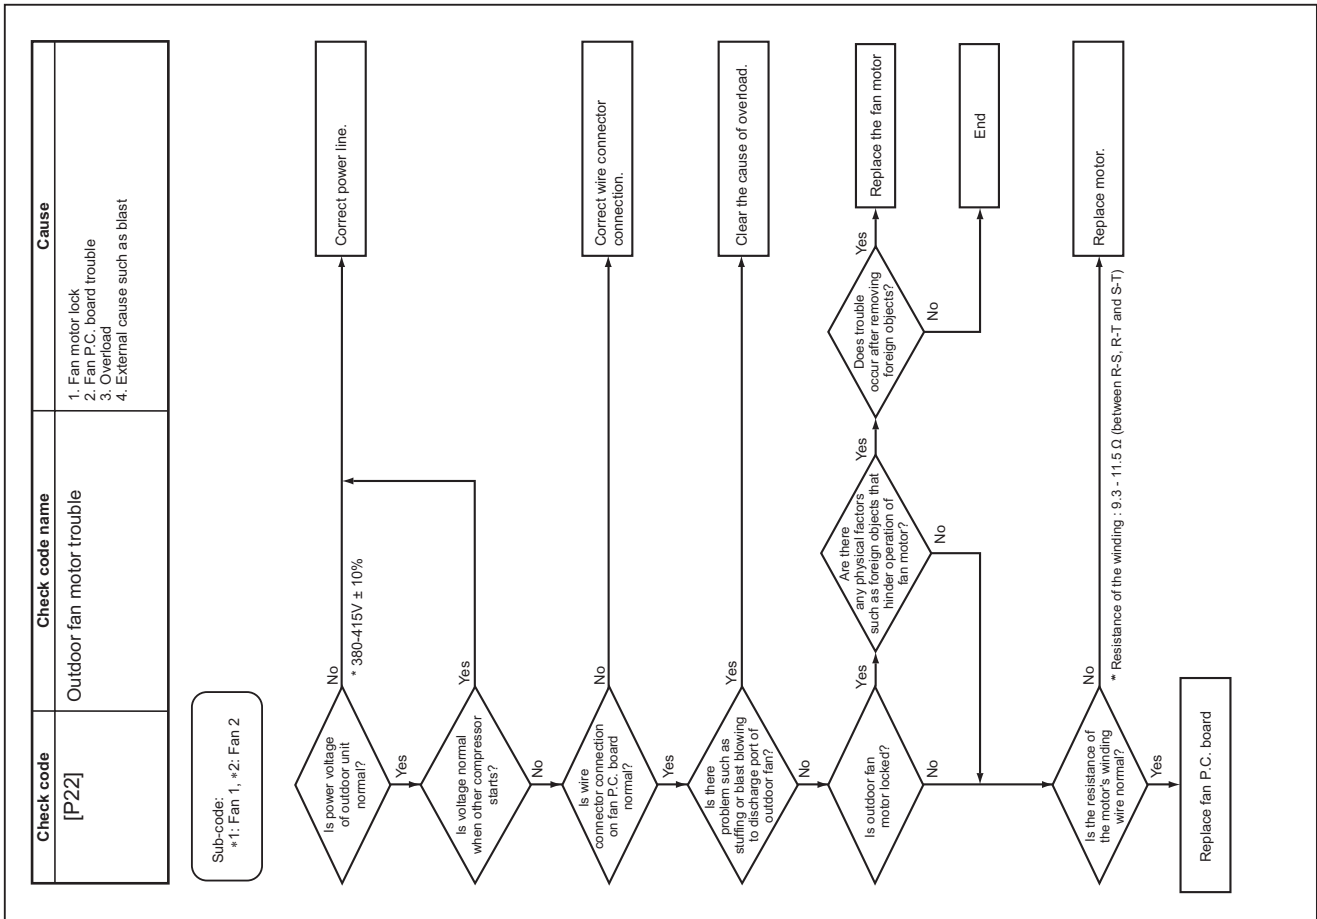

Check code	Check code name	Cause
[P29]	Compressor position detective circuit trouble	1. Wire/connection trouble 2. Compressor trouble 3. Compressor P.C. board trouble

Sub-code:  
1\*: Compressor 1, 2\*: Compressor 2

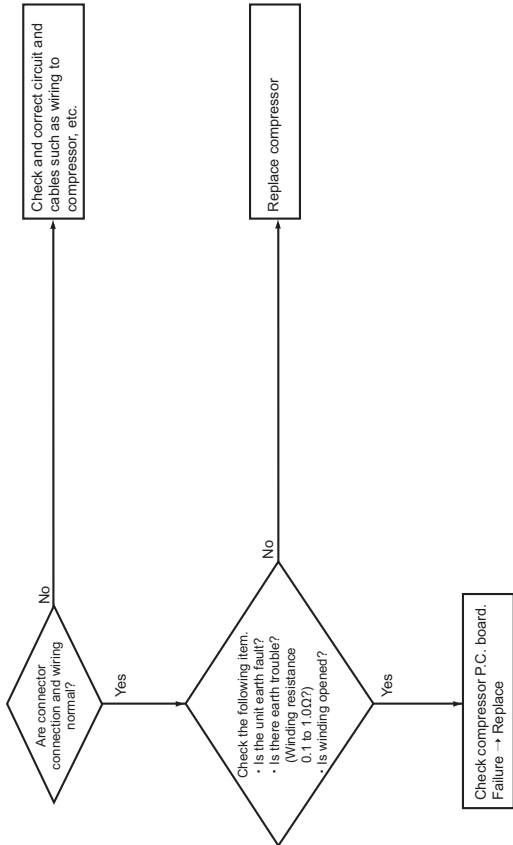


Check code	Check code name	Cause
[P31]	Other indoor trouble (Group follower unit trouble)	Another indoor unit in the group is abnormal.

When the header unit of the group detected trouble [E03], [L03], [L07] or [L08], the follower unit of the group displays [P31] trouble and stops. There are no check code display and alarm record of the main remote controller.


## 8-6. 7-Segment Display Function

### 7-segment display on outdoor unit (interface P.C. board)

The interface control P.C. board features a 7-segment LED display designed to check operational status. Display items can be changed by changing the combination of the number settings of rotary switches provided on the P.C. board (SW01, SW02 and SW03).

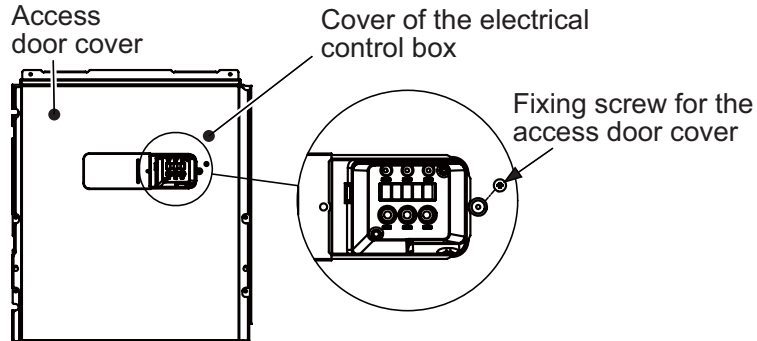

### Interface P.C. board

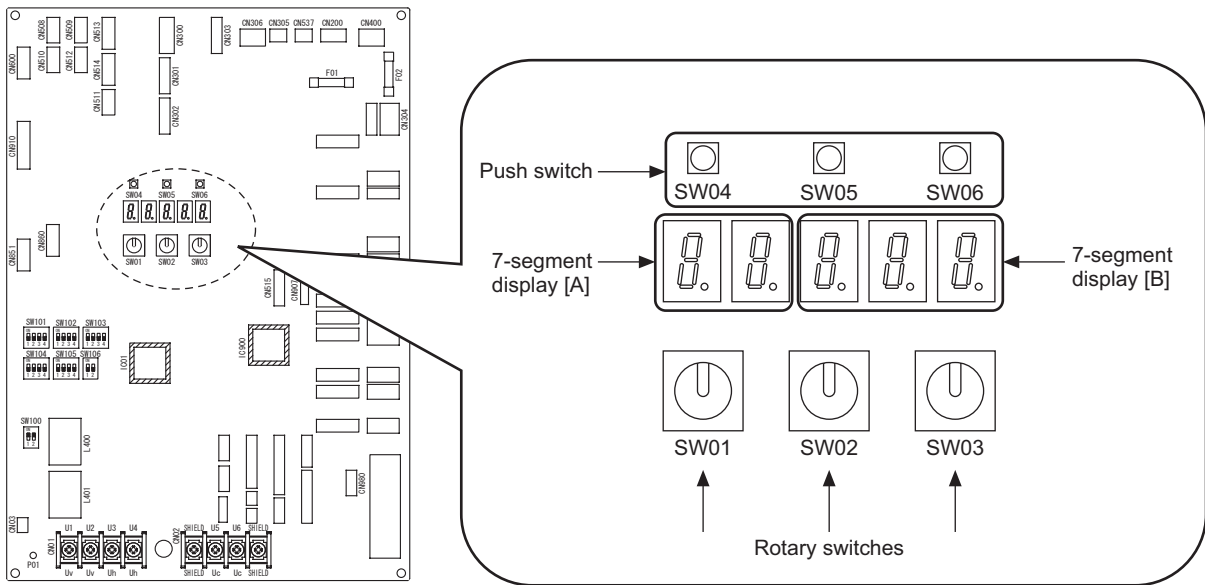

## Checking Procedure to Be Followed in Event of Abnormal Shutdown

If the system is shut down due to a trouble in the outdoor unit, perform checks in the following steps:


### 1 Open the panel of the outdoor unit and inspection window of the electric parts box, and check the 7-segment display.

The check code is displayed in the 7-segment display.

#### Checking Procedure to be Followed in Event of Abnormal Shutdown

In the event of a system shutdown due to an abnormal state at the outdoor unit, perform checks in the following steps.

1. Open the panel of the outdoor unit and inspection window of the electric parts box, and check the 7-segment display.

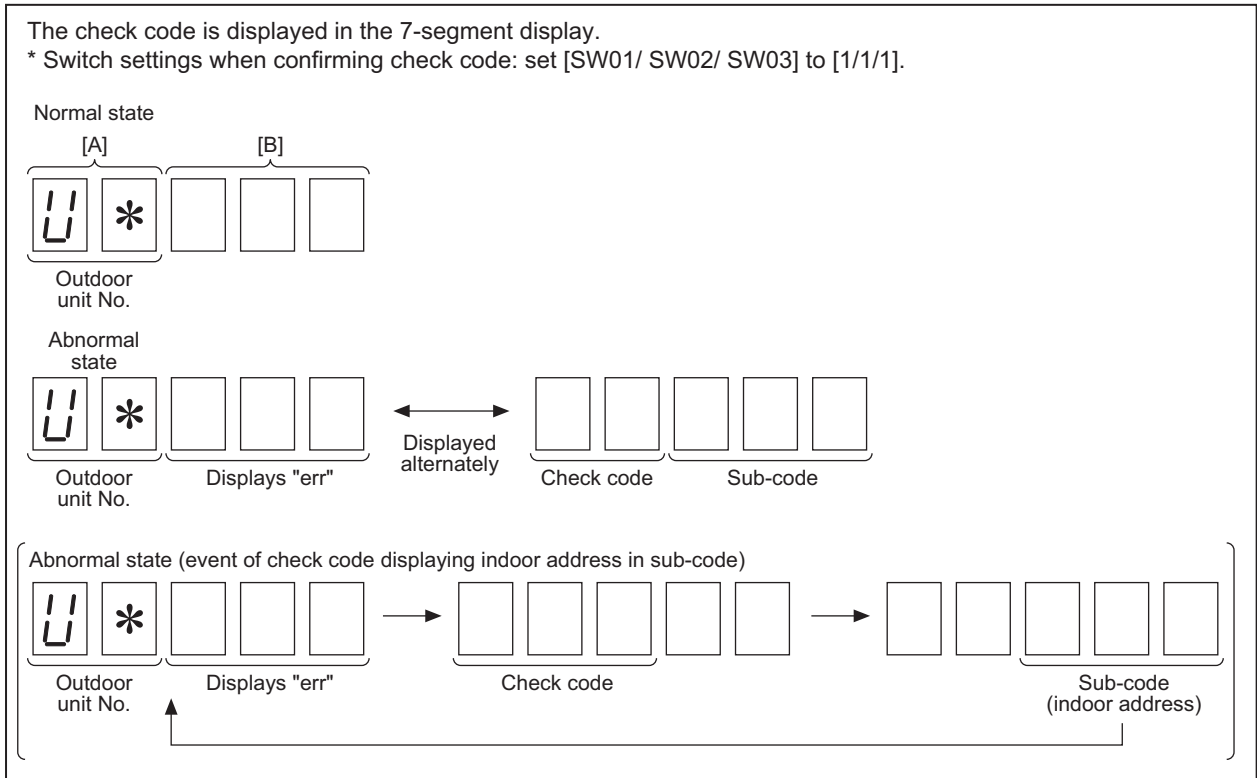

2. Confirm the check code, and perform checking following the diagnostic procedure for that check code.
  3. In the event of the 7-segment display of the header unit being check code [E28. \* \*], there is an abnormality occurring at a follower unit. Push the push-switch SW04 of the header unit for several seconds. The outdoor fan will run only in the outdoor unit where the trouble has occurred, so open the panel of the unit where the fan is running, and confirm the check code of the 7-segment display.
  4. Perform checking following the diagnostic procedure for that check code.
- \* To check the check code, set the rotary switches SW01/SW02/SW03 to [1/1/1].

### 2 Check the check code and follow the applicable diagnostic procedure.

### 3 If the 7-segment display shows [E28\_ \_], there is a trouble in a follower unit.

Press the push-switch SW04 on the header unit and hold for several seconds.

As the fan of the outdoor unit in which the trouble has occurred comes on, open the panel of the unit, and check the check code shown on the 7-segment display.

### 4 Perform checks in accordance with the diagnostic procedure applicable to the check code.

**(1) Display of System Information (Displayed on Header Outdoor Unit Only)**

SW01	SW02	SW03	Display detail					
1	3	15	1	-		-		
			2	System capacity	A	[...8]~[120]:8 to 120 HP		
					B	[HP]		
			3	No. of outdoor units	A	[...1]~[...5]:1 to 5		
					B	[...P]		
			4	No. of indoor units connected / No. of units with cooling thermostat ON	(1) [... .. 0] ~ [... .. 128] : 0 ~ 128 (Number of connected units) (2) [ C ... .. 0 ] ~ [ C ... 128 ] : 0 ~ 128 (Number of cooling thermostat ON) *Switch the display of (1) and (2) with SW04			
			5	No. of indoor units connected / No. of units with heating thermostat ON	(1) [ ... .. 0 ] ~ [ ... .. 128 ] : 0 ~ 128 (Number of connected units) (2) [ H ... .. 0 ] ~ [ H ... 128 ] : 0 ~ 128 (Number of heating thermostat ON) *Switch the display of (1) and (2) with SW04			
			6	Amount of compressor command correction	A	Value displayed in hexadecimal format		
					B	-		
			7	Release control	A	Normal: [r. ...], During release control: [r.1]		
					B	-		
			8	Oil equalization control	Normal: [oiL-0] During oil equalization control: [oiL-1]			
			9	Oil equalization request	A	Displayed through LED segment lighting pattern		
					B	<p>Display section A    Display section B</p> <p>"A" Light on : Header . Oil equalization demand "F" Light on : Header . Oil equalization demand "C" Light on : Follower . Oil equalization demand</p> <p>U1    U2    U3    U4    U5    Outdoor unit No.</p>		
			10	Refrigerant/oil recovery operation	A	Oil recovery in cooling: [C1], Normal: [C ...]		
					B	Refrigerant recovery in heating: [H1], Normal: [H ...]		
11	Automatic addressing	A	[Ad]					
		B	During automatic addressing: [... FF], Normal: [... ..]					
12	Power peak-cut	A	[dU] Normal: [... ..], During 50-90% capacity operation: [ _50_ _90 ] While control is based on BUS line input: [E50-E90]					
13	Optional control (P.C. board input)	Displays optional control status		A	B			
		Operation mode selection: During priority heating (normal)		h.*	*.*.*			
		Priority cooling		c.*	*.*.*			
		Heating only		H.*	*.*.*			
		Cooling only		C.*	*.*.*			
		Priority given to No. of indoor units in operation		n.*	*.*.*			
		Priority given to specific indoor unit		U.*	*.*.*			
		External master ON/OFF: Normal		*....	*.*.*			
		Start input		*.1	*.*.*			
		Stop input		*.0	*.*.*			
Night operation: Normal		*.*	....*.*					
Start input		*.*	1.*.*					
Snowfall operation: Normal		*.*	*....*					
Start input		*.*	*.1.*					
14	Optional control (BUS line input)	Same as above						
15	-	-						
16	-	-						
15	No. of HWM (Hot water module) recorded on the I/F P.C.board	A	[ ho ]					
		B	[...0] to [...2] = 0 to 2					



## (2) Display of Outdoor Unit Information (Displayed on Each Outdoor Unit)

SW01	SW02	SW03	Display detail							
1	1		Check code data	A	Outdoor unit No.: [U1] to [U5]					
			B	If there is no check code, [U. *. - - -] is displayed. If there is check code, [U. *. err] ⇔ [OOO]. [△△] ([OOO]: Check code, [△△]: Sub-code) . . . . (The display switches alternately) (*: Outdoor unit No.)						
				<SW04> push SW function: Fan operation at outdoor unit with trouble. 7-segment display section A: [E.1] <SW04 + SW05> push SW function: Fan operation at outdoor unit without trouble. 7-segment display section A: [E.0] <SW05> push SW function: Fan operation function check mode is cancelled.						
	2			A	-					
				B	-					
	3			Operation mode	A	Stop [... ..] Normal cooling: [... C], Normal heating: [... H], Normal defrosting: [... J]				
				B	-					
	4			Outdoor unit HP capacity	A	8HP: [... 8], 10HP: [... 10], 12HP: [... 12], 14HP: [14], 16HP: [16], 18HP: [18], 20HP: [20], 22HP: [22], 24HP: [24]				
				B	[...HP]					
	5			Compressor operation command*Operation data of each compressor is displayed in turn in 2 second intervals.						
				Normal: Compressor speed (rps) is displayed in decimal format. 7-segment display (A/B): [C1. .... ] ⇒ [... ***, *] ⇒ [C2. .... ] ⇒ [... ***, *]						
				<SW04> push SW function: Switches to display of operating current (decimal value). 7-segment display (A/B): [i1 . .... ] ⇒ [...****] ⇒ [i2. .... ] ⇒ [...****] Pressing of <SW05> restores normal display.						
	6			Outdoor fan mode	A	[FP]				
				B	Mode 0 to 63: [... 0] to [63]					
	7			Compressor backup	A	[C.b.]				
				B	Displays compressor backup setting status Normal: [... ..] Compressor No. 1 backup: [1 ... ..] Compressor No. 2 backup: [... 1 ...]					
8		1		A	-					
			B	-						
9			Control valve output data	Displays control output status of solenoid valve		A	B			
				4-way valve: ON		H. 1	... ..			
				4-way valve: OFF		H. 0	... ..			
10				-		-	-			
				SV3D: OFF		3. 1	0 0 0			
11				SV3D: OFF		3. 0	1 0 0			
				SV3D: OFF		3. 0	0 1 0			
				SV3D: ON		3. 0	0 0 1			
12			SV41: ON / SV42: OFF		4. ...	1 0 0				
			SV41: OFF / SV42: ON		4. ...	0 1 0				
14			PMV1//PMV2PMV3 opening	Displays opening data in decimal format. "Switch display of PMV1, PMV2, and PMV3 by pressing <SW04>"		PMV1	** * ** .P			
						PMV2	... * ** .P			
						PMV3	... * ** .P			
15			PMV4 opening	Displays opening data in decimal format.		PMV4	... * ** .P			
16			Oil level judgment status							
			Normal	A	[o L.]					
				B	Initial display: [... ..], Oil level judgment result: [# * \$] Displayed letters #, * and \$ represent judgment results for compressor Nos. 1 and 2, respectively ("0" for normal and "1" or "2" for low level).					
			<SW04> push SW function: Displays low level confirmed judgment result of each compressor.							
			*Pressing of <SW05> restores normal display.	A	[L d.]					
				B	Compressor No. 1 low level being confirmed: [L ... ..] Compressor No. 2 low level being confirmed: [... L ...]					
<SW15> push SW function : for 2 seconds, change display to low level judgement timer										
*Pressing of <SW05> restores normal display	A	[ T ..., ]								
	B	Low level judgment timer : [120] (i.e. : 120 minutes)								

### (3) Display of Outdoor Cycle Data (Displayed at Each Outdoor Unit)

SW01	SW02	SW03	Display detail					
1	1	2	Pd pressure data	Pd pressure (MPaG) is displayed in decimal format. (MPaG: Approx. 10 times magnitude of kg/cm <sup>2</sup> G)	A	B		
					P d.	*. **		
				Ps pressure data	Ps pressure (MPaG) is displayed in decimal format.	P s.	*. **	
				PL pressure conversion data	Converted PL pressure (MPaG) is displayed in decimal format.	P L.	*. **	
				TD1 sensor data	Temperature sensor reading (°C) is displayed in decimal format.	Letter symbol	t d	1 ... ..
						Data	*	*. **
				TD2 sensor data	• Letter symbol and data are displayed alternately, for 1 second and display for 3 seconds, respectively.	Letter symbol	t d	2 ... ..
						Data	*	*. **
				TS1 sensor data	• Data is displayed in [ * ].	Letter symbol	t S	1 ... ..
						Data	*	*. **
				TS3 sensor data	• Data with negative value is displayed as [- *].	Letter symbol	t S	3 ... ..
						Data	*	*. **
				TE1 sensor data		Letter symbol	t E	1 ... ..
						Data	*	*. **
				TE2 sensor data		Letter symbol	t E	2 ... ..
						Data	*	*. **
	TE3 sensor data		Letter symbol	t E	3 ... ..			
			Data	*	*. **			
	TL1 sensor data		Letter symbol	t L	1 ... ..			
			Data	*	*. **			
	TL2 sensor data		Letter symbol	t L	2 ... ..			
			Data	*	*. **			
	TL3 sensor data		Letter symbol	t L	3 ... ..			
			Data	*	*. **			
	TO sensor data		Letter symbol	t o	... ..			
			Data	*	*. **			

SW01	SW02	SW03	Display detail					
1	1	5	TK1 sensor data	Temperature sensor reading (°C) is displayed in decimal format.	Letter symbol	F 1	... ..	
					Data	*	*. **	
				TK2 sensor data		Letter symbol	F 2	... ..
						Data	*	*. **
				TG1 sensor data		Letter symbol	t G	1 ... ..
						Data	*	*. **
				TG2 sensor data		Letter symbol	t G	2 ... ..
						Data	*	*. **
				TG3 sensor data		Letter symbol	t G	3 ... ..
						Data	*	*. **
	TK1_Pre data		Letter symbol	F1	PrE			
			Data	*	*. **			
	TK2_Pre data		Letter symbol	F2	PrE			
			Data	*	*. **			

#### (4) Display of Outdoor Cycle Data (Displayed at Header Unit)

\* This method is used when displaying follower unit information on the 7-segment display of the header unit.

SW01	SW02	SW03	Display detail								
3	1	1~4	Trouble data	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)						
				B	Check code is displayed (latest one only). If there is no check code: [---].						
	2		A	—							
			B	—							
	3		Outdoor unit HP capacity	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)						
				B	8HP: [... 8], 10HP: [... 10], 12HP: [... 12], 14HP: [14], 16HP: [16], 18HP: [18], 20HP: [20], 22HP: [22], 24HP: [24]						
	4		Compressor operation command	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)						
				B	Indicates which compressor is ON. * Any unconnected compressors is represented by “—”. <table border="1" style="float: right; margin-left: 20px;"> <tr> <td>B</td> <td></td> </tr> <tr> <td></td> <td>1 0</td> </tr> <tr> <td></td> <td>0 1</td> </tr> </table>	B			1 0		0 1
				B							
					1 0						
			0 1								
			When compressor No. 1 is ON	1 0							
			When compressor No. 2 is ON	0 1							
	5		Fan operation mode	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)						
				B	At rest: [F ... 0], In mode 63: [F 6 3]						
	6		Release signal	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)						
				B	Normal: [r ... ..], Upon receiving release signal: [r ... 1]						
	7		Oil level judgment	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)						
B		Normal: [... ..], Low level: [... .. L]									
8	Compressor 1 operating current	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)								
		B	[**.*], *.* is value of operating current in decimal format.								
9	Compressor 2 operating current	A	[U.*], *SW03 setting No. + 1 (Outdoor unit No. U2 to U5)								
		B	[**.*], *.* is value of operating current in decimal format.								

**Note:** Follower unit is selected by setting SW03.

SW03	7-segment display section A
1	U2
2	U3
3	U4
4	U5

### (5) Display of Indoor Unit Information (Displayed on Header Unit Only)

SW01	SW02	SW03	Display detail		
4	1~16	1~8	Indoor check code	B	No check code : [- - -]
			Indoor BUS communication signal receiving status	B	Upon receiving signal : [... .. 1], Other times : [..... ..]
Indoor HP capacity			B	... 0.3, ...0.4, ...0.5, ...0.6 ... 0.8, ...1.0, ...1.2, ...1.7, ...2.0 ... 2.5, ...3.0, ...3.2, ...4.0, ...5.0 ... 6.0, ...8.0, ...10.0, ...16.0, ...20.0	
Indoor request command (S code, operation mode)			B	[#... *] # represents mode : COOL : [C. ... *], HEAT : [H ... F] FAN : [F. ... *], OFF : [S ... *] * represents S code : [# ... 0] to [# ... F]	
6			Indoor PMV opening data	B	Displayed in decimal format
7			Indoor temperature sensor data1	B	Switch temperature display of TA, TCJ, TC1 and TC2 with SW06
8			Indoor temperature sensor data2	B	Switch temperature display of TF, TA2 and TA3 with SW06
9			1	1	Outdoor DN code setting

**Note:** Indoor address No. is selected by setting SW02 and SW03 and displayed on 7-segment display, section A.

SW02	SW03	Indoor address	7-segment display section A
1 ~ 16	1	SW02 setting number	[01] ~ [16]
1 ~ 16	2	SW02 setting number +16	[17] ~ [32]
1 ~ 16	3	SW02 setting number +32	[33] ~ [48]
1 ~ 16	4	SW02 setting number +48	[49] ~ [64]
1 ~ 16	5	SW02 setting number +64	[65] ~ [80]
1 ~ 16	6	SW02 setting number +80	[81] ~ [96]
1 ~ 16	7	SW02 setting number +96	[97] ~ [112]
1 ~ 16	8	SW02 setting number +112	[113] ~ [128]

### (6) Display of Outdoor EEPROM Writing Check Code (Displayed on Header Unit Only)


\* The latest check code written in the EEPROM of each outdoor unit is displayed.

(This function is used to check the trouble code after the resetting of the power supply.)

To display the check code, push SW04 and hold for at least 5 seconds after setting SW01 to 03 as shown in the table below.

SW01	SW02	SW03	Indoor address	7-segment display section A	
1	1	16	Latest check code of header unit (U1)	E. 1.	***
	2		Latest check code of follower unit No. 1 (U2)	E. 2.	***
	3		Latest check code of follower unit No. 2 (U3)	E. 3.	***
	4		Latest check code of follower unit No. 3 (U4)	E. 4.	***
	5		Latest check code of follower unit No. 4 (U5)	E. 5.	***

#### • 7-Segment Display

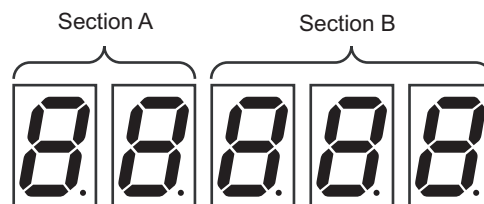

Set SW01/SW02/SW03 to [1/1/16] and push SW04 and hold for at least 5 seconds. The latest check code of the header unit (U1) will be displayed.

If the setting of SW02 is changed, the latest check code of a follow unit (U2-U5) will be displayed.


## 8-7. Oil Level Judgment Display

The current compressor oil level judgment results can be accessed by setting the switches provided on the interface P.C. board of an outdoor unit.

Perform the checks in accordance with the procedure described below.

### 1 Operation Procedure

- (1) Start the operation.
- (2) Set the switches provided on the interface P.C. board of the outdoor unit for which oil level judgment results are required as follows: SW01/SW02/SW03 = 1/16/1
- (3) The oil level judgment result will be displayed on the 7-segment display. 7-segment display: [oL] [# \* ...]  
The letters #, and \* are digits that represent judgment results for compressor Nos. 1 and 2, respectively.  
(See the table below for the interpretation of the judgment results.)
- (4) When checking is completed, revert the SW01/SW02/SW03 setting to [1/1/1].

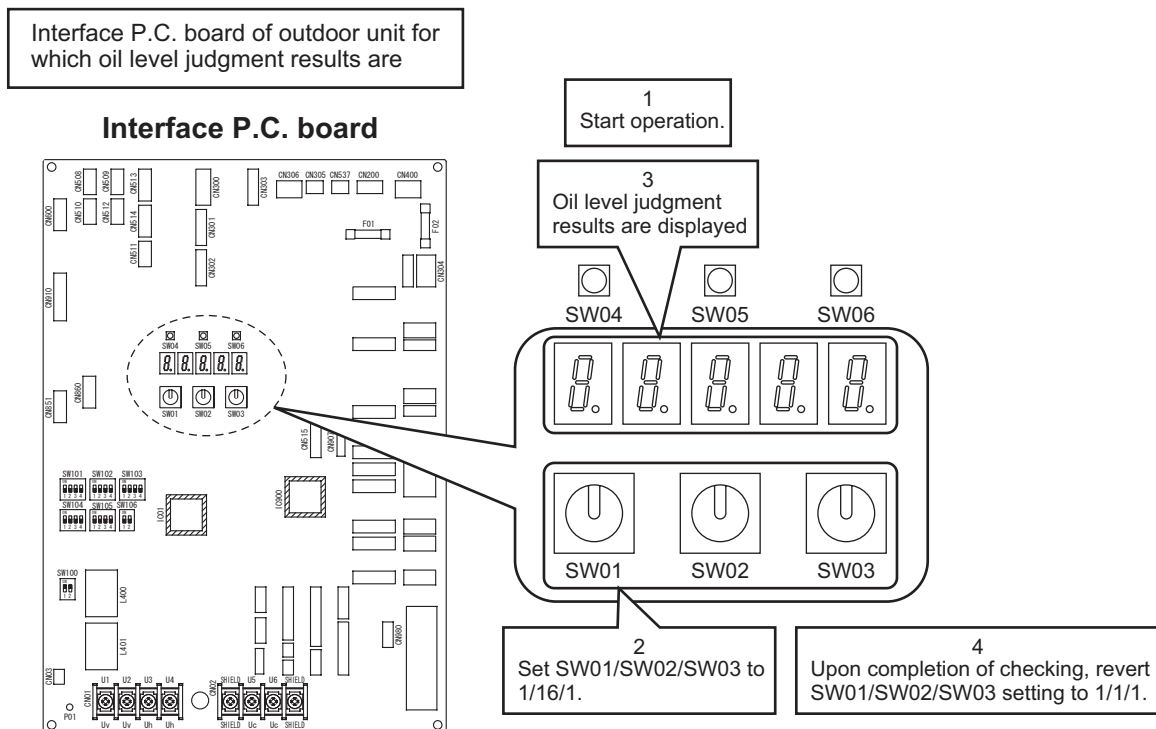

## 2 Oil Level Judgment Results

Displayed digit	Judgment result	Description
0	Normal	The amount of oil in the compressor is sufficient.
1 2	Low level	The amount of oil in the compressor is insufficient. (Both "1" and "2" stand for insufficiency.) If this result persists, the system will turn itself off in a protective shutdown.

### Display example

7-segment display [oL] [0 0 ...] Oil level is normal for compressors 1 and 2.  
 [oL] [2 2 ...] Oil level is low for compressors 1 and 2.  
 [oL] [0 2 ...] Oil level is low for compressor 2 and normal for compressors 1.


└── Judgment result for compressor 2  
 └── Judgment result for compressor 1

## 8-8. SMMS-u Outdoor Interface P.C. Board Function Setting Change Table

### 1. Switch/Function Setting Change

SW No.		Change contents	
SW100	DIP SW 2 bit	bit1	Uh communication termination resistance for central control OFF: No termination resistance    ON: With termination resistance
		bit2	Uv communication termination resistance between indoor and outdoor units OFF: No termination resistance    ON: With termination resistance
SW101	DIP SW 4 bit	bit1	Setup of header outdoor unit OFF: Follower outdoor unit    ON: Header outdoor unit
		bit2	* Used by combining with SW102 (4 bit)
		bit3	
		bit4	
SW102	DIP SW 4 bit	bit1	* Used by combining with SW101 (3 bit)
		bit2	
		bit3	
		bit4	
SW103	DIP SW 4 bit	bit1	Compressor 1 backup OFF: Normal    ON: Compressor 1 Backup when compressor 1 was in trouble
		bit2	Compressor 2 backup OFF: Normal    ON: Compressor 2 Backup when compressor 2 was in trouble
		* All bit1 and 2 are ON : Setup of outdoor unit backup	
		■ In case of header outdoor unit	
		Bit3	Trouble judgment for over-capacity of indoor unit connection OFF: Trouble judgement (Normal) ON: None (When outdoor unit backup set)
bit4	Trouble judgment for No. of connected indoor units OFF: None    ON: Trouble judgement		
SW104	DIP SW 4 bit	bit1	
		bit2	
		bit3	
		bit4	
SW105	DIP SW 4 bit	bit1	Corresponds to 2-core wire OFF: Normal (3-core wire <Successive MAKE signal> or 4-core wire <Pulse signal>) ON: 2-core wire <Successive MAKE signal : Use only ON input terminal>
		bit2	Demand control (Expansion change) OFF: Normal demand (1 type)    ON: Intermediate demand (3 types)
		bit3	
		bit4	
SW106	DIP SW 4 bit	bit1	Change of EEPROM data backup function OFF: Normal    ON: No data backup
		bit2	Communication setup reset OFF: Normal    ON: Reset of communication setup and communication termination resistance between indoor units

**Interface Board Switches and jumper wire positions to be used in the Function setup switching table**

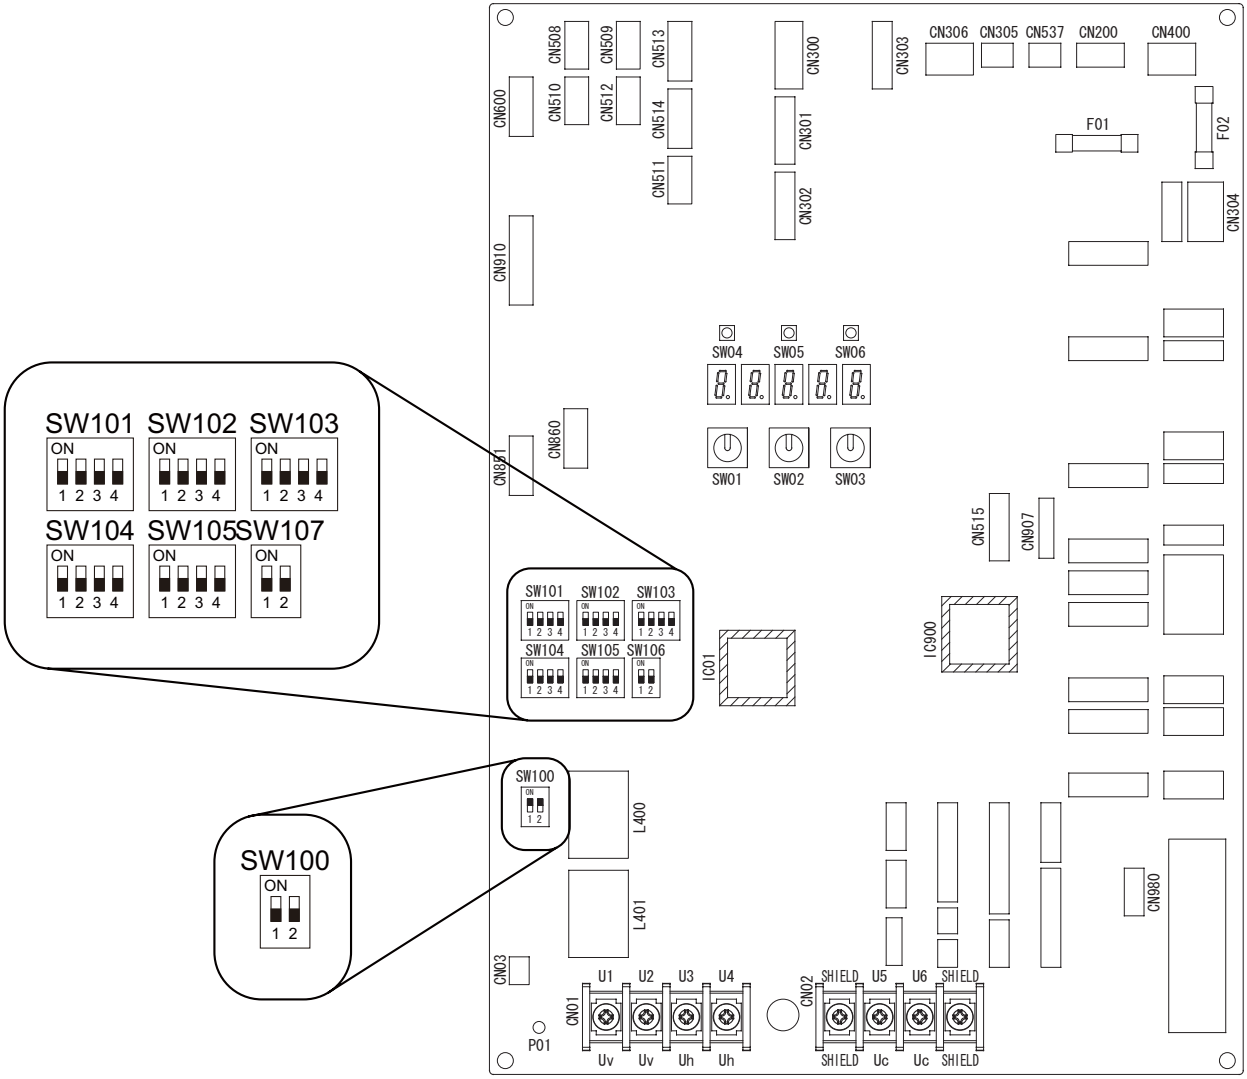

## 8-9. Leakage/Clogging of Refrigerating Cycle Circuit

### List of Check Codes Generated upon Occurrence of Leakage/Clogging in Outdoor Cycle or Oil Circuit Part

(MMY-MUP0801\*, 1001\*, 1201\*, 1401\*)

#### Clogging


Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code	Symptom
Outdoor PMV1, 2	A	Corresponding unit	Activation of high-pressure protection Activation of low-pressure protection Discharge temp. trouble (TD1)	P20 H06 P03 Rise of pressure Fall of pressure Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Discharge temp. trouble (TD1)	P03 Rise of discharge temp. (Compressor 1)
Check valve in discharge pipe convergent section	C	Corresponding unit	High-pressure protection trouble High-pressure SW system trouble	P20 P04-01 Abnormal rise of pressure
Oil-equalization circuit Capillary or Strainer	E	Corresponding unit	Oil level detection circuit trouble Oil level low detection and protection	H16-01 H07 Oil circuit trouble or Oil level low
SV3D valve	F	Corresponding unit	Oil level low detection and protection	H07 Oil level low
SV3D valve circuit Capillary or Strainer	G	Corresponding unit	Oil level low detection and protection	H07 Oil level low
SV3F valve or SV3F valve circuit Strainer	H	Corresponding unit	Oil level low detection and protection	H07 Oil level low
SV41 valve	I	Corresponding unit	High-pressure protection trouble	P20 Rise of pressure
Inverter heat sink	J	Corresponding unit	Heat sink overheating trouble	P07-01 Rise of IPM (TH) temp. (Compressor 1)

#### Leakage

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code	Symptom
Outdoor PMV1, 2	A	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07 Refrigerant entrapment
		Other connected unit	Discharge temp. trouble (TD1)	P03 Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07 Oil level low
Check valve in discharge pipe convergent section	C	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-01 H02-01 Refrigerant entrapment
SV41 valve	I	Corresponding unit	Discharge temp. trouble (TD1)	P03 Rise of discharge temp. (Compressor 1)
4-way valve	K	Corresponding unit	4-way valve reversing trouble Gas leak detection	P19 P15 Incorrect internal position of 4-way valve



**Outdoor Unit (8, 10, 12, 14HP)**  
**Model: MMY-MUP0801\*, 1001\*, 1201\*, 1401\***

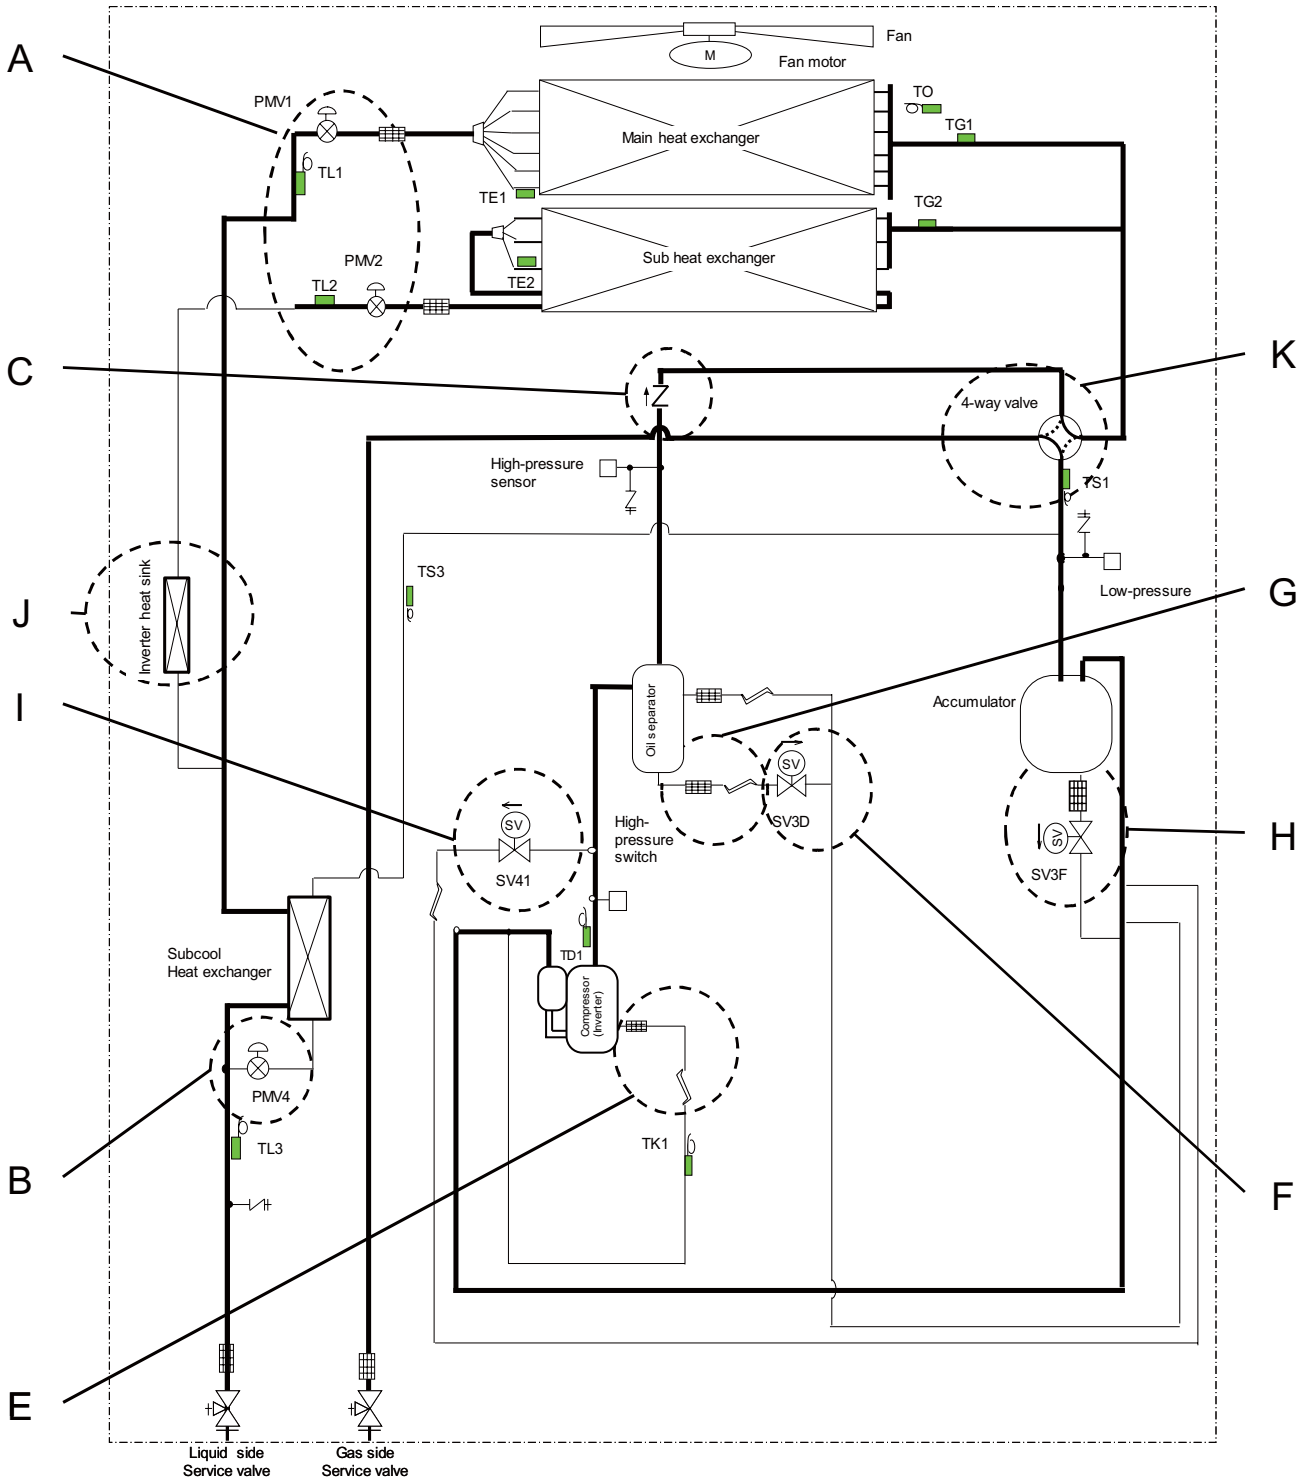

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

**List of Check Codes Generated upon Occurrence of Leakage/Clogging in Outdoor Cycle or Oil Circuit Part  
(MMY-MUP1601\*, 1801\*, 2001\*)**


**Clogging**

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code	Symptom
Outdoor PMV1, 2, 3	A	Corresponding unit	Activation of high-pressure protection Activation of low-pressure protection Discharge temp. trouble (TD1)	P20 H06 P03 Rise of pressure Fall of pressure Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Discharge temp. trouble (TD1)	P03 Rise of discharge temp. (Compressor 1)
Check valve in discharge pipe convergent section	C	Corresponding unit	High-pressure protection trouble High-pressure SW system trouble	P20 P04-01 Abnormal rise of pressure
Oil-equalization circuit Capillary or Strainer	E	Corresponding unit	Oil level detection circuit trouble Oil level low detection and protection	H16-01 H07 Oil circuit trouble or Oil level low
SV3D valve	F	Corresponding unit	Oil level low detection and protection	H07 Oil level low
SV3D valve circuit Capillary or Strainer	G	Corresponding unit	Oil level low detection and protection	H07 Oil level low
SV3F valve or SV3F valve circuit Strainer	H	Corresponding unit	Oil level low detection and protection	H07 Oil level low
SV41 valve	I	Corresponding unit	High-pressure protection trouble	P20 Rise of pressure
Inverter heat sink	J	Corresponding unit	Heat sink overheating trouble	P07-01 Rise of IPM (TH) temp. (Compressor 1)

**Leakage**

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code	Symptom
Outdoor PMV1, 2	A	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07 Refrigerant entrapment
		Other connected unit	Discharge temp. trouble (TD1)	P03 Rise of discharge temp. (Compressor 1)
Outdoor PMV4	B	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07 Oil level low
Check valve in discharge pipe convergent section	C	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-01 H02-01 Refrigerant entrapment
SV41 valve	I	Corresponding unit	Discharge temp. trouble (TD1)	P03 Rise of discharge temp. (Compressor 1)
4-way valve	K	Corresponding unit	4-way valve reversing trouble Gas leak detection	P19 P15 Incorrect internal position of 4-way valve

**Outdoor Unit (16, 18, 20HP)**  
**Model: MMY-MUP1601\*, 1801\*, 2001\***

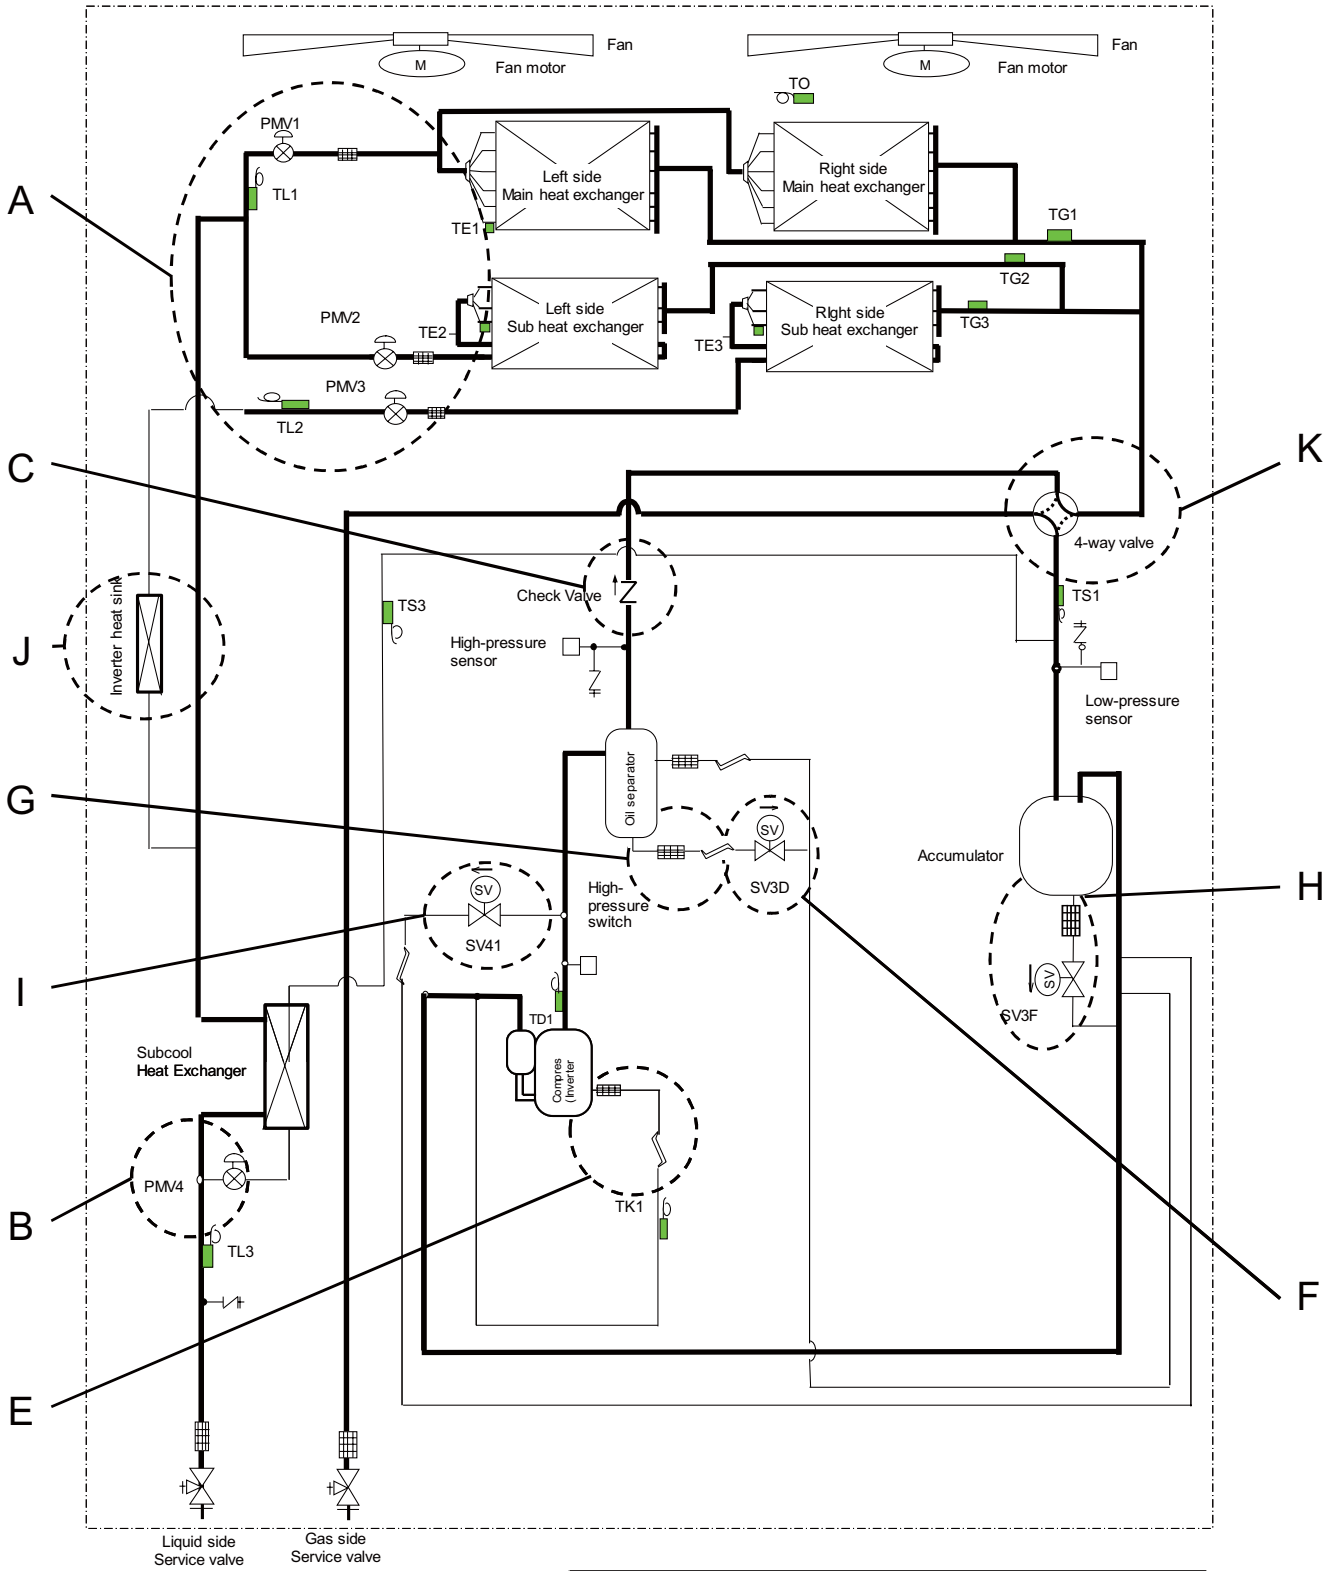

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

**List of Check Codes Generated upon Occurrence of Leakage/Clogging in Outdoor Cycle or Oil Circuit Part  
(MMY-MUP2201\*, 2401\*)**


**Clogging**

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2, 3	A	Corresponding unit	Activation of high-pressure protection Activation of low-pressure protection Discharge temp. trouble (TD1)	P20 H06 P03	Rise of pressure Fall of pressure Rise of discharge temp. (Compressor 1) Rise of discharge temp. (Compressor 2)
			Discharge temp. trouble (TD2)	P17	
Outdoor PMV4	B	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
			Discharge temp. trouble (TD2)	P17	Rise of discharge temp. (Compressor 2)
Check valve in discharge pipe convergent section	C	Corresponding unit	High-pressure protection trouble High-pressure SW system trouble	P20 P04-XX	Abnormal rise of pressure
Check valve in discharge pipe	D	Corresponding unit	High-pressure SW system trouble	P04-XX	Abnormal rise of pressure
Oil-equalization circuit Capillary or Strainer	E	Corresponding unit	Oil level detection circuit trouble Oil level low detection and protection	H16-XX H07	Oil circuit trouble or Oil level low
SV3D valve or SV3F valve circuit Strainer	F	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3D valve circuit Capillary or Strainer	G	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV3F valve or SV3F valve circuit Strainer	H	Corresponding unit	Oil level low detection and protection	H07	Oil level low
SV41, 42 valve	I	Corresponding unit	High-pressure protection trouble	P20	Rise of pressure
Inverter heat sink	J	Corresponding unit	Heat sink overheating trouble	P07-XX	Rise of IPM (TH) temp.

**Leakage**

Part	Location of Problem (Refer to next page)	Unit generating check code	Detected problem and check code		Symptom
Outdoor PMV1, 2	A	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Refrigerant entrapment
		Other connected unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
			Discharge temp. trouble (TD2)	P17	Rise of discharge temp. (Compressor 2)
Outdoor PMV4	B	Corresponding unit	Outdoor liquid backflow trouble Oil level low detection and protection	P13 H07	Oil level low
Check valve in discharge pipe convergent section	C	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-XX H02-XX	Refrigerant entrapment
Check valve in discharge pipe	D	Corresponding unit	Oil level low detection and protection Compressor breakdown Compressor trouble (lockup)	H07 H01-XX H02-XX	Refrigerant entrapment
SV41, 42 valve	I	Corresponding unit	Discharge temp. trouble (TD1)	P03	Rise of discharge temp. (Compressor 1)
			Discharge temp. trouble (TD2)	P17	Rise of discharge temp. (Compressor 2)
4-way valve	K	Corresponding unit	4-way valve reversing trouble Gas leak detection	P19 P15	Incorrect internal position of 4-way valve

**Outdoor Unit (22, 24HP)**  
**Model: MMY-MUP2201\*, 2401\***

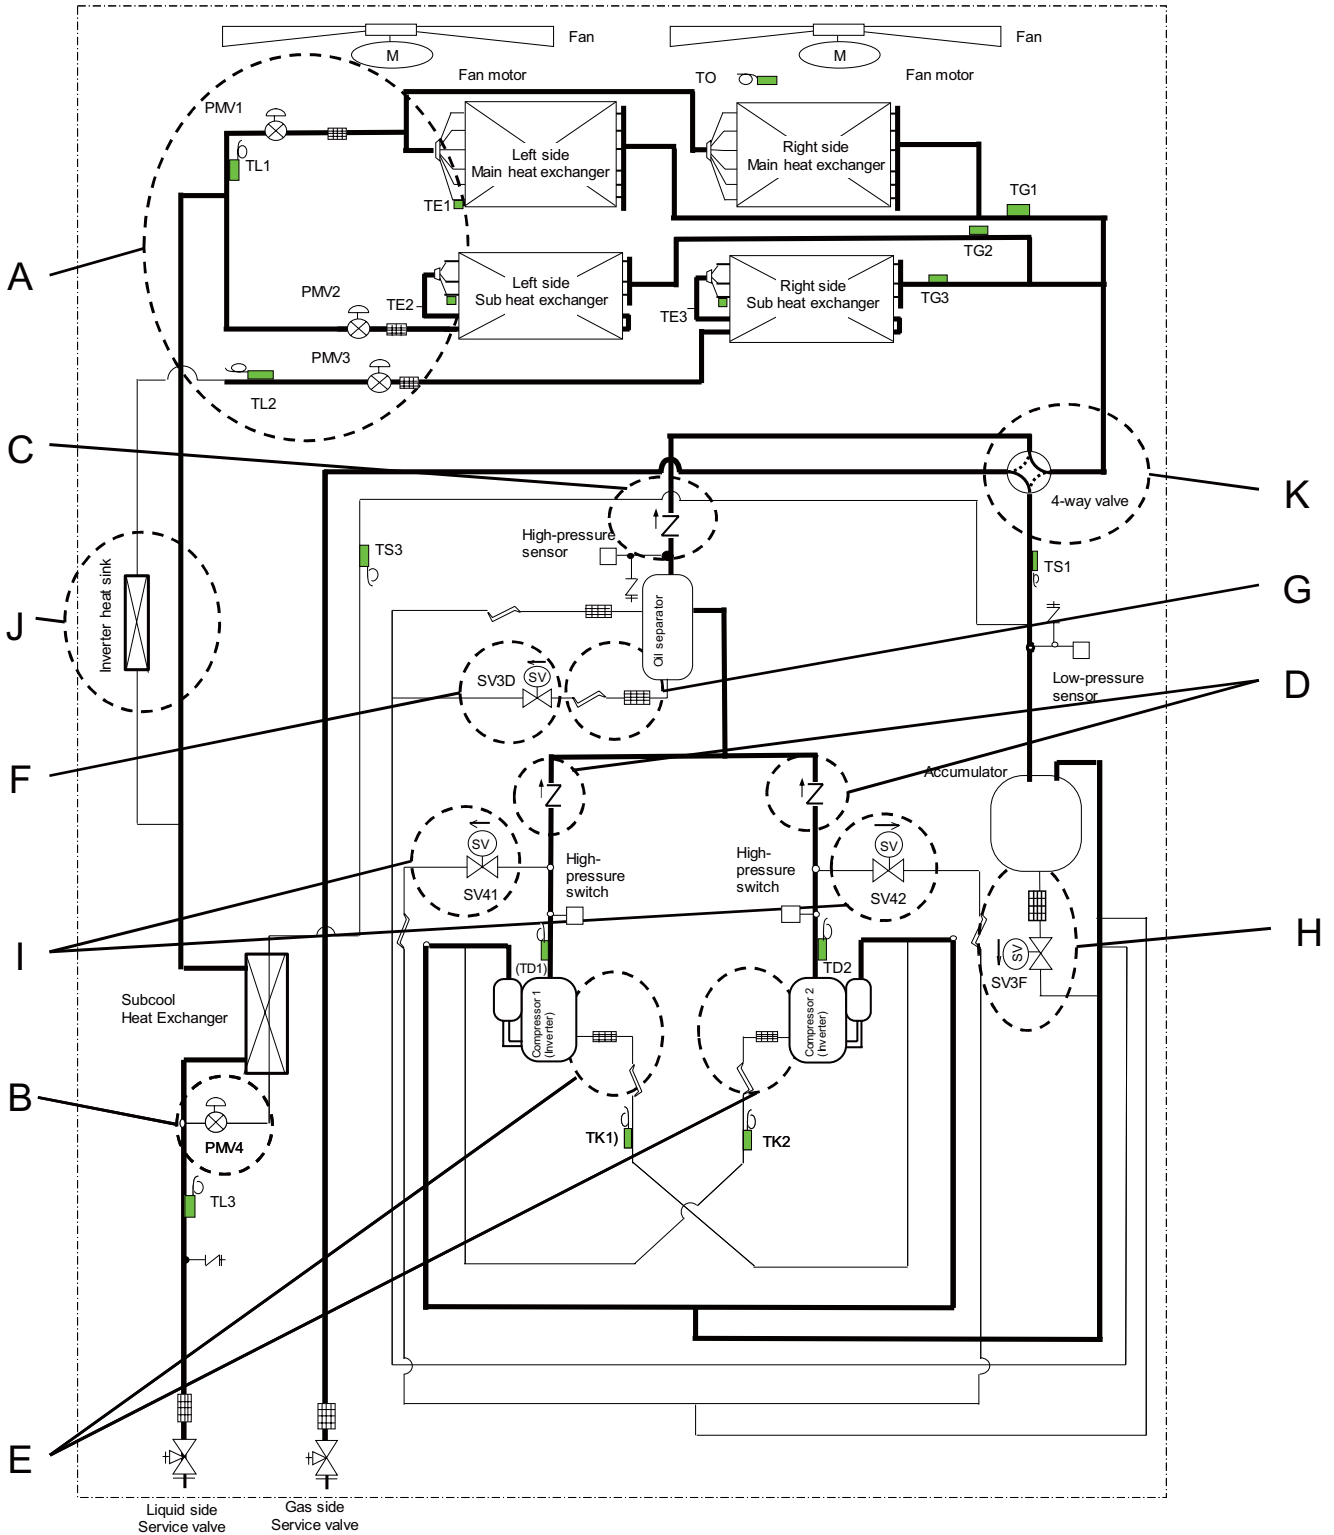


Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

## 8-10. Sensor Characteristics

### Outdoor Unit


#### ▼ Temperature sensor characteristics

Outdoor TS1, TS3, TE1, TE2, TE3, TL1, TL2, TL3 and TO sensors

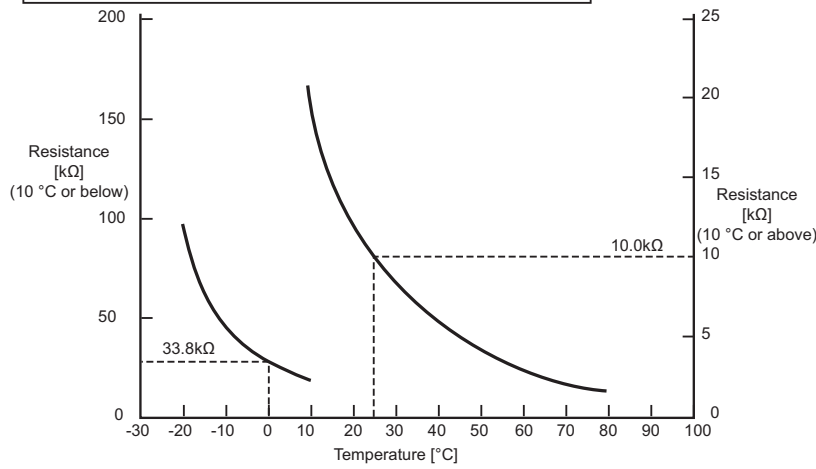


Temperature [°C]	Resistance [kΩ]
-20	101.7
-15	76.3
-10	57.7
-5	44.0
0	33.8
5	26.1
10	20.4
15	16.0
20	13.0
25	10.0
30	8.0
35	6.4
40	5.2
45	4.2
50	3.5
55	2.8
60	2.3
65	1.9
70	1.6
75	1.4
80	1.1

Outdoor TD1, TD2, TK1 and TK2 sensors

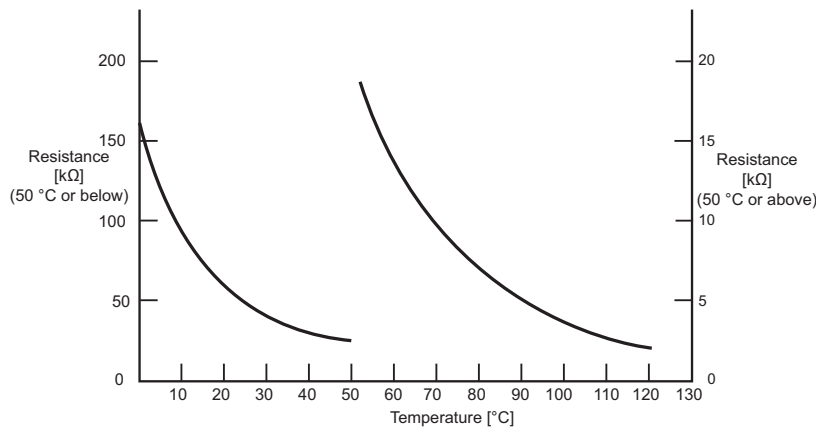

Temperature [°C]	Resistance [kΩ]
0	162.2
5	125.8
10	98.3
15	77.5
20	61.5
25	49.1
30	39.5
35	32.0
40	26.1
45	21.4
50	17.6
55	14.6
60	12.1
65	10.2
70	8.5
75	7.2
80	6.1
85	5.2
90	4.5
95	3.8
100	3.3
105	2.9
110	2.5
115	2.2
120	1.9

Outdoor TG1, TG2 and TG3 sensors

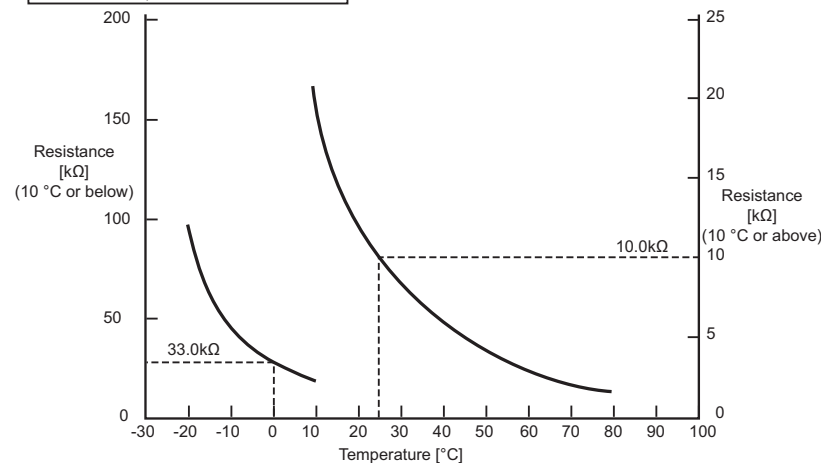

Temperature [°C]	Resistance [kΩ]
-20	98.9
-15	74.1
-10	56.1
-5	42.8
0	33.0
5	25.6
10	20.0
15	15.8
20	12.5
25	10.0
30	8.0
35	6.5
40	5.3
45	4.4
50	3.6
55	3.0
60	2.5
65	2.1
70	1.7
75	1.5
80	1.3

## Outdoor Unit



### ▼ Pressure sensor characteristics

- Input/output wiring summary

Pin No.	High pressure side (PD)		Low pressure side (PS)	
	Input/output name	Lead wire color	Input/output name	Lead wire color
1	OUTPUT	White	—	—
2	—	—	OUTPUT	White
3	GND	Black	GND	Black
4	+5V	Red	+5V	Red

- Output voltage vs. pressure


High pressure side (PD)	Low pressure side (PS)
0.5~4.5V 0~3.92MPa	0.5~4.5V 0~2.0MPa

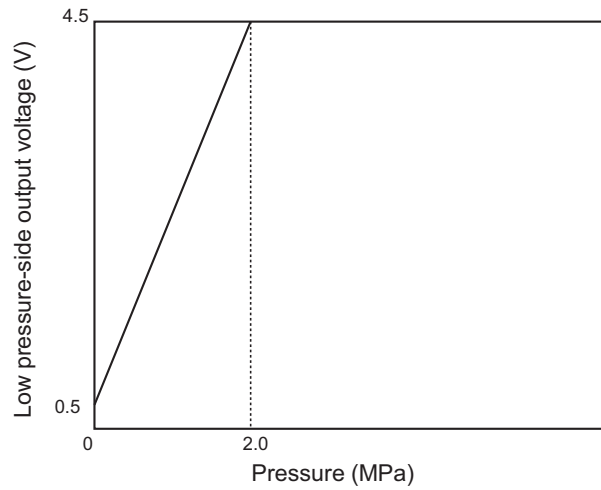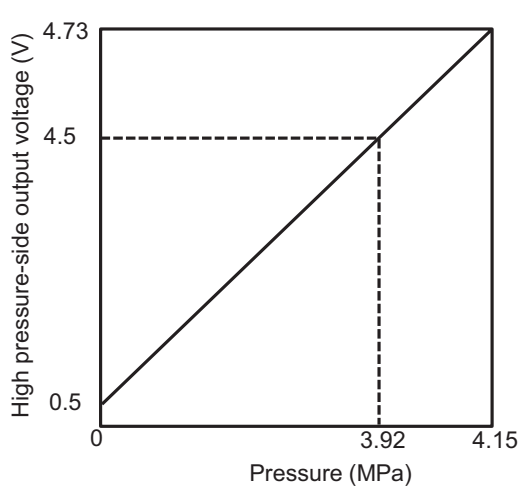

## Indoor Unit


### ▼ Temperature sensor characteristics

Indoor TA(TSA), TRA,TF(TFA) sensor

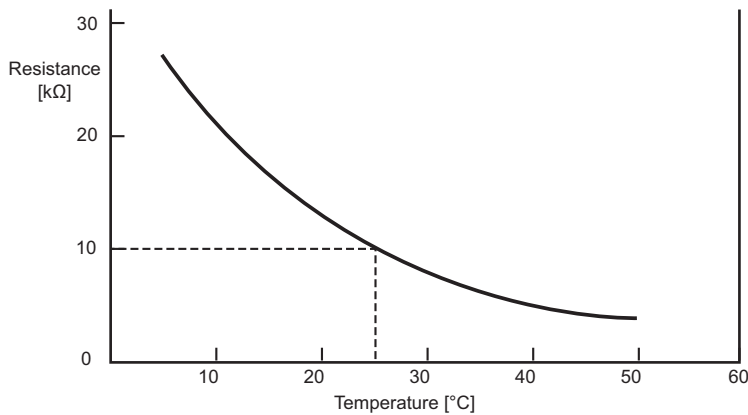


Temperature [°C]	Resistance [kΩ]
0	33.8
5	26.1
10	20.4
15	16.0
20	12.6
25	10.0
30	8.0
35	6.4
40	5.2
45	4.2
50	3.5
55	2.8
60	2.3

Indoor TC1 sensor

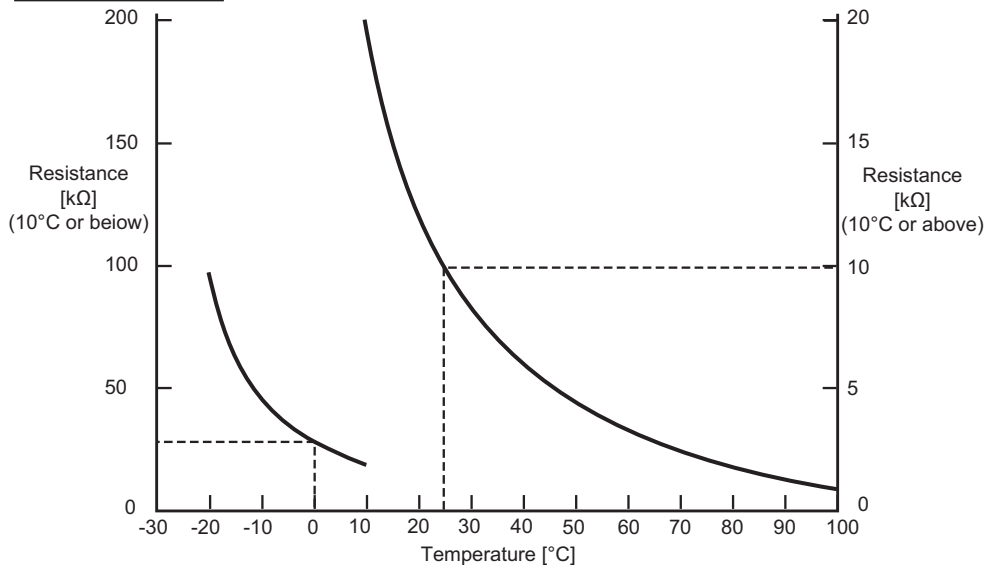

Temperature [°C]	Resistance [kΩ]
-20	98.3
-15	73.7
-10	55.8
-5	42.6
0	32.8
5	25.5
10	20.0
15	15.7
20	12.5
25	10.0
30	8.1
35	6.5
40	5.3
45	4.4
50	3.6
55	3.0
60	2.5
65	2.1
70	1.7
75	1.5
80	1.2
85	1.1
90	0.9
95	0.8
100	0.7

Indoor TC2 and TCJ, TOA sensor

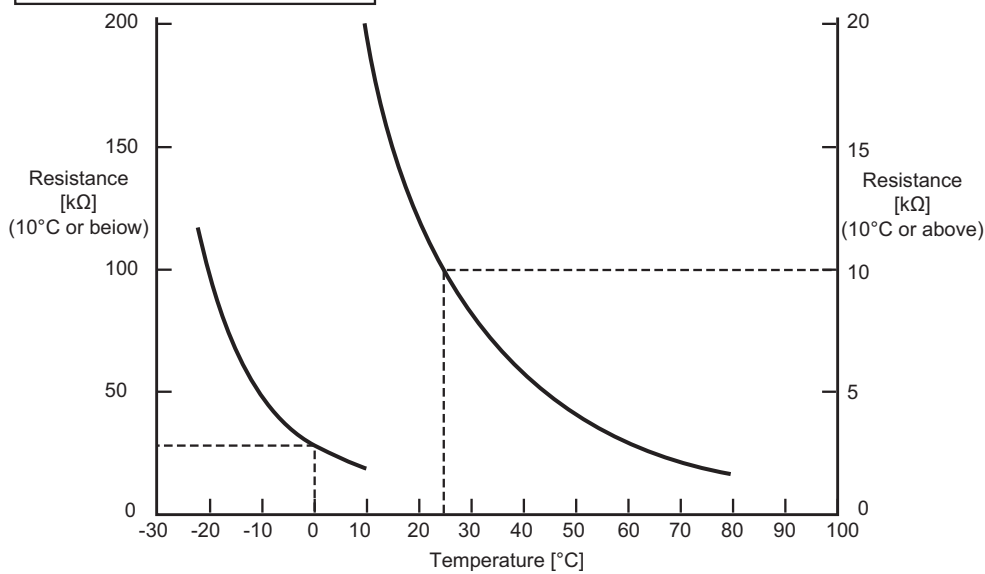

Temperature [°C]	Resistance [kΩ]
-20	102.9
-15	76.6
-10	57.7
-5	44.0
0	38.8
5	26.1
10	20.4
15	16.0
20	12.6
25	10.0
30	8.0
35	6.4
40	5.2
45	4.2
50	3.5
55	2.8
60	2.3
65	1.9
70	1.6
75	1.4
80	1.2



## 8-11. Pressure Sensor Output Check

### Outdoor Unit

#### ▼ Pd sensor characteristics

0 to 4.15 MPa (0.5 to 4.73V output for 0 to 4.15 MPa)

Voltage readings across pins 2 and 3 of CN501 on indoor unit main P.C. board (with negative-side probe of multimeter placed on pin 3)

VOLT	Pd (MPa)	Pd (kg/cm <sup>2</sup> )	VOLT	Pd (MPa)	Pd (kg/cm <sup>2</sup> )	VOLT	Pd (MPa)	Pd (kg/cm <sup>2</sup> )	VOLT	Pd (MPa)	Pd (kg/cm <sup>2</sup> )	VOLT	Pd (MPa)	Pd (kg/cm <sup>2</sup> )
0.00	0.00	0.0	1.00	0.49	5.0	1.99	1.46	14.9	2.99	2.44	24.9	3.98	3.42	34.8
0.02	0.00	0.0	1.02	0.51	5.2	2.01	1.48	15.1	3.01	2.46	25.1	4.00	3.44	35.0
0.04	0.00	0.0	1.04	0.53	5.4	2.03	1.50	15.3	3.03	2.48	25.3	4.02	3.45	35.2
0.06	0.00	0.0	1.06	0.54	5.5	2.05	1.52	15.5	3.05	2.50	25.5	4.04	3.48	35.4
0.08	0.00	0.0	1.07	0.56	5.7	2.07	1.54	15.7	3.07	2.52	25.7	4.06	3.49	35.6
0.10	0.00	0.0	1.09	0.58	5.9	2.09	1.56	15.9	3.09	2.54	25.9	4.08	3.51	35.8
0.12	0.00	0.0	1.11	0.60	6.1	2.11	1.58	16.1	3.11	2.56	26.1	4.10	3.53	36.0
0.14	0.00	0.0	1.13	0.62	6.3	2.13	1.60	16.3	3.13	2.57	26.3	4.12	3.55	36.2
0.16	0.00	0.0	1.15	0.64	6.5	2.15	1.62	16.5	3.15	2.59	26.4	4.14	3.57	36.4
0.18	0.00	0.0	1.17	0.66	6.7	2.17	1.64	16.7	3.16	2.61	26.6	4.16	3.59	36.6
0.20	0.00	0.0	1.19	0.68	6.9	2.19	1.66	16.9	3.18	2.63	26.8	4.18	3.61	36.8
0.22	0.00	0.0	1.21	0.70	7.1	2.21	1.67	17.1	3.20	2.65	27.0	4.20	3.63	37.0
0.23	0.00	0.0	1.23	0.72	7.3	2.23	1.69	17.3	3.22	2.67	27.2	4.22	3.65	37.2
0.25	0.00	0.0	1.25	0.74	7.5	2.25	1.71	17.5	3.24	2.69	27.4	4.24	3.67	37.4
0.27	0.00	0.0	1.27	0.76	7.7	2.27	1.73	17.7	3.26	2.71	27.6	4.26	3.69	37.6
0.29	0.00	0.0	1.29	0.77	7.9	2.29	1.75	17.9	3.28	2.73	27.8	4.28	3.70	37.8
0.31	0.00	0.0	1.31	0.79	8.1	2.31	1.77	18.0	3.30	2.75	28.0	4.30	3.72	38.0
0.33	0.00	0.0	1.33	0.81	8.3	2.32	1.79	18.2	3.32	2.77	28.2	4.32	3.74	38.2
0.35	0.00	0.0	1.35	0.83	8.5	2.34	1.81	18.4	3.34	2.79	28.4	4.34	3.76	38.4
0.37	0.00	0.0	1.37	0.85	8.7	2.36	1.83	18.6	3.36	2.80	28.6	4.36	3.78	38.6
0.39	0.00	0.0	1.39	0.87	8.9	2.38	1.85	18.8	3.38	2.82	28.8	4.38	3.80	38.8
0.41	0.00	0.0	1.41	0.89	9.1	2.40	1.87	19.0	3.40	2.84	29.0	4.40	3.82	38.9
0.43	0.00	0.0	1.43	0.91	9.3	2.42	1.89	19.2	3.42	2.86	29.2	4.41	3.84	39.1
0.45	0.00	0.0	1.45	0.93	9.5	2.44	1.90	19.4	3.44	2.88	29.4	4.43	3.86	39.3
0.47	0.00	0.0	1.47	0.95	9.6	2.46	1.92	19.6	3.46	2.90	29.6	4.45	3.88	39.5
0.49	0.00	0.0	1.48	0.97	9.8	2.48	1.94	19.8	3.48	2.92	29.8	4.47	3.90	39.7
0.51	0.01	0.1	1.50	0.99	10.0	2.50	1.96	20.0	3.50	2.94	30.0	4.49	3.92	39.9
0.53	0.03	0.3	1.52	1.00	10.2	2.52	1.98	20.2	3.52	2.96	30.2	4.51	3.93	40.1
0.55	0.05	0.5	1.54	1.02	10.4	2.54	2.00	20.4	3.54	2.98	30.4	4.53	3.95	40.3
0.57	0.07	0.7	1.56	1.04	10.6	2.56	2.02	20.6	3.56	3.00	30.5	4.55	3.97	40.5
0.59	0.08	0.9	1.58	1.06	10.8	2.58	2.04	20.8	3.57	3.02	30.7	4.57	3.99	40.7
0.61	0.10	1.1	1.60	1.08	11.0	2.60	2.06	21.0	3.59	3.03	30.9	4.59	4.01	40.9
0.63	0.12	1.3	1.62	1.10	11.2	2.62	2.08	21.2	3.61	3.05	31.1	4.61	4.03	41.1
0.65	0.14	1.4	1.64	1.12	11.4	2.64	2.10	21.4	3.63	3.07	31.3	4.63	4.05	41.3
0.66	0.16	1.6	1.66	1.14	11.6	2.66	2.12	21.6	3.65	3.09	31.5	4.65	4.07	41.5
0.68	0.18	1.8	1.68	1.16	11.8	2.68	2.13	21.8	3.67	3.11	31.7	4.67	4.09	41.7
0.70	0.20	2.0	1.70	1.18	12.0	2.70	2.15	22.0	3.69	3.13	31.9	4.69	4.11	41.9
0.72	0.22	2.2	1.72	1.20	12.2	2.72	2.17	22.2	3.71	3.15	32.1	4.71	4.13	42.1
0.74	0.24	2.4	1.74	1.21	12.4	2.73	2.19	22.3	3.73	3.17	32.3	4.73	4.15	42.3
0.76	0.26	2.6	1.76	1.23	12.6	2.75	2.21	22.5	3.75	3.19	32.5			
0.78	0.28	2.8	1.78	1.25	12.8	2.77	2.23	22.7	3.77	3.21	32.7			
0.80	0.30	3.0	1.80	1.27	13.0	2.79	2.25	22.9	3.79	3.23	32.9			
0.82	0.31	3.2	1.82	1.29	13.2	2.81	2.27	23.1	3.81	3.25	33.1			
0.84	0.33	3.4	1.84	1.31	13.4	2.83	2.29	23.3	3.83	3.26	33.3			
0.86	0.35	3.6	1.86	1.33	13.6	2.85	2.31	23.5	3.85	3.28	33.5			
0.88	0.37	3.8	1.88	1.35	13.8	2.87	2.33	23.7	3.89	3.30	33.7			
0.90	0.39	4.0	1.90	1.37	13.9	2.89	2.35	23.9	3.89	3.32	33.9			
0.92	0.41	4.2	1.91	1.39	14.1	2.91	2.36	24.1	3.91	3.34	34.1			
0.94	0.43	4.4	1.93	1.41	14.3	2.93	2.38	24.3	3.93	3.36	34.3			
0.96	0.45	4.6	1.95	1.43	14.5	2.95	2.40	24.5	3.95	3.38	34.5			
0.98	0.47	4.8	1.97	1.44	14.7	2.97	2.42	24.7	3.97	3.40	34.7			

## Outdoor Unit

### ▼ PS sensor characteristics

0 to 2.0 MPa (0.5 to 5V output for 0 to 2.24 MPa)

Voltage readings across pins 2 and 3 of CN500 on indoor unit main P.C. board (with negative-side probe of multimeter placed on pin 3)

VOLT	PS (MPa)	PS (kg/cm <sup>2</sup> )	VOLT	PS (MPa)	PS (kg/cm <sup>2</sup> )	VOLT	PS (MPa)	PS (kg/cm <sup>2</sup> )	VOLT	PS (MPa)	PS (kg/cm <sup>2</sup> )	VOLT	PS (MPa)	PS (kg/cm <sup>2</sup> )
0.01	0.00	0.0	1.00	0.25	2.6	2.00	0.75	7.7	3.00	1.25	12.7	4.00	1.75	17.8
0.03	0.00	0.0	1.02	0.26	2.7	2.02	0.76	7.8	3.02	1.26	12.8	4.01	1.76	17.9
0.05	0.00	0.0	1.04	0.27	2.8	2.04	0.77	7.9	3.04	1.27	12.9	4.03	1.77	18.0
0.07	0.00	0.0	1.06	0.28	2.9	2.06	0.78	8.0	3.05	1.28	13.0	4.05	1.78	18.1
0.09	0.00	0.0	1.08	0.29	3.0	2.08	0.79	8.1	3.07	1.29	13.1	4.07	1.79	18.2
0.11	0.00	0.0	1.10	0.30	3.1	2.10	0.80	8.2	3.09	1.30	13.2	4.09	1.80	18.3
0.13	0.00	0.0	1.12	0.31	3.2	2.12	0.81	8.3	3.11	1.31	13.3	4.11	1.81	18.4
0.14	0.00	0.0	1.14	0.32	3.3	2.14	0.82	8.4	3.13	1.32	13.4	4.13	1.82	18.5
0.16	0.00	0.0	1.16	0.33	3.4	2.16	0.83	8.5	3.15	1.33	13.5	4.15	1.82	18.6
0.18	0.00	0.0	1.18	0.34	3.5	2.18	0.84	8.6	3.17	1.34	13.6	4.17	1.83	18.7
0.20	0.00	0.0	1.20	0.35	3.6	2.20	0.85	8.7	3.19	1.35	13.7	4.19	1.84	18.8
0.22	0.00	0.0	1.22	0.36	3.7	2.21	0.86	8.8	3.21	1.36	13.8	4.21	1.85	18.9
0.24	0.00	0.0	1.24	0.37	3.8	2.23	0.87	8.9	3.23	1.37	13.9	4.23	1.86	19.0
0.26	0.00	0.0	1.26	0.38	3.9	2.25	0.88	9.0	3.25	1.38	14.0	4.25	1.87	19.1
0.28	0.00	0.0	1.28	0.39	4.0	2.27	0.89	9.1	3.27	1.39	14.1	4.27	1.88	19.2
0.30	0.00	0.0	1.30	0.40	4.1	2.29	0.90	9.2	3.29	1.40	14.2	4.29	1.89	19.3
0.32	0.00	0.0	1.32	0.41	4.2	2.31	0.91	9.3	3.31	1.41	14.3	4.30	1.90	19.4
0.34	0.00	0.0	1.34	0.42	4.3	2.33	0.92	9.4	3.33	1.42	14.4	4.32	1.91	19.5
0.36	0.00	0.0	1.36	0.43	4.4	2.35	0.93	9.5	3.35	1.42	14.5	4.34	1.92	19.6
0.38	0.00	0.0	1.38	0.44	4.5	2.37	0.94	9.6	3.37	1.43	14.6	4.36	1.93	19.7
0.40	0.00	0.0	1.39	0.45	4.6	2.39	0.95	9.7	3.39	1.44	14.7	4.38	1.94	19.8
0.42	0.00	0.0	1.41	0.46	4.7	2.41	0.96	9.8	3.41	1.45	14.8	4.40	1.95	19.9
0.44	0.00	0.0	1.43	0.47	4.8	2.43	0.97	9.9	3.43	1.46	14.9	4.42	1.96	20.0
0.46	0.00	0.0	1.45	0.48	4.9	2.45	0.98	10.0	3.45	1.47	15.0	4.44	1.97	20.1
0.48	0.00	0.0	1.47	0.49	5.0	2.47	0.99	10.1	3.46	1.48	15.1	4.46	1.98	20.2
0.50	0.00	0.0	1.49	0.50	5.1	2.49	1.00	10.2	3.48	1.49	15.2	4.48	1.99	20.3
0.52	0.01	0.1	1.51	0.51	5.2	2.51	1.01	10.3	3.50	1.50	15.3	4.50	2.00	20.4
0.54	0.02	0.2	1.53	0.52	5.3	2.53	1.02	10.4	3.52	1.51	15.4	4.52	2.01	20.5
0.55	0.03	0.3	1.55	0.53	5.4	2.55	1.02	10.5	3.54	1.52	15.5	4.54	2.02	20.6
0.57	0.04	0.4	1.57	0.54	5.5	2.57	1.03	10.6	3.56	1.53	15.6	4.56	2.03	20.7
0.59	0.05	0.5	1.59	0.55	5.6	2.59	1.04	10.7	3.58	1.54	15.7	4.58	2.04	20.8
0.61	0.06	0.6	1.61	0.56	5.7	2.61	1.05	10.8	3.60	1.55	15.8	4.60	2.05	20.9
0.63	0.07	0.7	1.63	0.57	5.8	2.63	1.06	10.9	3.62	1.56	15.9	4.62	2.06	21.0
0.65	0.08	0.8	1.65	0.58	5.9	2.64	1.07	11.0	3.64	1.57	16.0	4.64	2.07	21.1
0.67	0.09	0.9	1.67	0.59	6.0	2.66	1.08	11.1	3.66	1.58	16.1	4.66	2.08	21.2
0.69	0.10	1.0	1.69	0.60	6.1	2.68	1.09	11.2	3.68	1.59	16.2	4.68	2.09	21.3
0.71	0.11	1.1	1.71	0.61	6.2	2.70	1.10	11.2	3.70	1.60	16.3	4.70	2.10	21.4
0.73	0.12	1.2	1.73	0.62	6.3	2.72	1.11	11.3	3.72	1.61	16.4	4.71	2.11	21.5
0.75	0.13	1.3	1.75	0.62	6.4	2.74	1.12	11.4	3.74	1.62	16.5	4.73	2.12	21.6
0.77	0.14	1.4	1.77	0.63	6.5	2.76	1.13	11.5	3.76	1.63	16.6	4.75	2.13	21.7
0.79	0.15	1.5	1.79	0.64	6.6	2.78	1.14	11.6	3.78	1.64	16.7	4.77	2.14	21.8
0.81	0.16	1.6	1.80	0.65	6.7	2.80	1.15	11.7	3.80	1.65	16.8	4.79	2.15	21.9
0.83	0.17	1.7	1.82	0.66	6.8	2.82	1.16	11.8	3.82	1.66	16.9	4.81	2.16	22.0
0.85	0.18	1.8	1.84	0.67	6.9	2.84	1.17	11.9	3.84	1.67	17.0	4.83	2.17	22.1
0.87	0.19	1.9	1.86	0.68	7.0	2.86	1.18	12.0	3.86	1.68	17.1	4.85	2.18	22.2
0.89	0.20	2.0	1.88	0.69	7.1	2.88	1.19	12.1	3.88	1.69	17.2	4.87	2.19	22.3
0.91	0.21	2.1	1.90	0.70	7.2	2.90	1.20	12.2	3.89	1.70	17.3	4.89	2.20	22.4
0.93	0.22	2.2	1.92	0.71	7.3	2.92	1.21	12.3	3.91	1.71	17.4	4.91	2.21	22.5
0.95	0.22	2.3	1.94	0.72	7.4	2.94	1.22	12.4	3.93	1.72	17.5	4.93	2.22	22.6
0.96	0.23	2.4	1.96	0.73	7.5	2.96	1.23	12.5	3.95	1.73	17.6	4.95	2.22	22.7
0.98	0.24	2.5	1.98	0.74	7.6	2.98	1.24	12.6	3.97	1.74	17.7	4.97	2.23	22.8
												4.99	2.24	22.9

# 9. BACKUP OPERATION (EMERGENCY OPERATION)

This product offers backup modes of operation to tide over certain emergency situations. If a trouble occurs in one of the compressors, it is possible to operate the system on an emergency basis by operating only the remaining compressor, (compressor backup operation).

If one of the outdoor units fails in a combined outdoor unit system, the system can be operated on an emergency basis by keeping only the remaining outdoor unit(s), (outdoor unit backup operation).

Perform backup operation setting in accordance with the procedure described below.

## 9-1. Note for Backup Operation

The method of backup operation differs according to the contents of trouble as shown in the table below.

Contents of trouble	Method of backup operation	Setting procedure
One of the compressors in the same unit fails (see Note 1)	Compressor backup (see Note 2)	Go to 9-2.
All the compressors in the same unit fail	Outdoor unit backup or cooling-season outdoor unit backup (see Notes 1, 3, 4 and 5)	Go to 9-3. or 9-4.
A trouble occurs in a compressor motor coil (e.g. a layer short-circuit)		
A trouble occurs in a refrigerating cycle part, fan or related part, or electrical part		
A trouble occurs in a temperature sensor or pressure sensor		

**Note 1:** If the compressor has failed due to a trouble in its motor coil (e.g. a layer short-circuit), do not perform compressor backup operation because of severe oil degradation. It could damage other outdoor units.

**Note 2:** Keep the number of backed-up outdoor units under compressor backup operation to one in the system (single refrigerant line).


**Note 3:** Keep the total backup outdoor units lower or equal than 50% of the outdoor units in one system refrigerant line.



**Note 4:** Count the outdoor unit that is having backup compressor operation as one operable outdoor unit. The backup operation is still possible to do as long as the total backup outdoor units lower or equal than 50% of total outdoor units.



**Note 5:** It is possible to do backup operation even the system is connected with different chassis size and different weight of outdoor units.

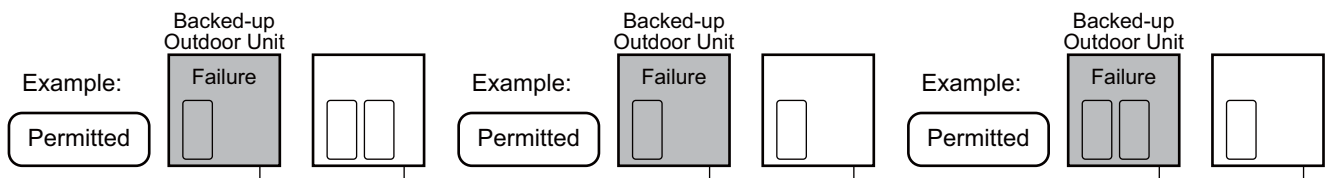

## 9-2. Compressor Backup Operation Setting


### <Outline>

If a failure occurs to one of the compressors installed in outdoor unit, follow the procedure described below to back up the failed compressor by using the remaining, normal compressor.

**Note:** The backup operation of compressor cannot be done for MMY-MUP0801\*, MMY-MUP1001\*, MMY-MUP1201\*, MMY-MUP1401\*, MMY-MUP1601\*, MMY-MUP1801\* and MMY-MUP2001\*, because only one compressor is installed in these models.

### <Work Procedure>

- (1) Turn off the power supply to all the outdoor units connected to the system.
- (2) Set the DIP switches of SW103, provided on the interface P.C. board of the outdoor unit with the failure compressor, as shown in the table below.

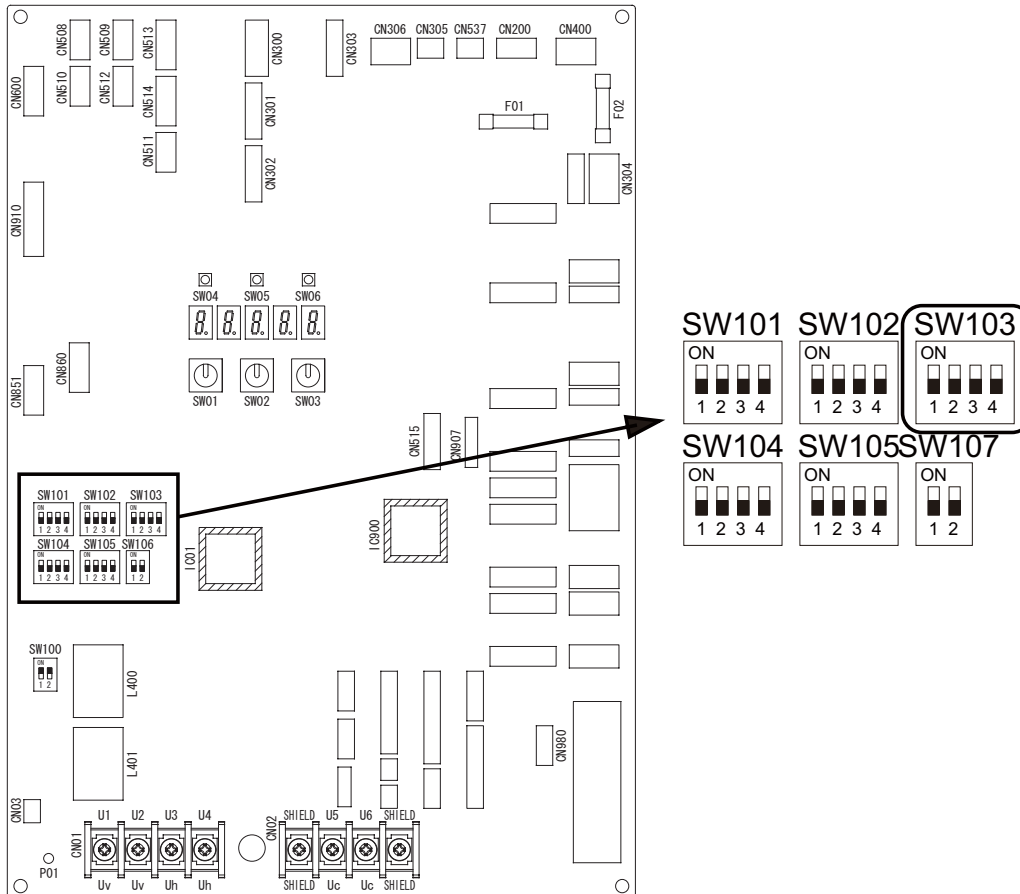

	SW103			
	Bit 1	Bit 2	Bit 3	Bit 4
Factory default setting	OFF	OFF	OFF	OFF
When compressor No.1 (front left) is failed	ON	OFF	OFF	OFF
When compressor No.2 (front right) is failed	OFF	ON	OFF	OFF


(3) Change the connection of wiring as shown in the below.

Outdoor Unit (22, 24HP)

Model: MMY-MUP2201", MUP2401"

1. When compressor No.1 is failure : No change the connection of wiring

2. When compressor No.2 is failure : Connection of wiring is changed as shown below.

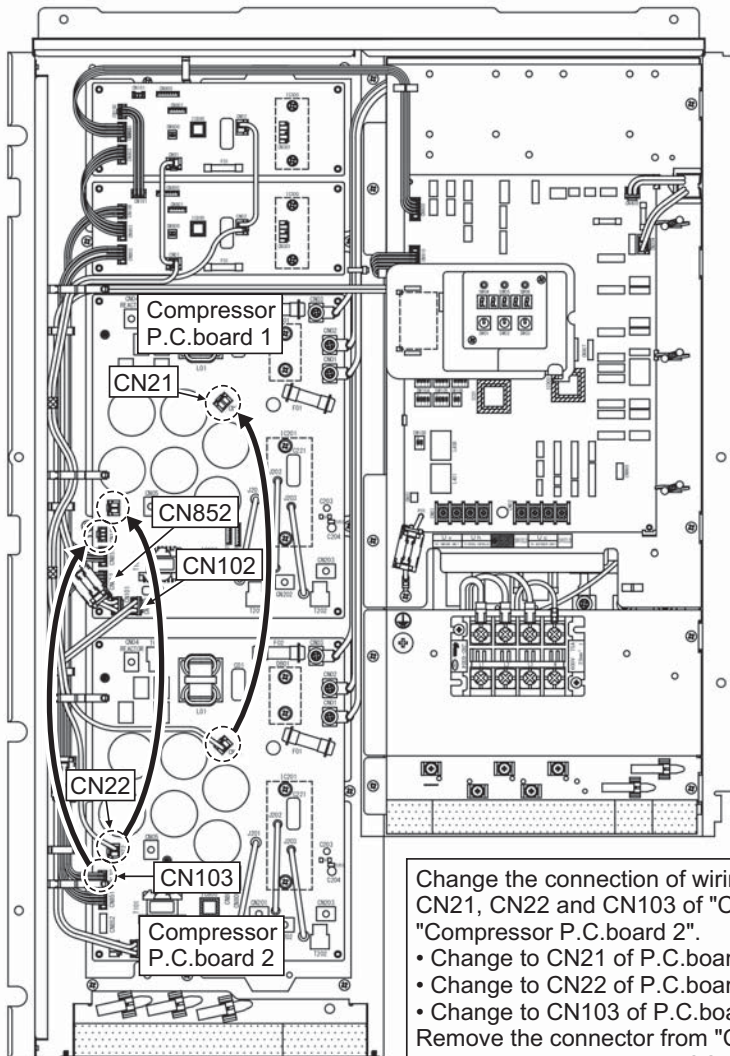

Change the connection of wiring which is connected to the CN21, CN22 and CN103 of "Compressor P.C.board 1" and "Compressor P.C.board 2".

- Change to CN21 of P.C.board 1 from CN21 of P.C.board 2.
- Change to CN22 of P.C.board 1 from CN22 of P.C.board 2.
- Change to CN103 of P.C.board 1 from CN103 of P.C.board 2.

Remove the connector from "Compressor P.C.board 1"

- Remove the connector of CN102
- Remove the connector of CN852

(4) Turn on the power supply to all the units connected to the system.  
This is the end of compressor backup operation setting.

### 9-3. Outdoor Unit Backup Operation Setting

#### <Outline>

This product allows outdoor unit backup operation setting to be performed either at the header unit or a follower unit. If any of the failure modes specified below occurs to one of the outdoor units in a multi-outdoor unit system, proceed with outdoor unit backup operation.

- A compressor failure (e.g. a layer short-circuit or a compressor failure in which no compressor is available to back up the failed compressor)
- A failure of a pressure sensor (Pd or Ps) or a temperature sensor (TD1, TD2, TS1, TS3, TE1, TE2, TE3, TG1, TG2, TG3, TK1, TK2, TL1, TL2 or TL3)

**Note:** Keep the number of backed-up outdoor units to one in the system (single refrigerant line).

#### 9-3-1. Follower outdoor unit backup operation setting (failure of follower outdoor unit)

##### <Work procedure>

(1) Turn off the power supply to all the indoor and outdoor units connected to the system.

##### [Setup of failed follower outdoor unit]

(2) Fully close the gas pipe service valve of the failed outdoor unit.


(3) Leave the service valve of the liquid pipe fully open (to prevent refrigerant stagnation in the unit). However, if there is a leakage from an outdoor PMV (unable to close), fully close the liquid pipe service valve.

(4) <In case of failure in compressor, electrical part, P.C. board>

From this point on, keep the power supply to the failed unit off.

<In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>

Disconnect the line for outdoor-outdoor communication [Uc (U5/U6)] and cover the U5 and U6 line with insulating tape separately. (Do not cover the line by mixing the U5 and U6 line altogether).

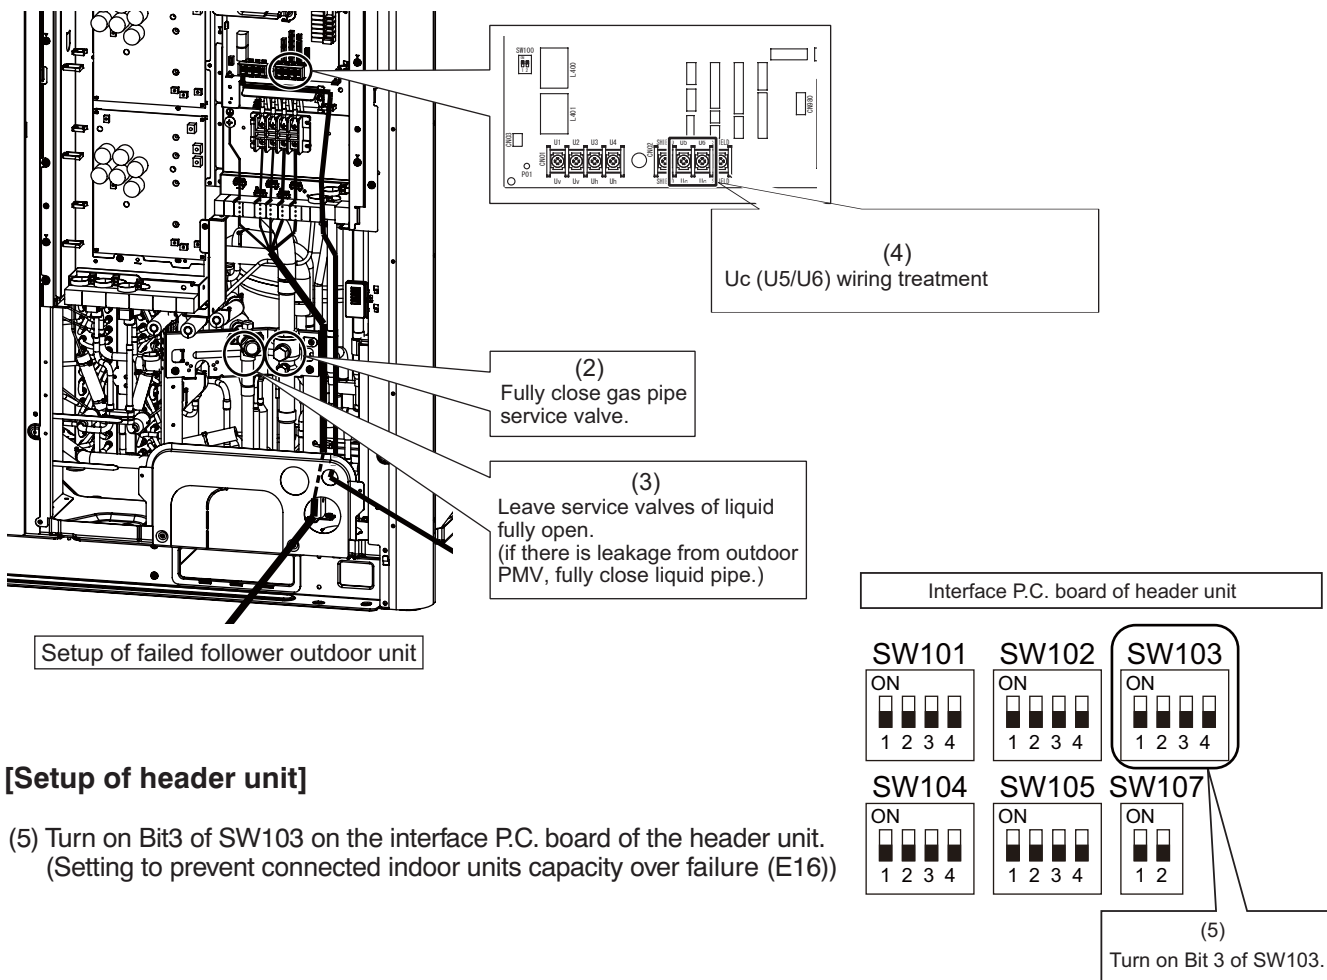


##### [Setup of header unit]

(5) Turn on Bit3 of SW103 on the interface P.C. board of the header unit. (Setting to prevent connected indoor units capacity over failure (E16))

- (6) Turn on the power supply to all the units connected to the system other than the failed follower unit. Determine what to do with the power supply to the failed follower unit in the following manner.  
 <In case of failure in compressor, electrical part, P.C. board>  
 Leave the power supply off.  
 <In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>  
 Turn on the power supply to protect the compressor (by turning on the case heater).  
 (When the power supply to the unit is turned on, [E19] (failure in the number of outdoor header units) will be displayed on the 7-segment display. However, this will not cause any problems.)
- (7) Perform settings needed to gain permission for backup operation from the header unit (failure clearance).
- 1) Set SW01/02/03 on the interface P.C. board to 1/1/1 and confirm that [U1] [E26] (dropping out of an outdoor unit) is displayed on the 7-segment display.
  - 2) Set SW01/02/03 on the interface P.C. board to 2/16/1. Upon confirming that [Er] [... ..] is displayed on the 7-segment display, press SW04 and hold for 5 seconds or more.
  - 3) [Er] [... CL] (failure clearance completed) will be displayed on the 7-segment display.
  - 4) Set SW01/02/03 back to 1/1/1. (The display should change to [U1] [- - -].)

- (7)  
 Set SW01/02/03 to 1/1/1  
 [U1] [E26] will be displayed.
- ↓
- Set SW01/02/03 to [2/16/1].  
 [Er] [... ..] will be displayed.
- ↓
- Press SW04 and hold for 5 seconds or more  
 [Er] [... CL] will be displayed.
- ↓
- Set SW01/02/03 back to 1/1/1.  
 [U1] [- - -] will be displayed.

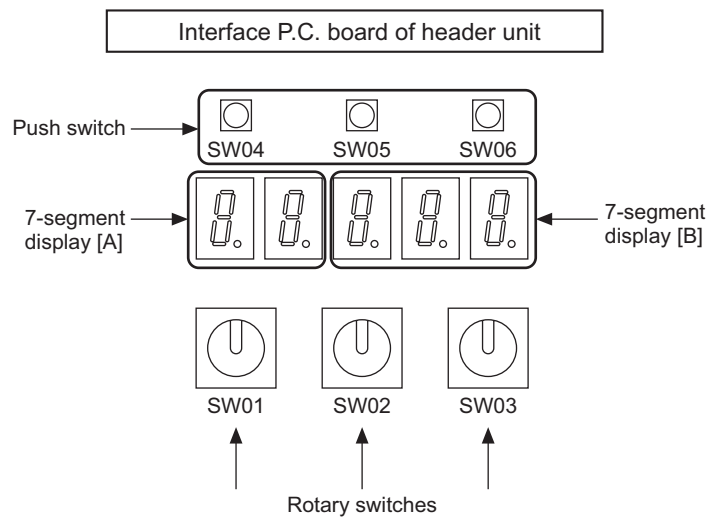

This is the end of follower outdoor unit backup operation setting. Check the operation.



## 9-3-2. Header outdoor unit backup operation setting (failure of header outdoor unit)

### <Work procedure>

(1) Turn off the power supply to all the units connected to the system at the source.

### [Setup of failed header outdoor unit]

(2) Fully close the gas pipe service valve of the failed outdoor unit.


(3) Leave the service valves of the liquid pipes fully open (to prevent refrigerant stagnation in the failed).

(4) <In case of failure in compressor, electrical part, P.C. board>

From this point on, keep the power supply to the failed unit off.

<In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>

Disconnect the line for outdoor-outdoor communication [Uc (U5/U6)] and cover the U5 and U6 line with insulating tape separately. (Do not cover the line by mixing the U5 and U6 line altogether).

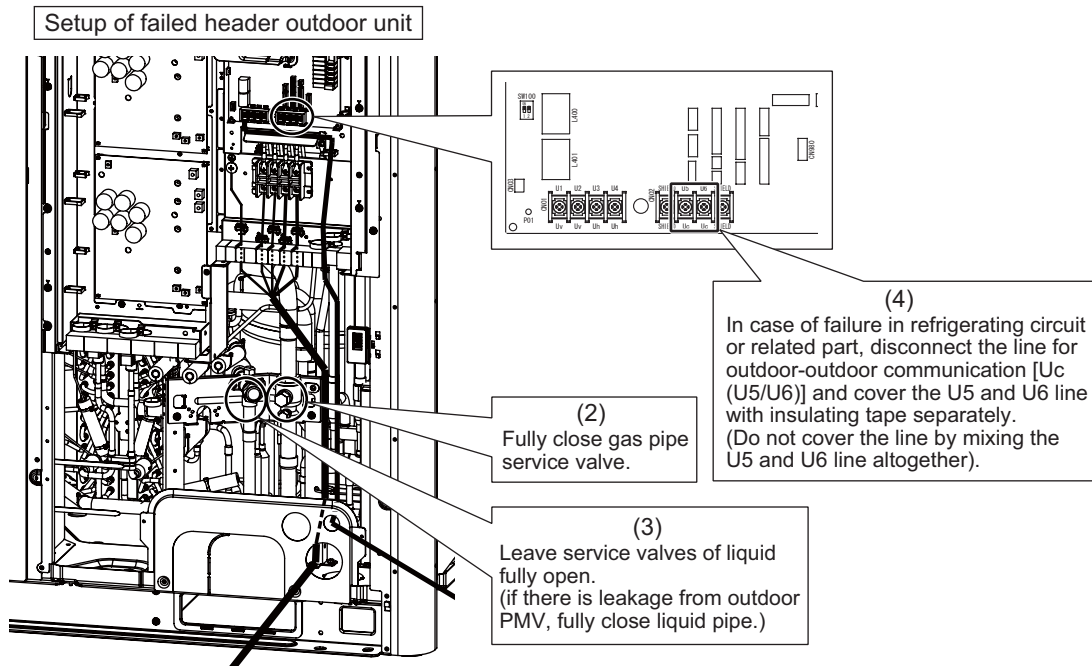

### [Selection of new header unit]

(5) Select a new header unit from the follower units on the basis of the following criteria:

- If only one follower unit is connected, select it as the header unit.
- If two follower units are connected, select the follower unit that is nearest to the failed header unit.


### [Setup of new header unit]

(6) Set SW101 and SW102 on the interface P.C. board same as the setting of failed header unit (refrigerant line address setting).

(7) Turn on Bit3 of SW103 on the interface P.C. board. (Setting to prevent connected indoor unit capacity over failure. (E16))




- (8) Set Bits 1 and 2 of SW100 on the interface P.C. board same as that of the failed header unit (terminator resistance setting).

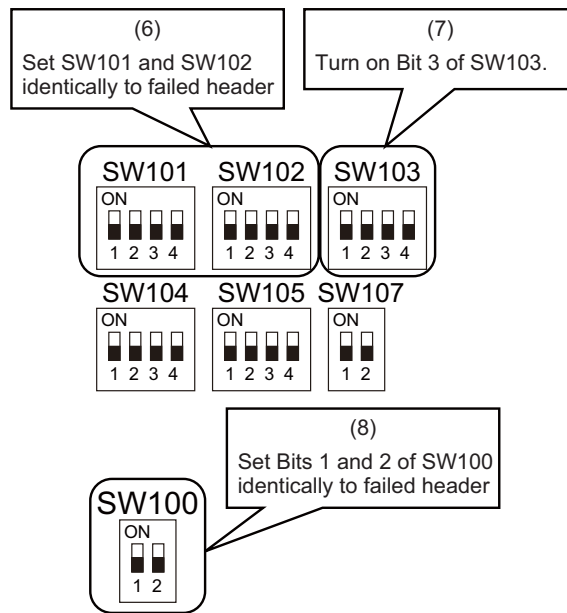

#### [Wiring changes to communication line]

- (9) Redirect the indoor-outdoor communication line connected to the failed header unit [U<sub>v</sub> (U1/U2)] to the unit selected as the header unit [U<sub>v</sub> (U1/U2)].
- (10) If a central control device is connected, connect the central control communication line [U<sub>h</sub> (U3/U4)] to the communication line terminal of the unit selected as the new header unit [U<sub>h</sub> (U3/U4)], and connect up the tie connector between the [U<sub>v</sub> (U1/U2)] and [U<sub>h</sub> (U3/U4)] terminals.

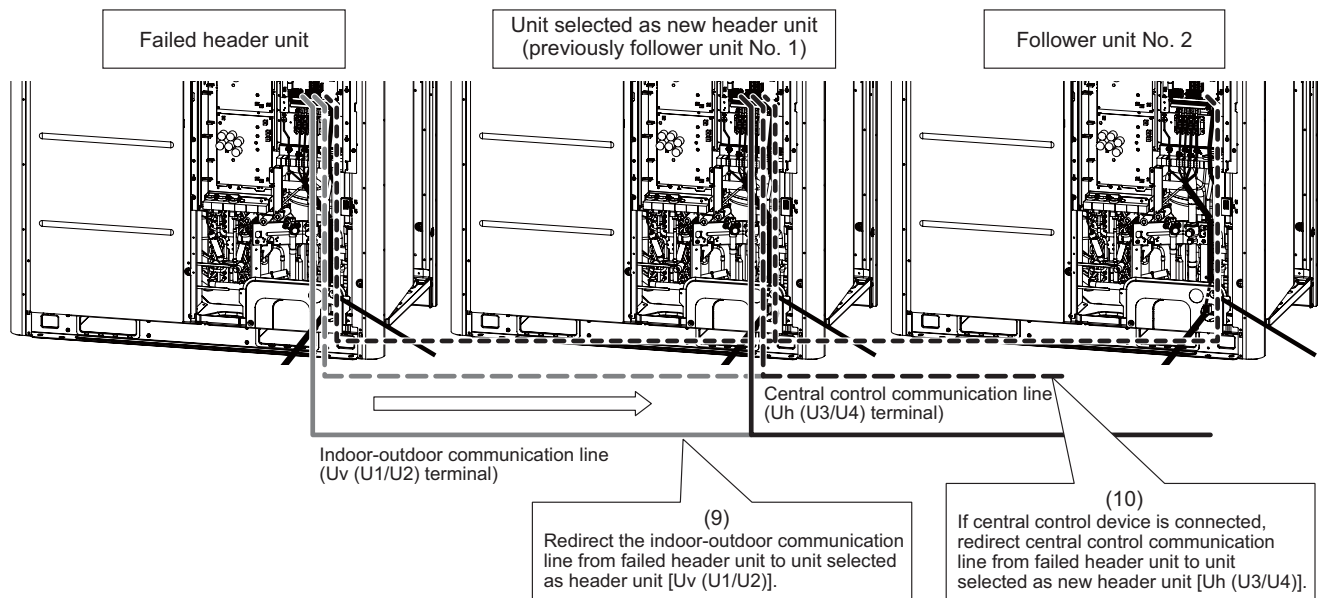

- (11) Turn on the power supply to all the units connected to the system other than the failed unit. Determine what to do with the power supply to the failed unit in the following manner.
- <In case of failure in compressor, electrical part, P.C. board>  
Leave the power supply off.
  - <In case of failure in refrigerating circuit or related part (pressure sensor, temperature sensor, refrigerating cycle part, or fan system part)>  
Turn on the power supply to protect the compressor (by turning on the case heater).  
(When the power supply to the unit is turned on, [E19] (failure in the number of outdoor header units) will be displayed on the 7-segment display. However, this will not cause any problems.)

This is the end of header outdoor unit backup operation setting. Check the operation.

## 9-4. Cooling-Season Outdoor Unit Backup Operation Setting

### <Outline>

Limited to summer and other situations where there is no need for heating operation, this function makes it possible to get backup operation up and running quickly without going through the normal setup procedure, regardless of which type of outdoor unit has failed, the header unit or a follower unit.

In this backup operation, the system behaves in exactly the same way as described in the “Outdoor Unit Backup

Operation Setting” section, except that it cannot perform heating operation.

**Note 1:** When the system is set up for this function, heating operation is not available. (“HEATING STANDBY” displayed on the remote controller.)

**Note 2:** If the unit failure has been caused by a failure in the interface P.C. board or electric circuit, this function is not available. In that case, follow the procedure specified in the “Outdoor Unit Backup Operation Setting” section.

### <Work procedure>

(1) Turn off the power supply to all the units connected to the system.

#### [Setup of failed outdoor unit]


Regardless of whether the failed outdoor unit is the header unit or a follower unit, there is no difference in the setup procedure.

(2) Turn on Bits 1 and 2 of SW103 provided on the interface P.C. board.

(3) If there is a leakage from an outdoor PMV (unable to close), fully close the liquid pipe service valve.

(4) Turn on the power supply to all the units connected to the system.

If the failure involves poor insulation of a compressor motor, remove the compressor leads before the power is turned on.

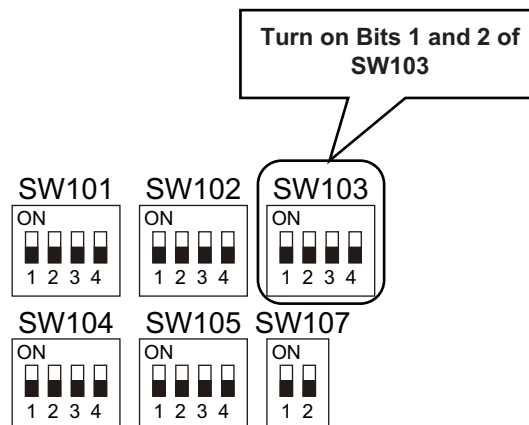

This is the end of cooling-season outdoor unit backup operation setting.

## 9-5. Outdoor Unit Automatic Backup Operation Outline

### Outline

In case of the outdoor unit failure, this product supports automatic backup operation for both header and follower units.

In system with connection of two or more outdoor units, if the automatic backup operation setting is ON and the following failure modes occur, the automatic backup operation function allows continuous operation.

- Compressor failure ( short-circuit, or no compressor can be operated.)
- Pressure Sensor (Pd / Ps) / Temperature Sensor ( TD1, TD2, TS1, TS3, TE1, TE2, TE3, TK1, TK2, TL1, TL2, TL3) failure

If the interface P.C. board or electric circuit system falls, indoor-outdoor unit communication signal trouble ( check code: E\*\*) or setting trouble ( check code:L\*\*) happens, the automatic backup operation cannot function, and a trouble is confirmed. In this case, do [Outdoor Unit Backup Setting] as described before.

### Outdoor Unit Automatic Backup Setting

To Turn ON the automatic backup operation setting, change the outdoor unit check Code 3D to 0.  
(The factory setting is ON, to disable the automatic backup operation setting, change the outdoor unit DN Code 3D to 1)


### Check Code (----) Display during Outdoor Unit Automatic Backup Operation

If the outdoor unit is on the automatic backup operation, check code (----) will be displayed on the remote controller. The check code (----) will be also displayed on the outdoor unit targeted for backup operation, please contact a service center immediately to repair the failure outdoor unit.

# 10. OUTDOOR UNIT REFRIGERANT RECOVERY METHOD

## 10-1. Refrigerant Recovery from Troubled Outdoor Unit (Reclaim)

This product supports refrigerant reclaim, a function which allows refrigerant to be recovered from an outdoor unit in need of repair using a normal outdoor unit in a system featuring multiple outdoor units.

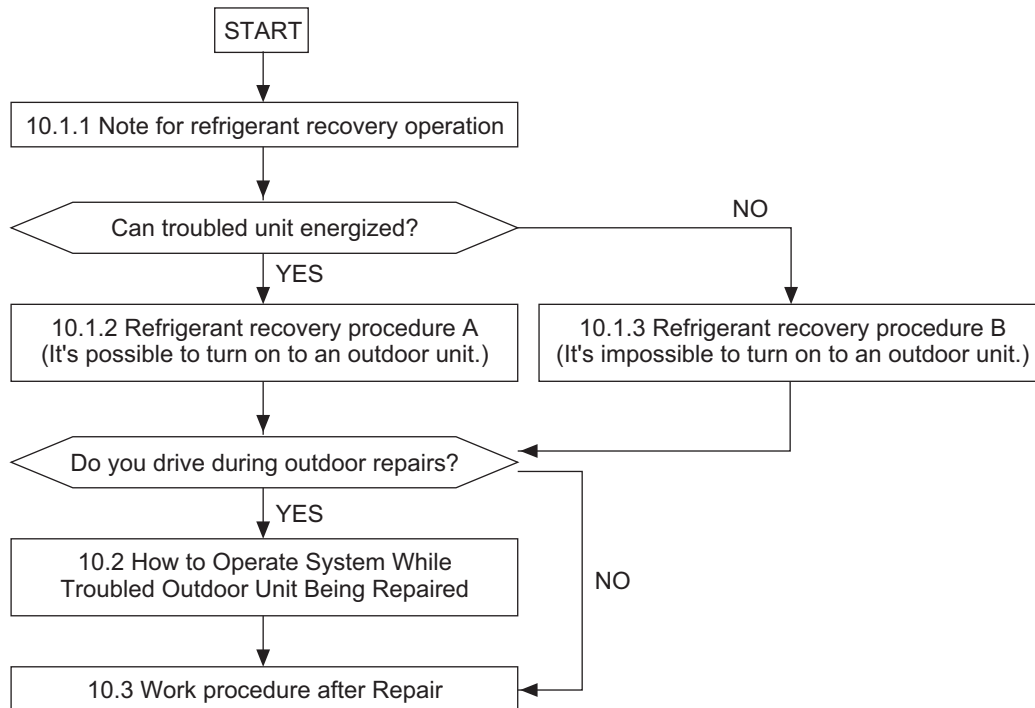

### 10-1-1. Note for refrigerant recovery operation

When performing reclaim operation, take note of the following matters:

- Note 1:** The reclaim refrigerant recovery rate changes with outside temperature and other factors. After reclaim is completed, recover any residual gas using a refrigerant recovery device, etc., and be sure to measure the amount of recovered refrigerant. (The refrigerant recovery rate can be improved by heating the accumulator of the outdoor unit to be repaired during reclaim operation.)
- Note 2:** If reclaim has been performed, the system cannot be operated until the troubled outdoor unit is repaired.  
(Continued operation would be impossible due to a refrigerant overcharge.)
- Note 3:** If outdoor PMV 1 happens to be unable to open or PMVs 2 and 3 happen to be unable to open, the refrigerant in the heat exchangers cannot be recovered. In that case, recover any residual gas in the heat exchangers using a tube piercing valve or some other tool. After a reclaim operation, do not perform any brazing until the residual gas in the heat exchangers is recovered.

### 10-1-2. Refrigerant recovery procedure A (Case that the troubled outdoor unit turn on)



#### <Work procedure>

Turn on the power supply to the system at the source, but leave the system switched off.  
If the trouble involves poor insulation of a compressor motor, remove the motor leads before the power is turned on.

#### [Setup of failed outdoor unit]

- (1) Connect the check joint of liquid pipe and the low pressure-side check joint using a charge hose, and purge the hose of air (to recover refrigerant from the liquid tank and heat exchangers).
- (2) Fully close the liquid pipe service valve of the troubled outdoor unit.  
(Leave the service valves of the gas pipe fully open.)
- (3) Set SW01/02/03 on the interface P.C. board of the failed outdoor unit to 2/11/1. After [rd] [... ..] is displayed on the 7-segment display, press SW04 and hold for 5 seconds or more.

- (4) [rd] [... FF] will be displayed on the 7-segment display, and reclaim operation will start.  
 \* To put the operation on hold midway, turn off the power supply to all the outdoor units, or press SW05 on the interface P.C. board.
- (5) Approx. 20 minutes after the system starts up , fully close the gas pipe service value of the troubled outdoor unit.
- (6) Press SW05 on the interface board to finish the reclaim operation.
- (7) Turn off the power supply to all the outdoor units , and recover the residual refrigerant in the outdoor unit using a refrigerant re device. Be sure to measure the amount of recovered refrigerant. (This is necessary to determine how much additional refrigerant will be needed after the completion of the repair.)

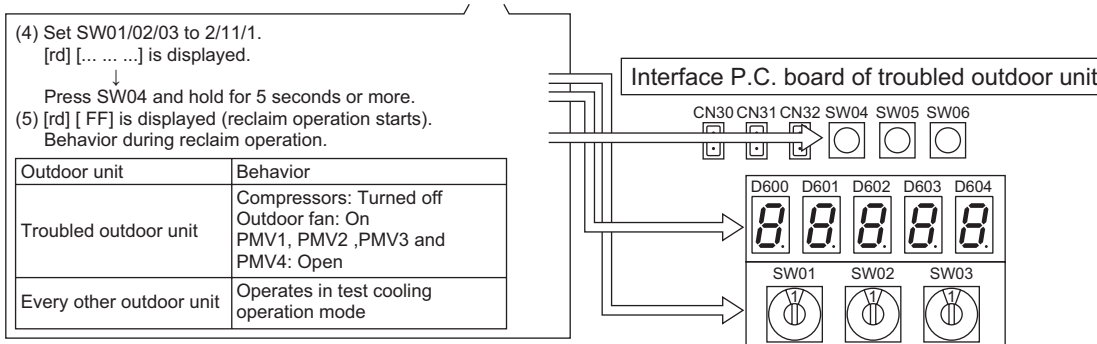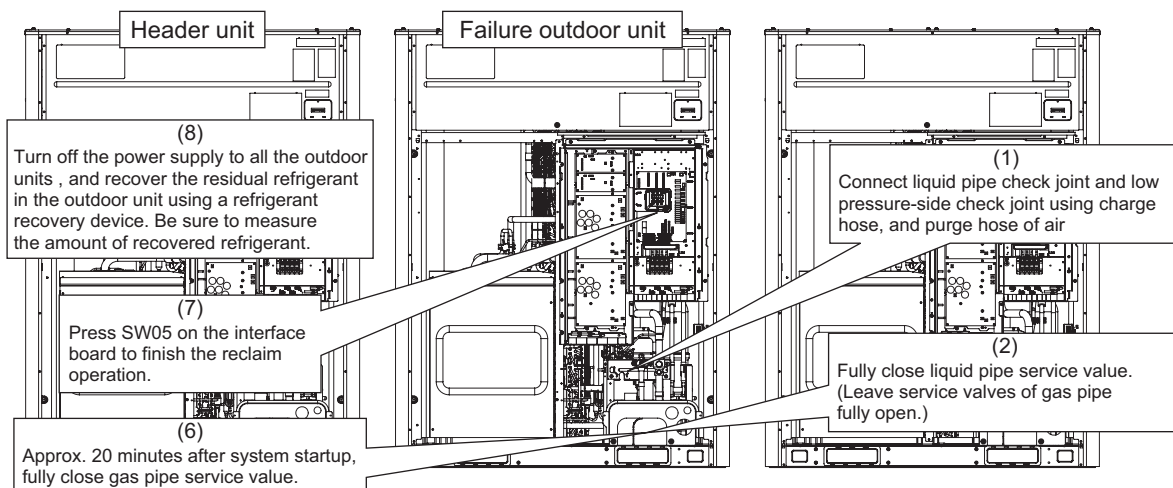

This is the end of the refrigerant recovery operation.  
 Set SW01/02/03 of the troubled outdoor unit and the outdoor unit for pressure adjustment back to 1/1/1.

### 10-1-3. Refrigerant recovery procedure B (Case that the troubled outdoor unit does not turn on)

#### <Outline>

If outdoor unit backup operation setting is performed, use an alternative refrigerant recovery procedure as described below, provided that the power cannot be turned on for the troubled outdoor unit. (Refrigerant will be recovered from the failed outdoor unit using the test cooling operation function.)

**Note:** If the power cannot be turned on the troubled outdoor unit, the solenoid valves and PMVs of the unit cannot be turned on, so that it reduces the amount of recovered refrigerant compared to a standard reclaim operation. Recover the residual gas in the unit using a refrigerant recovery device, and be sure to measure the amount of recovered refrigerant.



#### <Work procedure>

##### [Setup of troubled outdoor unit]

- (1) Connect the liquid pipe check joint and the low pressure-side check joint using a gauge manifold, and purge the manifold of air (to recover refrigerant from the heat exchangers).
- (2) Fully close the liquid pipe packed valve of the troubled outdoor unit.  
(Leave the service valve of the gas pipe fully open.)

##### [Setup of unit selected as header unit (hereafter "header outdoor unit")]

- (3) Set SW01/02/03 on the interface P.C. board of the header outdoor unit to 2/5/1. After [C.] [... ..] is displayed on the 7-segment display, press SW04 and hold for 5 seconds or more.
- (4) After [C. ...] [... - C] is displayed on the 7-segment display, the system starts operating in the test cooling operation mode.
- (5) Set SW01/02/03 on the interface P.C. board of the header outdoor unit to 1/2/2 to have the low-pressure sensor\ output (MPa) displayed on the 7-segment display.
- (6) Approx. 20 minutes after the system starts on , fully close the gas pipe service value of the failed outdoor unit.
- (7) Press SW05 on the interface board to finish the reclaim operation.
- (8) Turn off the power supply to all the outdoor units , and recover the residual refrigerant in the outdoor unit using a refrigerant recovery device. Be sure to measure the amount of recovered refrigerant.  
(This is necessary to determine how much additional refrigerant will be needed after the completion of the repair.)

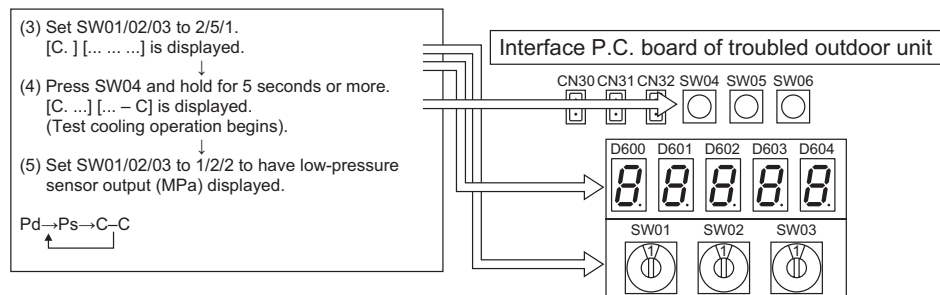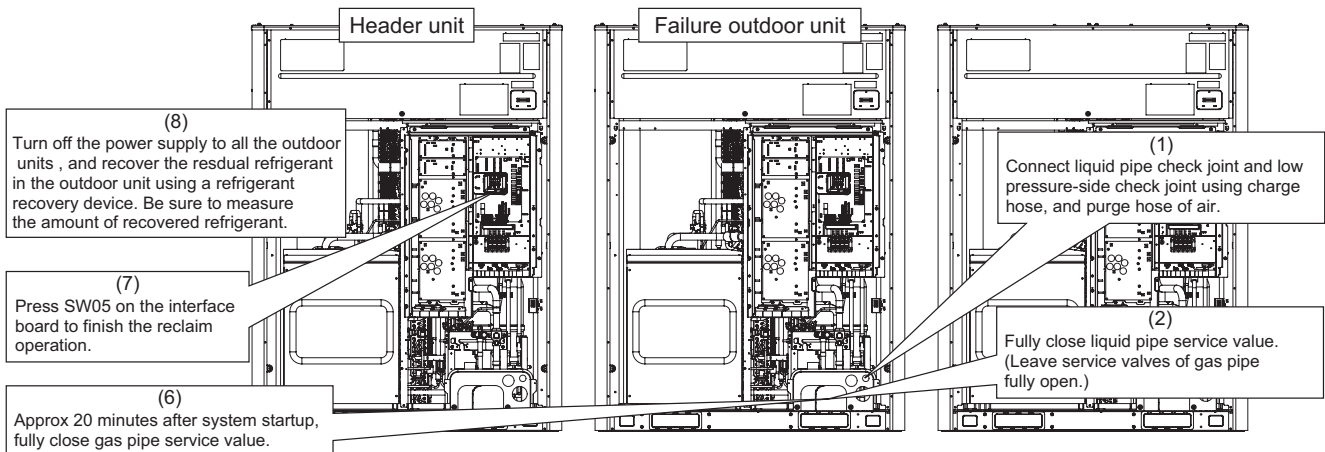

This is the end of the refrigerant recovery operation.

Set SW01/02/03 of the troubled outdoor unit and the outdoor unit for pressure adjustment back to 1/1/1.

## 10-2. How to Operate System While Troubled Outdoor Unit Being Repaired

### <Outline>

After refrigerant is recovered from the troubled outdoor unit through a reclaim operation, the overall amount of refrigerant held by the system becomes excessive, and this makes it impossible to operate the remaining outdoor units even though they are not troubled. However, operation is still possible if the system-wide amount of refrigerant is adjusted in accordance with the procedure described below.

### <Work procedure>

- (1) Follow the steps specified in “10-1. Refrigerant Recovery from Troubled Outdoor Unit (Reclaim)”.
- (2) Adjust the amount of refrigerant held by the system by removing some of it using a refrigerant recovery device, etc.  
Determine the amount of refrigerant to be removed according to the capacity of the failed outdoor unit. (See the table below.)

**Example:** If you are under repairing of a 16HP outdoor unit in the 50HP system  
(combination of outdoor unit: 18HP + 16HP + 16HP):

Amount of refrigerant to be remove from this system = 11 kg

- (3) Set up the outdoor unit from which refrigerant has been recovered in the manner described in “9-3. Outdoor Unit Backup Operation Setting”.  
This completes the procedure.

System capacity (HP)	Outdoor unit combination					Amount of refrigerant (kg)
8	8	-	-	-	-	7.5
10	10	-	-	-	-	7.7
12	12	-	-	-	-	8.3
14	14	-	-	-	-	8.3
16	16	-	-	-	-	10.0
18	18	-	-	-	-	11.0
20	20	-	-	-	-	13.0
22	22	-	-	-	-	14.0
24	24	-	-	-	-	14.5
26	14	12	-	-	-	16.6
28	14	14	-	-	-	16.6
30	18	12	-	-	-	20.7
32	20	12	-	-	-	21.3
34	20	14	-	-	-	21.3
36	24	12	-	-	-	22.8
38	24	14	-	-	-	22.8
40	20	20	-	-	-	26.0
42	24	18	-	-	-	25.5
44	24	20	-	-	-	27.5
46	24	22	-	-	-	28.5
48	24	24	-	-	-	29.0
50	24	14	12	-	-	31.1
52	24	14	14	-	-	31.1
54	20	20	14	-	-	34.3
56	24	20	12	-	-	35.8
58	24	20	14	-	-	35.8
60	24	24	12	-	-	37.3
62	24	24	14	-	-	37.3
64	24	20	20	-	-	37.3

System capacity (HP)	Outdoor unit combination					Amount of refrigerant (kg)
66	24	22	20	-	-	41.5
68	24	24	20	-	-	42.0
70	24	24	22	-	-	43.0
72	24	24	24	-	-	43.5
74	24	24	14	12	-	45.6
76	24	24	14	14	-	45.6
78	24	20	20	14	-	48.8
80	24	24	20	12	-	50.3
82	24	24	20	14	-	50.3
84	24	24	24	12	-	51.8
86	24	24	24	14	-	51.8
88	24	24	20	20	-	55.0
90	24	24	22	20	-	56.0
92	24	24	24	20	-	56.5
94	24	24	24	22	-	57.5
96	24	24	24	24	-	58.0
98	24	24	24	14	12	60.1
100	24	24	24	14	14	60.1
102	24	24	20	20	14	63.3
104	24	24	24	20	12	64.8
106	24	24	24	20	14	64.8
108	24	24	24	24	12	66.3
110	24	24	24	24	14	66.3
112	24	24	24	20	20	69.5
114	24	24	24	22	20	70.5
116	24	24	24	24	20	71.0
118	24	24	24	24	22	72.0
120	24	24	24	24	24	72.5

### 10-3. Work procedure after Repair

When vacuuming in the repaired outdoor unit, follow the procedure described below.

#### <Work procedure>

(1) Follow the procedure below to fully open PMV 1, 2, 3, and 4 and turn off the outdoor unit within 2 minutes after the operation is completed.

**Note)** The PMV fully open operation by the following operation will return to fully closed after 2 minutes.


1. Set [SW01/SW02/SW03] on the interface board to [2/1/3], and after [H.r.] [.....] is displayed on the 7-segment display, press [SW04] and hold for 5 seconds or more.
2. Press [SW06] and hold for 5 seconds or longer, and [P.1] [F o...] is displayed on the 7-segment display. (PMV1 fully open)
3. Set [SW01/SW02/SW03] on the interface board to [2/1/4], and after [P.2] [.....] is displayed on the 7-segment display, press [SW04] and hold for 5 seconds or longer, and [P.2][Fo...] is displayed on the 7-segment display. (PMV2 fully open)
4. 3. Similarly, set [SW01/SW02/SW03] to [2/1/5], set [SW01/SW02/SW03] to [2/1/6], press [SW04] and hold for 5 seconds or more, and each have 7 segments. [P.3][Fo...] (PMV3 fully open), [P.4][Fo...] (PMV4 fully open) are displayed on the display.

**Note)** 7-segment display and operation method: [P.x] [\* \* ...]

- The initial state is normal control, and [.....] is displayed in \*.
- When push SW4 is pressed for 5 seconds, it fully opens for 2 minutes, and [F o...] is displayed in \*.
- Pressing again for 5 seconds displays an intermediate opening for 2 minutes, and [C o...] is displayed in \*.
- Pressing it again for 5 seconds closes it completely for 2 minutes and displays [Fc...] in \*.
- Press again for 5 seconds to return to normal control.

(2) Return [SW01/SW02/SW03] on the interface board to [1/1/1].


(3) Be sure to perform vacuuming in from the three check joints shown in the diagram below (liquid pipe, discharge pipe and suction pipe).

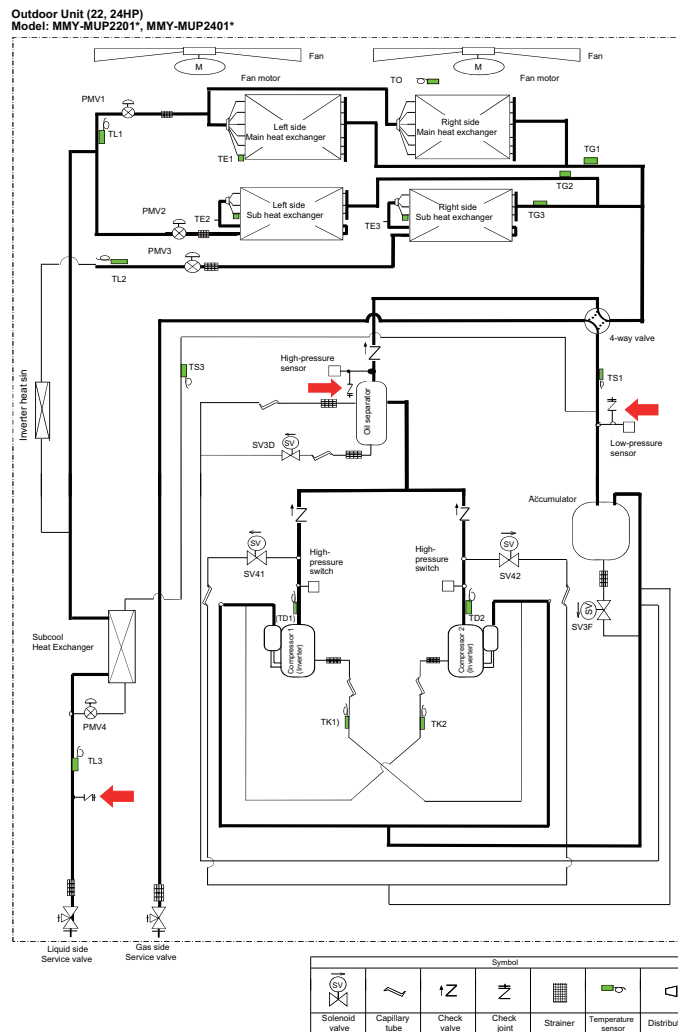



# 11. REPLACING COMPRESSORS

## 11-1. Compressor Replacement Procedure (Outline)

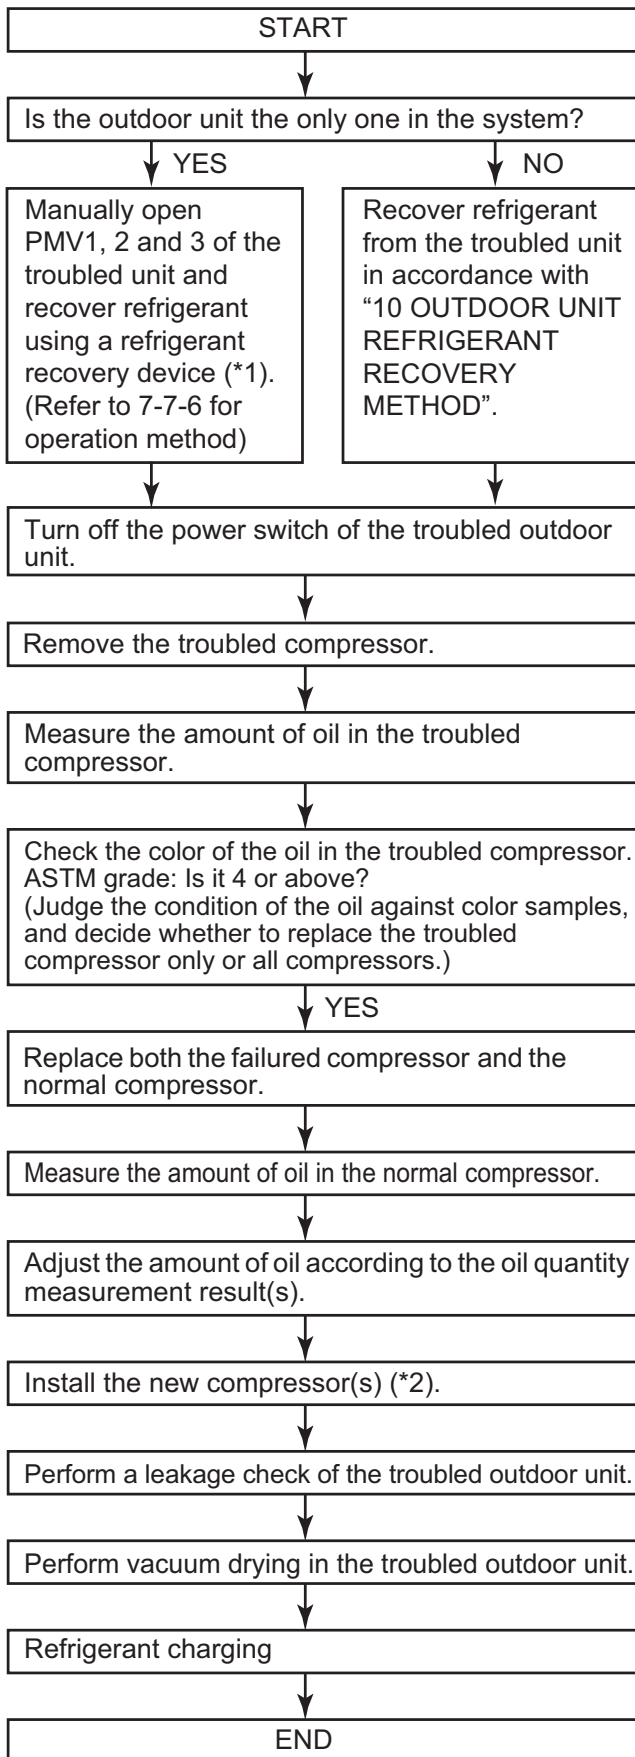

### WARNING

In situations such as indoor unit relocation and repairs, it is not possible to recover all the refrigerant held by the system in the outdoor units. It could cause a serious accident, such as blow out or injury. Be sure to perform refrigerant recovery using a refrigerant recovery device.

### WARNING

When detaching a pipe by heating with a burner at brazed joint, take care as any oil left in the piping may burn in a momentary flash of fire when the brazed filler metal melts.

\*1 The full-opening of PMV 1, 2, 3 via rotary switch is automatically undone after 2 minutes, causing the valves to fully close.

To maintain fully open state, turn off the power switch of the outdoor unit within 2 minutes

\*2 The SMMS-u and the SMMS-i and SMMS-e use different types of compressors. Be sure to check the service part code.

Replace the troubled compressor only.

This flowchart only shows the standard compressor replacement procedure. Since the situation can differ site by site, perform the task in accordance with the following judgment criteria:

1. The compressors that are used as service parts are filled with oil as listed below (per 1 compressor):

8, 10, 12, 14, 22, 24HP	1900 cc
16, 18, 20HP	3000 cc

2. The oil volume that was filled in the outdoor unit is listed as below:

8, 10, 12, 14HP	3400 cc
16, 18, 20HP	5000 cc
22, 24HP	5800 cc

3. The removed compressors normally filled with oil as listed below (per 1 compressor):


8, 10, 12, 14, 22, 24HP	800~1400 cc
16, 18, 20HP	2000~2600 cc

Oil separator's oil volume is normally around 0~1000 cc.

## 11-2. Replacement of Compressors

### <Checking color of oil in troubled compressor>

- Lay the troubled compressor down, draw a small amount of oil via the oil equalization pipe, and check its color against color samples.
- Determine the number of compressors to be replaced according to the color checking result.  
ASTM grade: Below 4 → Replace the troubled compressor only.  
ASTM grade: 4 or above → Replace both the troubled compressor and the normal compressor(s).

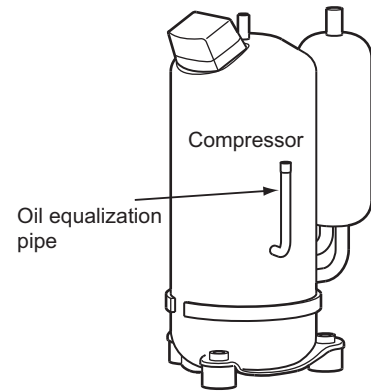

### WARNING

When detaching a pipe by heating with a burner at brazed joint, take care as any oil left in the piping may burn in a momentary flash of fire when the brazing filler metal melts.

**Model: MMY-MUP0801\*, 1001\*, 1201\*, 1401\*, 2201\* and 2401\***

**For 8, 10, 12, 14, 22, 24HP**

**[When replacing troubled compressor only]**

### <Measuring amount of oil in failed compressor>

Put the troubled compressor above the scale to measure the amount of oil.

Amount of oil in troubled compressor:  $A \text{ [cc]} = (\text{Weight of compressor as it was dismantled (kg)} - 26.0\text{kg}) \times 1042$   
(Specific volume of oil: 1042 [cc/kg])

\* The weight of the compressor without oil inside is 26.0 kg.

### <Adjusting amount of oil in new compressor> (1900 cc at shipment)

- Perform the adjustment on the basis of how much oil the troubled compressor contained, A [cc], by following the steps below.

#### **1 Amount of oil in troubled compressor A [cc]: $0 \leq A < 1100$**

(1) Adjust the amount of oil in the new compressor to 1100 cc.

(Lay the new compressor down and draw 800 [cc] of oil via the oil-equalization pipe.)

#### **Notes:**

- Do not draw more than 800 [cc] of oil as it may cause damage to the compressor.
- If the troubled compressor contained 500cc or less, there may have been a problem with the oil equalization circuit, etc. Perform checks in accordance with "11-3. Check Procedure to Search Cause of Compressor Oil Shortage".

#### **2 Amount of oil in troubled compressor A [cc]: $1100 \leq A < 1900$**


(1) Adjust the amount of oil in the new compressor to A cc.

(Lay the new compressor down and draw  $(1900 - A)$  [cc] of oil via the oil equalization pipe.)

#### **3 Amount of oil in troubled compressor A [cc]: $1900 \leq A$**

(1) Adjust the amount of oil in the new compressor to A cc.

(Insert a hose into the discharge pipe or oil equalization pipe of the new compressor and inject  $(A-1900)$  [cc] of oil using a funnel, etc.)

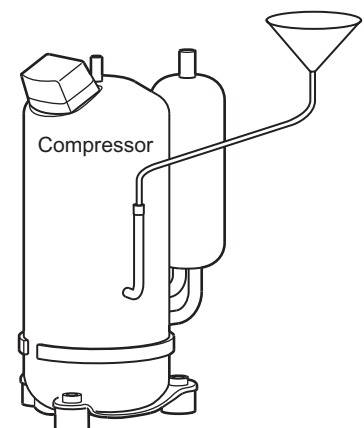

**Model: MMY-MUP1601\*, 1801\* and 2001\***

**For 16, 18, 20HP**

**[When replacing troubled compressor only]**

**<Measuring amount of oil in troubled compressor>**

Put the troubled compressor above the scale to measure the amount of oil.

Amount of oil in troubled compressor:  $A$  [cc] = (Weight of compressor as it was dismantled (kg) - 42.6kg) x 1042  
(Specific volume of oil: 1042 [cc/kg])

\* The weight of the compressor without oil inside is 42.6 kg.

**<Adjusting amount of oil in new compressor> (3000 cc at shipment)**

- Perform the adjustment on the basis of how much oil the troubled compressor contained,  $A$  [cc], by following the steps below.

### **1 Amount of oil in troubled compressor $A$ [cc]: $0 \leq A < 2500$**

(1) Adjust the amount of oil in the new compressor to 2500cc.

(Lay the new compressor down and draw 500 [cc] of oil via the oil-equalization pipe.)

**Notes:**

- Do not draw more than 500 [cc] of oil as it may cause damage to the compressor.
- If the troubled compressor contained 500cc or less, there may have been a problem with the oil equalization circuit, etc. Perform checks in accordance with "11-3. Check Procedure to Search Cause of Compressor Oil Shortage".

### **2 Amount of oil in troubled compressor $A$ [cc]: $2500 \leq A < 3000$**


(1) Adjust the amount of oil in the new compressor to  $A$  cc.

(Lay the new compressor down and draw  $(3000 - A)$  [cc] of oil via the oil equalization pipe.)

### **3 Amount of oil in troubled compressor $A$ [cc]: $3000 \leq A$**

(1) Adjust the amount of oil in the new compressor to  $A$  cc.

(Insert a hose into the discharge pipe or oil equalization pipe of the new compressor and inject  $(A-3000)$  [cc] of oil using a funnel, etc.)

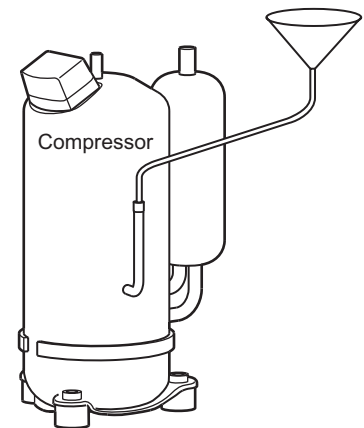

**Model: MMY-MUP2201\* and 2401\***

**For 22, 24HP**

**[When replacing normal as well as troubled compressor] - applicable to**

**<Remove the normal compressor>**

- Remove the normal compressor in the same way as the troubled compressor.

**Note:**

- Be sure to insulate the removed compressor leads using insulation tape, etc.

## **WARNING**

---

When detaching a pipe by heating with a burner at brazed joint, take care as any oil left in the piping may burn in a momentary flash of fire when the brazing filler metal melts.

---

**<Measuring amount of oil in normal compressor>**

- As was the case with the troubled compressor, measure the amount of oil contained by placing the compressor on a scale.

Amount of oil in normal compressor:  $B \text{ [cc]} = (\text{Weight of compressor as it was dismantled (kg)} - 26.0 \text{ kg}) \times 1042$   
(Specific volume of oil: 1042 [cc/kg])

- \* The weight of the compressor without oil inside is 26.0 kg.

**<Adjusting amount of oil in new compressors>**

- Perform the adjustment on the basis of how much oil the failure compressor contained, A [cc], and how much oil the normal compressor contained, B [cc], by following the steps below.

### **1 Combined amount of oil in troubled and normal compressors $A+B \text{ [cc]: } 0 \leq A+B < 2200$**

(1) Adjust the amount of oil in the two new compressors to 1000 cc each (total 2200 cc).

- Lay the compressors down and draw 800 [cc] of oil from each of them via their oil equalization pipes.

**Notes:**

- Do not draw more than 800 [cc] of oil from a compressor as it may cause damage.
- If the troubled compressor contained 500cc or less, there may have been a problem with the oil equalization circuit, etc. Perform checks in accordance with "11-3. Check Procedure to Search Cause of Compressor Oil Shortage".

### **2 Combined amount of oil in troubled and normal compressors $A+B \text{ [cc]: } 2200 \leq A+B < 3800$**


(1) Adjust the amount of oil in the two new compressors to  $(A+B)/2$  cc each.

- Lay the compressor down and draw  $[3800-(A+B)]/2$  [cc] of oil from each of them via their oil equalization pipes.

### **3 Combined amount of oil in troubled and normal compressors $A+B \text{ [cc]: } 3800 \leq A+B$**

(1) Adjust the amount of oil in the two new compressors to  $(A+B)/2$  cc each.

(Insert a hose into the discharge pipe or oil equalization pipe of each compressor and inject  $(A+B)/2-1900$  [cc] of oil using a funnel, etc.)

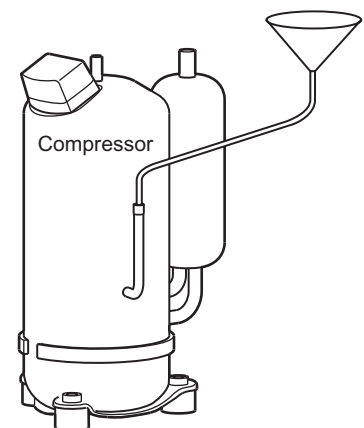

### <Installing compressor>

- Install a compressor by following the dismantling procedure in reverse.

#### **Notes:**

- The tightening torque of the screws, used to fix the compressor's lead wires, is 2.5 N•m.
- The tightening torque of the hexagonal bolts, used to mount the compressor, is 19.6 N•m.
- If oil has been drawn from the accumulator, repair the cut pipe through pinching and brazing.

### <Vacuum-pumping>

(Single outdoor unit system)

- Before performing vacuum-pumping, fully open PMV1, 2 and 3. If they are closed, the heat exchangers of the outdoor unit cannot be vacuum-pumped.
- Connect a vacuum pump consecutively to the check joints placed in the liquid and discharge pipes and on the high-pressure side of the suction pipe, and turn it on.
- Operate the vacuum drying until the vacuum gauge indicates 1 mmHg.

### <Method to fully open PMV manually>

(1) Turn on the power switch of the outdoor unit.

(2) Fully open the PMV1.

(3) Fully open the PMV2.

(4) Fully open the PMV3

(5) Turn off the power switch of the outdoor unit


\* Please refer to chapter 7-7-6 to fully open the PMV1, 2, and 3.

\* Step (4) is not needed for Model: MMY-MUP0801\*, 1001\*, 1201\* and 1401\*

### <Refrigerant charging>

- Inject the same amount of refrigerant as the recovered residual refrigerant via the charging port of the liquid-side service valve.

### 11-3. Check Procedure to Search Cause of Compressor Oil Shortage

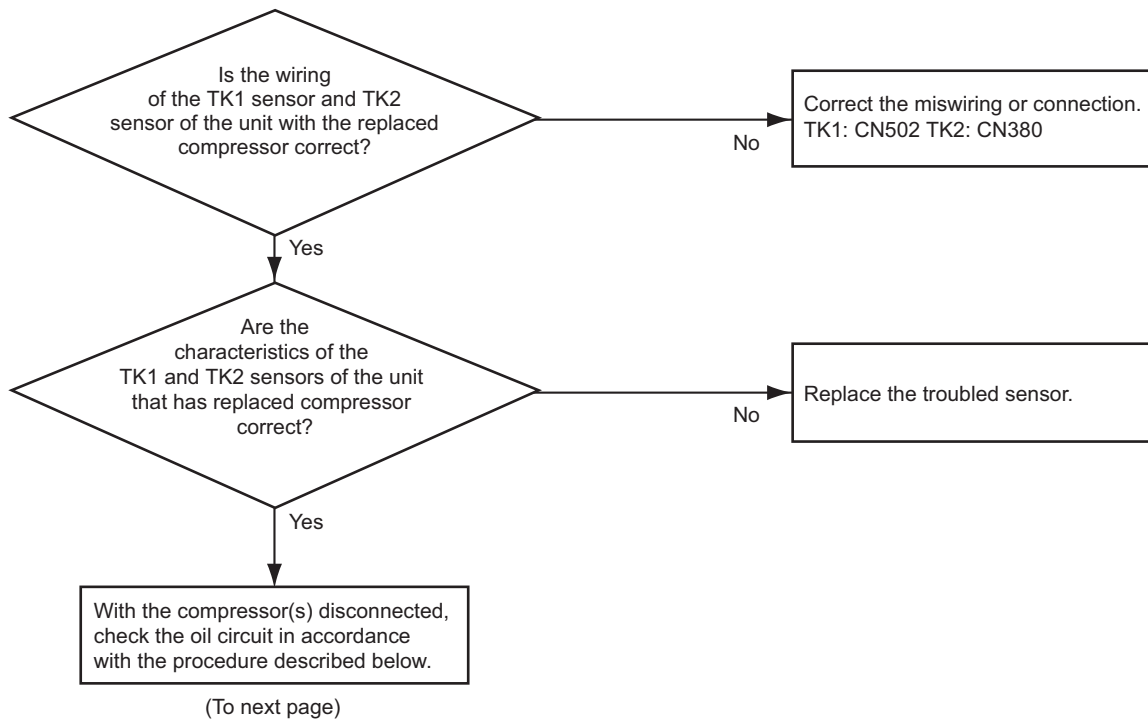


**<MMY-MUP0801\*, 1001\*, 1201\* and 1401\*>**

Check items and procedures to follow when checking oil circuit with compressor(s) disconnected

Check item	Location	Procedure
Leakage of outdoor PMV Leakage of check valve in discharge pipe convergent section	A, B, D	1) With PMV 1, 2 and 4 fully closed, apply pressure to the check joint of liquid pipe with nitrogen, and check the pressure at the check joint of discharge pipe. If the pressure at the check joint of discharge pipe increases, there is a leak from PMV1 (A) or PMV2 (B) and check valve of discharge pipe (D). Replace the troubled parts. 2) If the pressure does not increase, fully open outdoor PMV 1, 2 and check the pressure at the check joint of discharge pipe again. If the pressure increases, there is a leak from the check valve of discharge pipe (D). Replace the part.
Clogging of SV3D valve Clogging of oil-return capillary Clogging of oil-return distributor	F	3) With pressure applied to the check joint of discharge pipe with nitrogen, manually open the SV3D valve. If gas does not escape from the suction pipe section of the disconnected compressor, the SV3D valve, oil-return capillary or oil-return distributor is clogged. Replace the part.

Outdoor Unit (8, 10, 12, 14HP)  
Model : MMY-MUP0801\*, 1001\*, 1201\* and 1401\*

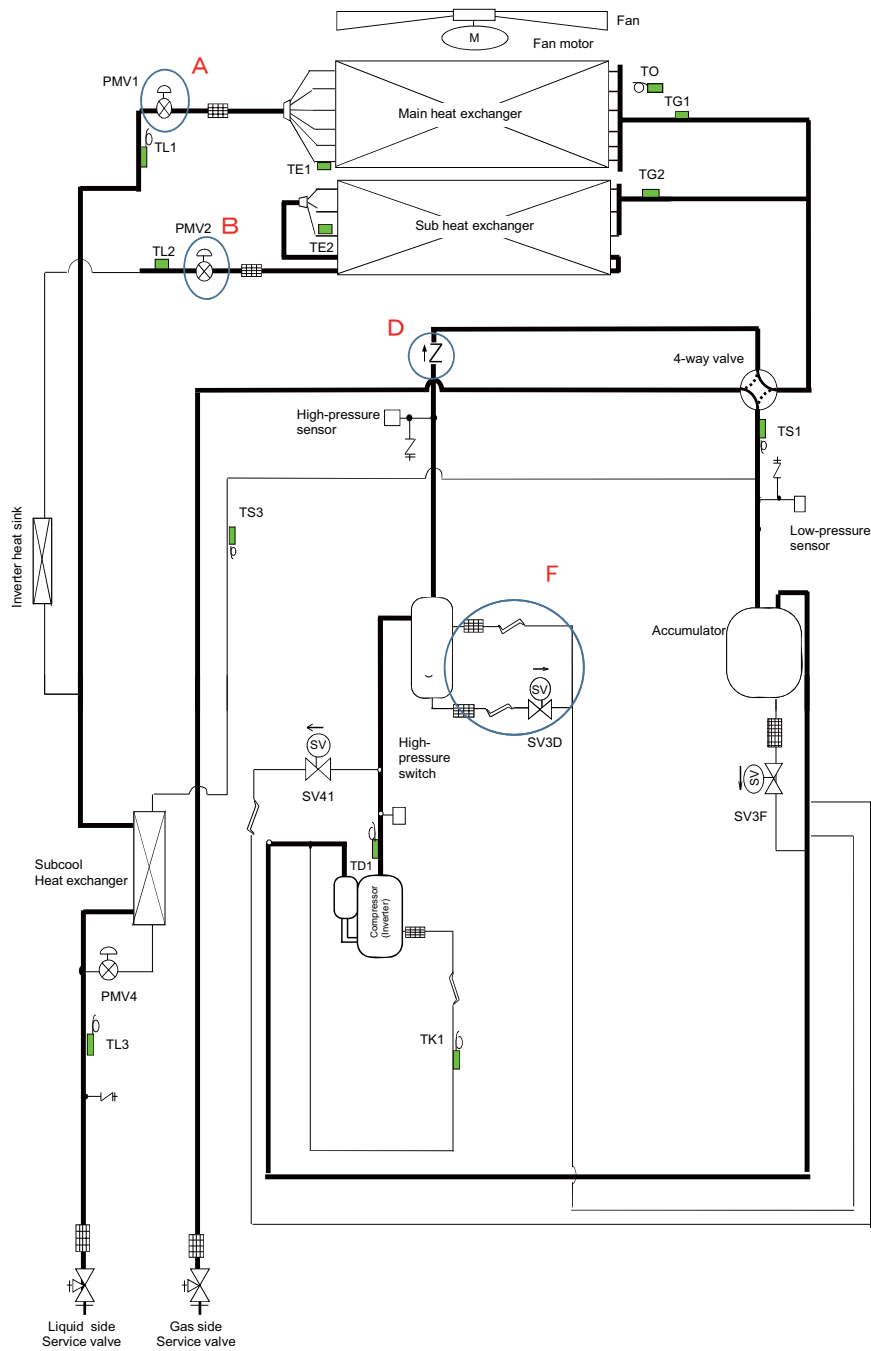


Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

### <MMY-MUP1601\*, 1801\* and 2001\*>

Check items and procedures to follow when checking oil circuit with compressor(s) disconnected

Check item	Location	Procedure
Leakage of outdoor PMV Leakage of check valve in discharge pipe convergent section	A,B C,D	1) With PMV 1, 2, 3 and 4 fully closed, apply pressure to the check joint of liquid pipe with nitrogen, and check the pressure at the check joint of discharge pipe. If the pressure at the check joint of discharge pipe increases, there is a leak from PMV1 (A), 2 (B) or 3 (C) and check valve of discharge pipe (D). Replace the troubled parts. 2) If the pressure does not increase, fully open outdoor PMV1 and 2 and check the pressure at the check joint of discharge pipe again. If the pressure increases, there is a leak from the check valve of discharge pipe (D). Replace the part.
Clogging of SV3D valve Clogging of oil-return capillary Clogging of oil-return distributor	F	3) With pressure applied to the check joint of discharge pipe with nitrogen, manually open the SV3D valve. If gas does not escape from the suction pipe section of the disconnected compressor, the SV3D valve, oil-return capillary or oil-return distributor is clogged. Replace the part.

Outdoor Unit (14A, 16, 18, 20HP)  
Model: MMY-MUP1601\*, 1801\* and 2001\*

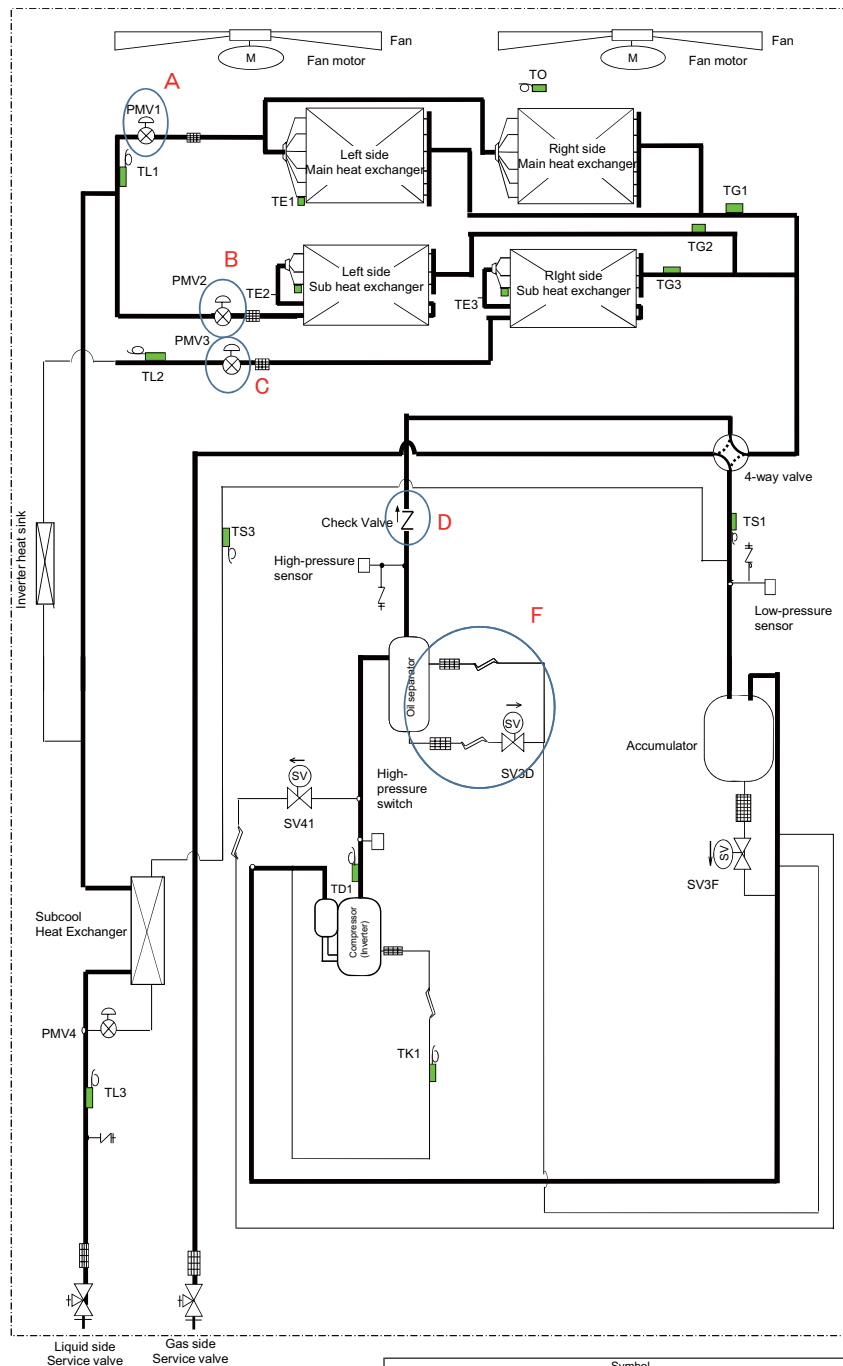


Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor



<MMY-MUP2201\*, 2401\*>




Check items and procedures to follow when checking oil circuit with compressor(s) disconnected


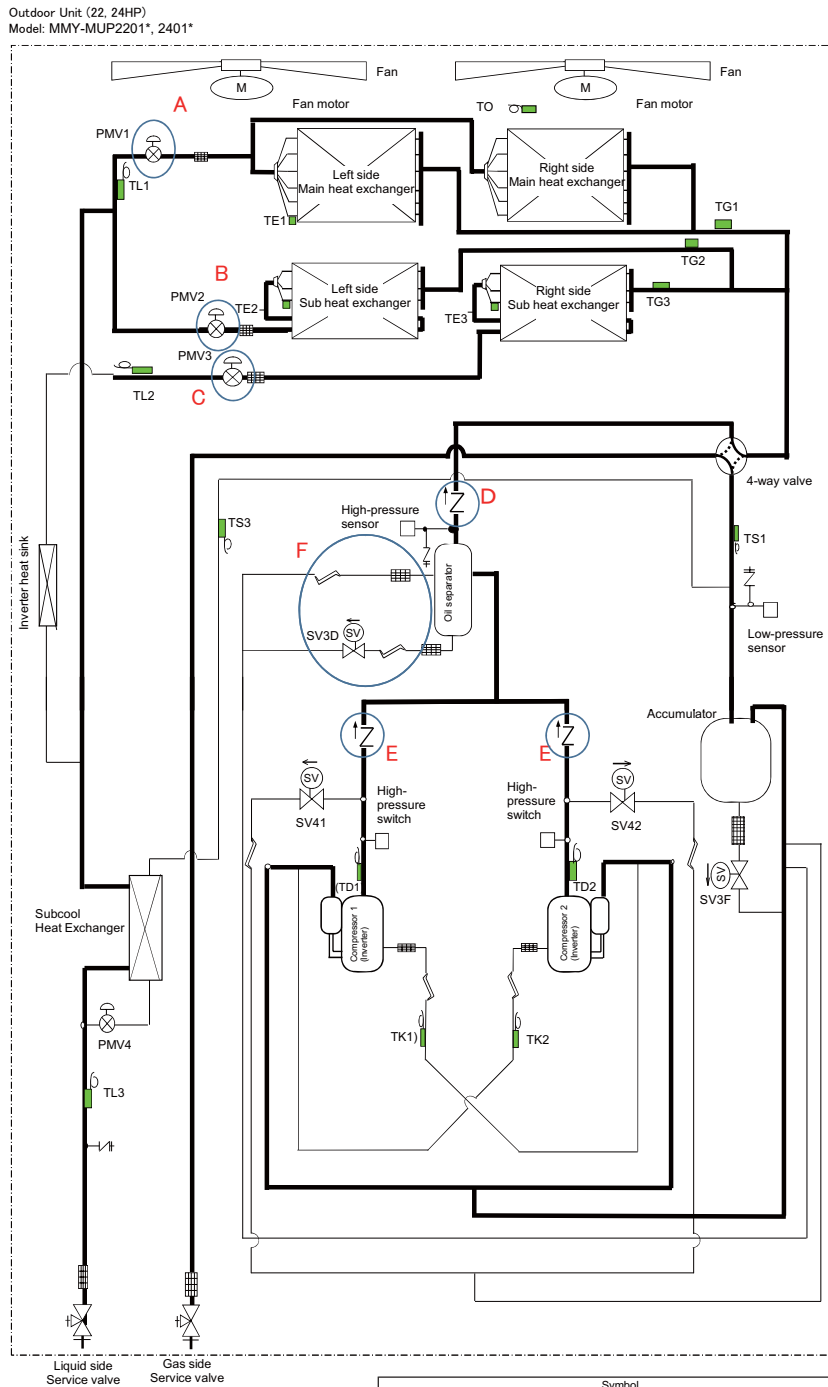







Check item	Location	Procedure
Leakage of outdoor PMV Leakage of check valve in discharge pipe convergent section	A,B C,D	1) With PMV 1, 2, 3 and 4 fully closed, apply pressure to the check joint of liquid pipe with nitrogen, and check the pressure at the check joint of discharge pipe. If the pressure at the check joint of discharge pipe increases, there is a leak from PMV1 (A), 2 (B) or 3 (C) and check valve of discharge pipe (D). Replace the troubled parts. 2) If the pressure does not increase, fully open outdoor PMV1 and 3 and check the pressure at the check joint of discharge pipe again. If the pressure increases, there is a leak from the check valve of discharge pipe (D). Replace the part.
Leakage of check valve in discharge pipe	E	3) With pressure applied to the check joint of discharge pipe with nitrogen, if gas escapes from the discharge pipe section of the disconnected compressor, there is a leak from the check valve of discharge pipe (E). Replace the part.
Clogging of SV3D valve Clogging of oil-return capillary Clogging of oil-return distributor	F	4) With pressure applied to the check joint of discharge pipe with nitrogen, manually open the SV3D valve. If gas does not escape from the suction pipe section of the disconnected compressor, the SV3D valve, oil-return capillary or oil-return distributor is clogged. Replace the part.




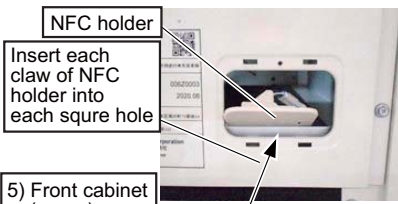
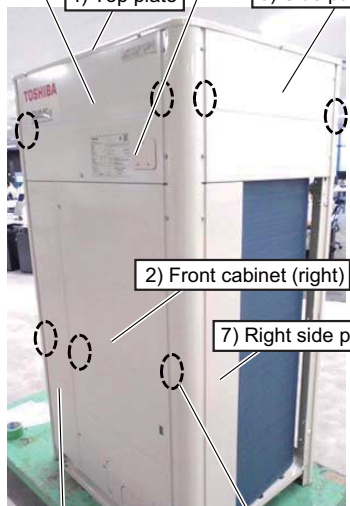






Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor
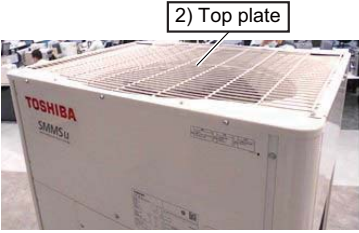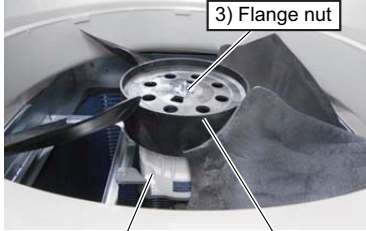
# 12. OUTDOOR UNIT PARTS REPLACEMENT METHODS








No.	Part	Work procedure	Remarks
1	Cabinet	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <hr/> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Stop the air conditioner operation, and turn off the circuit breaker.</li> <li>2) Remove the front cabinet (right). (M5 × 10 6 pcs)</li> <li>3) Remove the front cabinet (left). (M5 × 10 4 pcs)</li> <li>4) Remove the top plate. (M5 × 10 8 pcs) Front: 3 pcs, Back:3 pcs, Left and Right: 1 pcs each</li> <li>5) Remove the front cabinet (upper) (M5 × 10 5 pcs) <ul style="list-style-type: none"> <li>* Remove the NFC holder first (M4 × 10 1 pcs)</li> <li>• Remove the back side cabinet (upper). (M5 × 10 5 pcs)</li> </ul> </li> <li>6) Remove the side panel (right and left). Each (M5 × 10 4 pcs)</li> <li>7) Remove the right side panel. (Only 990W cabinet) (M5 × 10 5 pcs) <ul style="list-style-type: none"> <li>* Each cabinet has the hooks. Lift the cabinet to remove the hooks.</li> </ul> </li> </ol>	<p>NFC holder</p>  <p>Insert each claw of NFC holder into each square hole</p> <p>5) Front cabinet (upper)</p> <p>4) Top plate</p> <p>6) Side panel</p>  <p>2) Front cabinet (right)</p> <p>7) Right side panel</p> <p>3) Front cabinet (left)</p> <p>Hook</p> 
		<p><b>2. Attachment</b></p> <p>Carry out installation by following reverse procedure in the detachment 1) to 7).</p> <p>Hang the hooks into the slit on the metal frame to securely attach each cabinet.</p>	

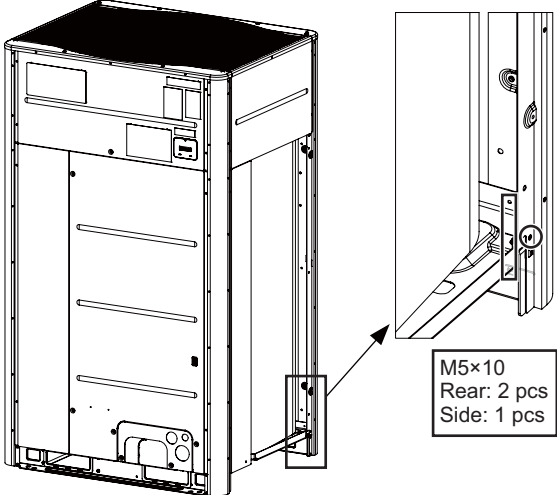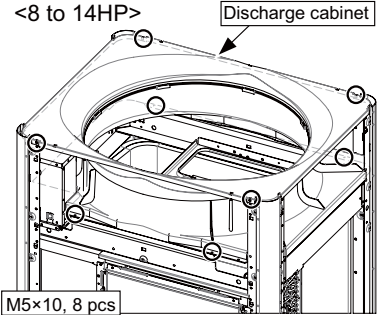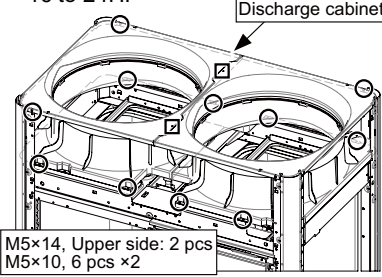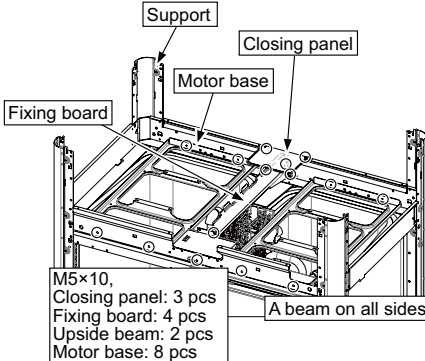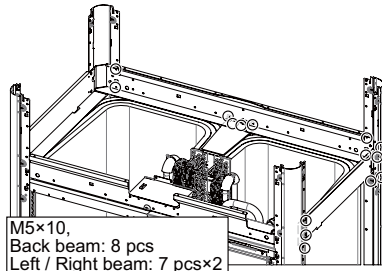



No.	Part	Work procedure	Remarks
2	Propeller fan and Fan motor	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <hr/> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Stop the air conditioner operation, and turn off the circuit breaker.</li> <li>2) Remove the screws for the top plate. (M5 × 10, 8 pcs: Front, 3 pcs. Back, 3 pcs. Left and Right, 1 pcs each.)</li> <li>3) Remove the flange nut securing the fan motor and propeller fan. (To loosen the nut, turn it clockwise.)</li> <li>4) Remove the square washer.</li> <li>5) Remove the propeller fan.</li> </ol> <p><b>⚠ CAUTION</b></p> <p>Lift it straight up. Do not forcibly pull it, or it may get stuck.</p> <hr/> <ol style="list-style-type: none"> <li>6) Disconnect the connectors for the fan motor leads from the Fan IPDU, and remove the fan motor leads. (Remove the wire clamp and binding band.)</li> <li>7) Remove the fan motor. (M6 × 20, 4 pcs )</li> </ol>	      
		<p><b>2. CAUTION for replacement or attachment</b></p> <ol style="list-style-type: none"> <li>1) Insert the propeller fan while aligning the D-cut surface of the fan motor shaft with the arrow mark (▲) on the fan. (If the propeller fan is tightly mounted on the shaft without securing alignment between the D-cut surface and the arrow mark (▲), it may cause the fan to melt and fall off due to friction heat.)</li> <li>2) Be sure to put the square washer in place. (Otherwise, unusual noises and vibrations may result.)</li> <li>3) Tighten the flange nut at a torque of 14.7 N•m. (To tighten the flange nut, turn it counterclockwise.) [When attaching two fan motors for 22, 24 HP] Be sure to attach them to the original positions. Fan motor 1: Attach it to the left side. Connect the fan motor connector to the upper fan P.C. board. Fan motor 2: Attach it to the right side. Connect the fan motor connector to the lower fan P.C. board.</li> </ol>	<p>1)</p>   <p>D-cut surface of fan motor shaft</p> <p>Arrow mark (▲) of fan To be aligned with D-cut surface</p>

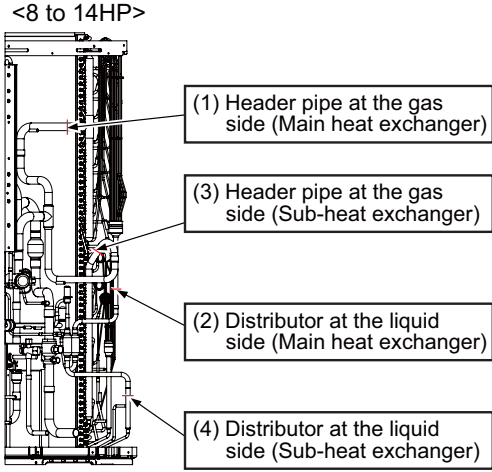
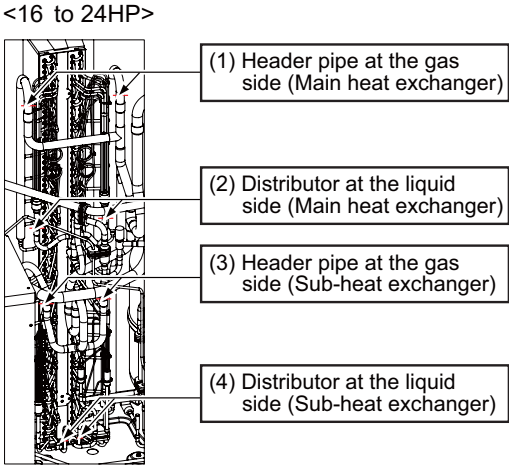
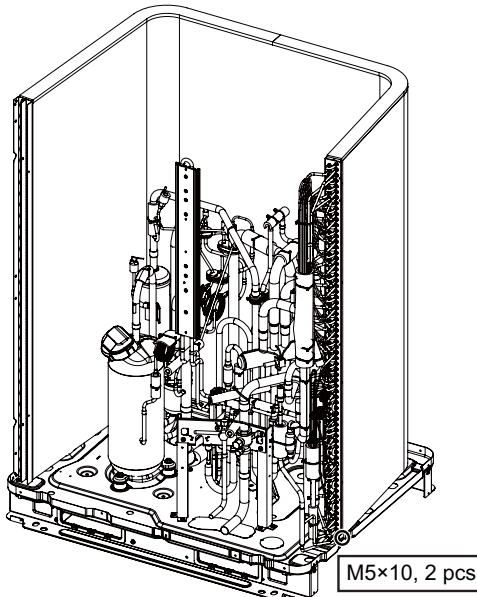
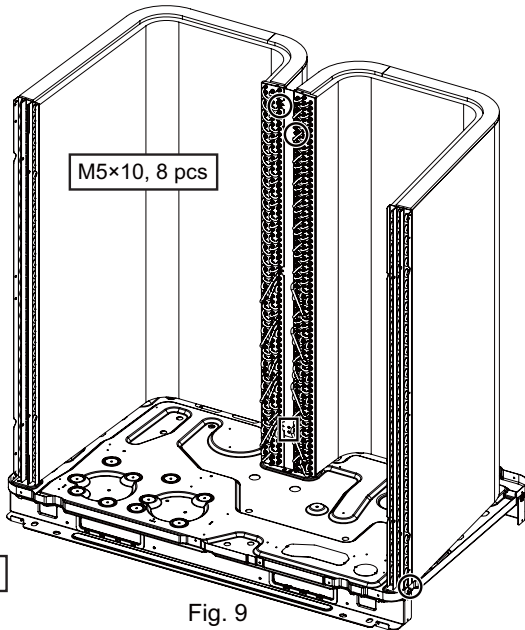



No.	Part	Work procedure	Remarks
3	Heat exchanger	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p><b>1. Detachment</b></p> <p>1) Remove No. 1. Cabinet, No.2. propeller fan/fan motor, and No. 5. Reactor. (Only 16~24HP)</p> <p>2) Remove the discharge cabinet, motor base, beams in four sides, and two rear supports.</p> <p>&lt;8 to 14HP(Fig.1)&gt;</p> <p>Discharge cabinet : Screws M5×10, 8 pcs  Motor base : M5×10, 4 pcs  Beams in four sides : M5×10, 21 pcs  Rear supports : M5×10, 6 pcs</p> <p>&lt;16 to 24HP(Fig.2 to 4)&gt;</p> <p>Discharge cabinet : M5×10, 12 pcs, M4×14, 2 pcs  Closing panel : M5×10, 3 pcs  Fixing board : M5×10, 3 pcs  Upper beams : M5×10, 2 pcs  Motor base : M5×10, 8 pcs  Beams in four sides : M5×10, 23 pcs  Rear supports : M5×10, 6 pcs</p>  <p style="text-align: center;">Fig. 5</p>	<p>&lt;8 to 14HP&gt;</p>  <p style="text-align: center;">Fig. 1</p> <p>&lt;16 to 24HP&gt;</p>  <p style="text-align: center;">Fig. 2</p>  <p style="text-align: center;">Fig. 3</p>  <p style="text-align: center;">Fig. 4</p>

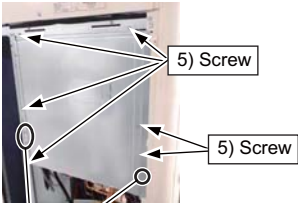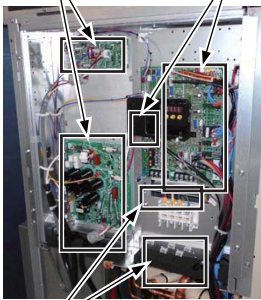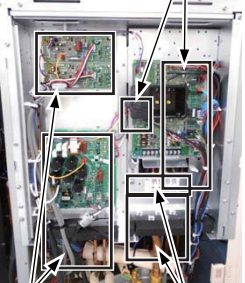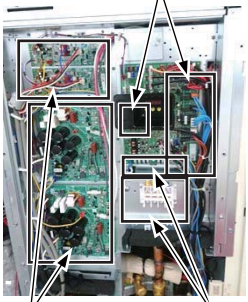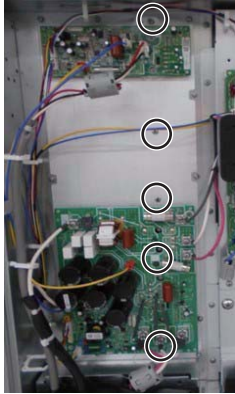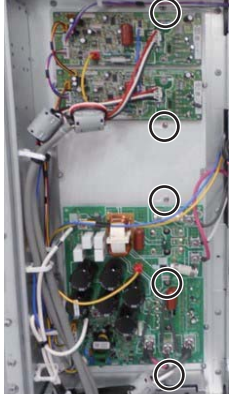No.	Part	Work procedure	Remarks
3	Heat exchanger (continued)	<p>3) Cut the pipes at the heat exchanger (Fig.6, Fig.7).</p> <div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>&lt;8 to 14HP&gt;</p>  <p>Fig. 6</p> </div> <div style="text-align: center;"> <p>&lt;16 to 24HP&gt;</p>  <p>Fig. 7</p> </div> </div> <p>4) Remove the heat exchanger while draw it upward or at rear side</p> <p>&lt;8 to 14HP (Fig.8)&gt; : M5 × 10, 2 pcs        &lt;16 to 24HP (Fig.9)&gt; : M5 × 10, 8 pcs</p> <div style="display: flex; justify-content: space-around; margin-top: 20px;"> <div style="text-align: center;">  <p>Fig. 8</p> </div> <div style="text-align: center;">  <p>Fig. 9</p> </div> </div>	
<p><b>2. Attachment</b>          Carry out installation by following reverse procedure in the detachment 1) to 4).</p>			



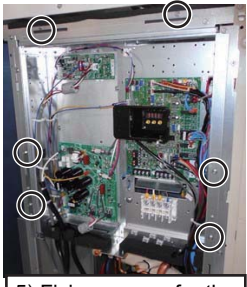


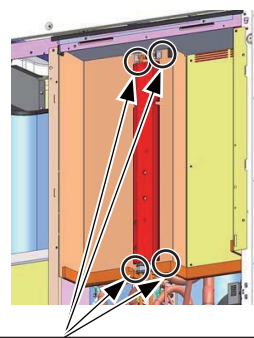

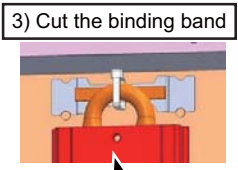
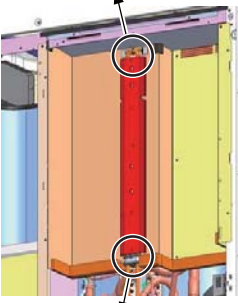
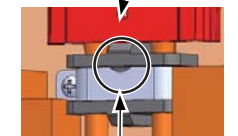
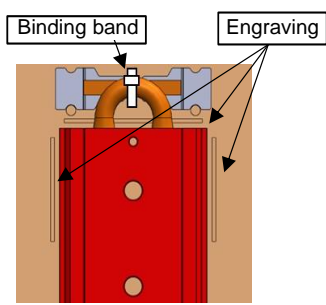
No.	Part	Work procedure	Remarks
4	Inverter assembly	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Stop the air conditioner operation, and turn off the circuit breaker.</li> <li>2) Remove the inverter cover. (M4 × 10, 2 pcs.)</li> <li>3) Remove the connectors and clamp, and remove each wire.</li> <li>4) Remove the fixing screws for the heat sink. (8 to 20 HP : M4 × 16, 5 pcs 22 to 24 HP : M4 × 16, 6 pcs) Tighten the screws removed to the hole next to upper and lower slotted hole to remove the heat sink</li> <li>5) Remove the fixing screws for the box. (M5 × 10, 4 pcs for right and left, 2 pcs for top)</li> <li>6) Lift up the box lightly to disengage the fixing hook at the right-lower part. (The lower part of the box comes out toward you.)</li> <li>7) Hold the top board with both hands to disengage the top hook.</li> </ol>	 <p>5) Screw</p> <p>5) Screw</p> <p>Fixing part : Screw slot hole (Tentative structure) * Loosen the screw without removing it.</p> <p>2) Screw for inverter cover</p> <p>3) Comp., FM, or Reactor lead</p> <p>3) Coil, sensor, heater, or NFC lead</p>  <p>3) Power supply Signal lead</p> <p>[8-14HP] Wiring position</p> <p>3) Coil, sensor, heater, or NFC lead</p>  <p>3) Comp., FM, or Reactor lead</p> <p>3) Power supply Signal lead</p> <p>[16-20HP] Wiring position</p> <p>3) Coil, sensor, heater, or NFC lead</p>  <p>3) Comp., FM, or Reactor lead</p> <p>3) Power supply Signal lead</p> <p>[22-24HP] Wiring position</p>  <p>[8-14HP] 4) Fixing screws for the heat sink (5 pcs)</p>  <p>[16-20HP] 4) Fixing screws for the heat sink (5 pcs)</p>  <p>[22-24HP] 4) Fixing screws for the heat sink (6 pcs)</p>






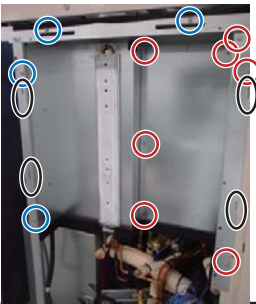
No.	Part	Work procedure	Remarks
4	Inverter assembly (continued)	<p><b>2. Attachment</b></p> <p>1) Carry out installation by following reverse procedure in the detachment 1) to 7).</p> <p><b>NOTE 1</b> Apply thickly the heat sink grease to the refrigerant cooling heat sink and install the inverter box. Return the wires to the original state. (Application amount : 100 to 200 <math>\mu\text{m}</math>) Heat dissipation grease (Part No. : 43167044)</p> <p><b>NOTE 2</b> If the refrigerant cooling heat sink is twisted significantly, adjust it so that it is parallel to the contact surface with the refrigerant cooling heat sink of the box; otherwise, poor contact may cause operation stop.</p> <p style="text-align: center;">Tightening torque of each fixing screws.</p> <div style="border: 1px solid black; border-radius: 15px; padding: 10px; margin: 10px auto; width: 80%;"> <p>Fix the following screws with the specified tightening torque.</p> <p>Power supply terminal block : 2.5 to 3.0 N•m  Earth terminal block : 5.5 to 6.6 N•m  Signal terminal block : 1.2 to 1.4 N•m  INV P.C.boardComp.fixing : 1.9 to 2.1 N•m  INV P.C.boardReactor fixing : 1.9 to 2.1 N•m  Refrigerant cooling heat sink fixed screw : 1.4 to 1.5 N•m</p> </div>	 <p>5) Fixing screws for the box (6 pcs). (Equal to 8-24HP)</p> <p>6) Disengage the fixing hook at the lower right. (Equal to 8-24HP)</p>  <p>7) Lift the inverter assembly lightly to disengage the upper hook (2 pcs), and remove the inverter assembly. (Equal to 8-24HP)</p>  <p>(NOTE1) Apply the the heat sink grease to the refrigerant cooling heat sink and install the inverter box.</p>  <p>(NOTE 2) Adjust the refrigerant cooling heat sink so that it is parallel to the heat sink on the box. Follow the size below for the space between the waterproof cover and the refrigerant cooling heat sink Top space : 4 to 6mm, Bottom space : 4 to 6mm</p>





No.	Part	Work procedure	Remarks
4	Waterproof cover assembly	<p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Stop the air conditioner operation, and turn off the circuit breaker.</li> <li>2) Remove the inverter assembly. (Refer to the detachment for No.4 inverter assembly.)</li> <li>3) Remove the binding band at the upper of the refrigerant cooling heat sink and the fixing rubber at the lower.</li> <li>4) Loosen the clamp at the left side of the waterproof cover (8-20HP : 2 pcs, 22-24HP : 3 pcs) to remove the fan motor and reactor.</li> <li>5) Remove the screws fixing right side of the cover and remove the two hooks hanged on the pillar. (M5 × 10, 7 pcs)</li> <li>6) Remove the screws fixing left side of the cover and two hooks hanged on the pillar, and remove the cover from the right side of the heat sink while turning the cover clockwise. (8 to 20HP : M5 × 10, 4 pcs 22 to 24HP : M5 × 10, 5 pcs)</li> </ol> <p><b>NOTE</b> Remove the refrigerant cooling heat sink with care not to bend it.</p> <p><b>2. Attachment</b></p> <ol style="list-style-type: none"> <li>1) Carry out installation by following reverse procedure in the detachment 1) to 5).</li> </ol> <p><b>NOTE</b> If the refrigerant cooling heat sink is twisted significantly, adjust it so that it is parallel to the contact surface with the refrigerant cooling heat sink of the box; otherwise, poor contact may cause operation stop.</p> <ol style="list-style-type: none"> <li>1) Carry out installation by following reverse procedure in the detachment 1) to 7).</li> </ol> <p><b>NOTE</b> Align the refrigerant cooling heat sink with the rib at the upper-center of the fixing rubber to install the fixing rubber for the heat sink.</p>	<p>3) Cut the binding band</p>    <p>Align the heat sink with the rib at the upper-center of the fixing rubber to install the fixing rubber.</p>  <p>Binding band      Engraving</p> <p>Fix the refrigerant cooling heat sink positioned along engraving of waterproof cover.</p> <p>3) Remove the screws (M4) and the clamp, and remove the fixing rubber.</p>  <p>4) Remove the fan motor and reactor lead from the clamp. (8-20HP : 2 pcs 22,24HP : 3 pcs)</p>  <p>6) Remove the left waterproof cover from the right side of the heat sink, while turning the cover clockwise.</p>  <p>Fixing the right waterproof cover 5) Fixing screw (Red) (8 to 24HP : 7 pcs) Hooking claw (Black : right 2 pcs) Fixing the left waterproof cover 5) Fixing screw (Blue) (8 to 20HP : 4 pcs, 22 to 24HP : 5 pcs) Hooking claw (Black : left 2 pcs)</p>


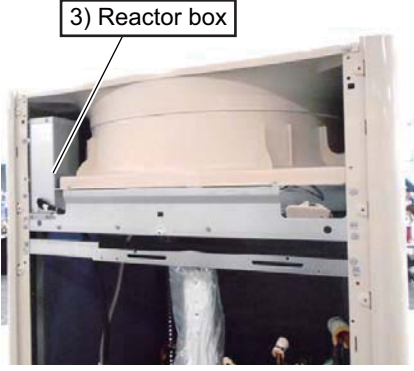
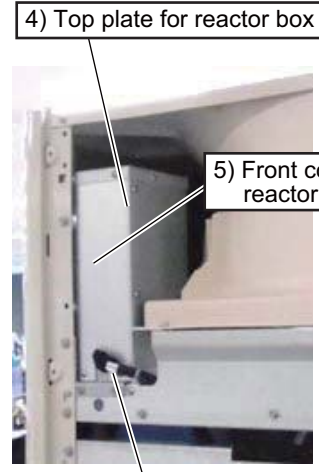
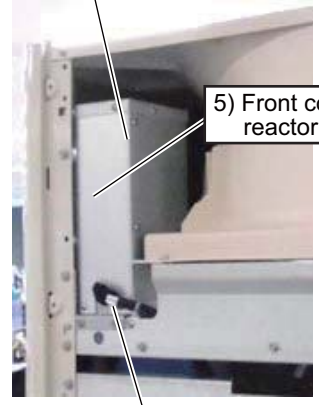


No.	Part	Work procedure	Remarks
5	Reactor assembly (8-14HP)	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Stop the air conditioner operation, and turn off the circuit breaker.</li> <li>2) Following to works 1) to 5) in 1 of No.1 Cabinet, remove the cabinets.</li> <li>3) Remove the screws for the reactor box. (M5 × 10 2 pcs)</li> <li>4) Remove the top plate for reactor box. (M4 × 8 3pcs)</li> <li>5) Remove the front cover for reactor box. (M4 × 8 4pcs, Hook at the left)</li> <li>6) Remove the reactor. (M4 × 8 2pcs, Hook at the left)</li> </ol>	    
		<p><b>2. Attachment</b></p> <p>Carry out installation by following reverse procedure in the detachment 1) to 7).</p> <p>Hook the hooks on each cabinet securely into the square holes in the supports.</p>	

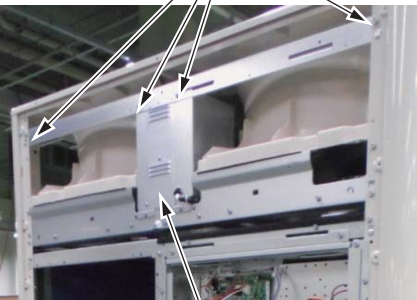
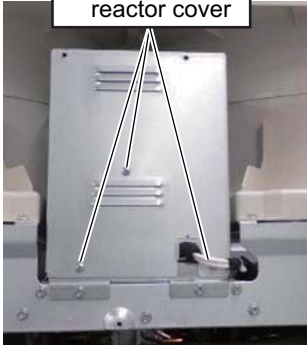
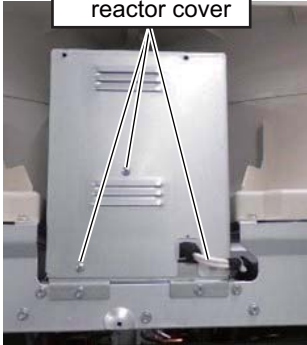
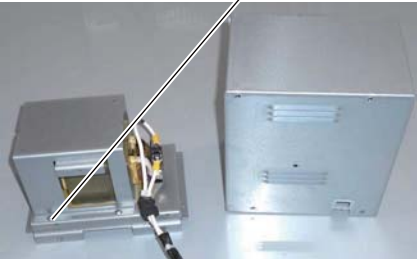
No.	Part	Work procedure	Remarks
5	Reactor assembly (16-24HP)	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Stop the air conditioner operation, and turn off the circuit breaker.</li> <li>2) Following to works 1) to 5) in 1 of No.1 Cabinet, remove the cabinets.</li> <li>3) Remove the screws for the fixed plate of reactor box. (M5 × 10, 4 pcs)</li> <li>4) Remove the screws for the reactor box, and draw the reactor box toward you. (M5 × 10, 2 pcs, Rear side is hooked)</li> <li>5) Remove the reactor cover. (M4 × 8, 6 pcs)</li> <li>6) Remove the reactor. (M4 × 8, 4 pcs)</li> </ol> <p><b>2. Attachment</b></p> <p>Carry out installation by following reverse procedure in the detachment 1) to 6).</p> <p>Hook the hooks on each cabinet securely into the square holes in the supports.</p> <p>[When attaching two reactors for 22, 24 HP] Be sure to wire the round type terminal leads to the specified reactors.</p> <p>Reactor 1: Wire the round type terminal lead without the black tape to the reactor 1.</p> <p>Reactor 2: Wire the round type terminal lead with the black tape to the reactor 2.</p>	<p>3) Fixed plate of reactor box</p>  <p>4) Screw for reactor box</p>  <p>5) Screws for reactor cover</p>  <p>6) Screw for reactor box</p> 

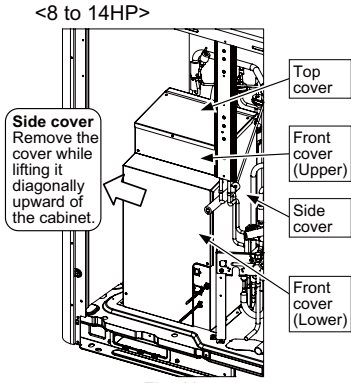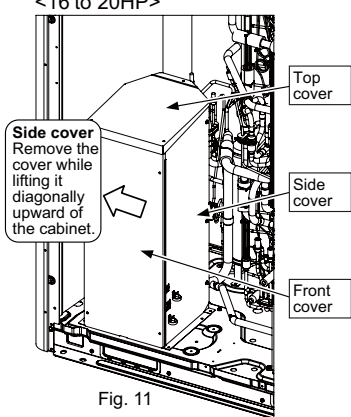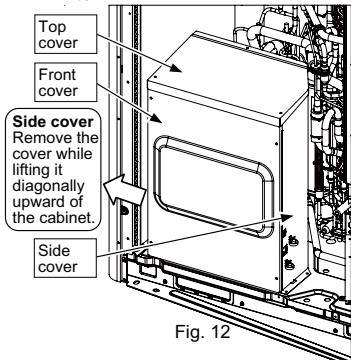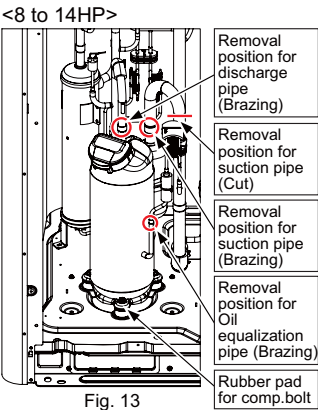
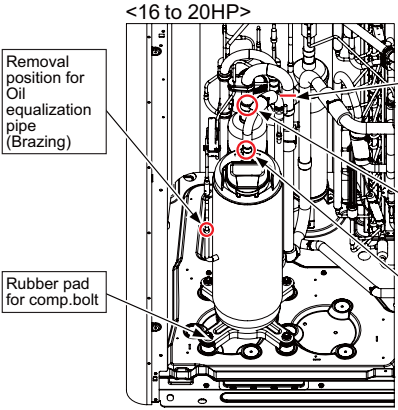
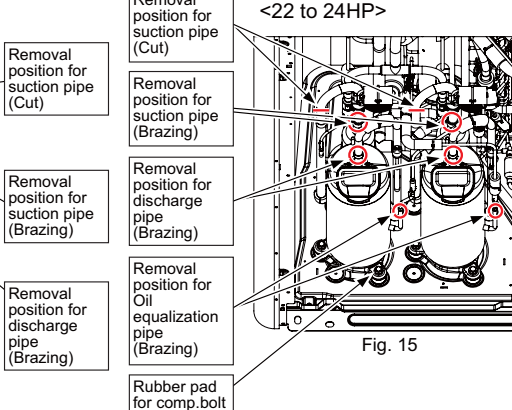
No.	Part	Work procedure	Remarks
6	Compressor	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <hr/> <p><b>1. Detachment</b></p> <p>1) Carry out work of No. 1 Cabinet and remove the compressor cover and soundproof materials.</p> <p><b>⚠ WARNING</b></p> <p>Be careful of burns. The compressor cover is very hot immediately after outdoor unit stops.</p> <hr/> <p>&lt;8 to 14HP (Fig.10)&gt;</p> <ul style="list-style-type: none"> <li>Remove the cover in order of top, front (upper), front (lower), and side.</li> <li>Screws for the compressor covers : M5 × 10, 8 pcs</li> <li>* Screws for the base plate and the comp. cover : M5 × 10, 4 pcs</li> </ul> <p>&lt;16 to 20HP (Fig.11)&gt;</p> <ul style="list-style-type: none"> <li>Remove the cover in order of top, front (upper), front (lower), and side.</li> <li>Screws for the compressor covers : M5 × 10, 7 pcs</li> <li>* Screws for the base plate and the comp. cover : M5 × 10, 5 pcs</li> </ul> <p>&lt;22 to 24HP (Fig.12)&gt;</p> <ul style="list-style-type: none"> <li>Remove the cover in order of top, front (upper), front (lower), and side.</li> <li>Screws for the compressor covers : M5 × 10, 7 pcs</li> <li>* Screws for the base plate and the comp. cover : M5 × 10, 4 pcs</li> <li>* Use the ratchet tools with its length adjusted to detach and attach the comp. cover if needed.</li> </ul> <p>2) Disconnect the compressor lead, case heater, temperature sensor (TD, TK), pipe cover, and pipe fixing rubber, or move them away from parts to be brazed to prevent them from being fired while brazing.</p> <p>3) Remove the pipes connected to the compressor in the order of oil equalizer pipe, discharge pipe, suction pipe*.</p> <ul style="list-style-type: none"> <li>* If the suction pipe cannot be removed through brazing, cut it at the position shown in the figure, and use the repair parts below to install the pipe.</li> </ul> <p>4) Remove the compressor bolts and anti-vibration take the compressor out of the unit.</p>	<p><b>Fig. 10</b></p>  <p><b>Fig. 11</b></p>  <p><b>Fig. 12</b></p> 
		<p><b>Fig. 13</b></p>  <p><b>Fig. 14</b></p>  <p><b>Fig. 15</b></p> 	

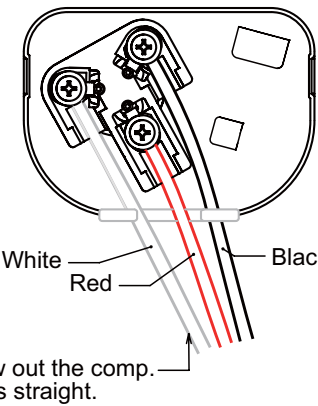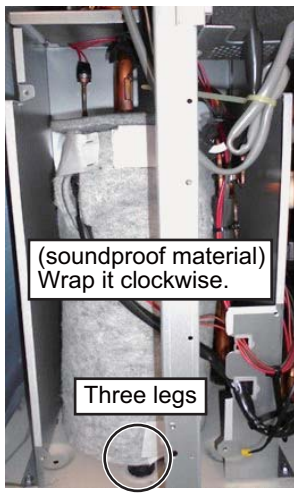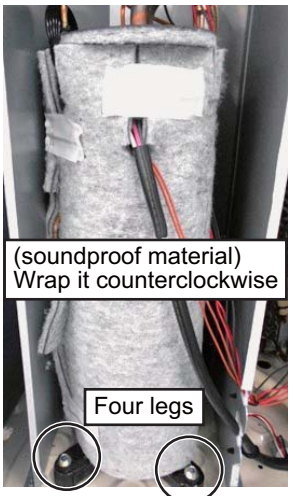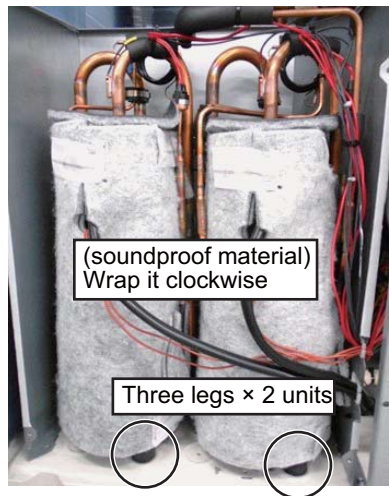No.	Part	Work procedure	Remarks	
6	Compressor (continued)	<p><b>2. Attachment</b></p> <ol style="list-style-type: none"> <li>1) Carry out installation by following reverse procedure in the detachment 1) to 4).</li> <li>2) Install the compressor and braze the pipes, and then install each wire around the compressor. (Comp.lead, Case heater, Temperature sensor (TD, TK)) Exchange a comp. leads together as replacing a compressors. * The right fig. 1 shows caution when the comp. leads are installed. <ul style="list-style-type: none"> <li>• Incorporate the terminal block into the compressor.</li> <li>• Bend each terminal at 90° while holding the terminal block so that it does not tilt.</li> <li>• To prevent the screws from being slanted, place the comp. leads in the specified position as shown in the figure, and then tighten the screw according to the following steps. <ol style="list-style-type: none"> <li>(1) Temporary tightening the screws by your hand.</li> <li>(2) Tighten the screws securely with an electric screwdriver.</li> <li>(3) Tighten them with the specified torque using a torque wrench driver. (2.5N•m)</li> </ol> </li> <li>* Do not screw the screws slantingly. Otherwise, the comp. leads may burn.</li> <li>• Insert the comp. leads into the sealing material, and attach the terminal cover so that they do not pinch with the terminal cover, and then draw out the comp. leads straightly.</li> <li>• Do not apply excessive stress to the comp. leads.</li> <li>• Do not put the protective tubes in the terminal cover.</li> <li>• Note that the leads do not touch the comp. shell.</li> </ul> </li> <li>3) Wrap the soundproof material*1 around the compressor and install the compressor cover *2. (Fig. 17 to 19)</li> </ol> <p>*1 Wrap the soundproof material around the compressor so that its bottom is put on the legs of the compressor.</p> <p>*2 Install the compressor cover so that pipes or wires around the comp. do not deform or are caught with the cover.</p>	 <p>[When attaching two compressors for 22, 24 HP] Be sure to wire the comp. lead to the specified compressors.</p> <p>Compressor 1: Wire the longer lead to the left compressor. Compressor 2: Wire the shorter lead to the right compressor.</p>	
		<p>&lt;8 to 14HP&gt;</p> 	<p>&lt;16 to 20HP&gt;</p> 	<p>&lt;22 to 24HP&gt;</p> 
		Fig. 17	Fig. 18	Fig. 19

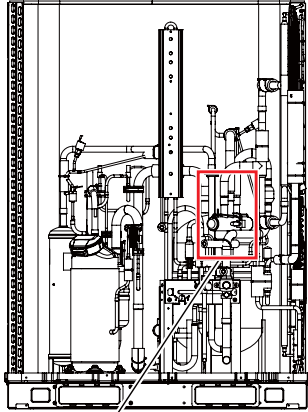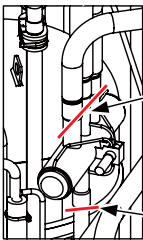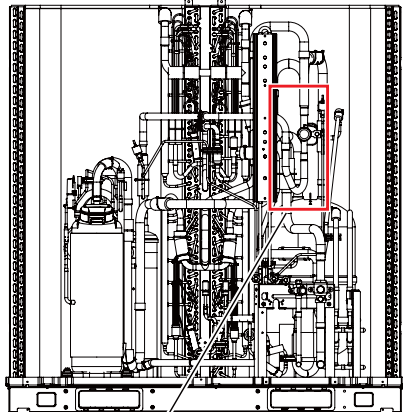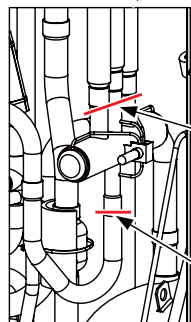No.	Part	Work procedure	Remarks
7	4-way valve - detachment/attachment	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <hr/> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Carry out work of No. 1 Cabinet and disconnect wires around 4-way valve or move them away from parts to be brazed to prevent them from being fired while brazing.</li> <li>2) Cut the C, S, or E pipes on the top of the four-way valve, and disconnect the D pipes on the bottom with brazing, and then remove the four-way valve.</li> </ol> <p><b>2. Attachment</b></p> <p>Carry out installation by following reverse procedure in the detachment 1) to 2).</p>	<p>&lt;8 to 14HP&gt;</p>   <p>4-way valve C,S,E (Cut)</p> <p>4-way valve D (Brazing)</p> <p>(Work procedure is the same as that of 8 to 14HP)</p> <p>&lt;16 to 24HP&gt;</p>   <p>4-way valve C,S,E (Cut)</p> <p>4-way valve D (Brazing)</p>

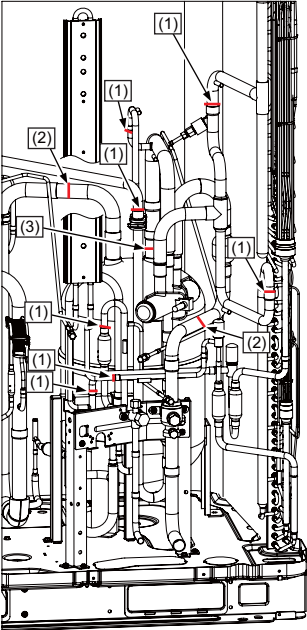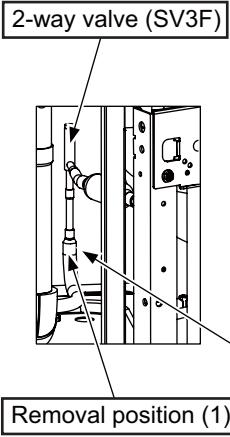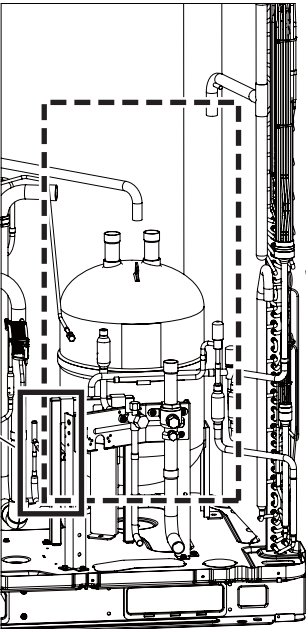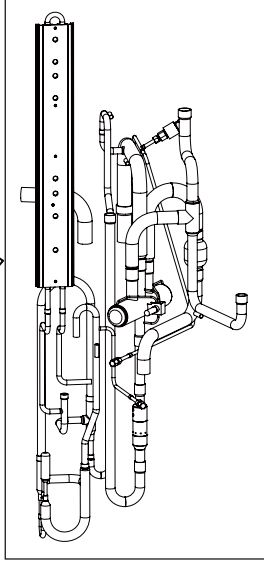

No.	Part	Work procedure	Remarks
8-1	Accumulator - detachment/ attachment <8 to 14HP>	<p><b>⚠ WARNING</b></p> <p>Wear a pair of gloves. Otherwise, you will risk an injury involving a replacement part or some other object.</p> <p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Carry out work of No. 1 Cabinet.</li> <li>2) Disconnect the wires, pipe fixing rubber, or pipe cover, or move them away from parts to be brazed to prevent them from being fired while brazing.</li> <li>3) Disconnect the pipe joints (1) with the burner, cut the pipes (Service parts*) (2) and (3) with the pipe cutter, to remove the accumulator as shown in the figure below. * Use the pipes in service parts for installation.</li> <li>4) Disconnect the pipe joint at the outlet side of the 2-way valve (SV3F) with the burner to take out the accumulator and the 2-way valve. Removing the inlet side joint of the 2-way valve (SV3F) may cause oil leak.</li> <li>5) Remove the oils in the tank so that they do not remain in the 2-way valve, and disconnect the pipe joint at the inlet side of the 2-way valve (SV3F) with the burner.</li> <li>6) Braze the 2-way valve piping to new accumulator to install the accumulator into the outdoor unit.</li> </ol> <p><b>2. Attachment</b></p> <p>Carry out installation by following reverse procedure in the detachment 1) to 4).</p>	 <p style="text-align: center;">Space after the pipes are removed at 3)</p> <div style="display: flex; justify-content: space-around;"> <div data-bbox="453 1352 683 1787">  <p>2-way valve (SV3F)</p> <p>Removal position (1)</p> </div> <div data-bbox="708 1272 1015 1899">  </div> <div data-bbox="1110 1240 1375 1841"> <p>Pipes to be removed at 3)</p>  </div> </div>

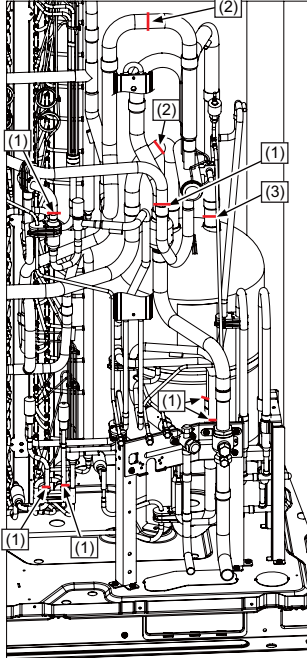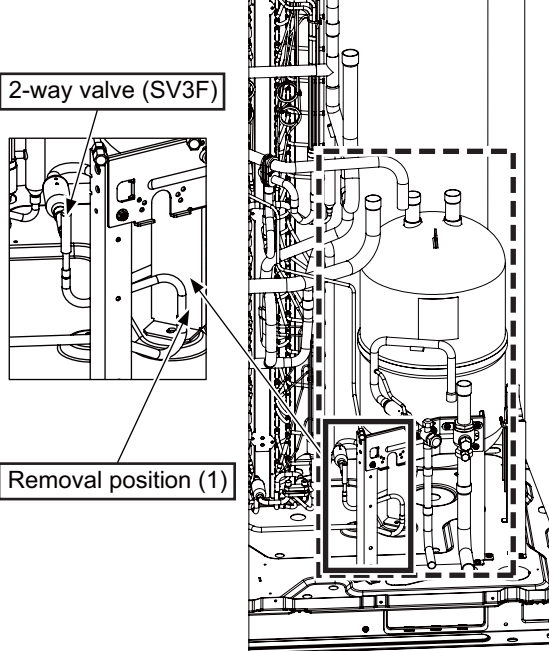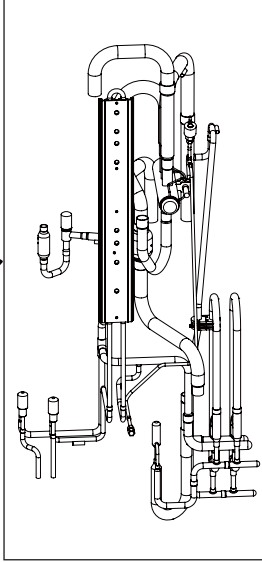No.	Part	Work procedure	Remarks
8-2	Accumulator - detachment/ attachment <16 to 24HP>	<p><b>1. Detachment</b></p> <ol style="list-style-type: none"> <li>1) Carry out work of No. 1 Cabinet.</li> <li>2) Disconnect the wires, pipe fixing rubber, or pipe cover, or move them away from parts to be brazed to prevent them from being fired while brazing.</li> <li>3) Disconnect the pipe joints (1) with the burner, cut the pipes (Service parts*) (2) and (3) with the pipe cutter, to remove the accumulator as shown in the figure below. * Use the pipes in service parts for installation. * Accessary specifications of the discharge pipe differ at 14 to 20HP and 22 to 24 HP. Check the service part table.</li> <li>4) Disconnect the pipe joint at the outlet side of the 2-way valve (SV3F) with the burner to take out the accumulator and the 2-way valve. Removing the inlet side joint of the 2-way valve (SV3F) may cause oil leak.</li> <li>5) Remove the oils in the tank so that they do not remain in the 2-way valve, and disconnect the pipe joint at the inlet side of the 2-way valve (SV3F) with the burner.</li> <li>6) Braze the 2-way valve piping to a new accumulator to install the accumulator into the outdoor unit.</li> </ol>	
		<p style="text-align: center;"><b>Space after the pipes are removed at 3)</b></p> 	<p style="text-align: center;"><b>Pipes to be removed at 3)</b></p> 
		<p><b>2. Attachment</b></p> <p>Carry out installation by following reverse procedure in the detachment 1) to 4).</p>	

# 13. P.C. BOARD EXCHANGE PROCEDURES

## 13-1. Replacement of outdoor P.C. board & Inverter Parts

### 13-1-1. List of service parts (Inverter)


Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60437	Power supply terminal block	MMY-MUP0801* MMY-MUP1001* MMY-MUP1201* MMY-MUP1401*	JXO-6004	TERMINAL (75A)	AC600V/75A,4P
43T6W888	Noise Filter P.C. board (1)		MCC-1748	ASM-S-PCB (N/F)	—
43T6W890	Interface P.C. board		MCC-1747	ASM-S-PCB (I/F)	—
43T6W892	Inverter P.C. board for Compressor (1)		MCC-1729	ASM-S-PCB (COMP)	50A
43T6W894	Inverter P.C. board for fan		MCC-1734	ASM-S-PCB (FAN)	—
43T52320	Magnet Contactor		FC-1S	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60437	Power supply terminal block	MMY-MUP1601* MMY-MUP1801* MMY-MUP2001*	JXO-6004	TERMINAL (75A)	AC600V/75A,4P
43T6W889	Noise Filter P.C. board (2)		MCC-1748	ASM-S-PCB (N/F)	—
43T55376	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43T6W890	Interface P.C. board		MCC-1747	ASM-S-PCB (I/F)	—
43T6W893	Inverter P.C. board for Compressor (2)		MCC-1729	ASM-S-PCB (COMP)	75A
43T6W894	Inverter P.C. board for fan		MCC-1734	ASM-S-PCB (FAN)	—
43T52322	Magnet Contactor		FC-2S	MAG CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V

Parts code	Description	Applicable model	Parts	Product code	Specifications
43T60437	Power supply terminal block	MMY-MUP2201* MMY-MUP2401*	JXO-6004	TERMINAL (75A)	AC600V/75A,4P
43T6W889	Noise Filter P.C. board (2)		MCC-1748	ASM-S-PCB (N/F)	—
43T55376	Line filter		—	LINE-FILTER	0.9mH/AC460V/50A
43T6W890	Interface P.C. board		MCC-1747	ASM-S-PCB (I/F)	—
43T6W892	Inverter P.C. board for Compressor (1)		MCC-1729	ASM-S-PCB (COMP)	50A
43T6W894	Inverter P.C. board for fan		MCC-1734	ASM-S-PCB (FAN)	—
43T52320	Magnet Contactor		FC-1S	MAG-CONTACTOR	—
43T50345	PTC Thermistor		MZ32-101R	THERMISTOR (PTC)	13A/AC500V



### 13-1-2. Configuration of inverter assembly

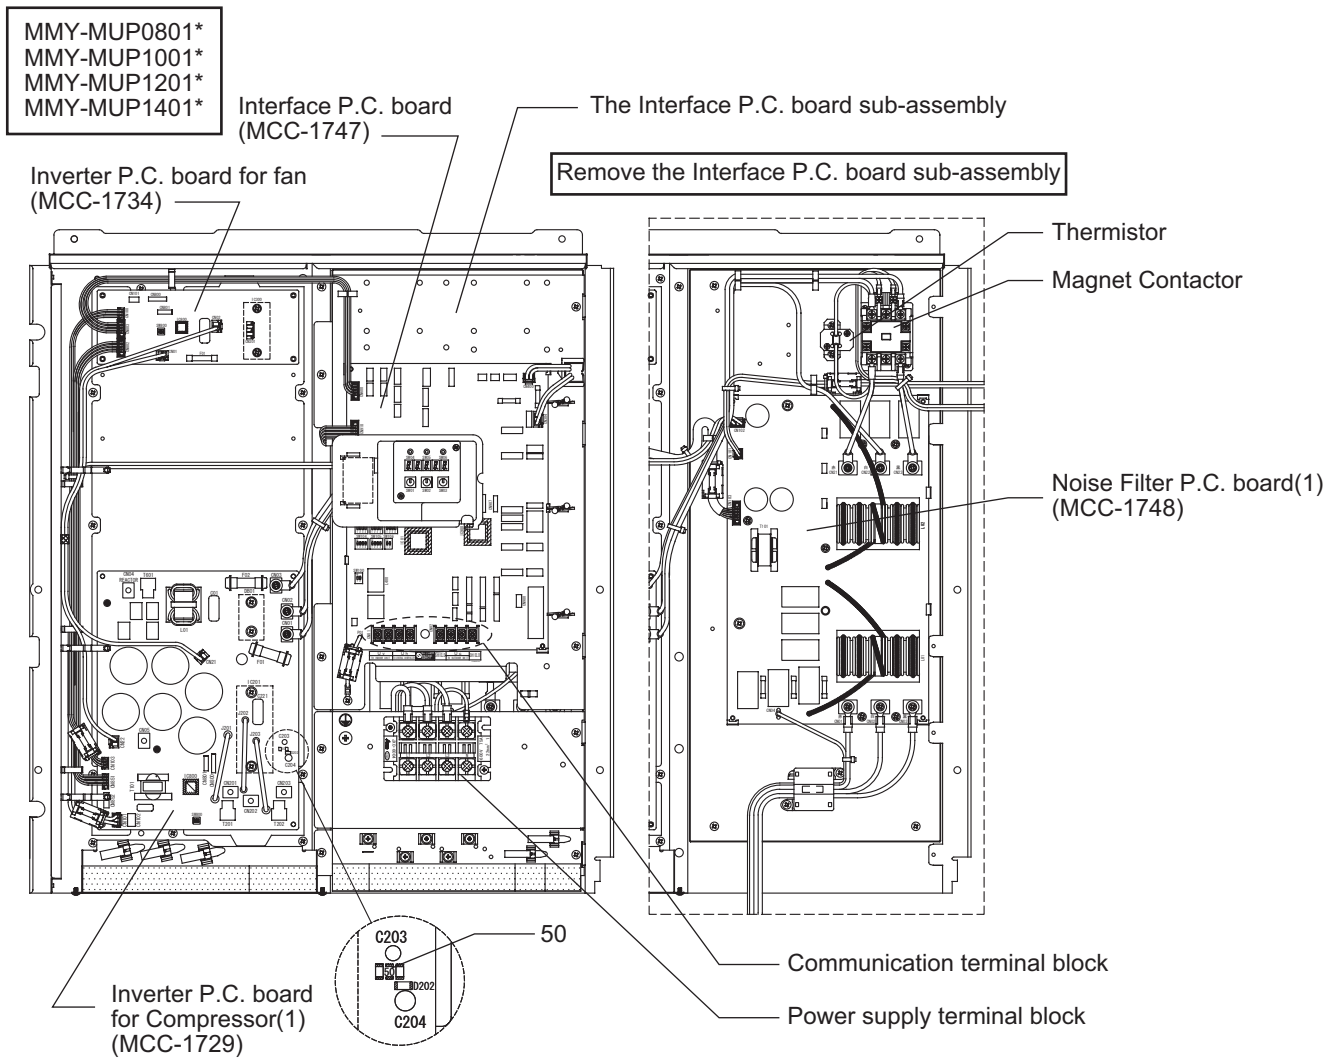

MMY-MUP1601\*  
 MMY-MUP1801\*  
 MMY-MUP2001\*



Interface P.C. board  
 (MCC-1747)

Inverter P.C. board for fan 2  
 (MCC-1734)

The Interface P.C. board sub-assembly

Inverter P.C. board for fan 1  
 (MCC-1734)

Remove the Interface P.C. board sub-assembly

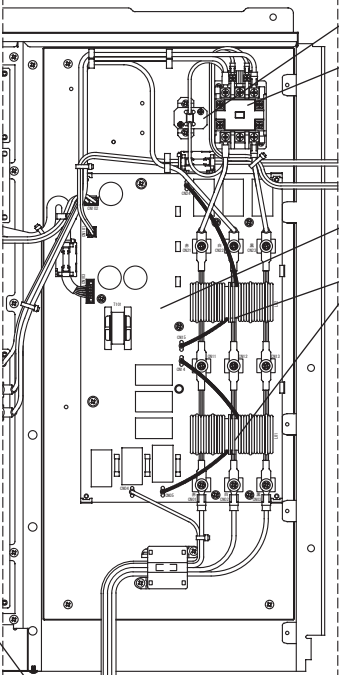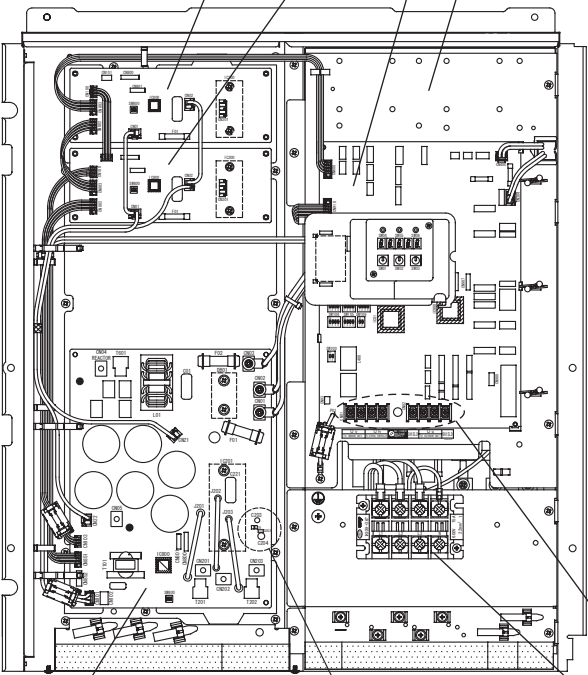


Thermistor

Magnet Contactor

Noise Filter P.C. board(2)  
 (MCC-1748)

Line Filter


Inverter P.C. board  
 for Compressor(2)  
 (MCC-1729)

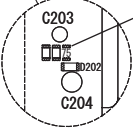

75

Communication terminal block

Power supply terminal block

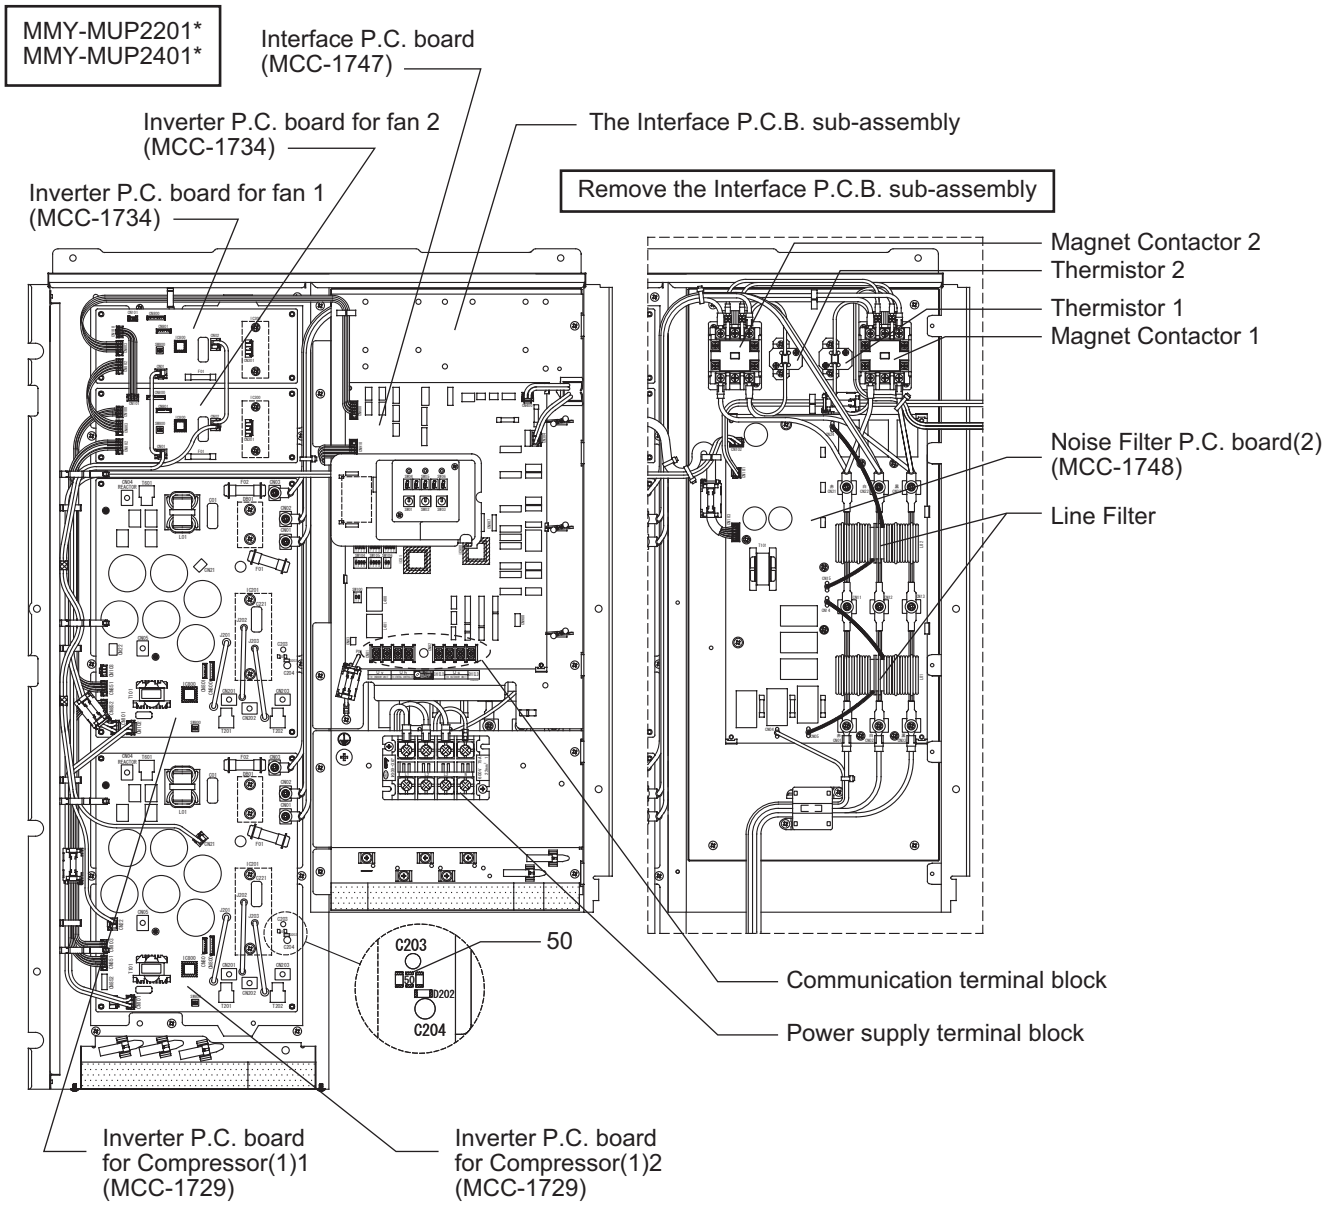


### 13-1-3. Interface P.C. Board (MCC-1747) Replacement Procedure

#### Subject part 43T6W890: ALL model

This Interface service P.C. board is commonly installed in different models. Please perform the change by a model after exchange of a service board.

#### Included item:

- ① MCC-1747 : 1pcs      ② Spacer : 4pcs      ③ Spacer : 2pcs      ④ Support : 1pcs

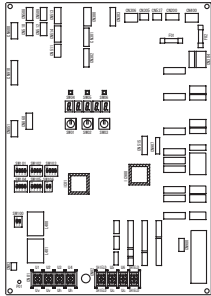

- ⑤ Bush : 3pcs




- ⑥ Short Connector : 1pcs




#### Replacement steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connectors and wiring for a screw terminal (⑦) which were connected to the interface P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove three screws (⑧:2pcs, ⑨:1pcs). (These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from the four spacers (②:4pcs, ③:2pcs)
- (5) Set the DIP switch settings of the service board to match the switch settings of the P.C. board being replaced.

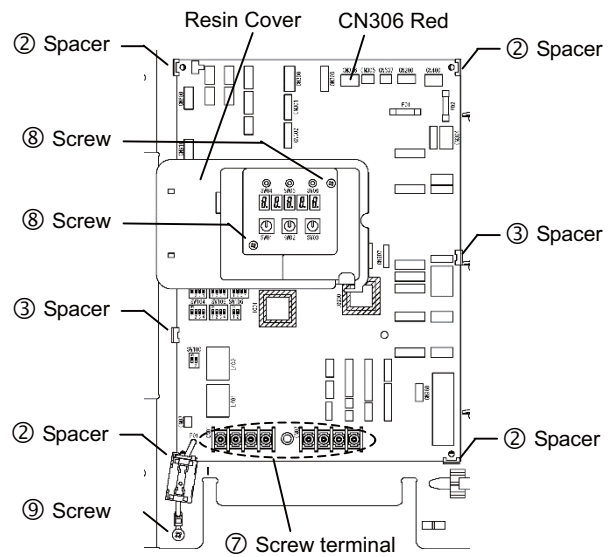

**Interface P. C. Board  
(43T6W890)**

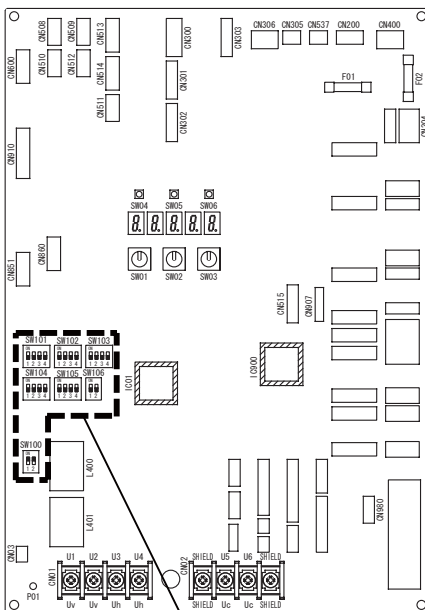

DIP Switch


- (6) Using a new spacer (②, ③), a support (④), and a bush (⑤), attach the service board.
- (7) Re-connect the connectors and resin cover, screws (⑧, ⑨), screw terminals (⑦). Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.

The torque of the screws


⑦	Screw terminals	M4 × 10	1.2N•m
⑧	Screw	M3 × 25	0.6N•m
⑨	Screw	M4 × 8	1.2N•m

- (8) The product with HP-SW2 should connect HP-SW2 to CN306. The product without HP-SW2 should connect a short connector to CN306.  
Caution: Please do not use a short connector for a product with HP-SW2. The protection circuit does not operate.
- (9) If a component on the P.C. board is bent during board replacement, adjust it manually ensuring that it is not short-circuited or contact other parts.
- (10) Install the cover, then turn on the power supply.

(11) "L10 : Outdoor capacity not set" check code is displayed on the 7-segment display.  
Perform a model change by the following flow.

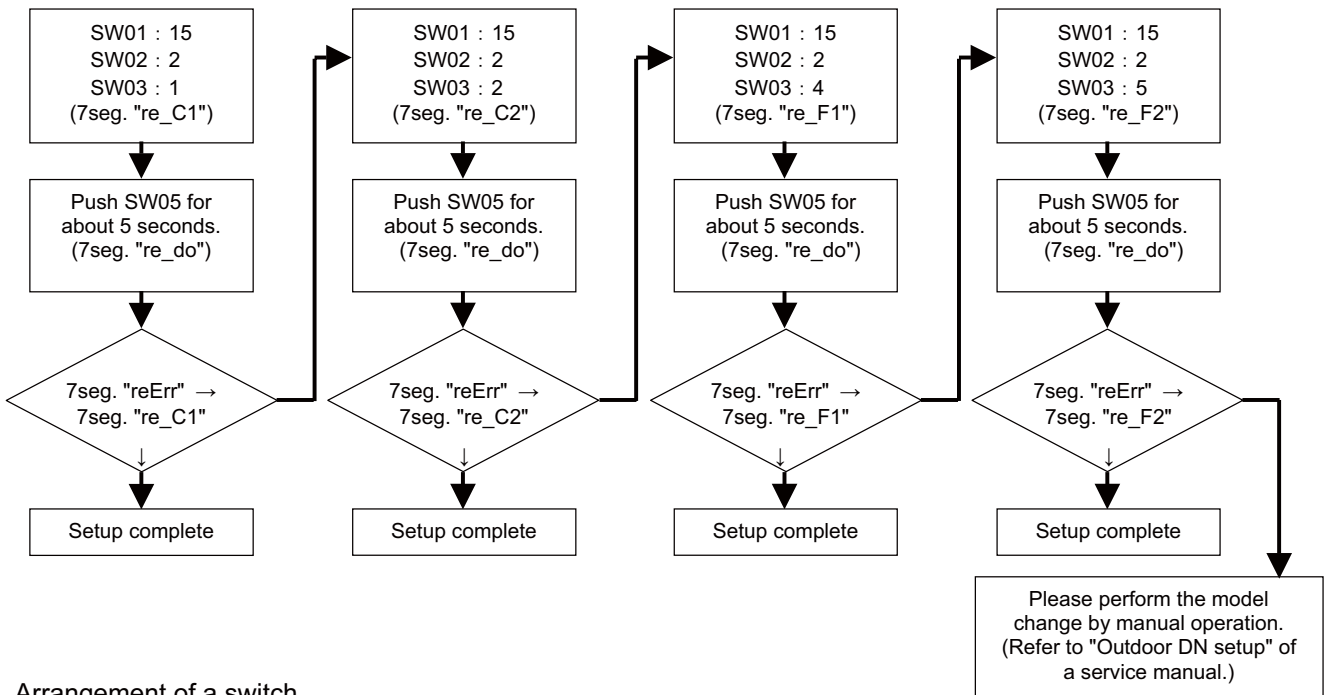

Arrangement of a switch

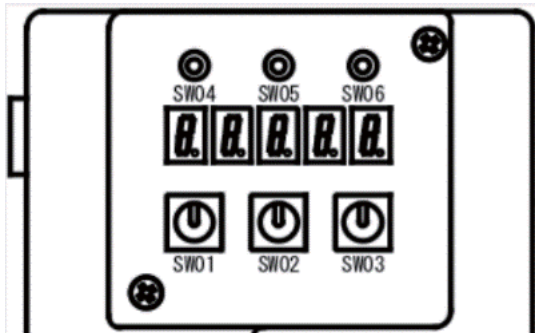

(12) Set SW01 : 1, SW02 : 1, SW03 : 1. Check the operation.


### 13-1-4. Compressor P.C. Board (MCC-1729) Replacement Procedure

Target model 43T6W892: MMY-MUP0801\*/1001\*/1201\*/1401\*  
MMY-MUP2201\*/2401\*  
43T6W893: MMY-MUP1601\*/1801\*/2001\*

This board is commonly installed in different models. Set the DIP switch (SW800) setting of the service board to the switch setting before replacement.


#### Included item:

- ① MCC-1729 : 1pcs
- ② Spacer : 4pcs
- ③ Bush : 2pcs
- ④ Collar : 2pcs

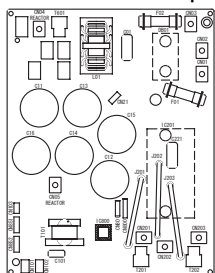


## Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connector and screw terminal (⑤ : 6pcs) which were connected to the Compressor P.C. board.  
(Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove six screws (⑥ : 4pcs, ⑦ : 2pcs).  
(These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from the four spacers (②) by round-nose pliers.

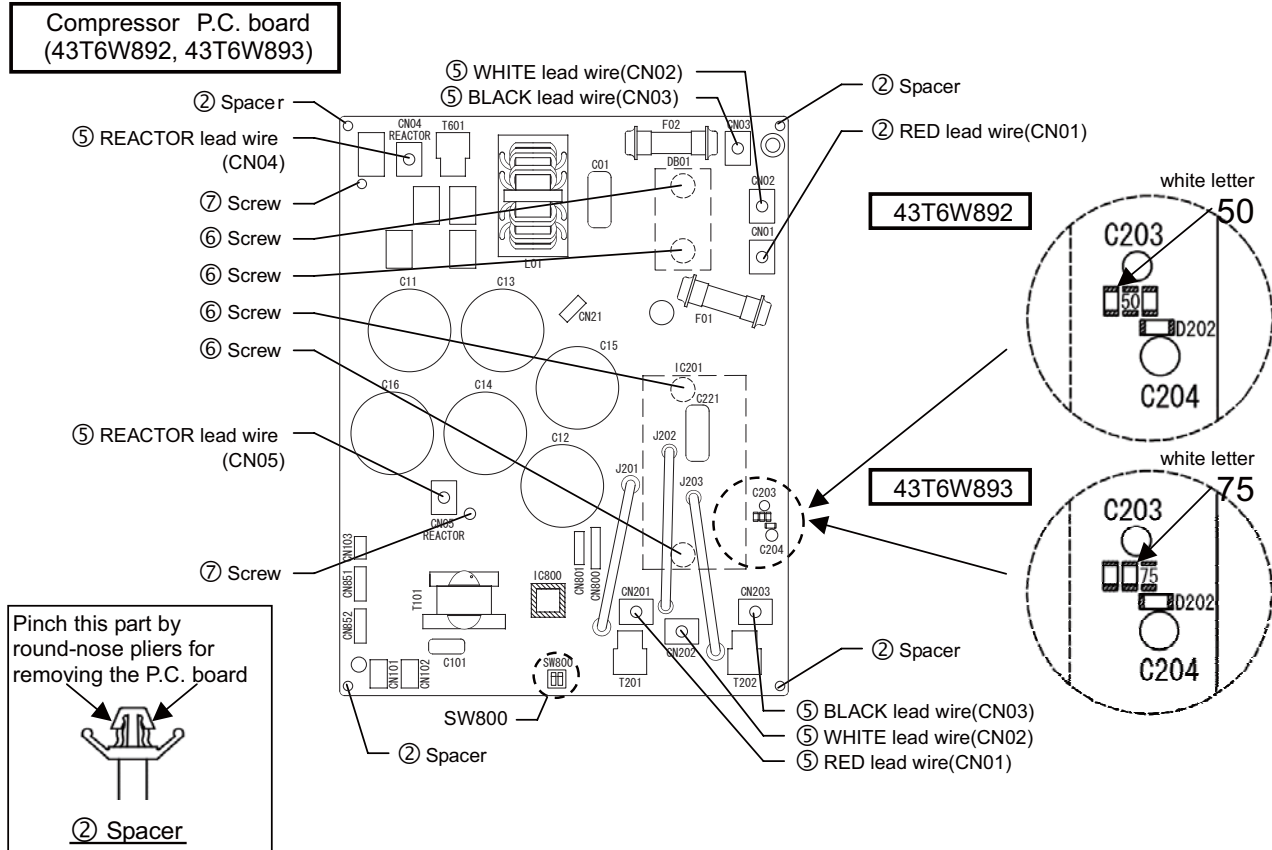

- (5) Set the SW800 setting of the service P.C. board to match the switch setting from the original P.C. board.
- (6) Exchange spacers (②) and attach collar (④) and bush (③) to the service P.C. board (①).

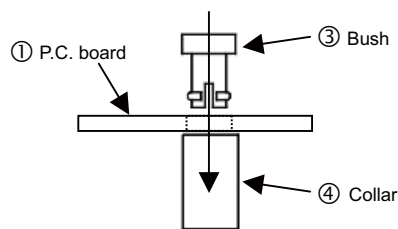

- (7) Apply the Silicone Thermal Grease to the semiconductors (DB01, IC201) on the service P.C. board, and align the positions of the heat sink holes to mount the Compressor P.C. board on the outdoor control unit. And fix the Compressor P.C. board to the outdoor control unit by the spacers (②).

Uniformly apply the Silicone Thermal Grease to the heat dissipating surfaces of the IPM (IC201) and rectifier (DB01).  
Note: Do this work carefully. Please do not soil or scratch the area which attaches the semiconductor of a heat sink.

Silicone Thermal Grease use one of the following

- Momentive Performance Materials "TIG1000"
- Dow Corning Toray "SC102"
- Mizutani Electric Ind "HSC1000"
- Shin-Etsu Chemical "G-746" or "G-747"

(8) Screw the Compressor P.C. board to the heat sink by the six screws (⑥, ⑦) that were removed in step (3). If the screws are loose, the semiconductors will generate heat, and cause it to breakdown. Do not use an electric driver or an air driver. The semiconductor may receive a damage.

The torque of the screws

⑤	Screw terminals	M5 × 10	2.0N•m
⑥	DB01, Q201	M4 × 15	1.2N•m
⑦	Collar and bush	M3 × 25	0.6N•m

(9) Re-connect the connectors and screw terminals (⑤). Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.

(10) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short-circuited or contact other parts.

(11) Install the cover, then turn on the supply. Check the operation.


### 13-1-5. Fan-Motor P.C. Board (MCC-1734) Replacement Procedure

Subject part 43T6W894: ALL model

This board is commonly installed in different models. Set the DIP switch (SW800) setting of the service board to the switch setting before replacement.

#### Included item:

① MCC-1734 : 1pcs

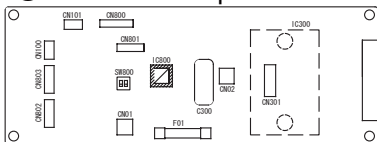

② Spacer : 4pcs



#### Replacement steps:

(1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.

(2) Remove all of the connector which were connected to the Fan-motor P.C. board. (Remove the connectors by pulling the connector body. Do not pull the wire.)


(3) Remove two screws (③). (These screws are to be re-used after procedure.)

(4) Remove the P.C. board from the four spacers (②) by round-nose pliers.

(5) Set the SW800 setting of the service P.C. board to match the switch setting from the original P.C. board.

(6) Apply the Silicone Thermal Grease to the semiconductors (IC300) on the service P.C. board, and align the positions of the heat sink holes to mount the Fan-motor P.C. board to the outdoor control unit by the spacers (②).

Fan-motor P.C. board (43T6W894)

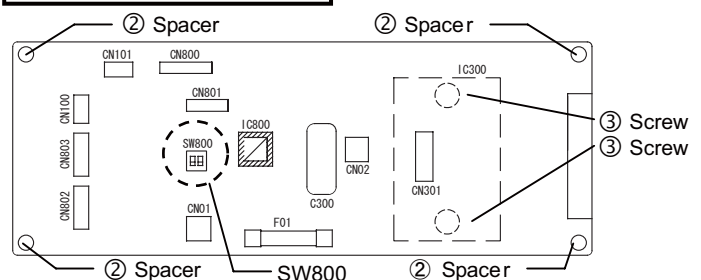

Pinch this part by round-nose pliers for removing the P.C. board



② Spacer



Uniformly apply the Silicone Thermal Grease to the heat dissipating surfaces of the IPM (IC300).  
Note: Do this work carefully. Please do not soil or scratch the area which attaches the semiconductor of a heat sink.

Silicone Thermal Grease use one of the following

- Momentive Performance Materials "TIG1000"
- Mizutani Electric Ind "HSC1000"
- Shin-Etsu Chemical "G-746" or "G-747"
- Dow Corning Toray "SC102"



- (8) Screw the Fan-motor P.C. board to the heat sink by the two screws (③) that were removed in step (3).  
If the screws are loose, the semiconductors will generate heat, and cause it to breakdown.  
Do not use an electric driver or an air driver.  
The semiconductor may receive a damage.

The torque of the screws

③	Screw	M3 × 14	0.6N•m
---	-------	---------	--------


- (9) Re-connect the connectors. Be sure that all the connectors are connected correctly and securely inserted.  
(10) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short-circuited or contact other parts.  
(11) Install the cover, then turn on the supply. Check the operation.

### 13-1-6. Noise Filter P.C. Board 1 (MCC-1748) Replacement Procedure

Subject part 43T6W888: MMY-MUP0801\*/1001\*/1201\*/1401\*

#### Included item:


- ① MCC-1748 : 1pcs    ② Spacer : 4pcs    ③ Spacer : 2pcs    ④ Bush : 6pcs

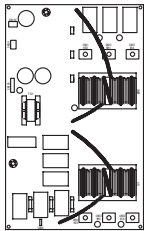

#### Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connector and solderless terminal tab (CN04), screw terminal (⑦ : 6pcs) which were connected to the Noise Filter P.C. board. Solderless terminal tab need to push lock pin. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove eight screws (⑤ : 6pcs, ⑥ : 2pcs). (These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from the four spacers (② : 4pcs, ③ : 2pcs).
- (5) Using a new spacer (②, ③), a bush (④), attach the service board.
- (6) Screw the Noise Filter P.C. board by the eight screws (⑤, ⑥) that were removed in step (3).
- (7) Re-connect the connectors and screw terminals (⑦), solderless terminal tab (CN04).  
Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.
- (10) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short-circuited or contact other parts.
- (11) Install the cover, then turn on the supply. Check the operation.

Noise Filter P.C. board  
(43T6W888)

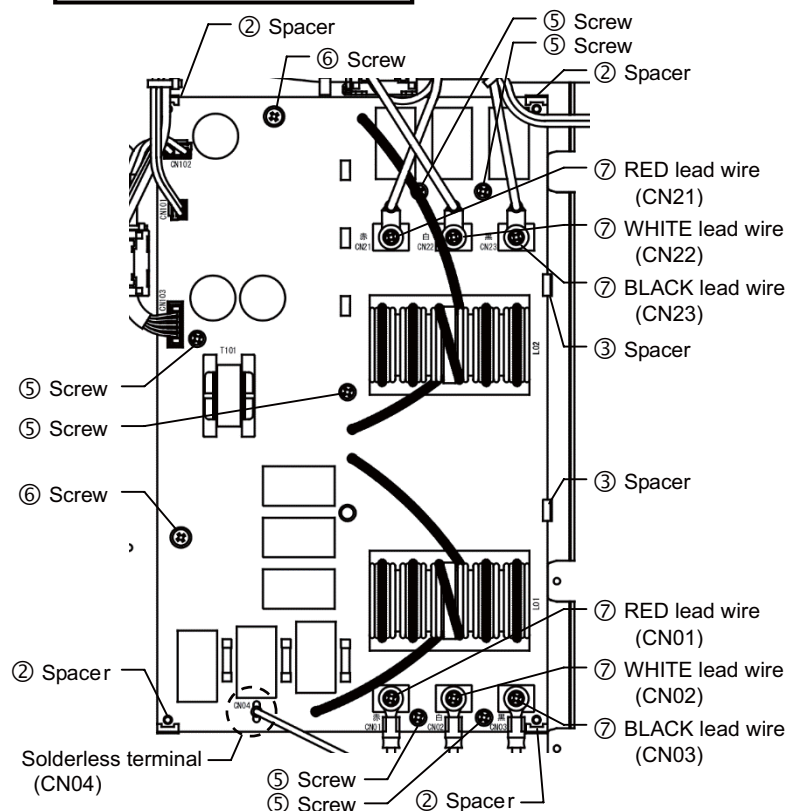

The torque of the screws

⑤	Screw	M3 × 18	0.6N•m
⑥	Screw	M4 × 8	1.2N•m
⑦	Screw terminals	M6 × 12	2.5N•m




## 13-1-7. Noise Filter P.C. Board 2 (MCC-1748) Replacement Procedure

Subject part 43T6W889: MMY-MUP1601\*/1801\*/2001\*/2201\*/2401\*

### Included item:



- ① MCC-1748 : 1pcs    ② Spacer : 4pcs    ③ Spacer : 2pcs    ④ Bush : 6pcs

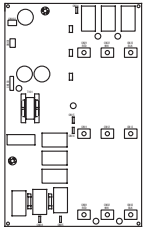

### Replacement Steps:

- (1) Turn off the power supply of the outdoor unit and wait at least 5 minutes for the capacitor to discharge.
- (2) Remove all of the connector and solderless terminal tab (CN04, CN05, CN14, CN15, CN24) screw terminal (⑦ : 9pcs), Line-Filter which were connected to the Noise Filter P.C. board. Solderless terminal tab need to push lock pin. (Remove the connectors by pulling the connector body. Do not pull the wire.)
- (3) Remove eight screws (⑤ : 6pcs, ⑥ : 2pcs). (These screws are to be re-used after procedure.)
- (4) Remove the P.C. board from the four spacers (② : 4pcs, ③ : 2pcs).
- (5) Using a new spacer (②, ③), a bush (④), attach the service board.
- (6) Screw the Noise Filter P.C. board by the eight screws (⑤, ⑥) that were removed in step (3).
- (7) Re-connect the connectors and screw terminals (⑦), Line-Filter, solderless terminal tab (CN04, CN05, CN14, CN15, CN24). Be sure that all the connectors and the screw terminals are connected correctly and securely inserted.
- (10) If the components on the P.C. board were bent during board replacement, adjust it manually ensuring that it is not short-circuited or contact other parts.
- (11) Install the cover, then turn on the supply. Check the operation.


Noise Filter P.C. board (43T6W889)

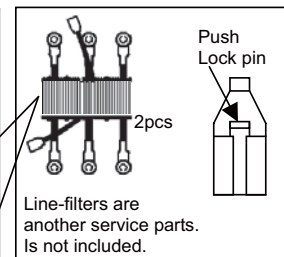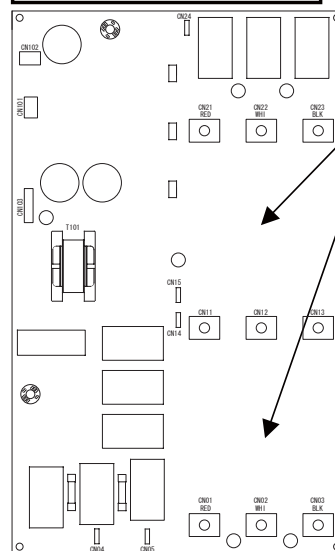

#### How to remove a Line-filter

- a) Remove the solderless terminal tab. (CN05, CN14, CN15, CN24)
- b) Remove the screw terminal. (CN01, CN02, CN03)
- c) Remove the screw (CN11, CN12, CN13), holding the lower Line-filter(L01).
- d) Remove the screw (CN21, CN22, CN23), holding the upper Line-filter (L02).

\*L01 and L02 are the same parts.

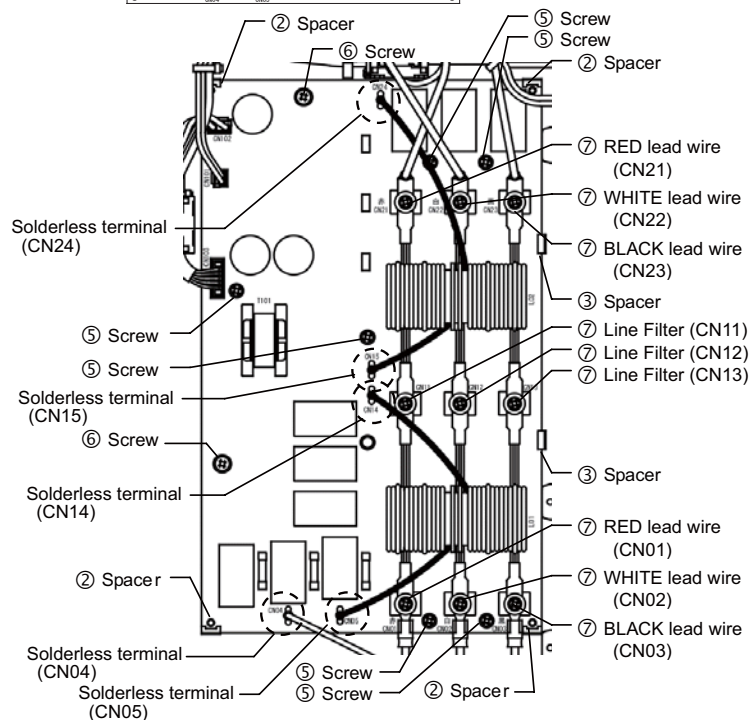


The torque of the screws

⑤	Screw	M3 × 18	0.6N•m
⑥	Screw	M4 × 8	1.2N•m
⑦	Screw terminals	M6 × 12	2.5N•m



# 14. EXPLODED DIAGRAM/PARTS LIST

## 14-1. Outdoor unit (8, 10, 12, 14HP)

MMY-MUP0801\*  
MMY-MUP1001\*  
MMY-MUP1201\*  
MMY-MUP1401\*

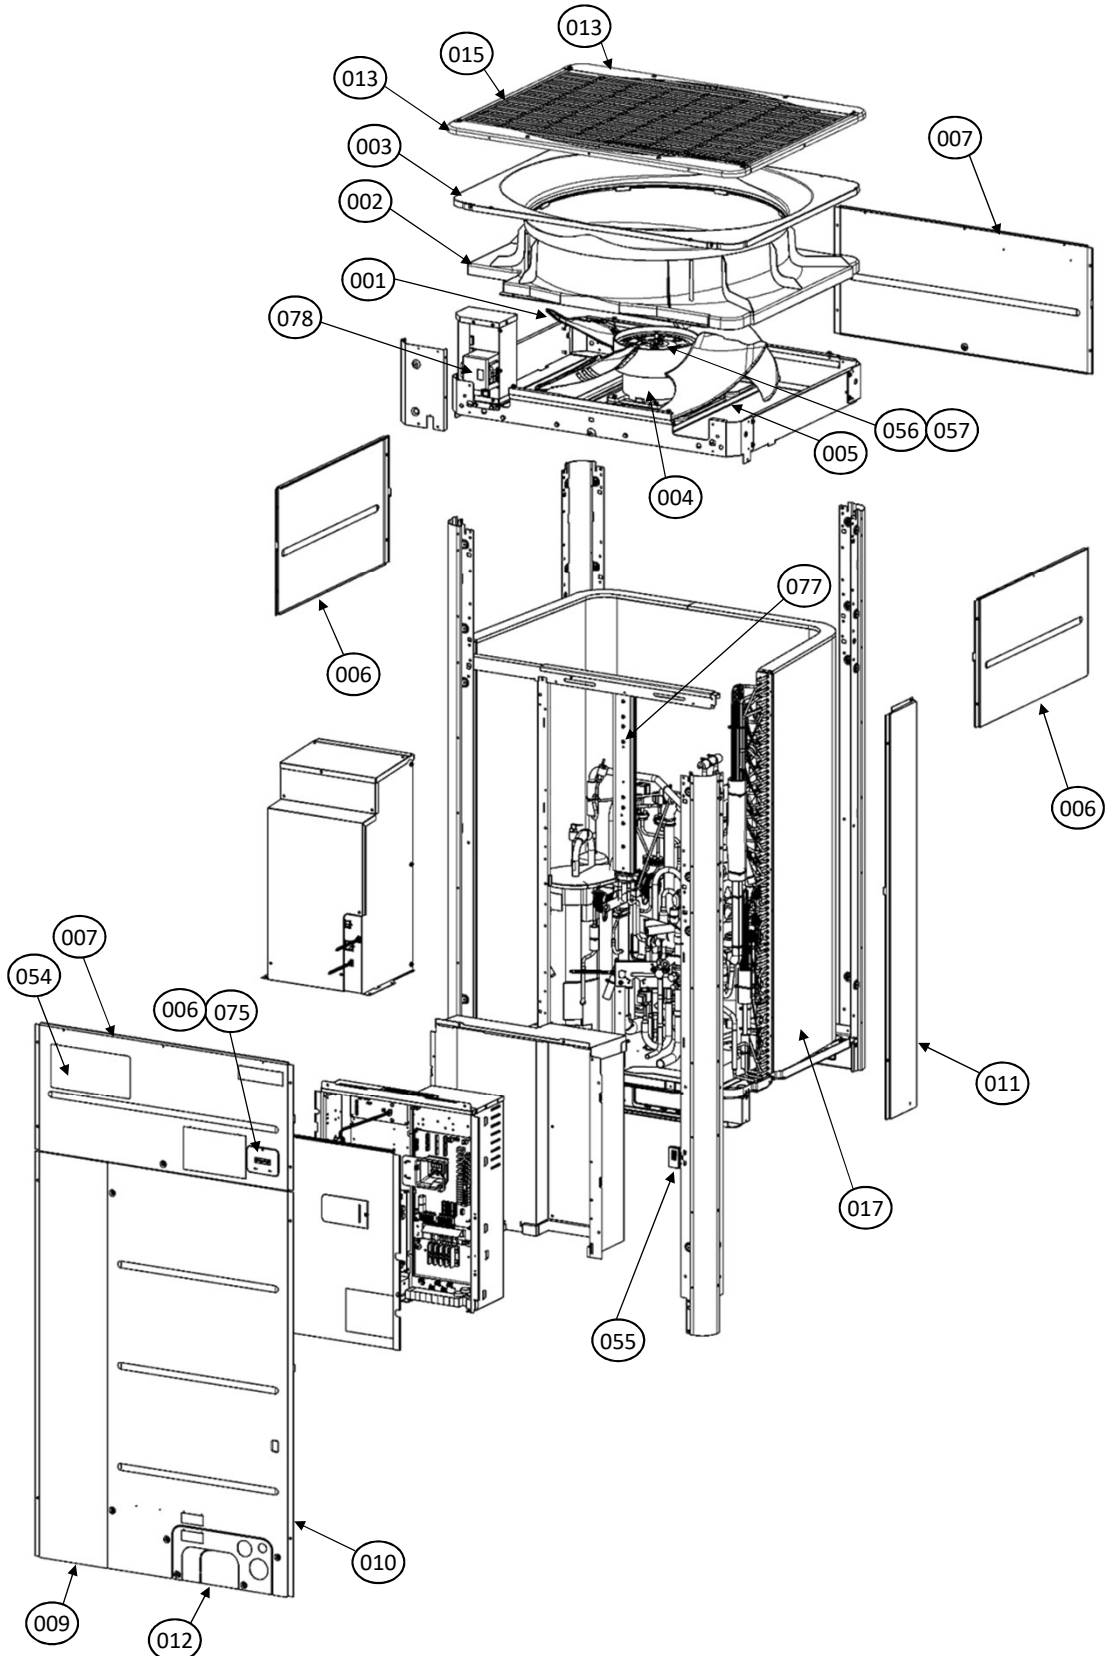


For MMY-MUP0801\*, MMY-MUP1001\*, MMY-MUP1201\*,  
 MMY-MUP1401\* model

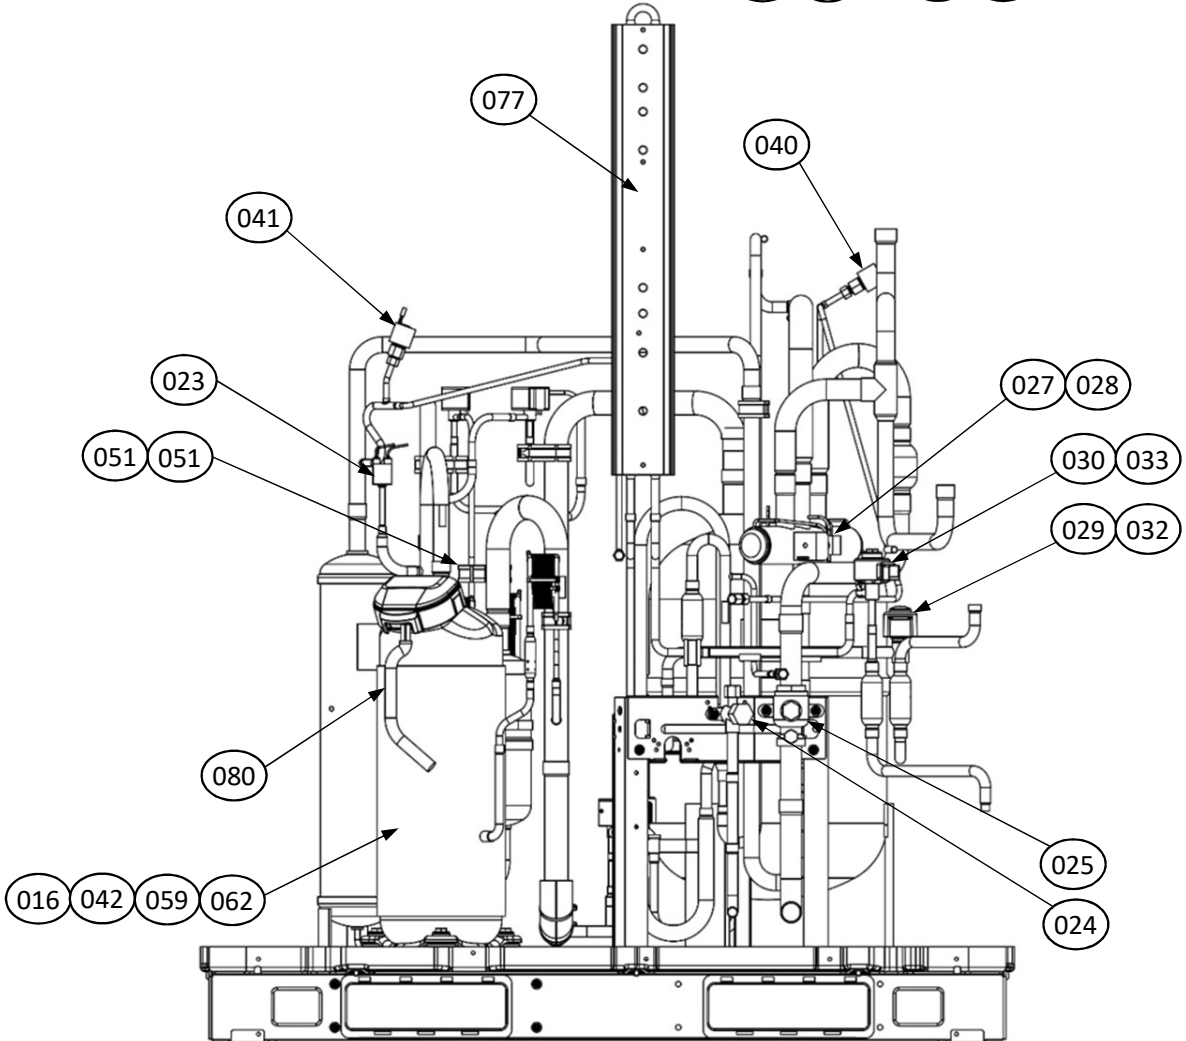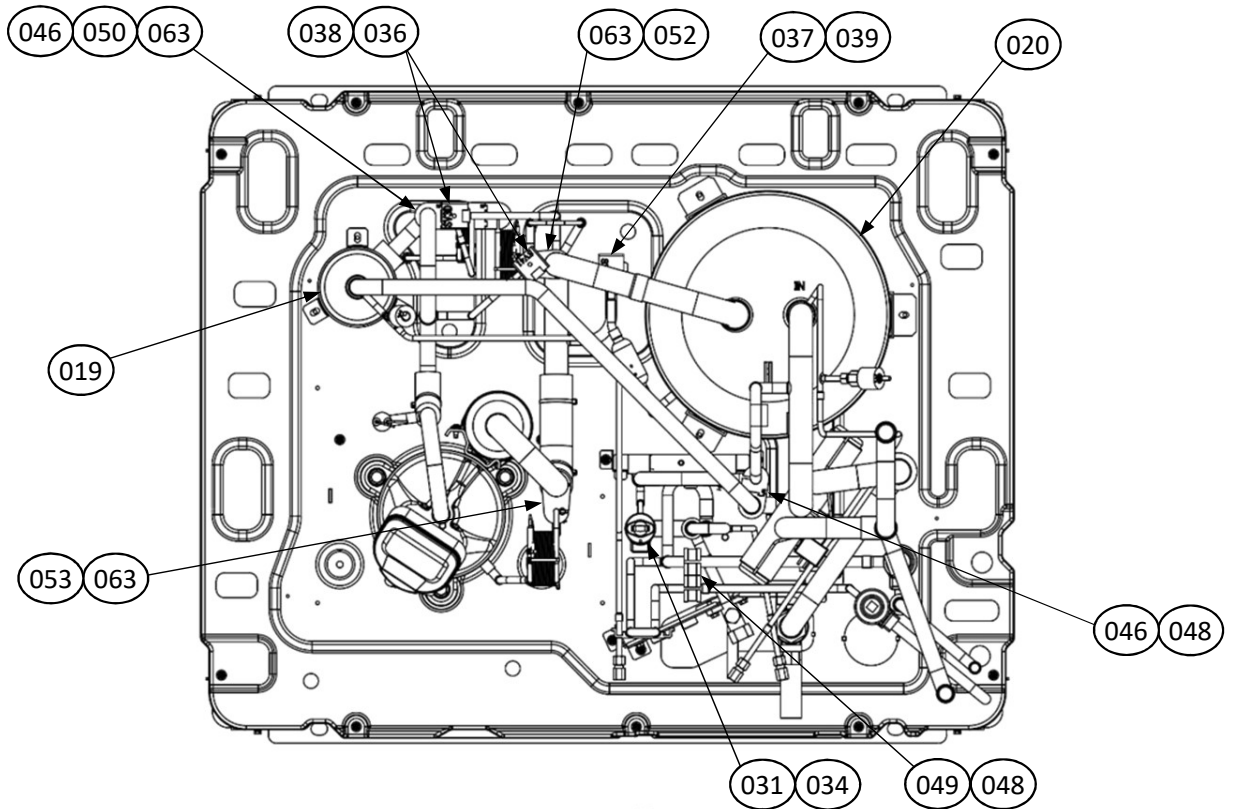

# Outdoor Unit (8, 10, 12, 14HP)


Model: MMY-MUP0801\*, MUP1001\*, MUP1201\*, MUP1401\*

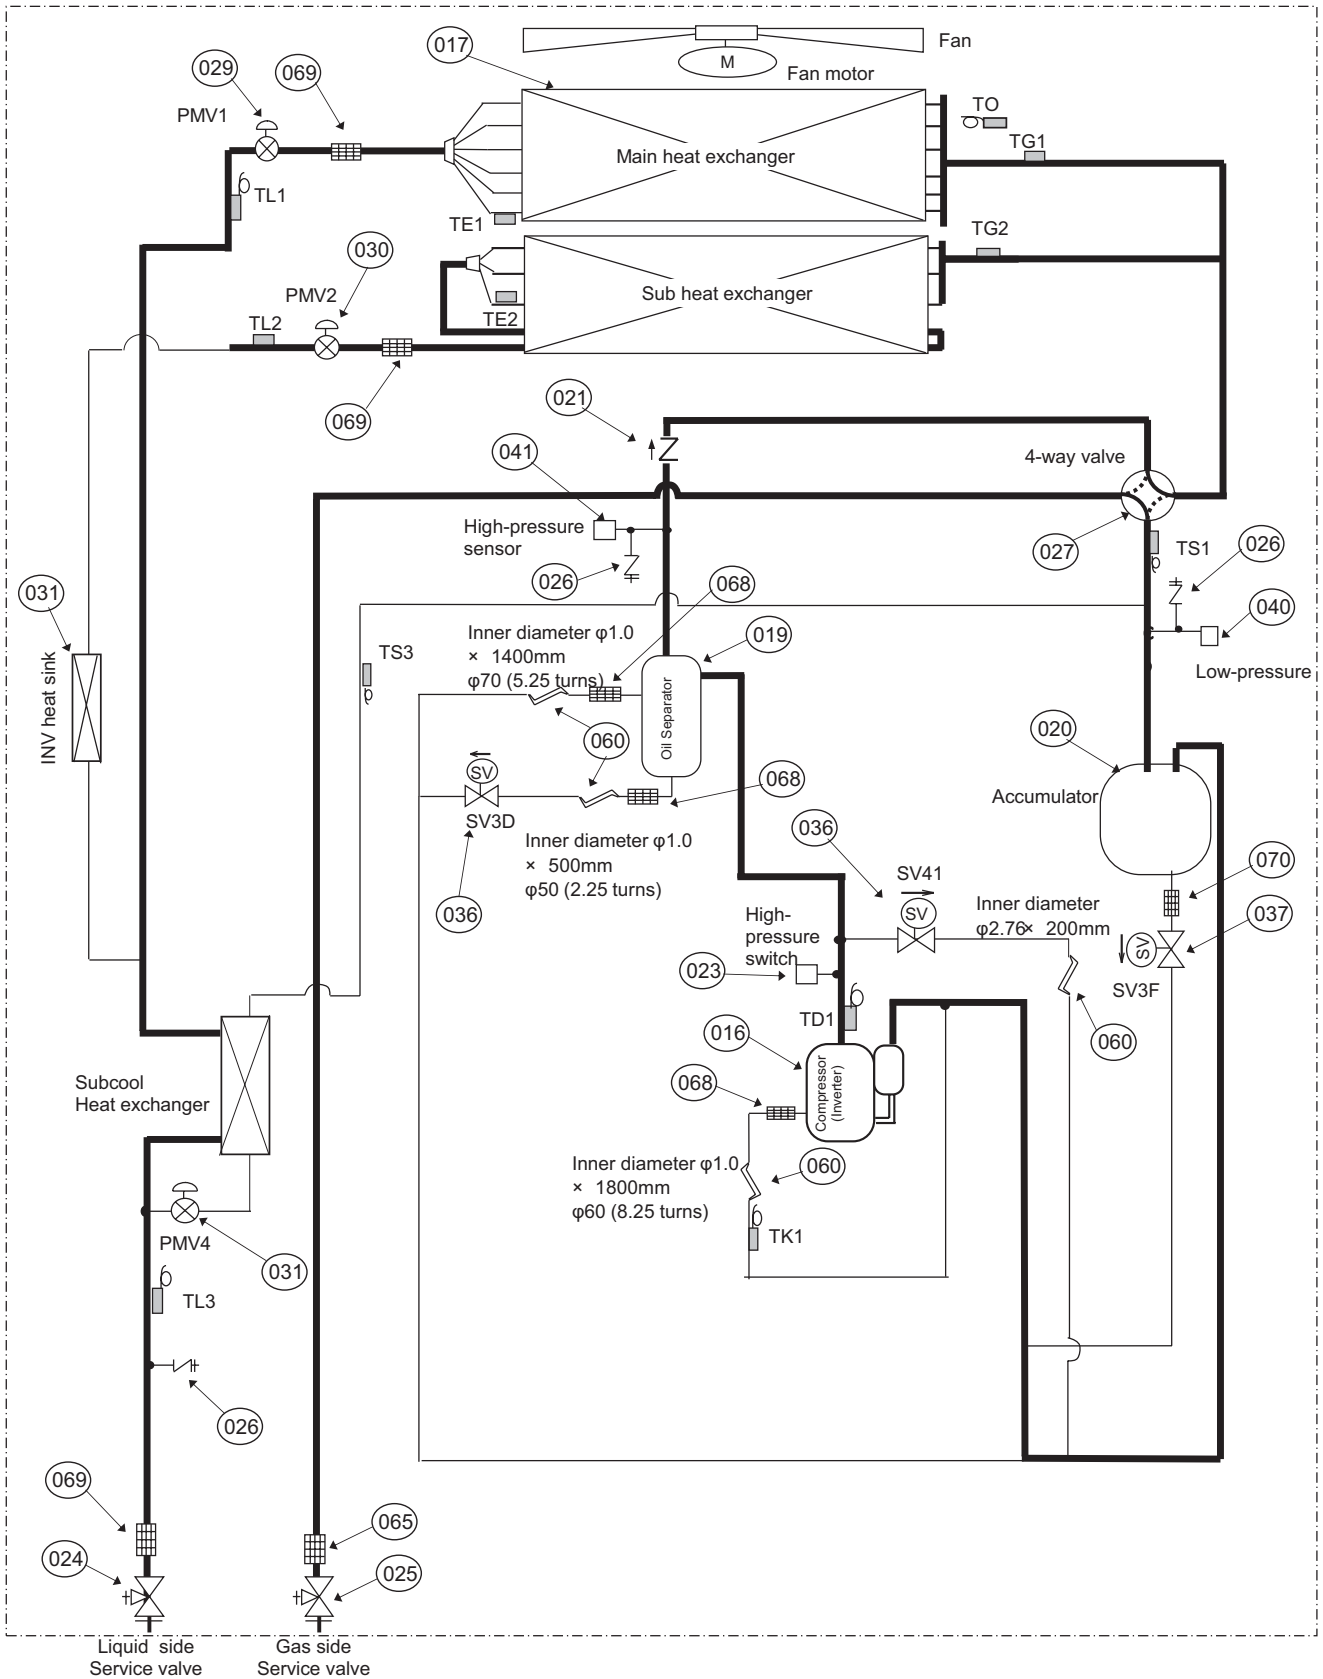



Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

## 14-2. Outdoor unit (16, 18, 20HP)

MMY-MUP1601\*  
MMY-MUP1801\*  
MMY-MUP2001\*

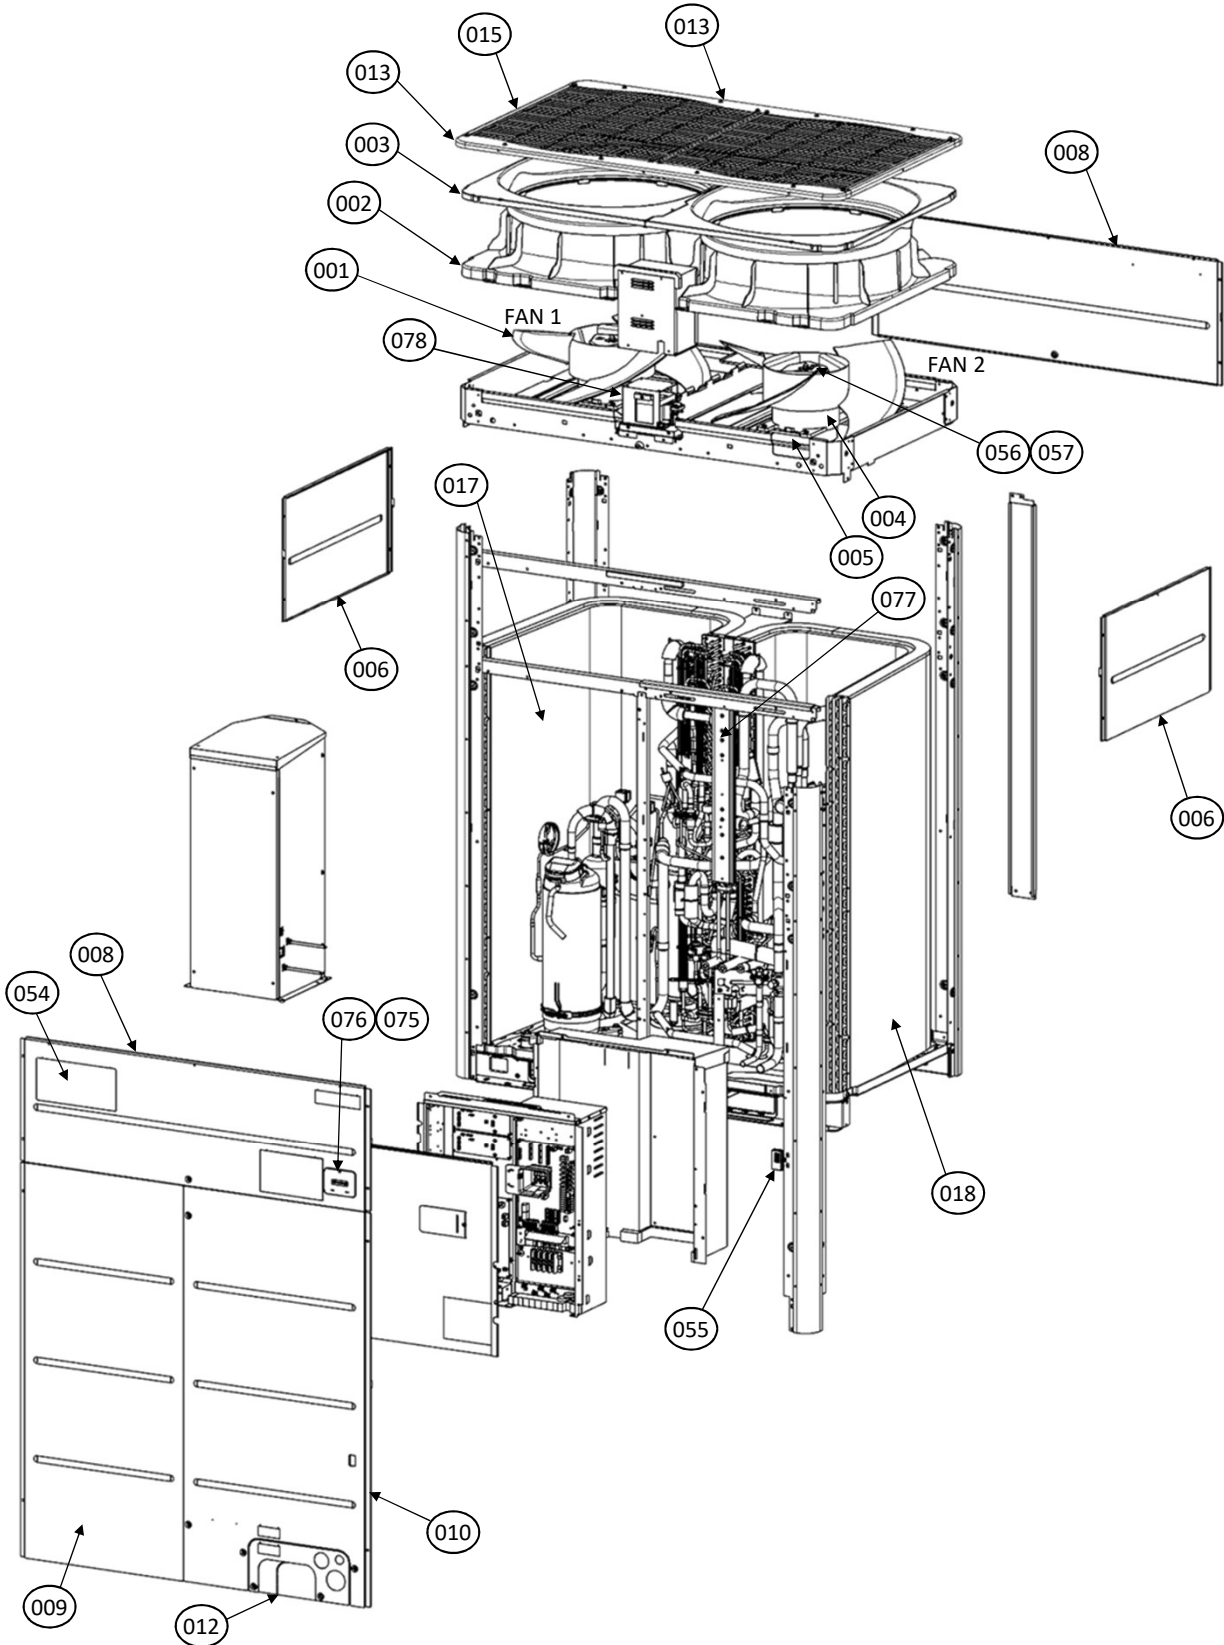


For MMY-MUP1601\*, MMY-MUP1801\*, MMY-MUP2001\* model

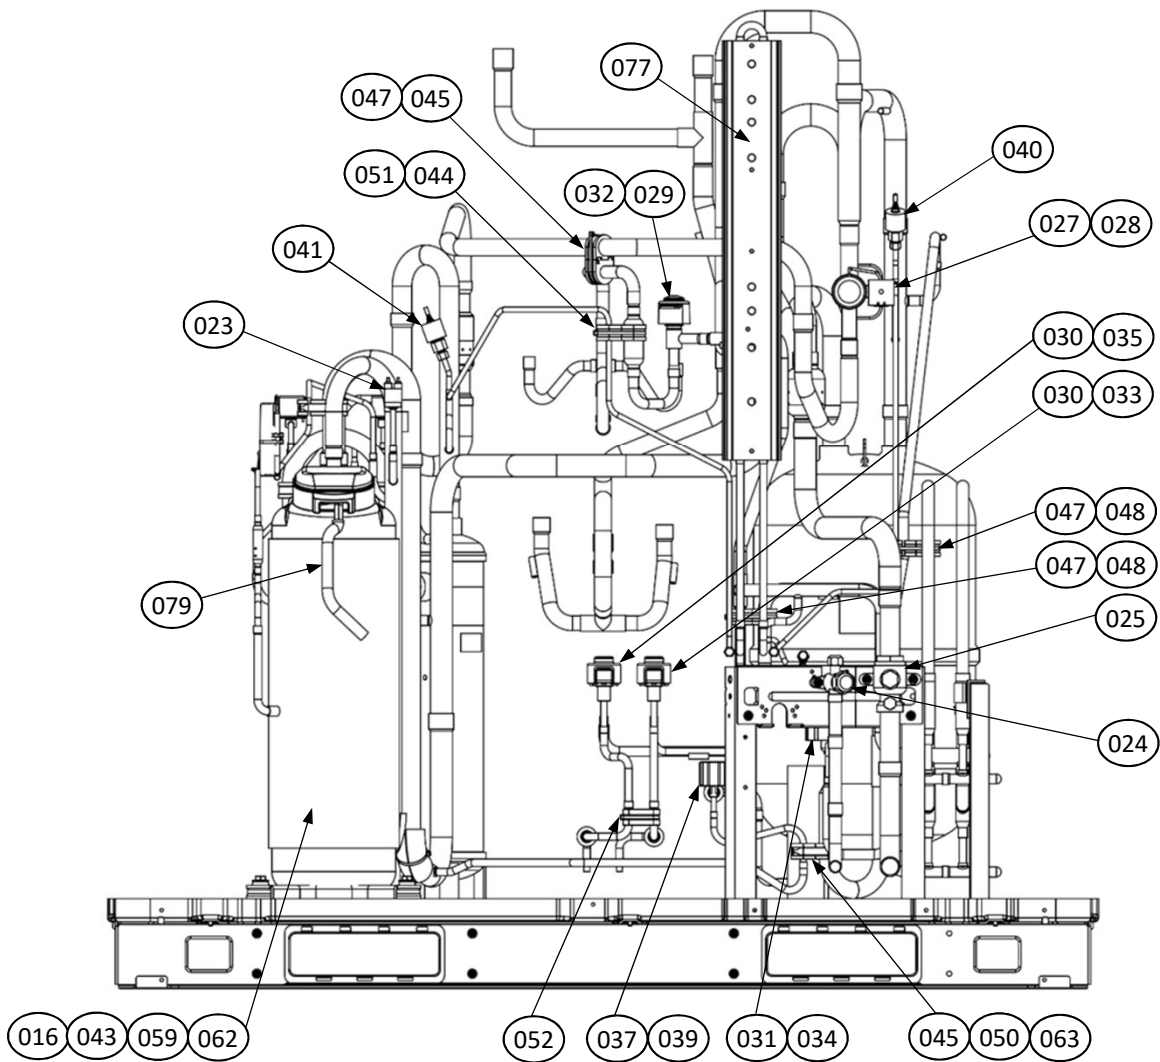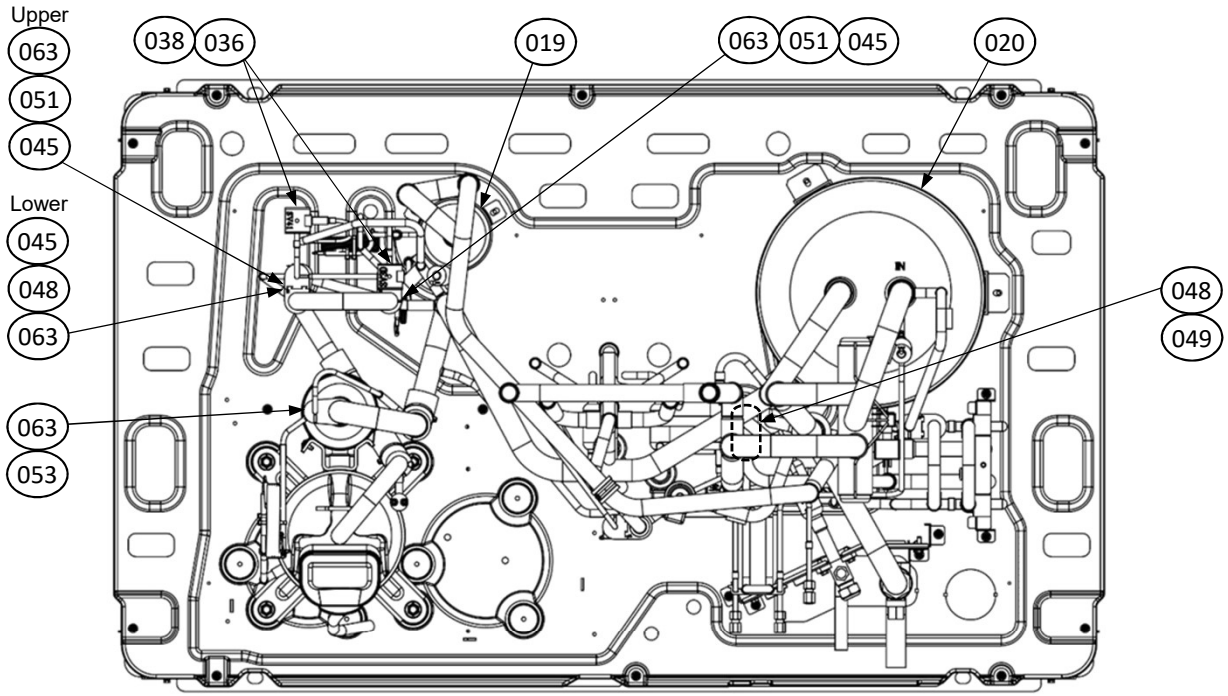




**Outdoor Unit (16, 18, 20HP)**  
**Model: MMY-MUP1601\*, MUP1801\*, MUP2001\***

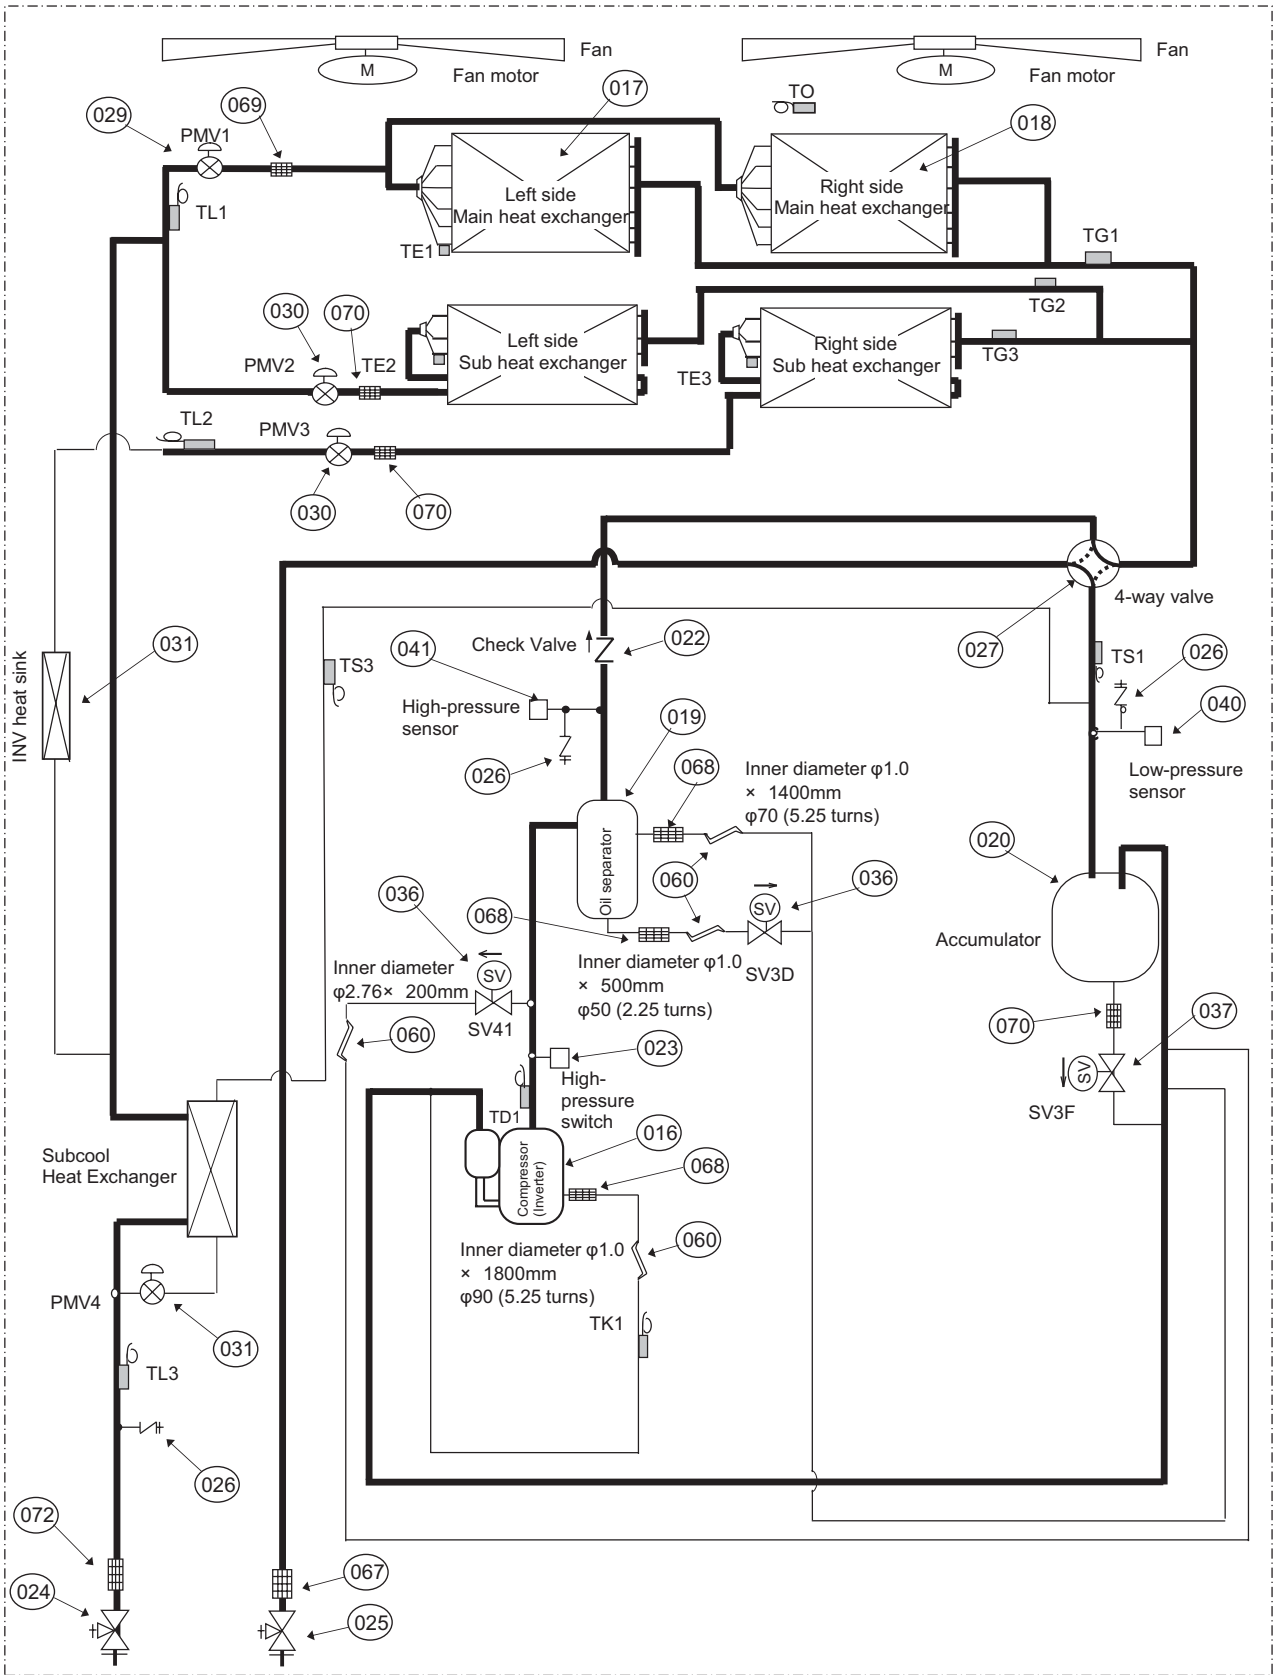

Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor



### 14-3. Outdoor unit (22, 24HP)

MMY-MUP2201\*  
MMY-MUP2401\*

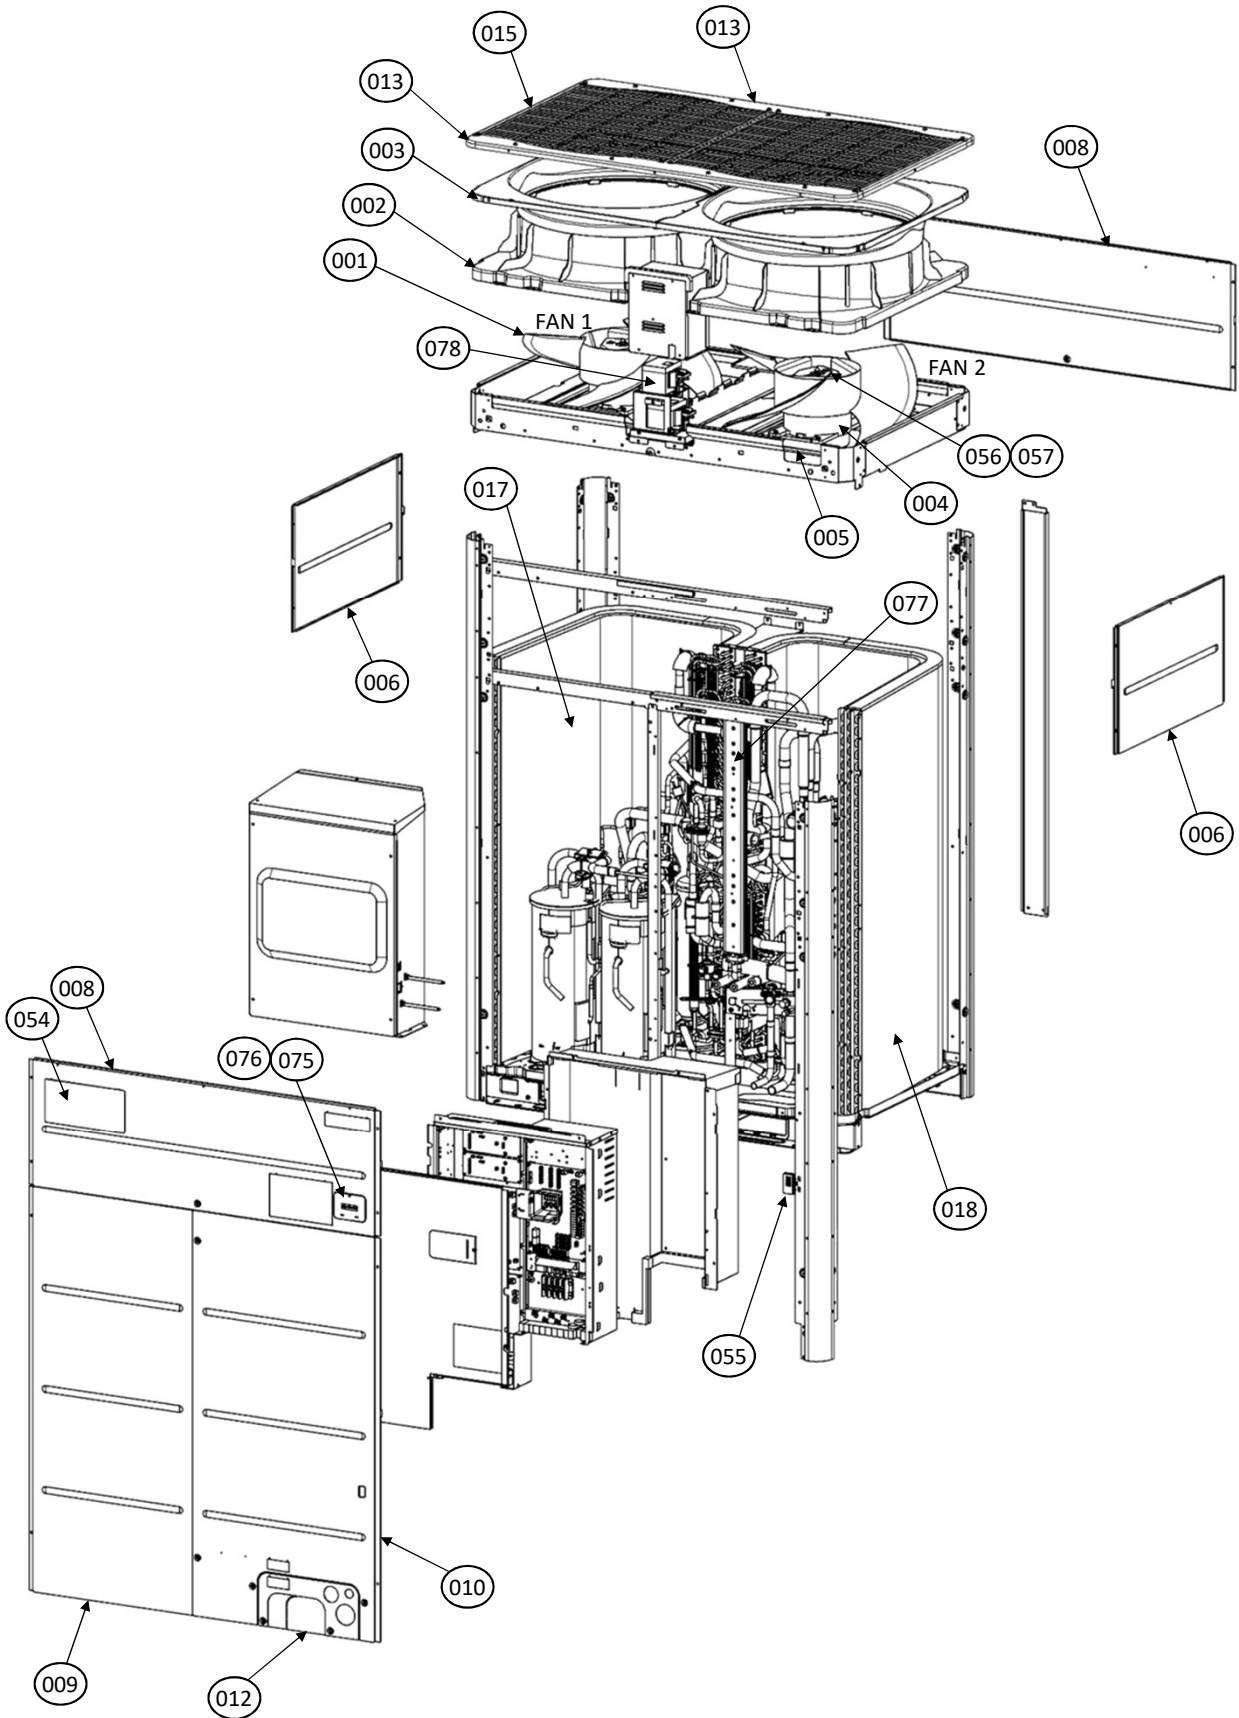




For MMY-MUP2201\*, MMY-MUP2401\* model

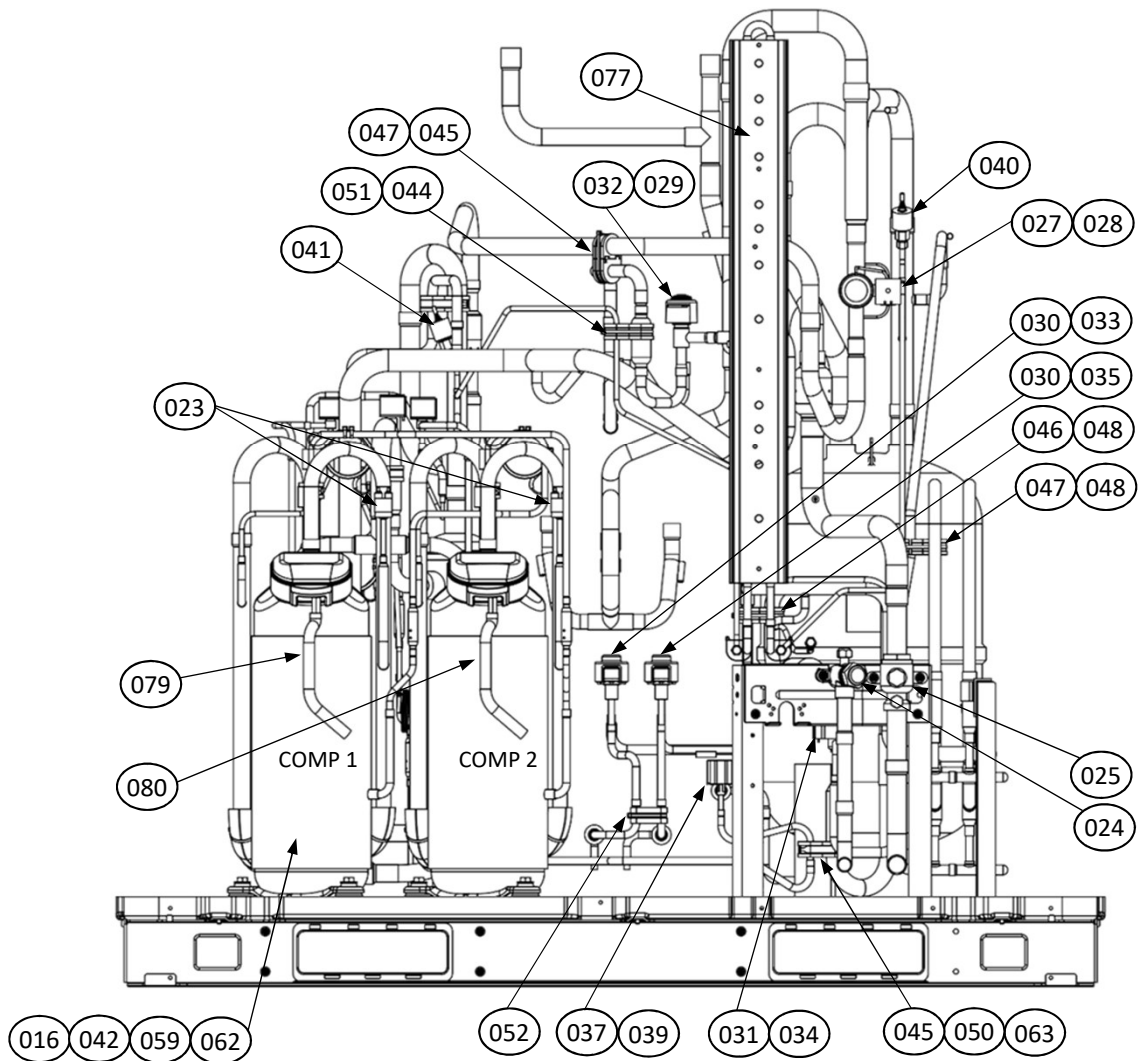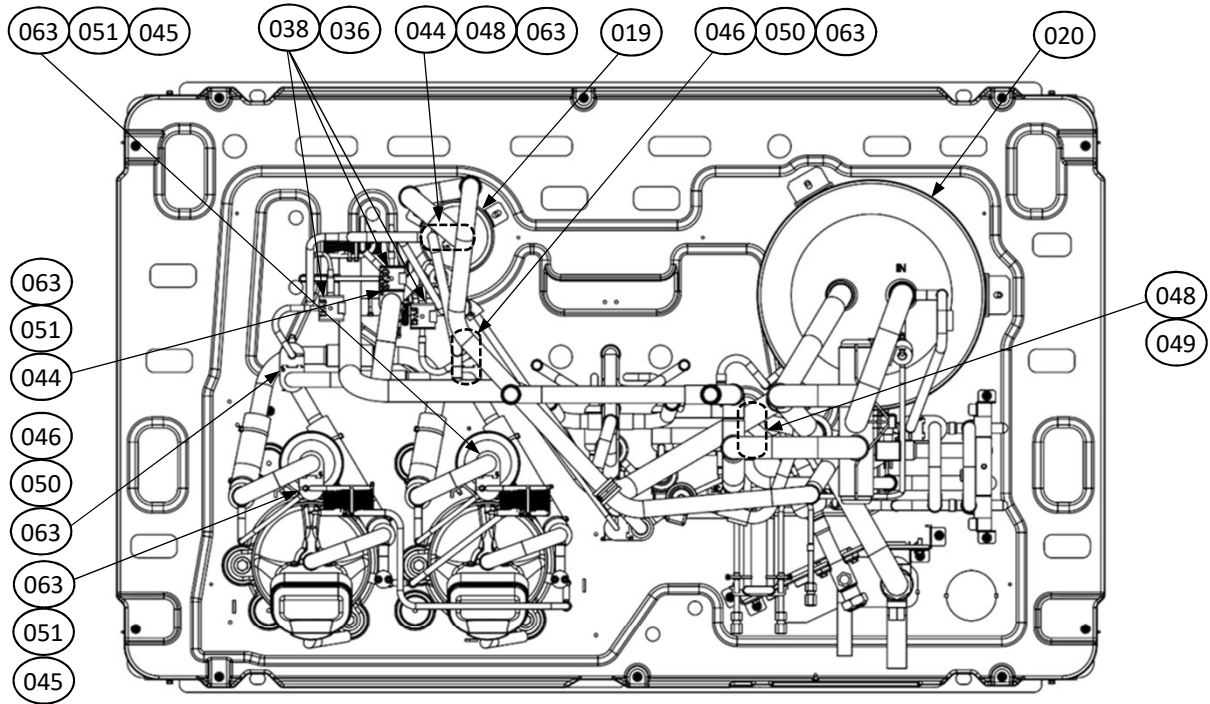

**Outdoor Unit (22, 24HP)**  
**Model: MMY-MUP2201\*, MUP2401\***

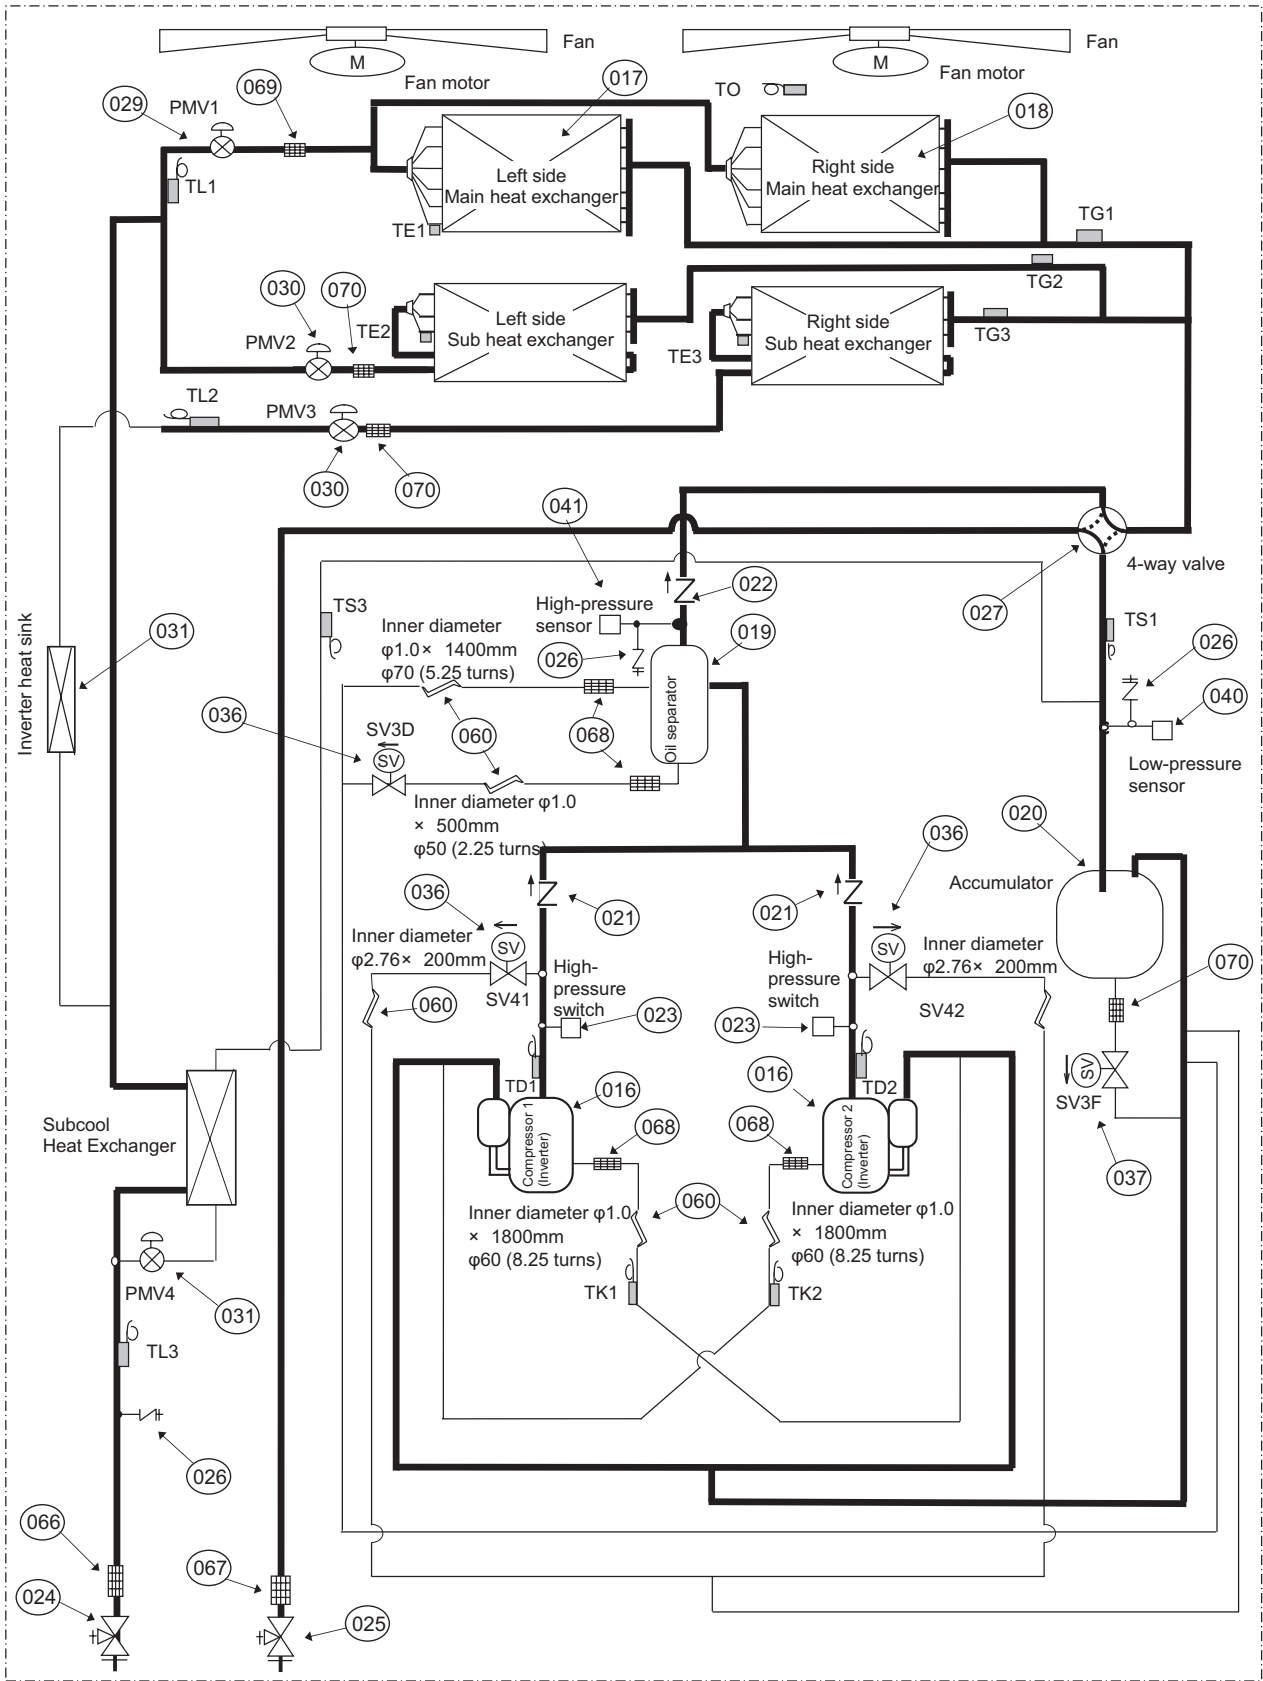

Liquid side Service valve      Gas side Service valve



Symbol						
Solenoid valve	Capillary tube	Check valve	Check joint	Strainer	Temperature sensor	Distributor

Ref. No.	Part No.	Description	Q'ty/Set MMY-MUP								
			0801*	1001*	1201*	1401*	1601*	1801*	2001*	2201*	2401*
001	43T20341	FAN-PR(PS741-T)	1	1	1	1					
001	43T20359	FAN-PR(PF581-T)					2	2	2	2	2
002	43T19374	BELLMOUTH	1	1	1	1					
002	43T19375	BELLMOUTH					2	2	2	2	2
003	43T19376	COVER-BELLMOUTH	1	1	1	1					
003	43T19377	COVER-BELLMOUTH					2	2	2	2	2
004	43T20360	ASM-COAT-FAN-M	1	1	1	1	2	2	2	2	2
005	43T00817	ASM-C-BASE-MOT	1	1	1	1	2	2	2	2	2
006	43T00811	ASM-C-PL-SIDE-U	2	2	2	2	2	2	2	2	2
007	43T00812	ASM-C-CABI-UP	1	1	1	1					
007	43T00819	ASM-C-CABI-UP					1	1	1	1	1
008	43T00813	ASM-C-CABI-UP	1	1	1	1					
008	43T00820	ASM-C-CABI-UP					1	1	1	1	1
009	43T00814	ASM-C-CABI-L	1	1	1	1					
009	43T00815	ASM-C-CABI-L					1	1	1	1	1
010	43T00818	ASM-HINS-CABI-R	1	1	1	1	1	1	1	1	1
011	43T00816	ASM-C-PL-SIDE-R	1	1	1	1					
012	43T00810	ASM-C-P-SERV	1	1	1	1	1	1	1	1	1
013	43T00808	ASM-C-PLATE-UP	2	2	2	2					
013	43T00809	ASM-C-PLATE-UP					2	2	2	2	2
015	43T19378	GUARD-FAN	1	1	1	1					
015	43T19379	GUARD-FAN					2	2	2	2	2
016	43T41559	ASM-COMP-S	1	1	1	1					
016	43T41560	ASM-COMP-S								2	2
016	43T41561	ASM-COMP-S					1	1	1		
017	43T43644	ASM-HE	1	1	1	1					
017	43T43645	ASM-HE-L					1	1			
017	43T43646	ASM-HE-L							1	1	1
018	43T43647	ASM-HE-R					1	1			
018	43T43648	ASM-HE-R							1	1	1
019	43T48314	ASM-SEPA-OIL	1	1	1	1					
019	43T48325	ASM-SEPA-OIL					1	1	1	1	1
020	43T48328	ASM-ACCUM-S	1	1	1	1					
020	43T48326	ASM-ACCUM-S					1	1	1		
020	43T48327	ASM-ACCUM-S								1	1
021	43T46445	CHECKVALVE	1	1	1	1				2	2
022	43T46446	CHECKVALVE					1	1	1	1	1
023	43T63388	SW-PRESS	1	1	1	1	1	1	1	2	2
024	43T46522	PACKEDVALVE	1	1	1	1					
024	43T46520	PACKEDVALVE					1	1	1		
024	43T46521	PACKEDVALVE								1	1
025	43T46393	VALVE-BALL	1	1	1	1	1	1	1	1	1
026	43T46409	JOINT-CHECK	3	3	3	3	3	3	3	3	3
027	43T46452	VALVE-4WAY	1	1	1	1	1	1	1	1	1
028	43T46523	COIL-V-4WAY(HT8P*)	1	1	1	1	1	1	1	1	1
029	43T46447	BODY-PMV	1	1	1	1	1	1	1	1	1
030	43T46394	BODY-PMV	1	1	1	1	2	2	2	2	2
031	43T46439	BODY-PMV	1	1	1	1	1	1	1	1	1
032	43T46525	COIL-PMV	1	1	1	1	1	1	1	1	1
033	43T46526	ASM-COIL-PMV-S	1	1	1	1	1	1	1	1	1
034	43T46451	COIL-PMV	1	1	1	1	1	1	1	1	1
035	43T46532	ASM-COIL-PMV-S					1	1	1	1	1
036	43T46408	VALVE-2WAY	2	2	2	2	2	2	2	3	3
037	43T46527	VALVE-2WAY	1	1	1	1	1	1	1	1	1
038	43T46528	ASM-2WAY-COIL-S (HT8P*)	2	2	2	2	2	2	2	3	3
039	43T46530	COIL-V-2WAY (HT8P*)	1	1	1	1	1	1	1	1	1
040	43T50401	ASM-P-SENSOR-S	1	1	1	1	1	1	1	1	1
041	43T50402	ASM-P-SENSOR-S	1	1	1	1	1	1	1	1	1
042	43T57311	HEATER	1	1	1	1				2	2
043	43T57312	HEATER					1	1	1		

Ref. No.	Part No.	Description	Q'ty/Set MMY-MUP								
			0801*	1001*	1201*	1401*	1601*	1801*	2001*	2201*	2401*
044	43T49348	RUB-P-SUPPORTER					1	1	1	3	3
045	43T49349	RUB-P-SUPPORTER					5	5	5	4	4
046	43T49350	RUB-P-SUPPORTER	2	2	2	2				3	3
047	43T49351	RUB-P-SUPPORTER					3	3	3	2	2
048	43T49352	RUB-P-SUPPORTER	2	2	2	2	4	4	4	4	4
049	43T49353	RUB-P-SUPPORTER	1	1	1	1	1	1	1	1	1
050	43T49354	RUB-P-SUPPORTER	1	1	1	1	1	1	1	3	3
051	43T49355	RUB-P-SUPPORTER	2	2	2	2	3	3	3	4	4
052	43T49376	RUB-P-SUPPORTER	1	1	1	1					
052	43T49347	RUB-P-SUPPORTER					1	1	1	1	1
053	43T49377	RUB-P-SUPPORTER	1	1	1	1	1	1	1		
054	43T01333	MARK-T(SMMS-U)	1	1	1	1	1	1	1	1	1
055	43T19380	HOLDER-SENSOR	1	1	1	1	1	1	1	1	1
056	43T39351	NUT-FLANGE	1	1	1	1	2	2	2	2	2
057	43T39350	SQUARE-WASHER	1	1	1	1	2	2	2	2	2
059	43T49357	RUB-VINS	3	3	3	3				6	6
059	43T49387	RUB CUSHION					4	4	4		
060	43T47375	CAPI	1	1	1	1	1	1	1	1	1
061	43T19333	FIX-P-SENSOR	12	12	12	12	14	14	14	16	16
062	43T47385	BOLT-COMP(M6)	3	3	3	3				6	6
062	43T47415	BOLT-COMP(M6)					4	4	4		
063	43T49358	FIX-BAND	3	3	3	3	5	5	5	7	7
064	43T85796	COPY-MANUAL(HT8P-E)	1	1	1	1	1	1	1	1	1
	43T85797	COPY-MANUAL(HT8P-TR)									
065	43T47394	STRAINER	1	1	1	1					
066	43T47417	STRAINER								1	1
067	43T47395	STRAINER					1	1	1	1	1
068	43T47388	STRAINER	3	3	3	3	3	3	3	4	4
069	43T47390	STRAINER	3	3	3	3	1	1	1	1	1
070	43T47414	STRAINER	1	1	1	1	3	3	3	3	3
072	43T47416	STRAINER					1	1	1		
073	43T48329	ASM-SCREW-S	1	1	1	1	1	1	1	1	1
074	43T48330	ASM-SCREW-S	1	1	1	1	1	1	1	1	1
075	43T6W841	ASM-NFC	1	1	1	1	1	1	1	1	1
076	43T63389	HOLDER(NFC)	1	1	1	1	1	1	1	1	1
077	43T67314	ASM-HEATSINK	1	1	1	1					
077	43T67312	ASM-HEATSINK								1	1
077	43T67313	ASM-HEATSINK					1	1	1		
078	43158248	REACTOR(CH-105)	1	1	1	1	1	1	1	2	2
079	43T60534	ASM-COMP-LEAD					1	1	1	1	1
080	43T60535	ASM-COMP-LEAD	1	1	1	1				1	1
081	43T55375	CLAMP-FILTER	2	2	2	2	3	3	3	4	4
083	43T50403	ASM-SENSOR	1	1	1	1	1	1	1	1	1
084	43T50404	ASM-SENSOR								1	1
085	43T50405	ASM-SENSOR	1	1	1	1	1	1	1	1	1
086	43T50406	ASM-SENSOR					1	1	1	1	1
087	43T50407	ASM-SENSOR	1	1	1	1	1	1	1	1	1

# Inverter Assembly

Model: MMY-MUP0801\*, 1001\*, 1201\*, 1401\*

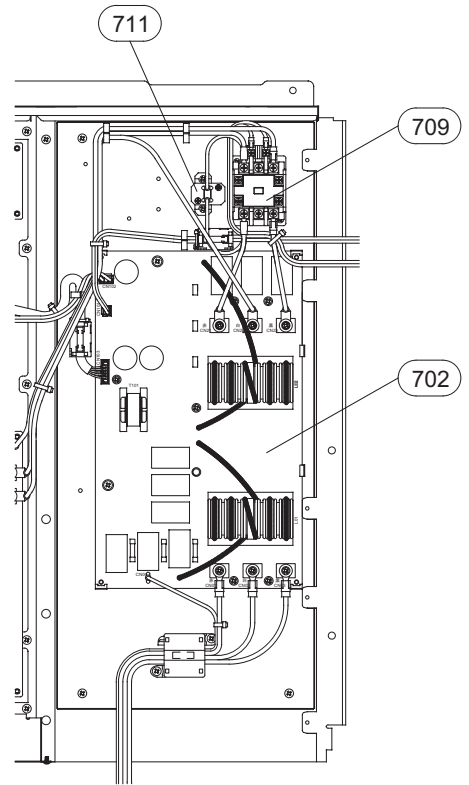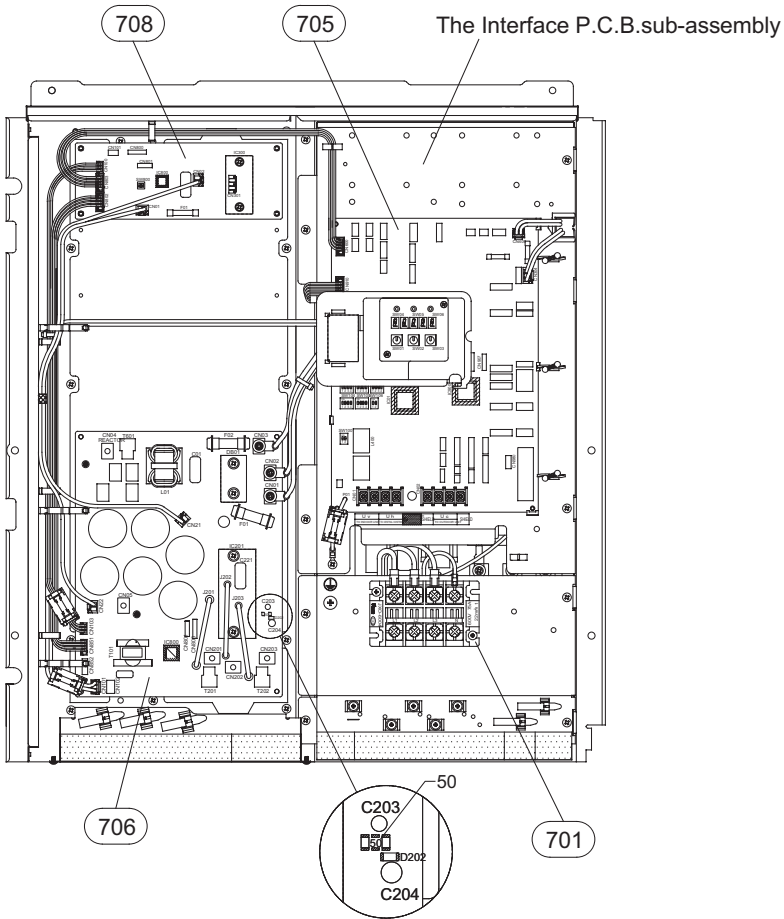


Remove the Interface P.C.B.sub-assembly.

Ref. No.	Part No.	Description	Q'ty/Set
701	43T60437	TERMINAL(75A)	1
702	43T6W888	ASM-S-PCB(N/F)	1
705	43T6W890	ASM-S-PCB(I/F)	1
706	43T6W892	ASM-S-PCB(COMP)	1
708	43T6W894	ASM-S-PCB(FAN)	1
709	43T52320	MAG-CONTACTOR	1
711	43T50345	THERMISTOR(PTC)	1

## Inverter Assembly


Model : MMY-MUP1601\*, 1801\*, 2001\*

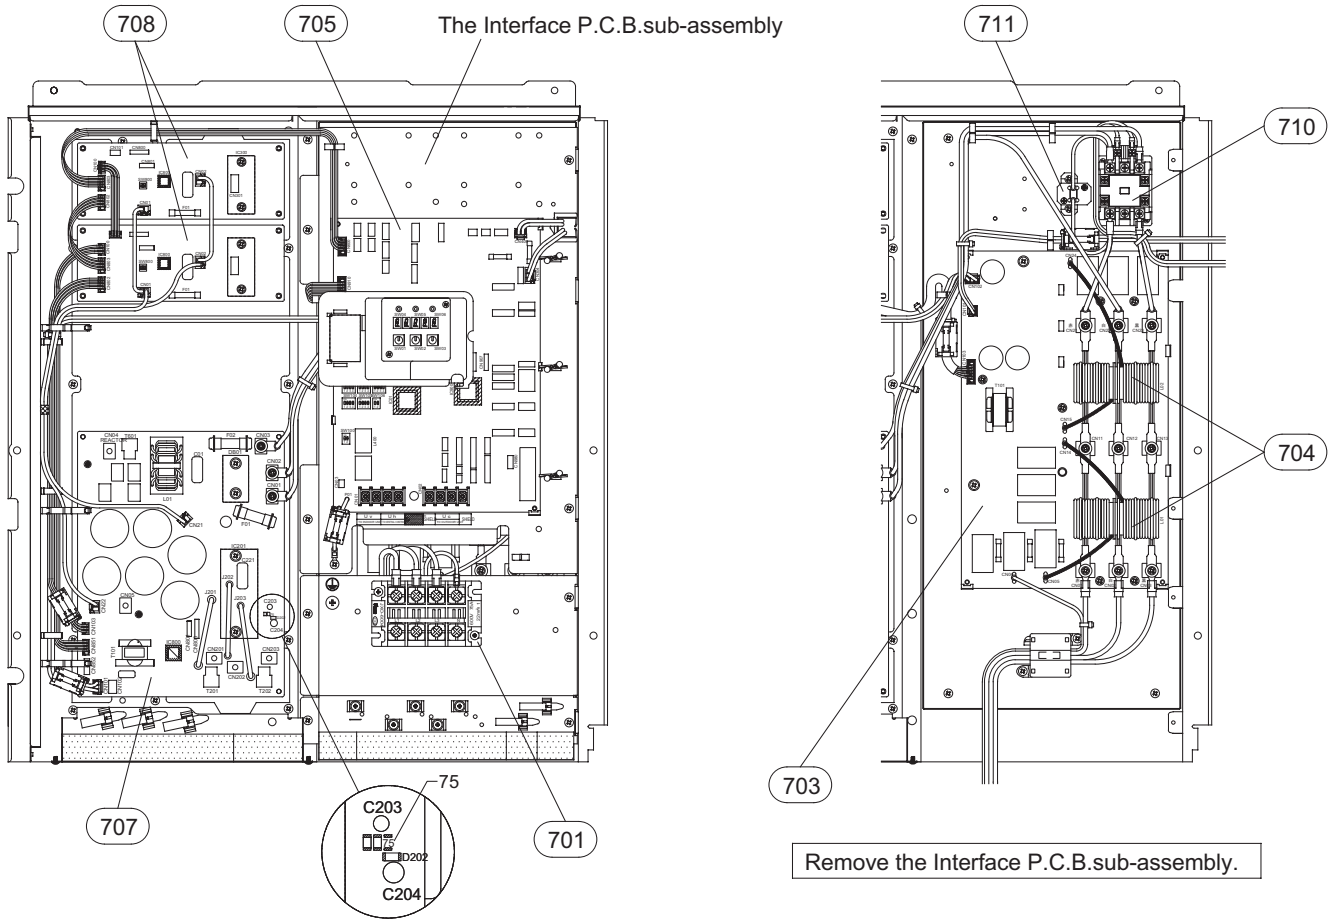

Ref. No.	Part No.	Description	Q'ty/Set
701	43T60437	TERMINAL(75A)	1
703	43T6W889	ASM-S-PCB(N/F)	1
704	43T55376	LINE-FILTER	2
705	43T6W890	ASM-S-PCB(I/F)	1
707	43T6W893	ASM-S-PCB(COMP)	1
708	43T6W894	ASM-S-PCB(FAN)	2
710	43T52322	MAG-CONTACTOR	1
711	43T50345	THERMISTOR(PTC)	1

# Inverter Assembly

Model : MMY-MUP2201\*, 2401\*

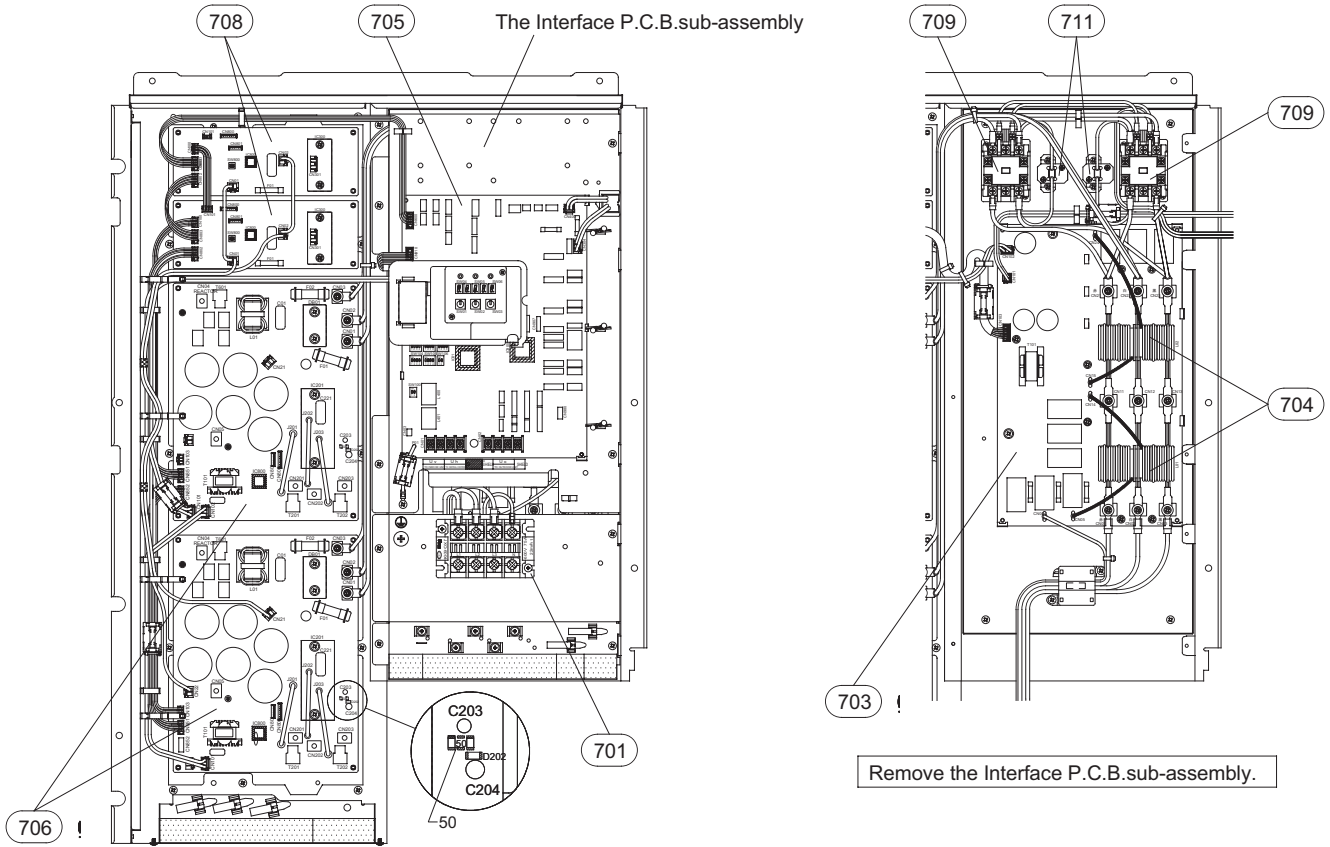

Ref. No.	Part No.	Description	Q'ty/Set
701	43T60437	TERMINAL(75A)	1
703	43T6W889	ASM-S-PCB(N/F)	1
704	43T55376	LINE-FILTER	2
705	43T6W891	ASM-S-PCB(I/F)	1
706	43T6W892	ASM-S-PCB(COMP)	2
708	43T6W894	ASM-S-PCB(FAN)	2
709	43T52320	MAG-CONTACTOR	2
711	43T50345	THERMISTOR(PTC)	2

# Toshiba Carrier (Thailand) Co., Ltd.

144 / 9 Moo 5, Bangkadi Industrial Park, Tivanon Road, Tambol Bangkadi, Amphur Muang, Pathumthani 12000, Thailand